

2.4 GHZ WIRELESS OPTICAL MOUSE IH-M471B User Manual

Package contents
Wireless Optical Mouse
USB nano receiver
1 AA alkaline battery
User manual

1. Installation guide

- 1) Remove the battery cover and install 1 AA battery to the mouse
- 2) Turn on mouse by ON/OFF switch, the Indication Light will blink.
- 3) Insert receiver into USB port of PC and wait a few seconds, the mouse can use then.

"ON/OFF" switch (Diagram 1)

Without using the mouse, user may turn off it by "ON/OFF" switch for saving battery power.


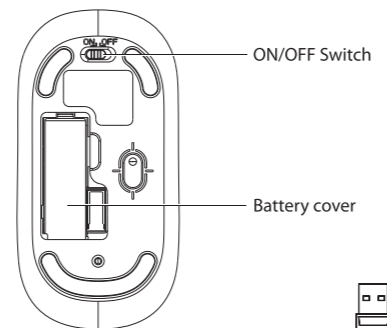


Diagram 1

2. Description of keys

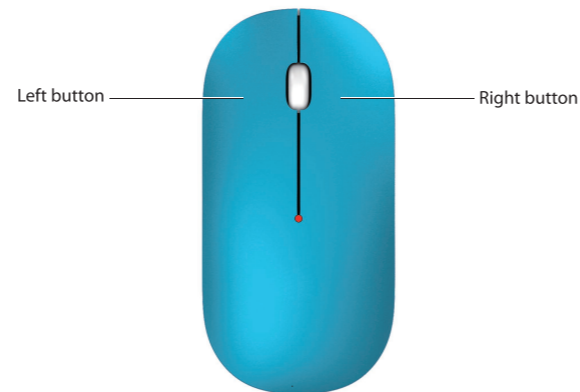

3. Low-voltage alarming function

When the LED light on top will blink automatically which indicates that the battery is getting low and new battery should be replaced

4. Specifications and functions

1. USB nano receiver can be stored inside battery compartment
2. 2.4GHz, operating distance up to 10 meters
3. Wireless carrier frequency: 2,402MHz-2,480 MHz
4. 64 wireless working channels, automatic frequency jumping
5. Power ON/OFF function
6. Low-voltage alarming function
7. Resolution: 1000DPI

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS