

User manual

Mouse:MS-148OR

Dongle:MX-205

Package contents

Wireless Optical Mouse

USB receiver

2 AAAalkaline batteries

User manual

Installing the battery (Diagram 1)



(Diagram 1)



(Diagram 2)



(Diagram 3)



(Diagram 4)



(Diagram 5)

Whenever new batteries are installed, make sure that they are fresh 1.5V AAA batteries.

A) Remove the battery cover.

B) Insert two AAA batteries into the battery compartment, make sure to properly orient the positive (+) and negative (-) ends as specified by the marks in the battery compartment. Replace the battery cover and make sure it is locked.

C) Switch on the mouse, the LED in bottom of mouse will blink.

Installing the receiver (Diagram 2)

The codes of receiver and mouse were successfully connected in factory.

User can directly use the complete set of products, no worry about the code connecting.

A) Insert receiver into USB port of PC, the computer system will automatically detect it and prepare it for full operation.


B) The mouse may use then.

If the user wrongly operates, please redo the above operating procedures.

"ON/OFF" switch (Diagram 1)

Without using the mouse, user may turn off it by "ON/OFF" switch for saving battery power.

Description of keys and DPI adjusting

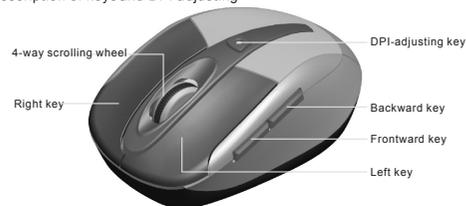

A) Using "DPI-adjusting key", the resolution of mouse can be switched between 800DPI and 1600DPI in turn. That LED light in "DPI-adjusting key" blinks slowly indicates 800DPI and fast 1600DPI.

B) Backward and Frontward keys for your easily navigating forward and backward on the Internet

C) The 4-way scrolling wheel allows you to scroll up and down and side-to-side. It's simply a more efficient way to navigate documents, spreadsheets and Web pages. For example, if you're working with a super-wide worksheet, you can tilt the wheel from side to side to scroll right and left, without clicking tiny scroll arrows.

Low-voltage alarming function

When batteries have been used for some time and discover the LED light in "DPI-adjusting key" blinks automatically, which reminds you that batteries' voltage is becoming low, suggested you replace the batteries with new ones.

Note: If your operating system is lower than Windows Vista, to activate the 4-way scrolling wheel, you may need to install driver. ACD driver is included in this product.

System requirements

Windows ME, 2000, XP or Vista

Specifications and functions

1. Super mini receiver can be stored at bottom for easy carrying
2. 2.4GHz, freely operating within 10 meters
3. Wireless carrier frequency: 2403~2477MHz
4. 16 wireless working channels, automatic frequency jumping
5. Power ON/OFF function
6. Low-voltage alarming function
7. Resolution: 800DPI and 1600DPI adjustable
8. 2-way communication technology speeds up data transmission without delay
9. 4-way scrolling wheel for scrolling up and down and side-to-side efficiently

Caution :

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Compliance statement:

1: This device is verified to comply with Part 15 of the FCC Rules. Operation subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

2: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.