

MONOPRICE®


Rechargeable Multimedia  
**Green Laser Presenter**  
with LCD Display 2.4GHz - Black



USER'S MANUAL

## PACKAGE CONTENTS

- Wireless Presenter
- USB Receiver
- USB Charging Cable
- Protective Pouch
- User Manual

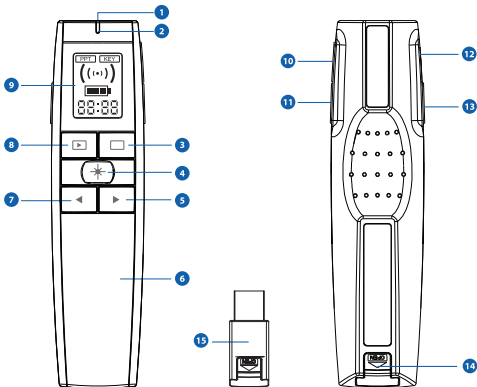

- 1 Green Laser Pointer
- 2 Power & Wireless Pairing Indicator
- 3 Black Screen
- 4 Laser Pointer Button
- 5 Next Page
- 6 Built-In Rechargeable Battery
- 7 Previous Page
- 8 Play/Esc
- 9 LCD Display (Mode Switch/Wireless Reception Signal/Battery Status/Timer)
- 10 Short-Press: Timer/Clock Toggle  
Long-Press: Timer/Clock Set
- 11 Timer Start/Pause/Set In
- 12 Micro-USB Charging Port
- 13 Short-Press: Mode Switch for  
Powerpoint & Keynote  
Long-Press: Mode On/Off
- 14 Built-In Storage for Receiver
- 15 Receiver

## USING THE DEVICE

### SAFETY WARNING!

This device generates a green laser light. To avoid injury or harm do not look into the laser or shine it into someone else's eyes. Keep out of reach of children.





### Hardware Installation

1. Remove the USB receiver (15) from the built-in receiver storage (14).
2. Insert the USB receiver into an available USB port on your PC or Mac. The computer will detect the new hardware and will automatically install the necessary drivers.
3. Power ON the presenter by pressing and holding the Power button (13) for about 3 seconds.

If the presenter is not functioning, try the following remedies:

1. Ensure the presenter is not operating with a low battery. Charge the battery as needed.
2. Try using a different USB port on your PC or Mac.
3. Reduce the distance between the USB receiver and the presenter.
4. Pair the presenter and the receiver by holding down the Power (13) and Timer Set (10) buttons until the blue LED starts flashing, release the buttons, and wait for LED to stop flashing.

### Using with Microsoft Powerpoint/Apple Keynote

1.  Play/ESC button (8) - starts and exits the presentation slide show.
2.  Previous/Next button (5/7) - moves to the previous or next slide.
3.  Black Screen button (3) - blanks the display to show a black screen.
4.  Green Laser Button Control - generates the green laser beam.

### Vibration Timer and Clock Setup

1. Press and briefly hold the Timer/Clock button (10) to select between Timer or Clock setup. A short press selects the Timer and a long press selects the Clock.
2. Press the Black Screen button (3) to toggle the MM or SS (Timer)/HH or MM (Clock).
3. Press the Next/Previous buttons (5/7) to increase/decrease the displayed value.
4. Press the Set In (11) button to confirm your settings

**NOTE:** When there are 5 minutes left on the timer, the presenter will vibrate for about 10 seconds. When 1 minute remains, it will vibrate for about 5 seconds. When time has expired, it will vibrate for 1 second. You can press the Power Button (10) to stop the vibration when triggered.

### Specifications:

- Operating Distance: up to 160 ft (49 meters)
- Wireless Carrier Frequency: 2.4GHz



**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Class B digital device, pursuant to Part 15 of the designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION  
RISK OF EXPLOSION IF BATTERY IS REPLACED  
BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING  
TO THE INSTRUCTIONS



■ ■ ■ ■ Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.