




















Dongguan Taide Industrial Co., Ltd.


Bluetooth Speaker

User's Manual for BT009

I. Outer Appearance and Function Buttons



1. **MODE/** Mode selector: Press the **Mode Selector** to select SD card, Flash Memory Stick, AUX, FM, Bluetooth and working state.
2. **▶/Play/Pause:** Click Pause while playing music and click Play during pausing. Press and hold Automatic Search button under the condition of FM. Under the condition of AUX, click Silence and then click again to open the voice.
3. /Alarm 1: Press this button to enable or disable the alarm 1. When enabled, the icon  shows up. Press and hold  to set up the time of alarm and the LCD display screen displays . Meanwhile, the clock flashes. Press  and  to configure the time. Finally, press the Set Button to quit or quit automatically.
4.  /Alarm 2: [Hint: The alarm lasts 1minute and to turn it off, press the Alarm Button]
5. **SNOOZE/DIMMER:** Backlight control/Alarm setup. Backlight control: There are 3 options like bright, dark and off. Press this button to select.
Alarm setup: **SNOOZE/DIMMER** can be regarded as snooze function only when the alarm rings and the alarm can ring again after five minutes.
6. /Upward: Press and hold the button to increase or decrease volume, press is to select songs upwards while playing music.
7. /Downward: Press and hold the button to increase volume; press is to select songs downwards.
8. **SET/Set button: Set:** Check the time and set up the calendar. Calendar setup: Press and hold the Set Button to initiate date configuration. When the year flashes, press  and  to adjust and then move to the month by pressing the Set Button again, continue to adjust via  and . When configuration is done, press any button to quit or quit automatically. Time check: When the time is not available, press the Set Button to check it out.
9. **SLEEP/** Automatic shut-down when time is up: The speaker turns itself off when the time is up. Options of this button include OFF, 15, 30, 45, 60, 75, 90 and 120minutes. Such function is set to OFF by default.
10. / Power On and Off: Press  to start after power supply is connected and press  to shutdown in operation.
11. /Colorful LED On/Off button: Press  to open colorful LED after power supply is connected; Touch colorful rings to choose your favorite LED luminescent color after opened; Hold , colors can be changed automatically after opened, automatically-changed color time is 5

minutes; press  to close colorful LED when opened.

II. Product functions and characteristics

1. FM radio: Internal FM Radio modules, antenna surrounded, automatic station search and stored stations. 3.5mm Aux cable used as antenna must be plugged.
2. LCD display screen: Display corresponding working mode and calendar and time.
3. Time display: Set calendar and clock.
4. DC power: Use DC power supply with DC12/2,000mA.
5. Power-off memory play: Memorize exactly interrupted position of last time automatically.
6. AUX Audio-in jack: Input 3.5MM audio cable to connect various sound sources of audiovisual products easily, including computer and MP3/MP4/IPOD/IPHONE.
7. Colorful LED: Touch control and colorful color bring warm and colorful for your life.
8. Alarm clock function: Remember time all the time and enhance life memory.
9. Internal high quality Bluetooth device and wireless transmission can make fashion more convenient.

III: Product parameter

Bluetooth spec: Bluetooth V2.1+EDR

Transmission distance: $\leq 10M$

Speaker standard: 8Ω 、2.5inch

Output power: $5W \times 2$

Frequency response: 90Hz-20KHz

Sensitivity: $80db \pm 2db$

SNR: $\geq 80dB$

Distortion factor: $\leq 0.3\%$

product standard: $W260 \times D156 \times H99MM$

IV. Power supply applied

The system applies DC power supply and specification of power supply is DC12V-2,000MA.

V. Common function description

Music Playback: Click “Mode” button to switch working mode, click “Play/Pause” button to pause or continue playing and hold “Upward” or “Downward” button for 3 seconds to adjust volume.

AUX playback: Use the supplied audio cable to connect the speaker to another music player such as computer by plugging one end to the speaker's AUX port and the other end to the music player's audio port. Plug and play mode shall be supported. Press Mode button to switch into working mode, hold “Upward” or “Downward” button for 3 seconds to adjust volume. Click “▶|” button, the voice shall be silent under the condition of AUX and then click “▶|” to open the voice.





FM radio: Click “Mode” button to choose FM working mode, hold “Play/Pause” to initiate automatic (save) station search, save station and delete station. Press “Upward” or “Downward” to choose station after FM search station is made, hold “Upward” or “Downward” button for 3 seconds to adjust volume.

Important tips: Audio-in jack cable must be plugged at the state of FM.

Clock query and calendar settings: Calendar settings: Hold SET button and enter calendar

settings: year can flicker, press ◀/- and +/▶ button to adjust and then press SET button to have month flickering and then press ◀/- and +/▶ button to adjust; Press any button to exit or exit automatically after day, hour and minute are adjusted in sequence.




Clock query: Press SET for query under the condition of non-display time.

Alarm clock settings: Press  button to enable or disable the alarm 1. When enabled, the icon  shows up. Press and hold  to set up the time of alarm and the LCD display screen displays . Meanwhile, the clock flashes. Press ◀/- and +/▶ to configure the time. Finally, press the Set Button to quit or quit automatically.

Bluetooth connection: Press MODE button to switch into Bluetooth, the display can show: BLUE, attached with prompt tone and the Bluetooth is open. Bluetooth connections can be conducted by Bluetooth connection equipment. Bluetooth equipment prompts whether to pair up or not. If selected Yes, it pairs up with the device and a beep is also generated by the speaker. If failed to detect any other Bluetooth device within 5minutes, the speaker will shut itself down. It is necessary to restart if reconnections are needed (MODE shall be switched into working mode of Bluetooth).

Tips: Please shutdown to restart or restart Bluetooth equipment if connections are failed.

Bluetooth music playback: When connected, the speaker plays music immediately. Press ◀V- and V+▶ to select tracks upwards or downwards. Press and hold ◀V- and V+▶ to adjust the volume. While playing music, press ▶|| to pause and ▶|| to resume

Use of colorful lamps: Press  to open colorful LED after power supply is connected; Touch **colorful rings** to choose your favorite LED luminescent color after opened; Hold , colors can be changed automatically after opened and press  to close colorful LED when opened.

VI、 Troubleshooting:

Faults	Solution
NO FM radio	Please make sure that you have plugged 3.5mm Aux cable,check if FM signal is covered.
Bluetooth can not connected	1、 Check if speaker is under bluetooth status, or restart your device or this spekaer 2、 Turn off other bluetooth devices around
Bluetooth speaker staccato	1、 check if the distance is too far, if there is barrier between speaker and your device。

FCC warning statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.