

# INSTRUCTION MANUAL




## PRECAUTIONS

1. Please store and use this product at the ambient temperature;
2. Do not expose this product to rain or immerse in water without the flap cover properly closed;
3. Prevent this product from falling that could result in serious damage;
4. Do not dismantle, repair or modify this product on your own;
5. To avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery.

## CONSIDERATE HINTS

1. Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing;
2. When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components;
3. The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

## OVERVIEW

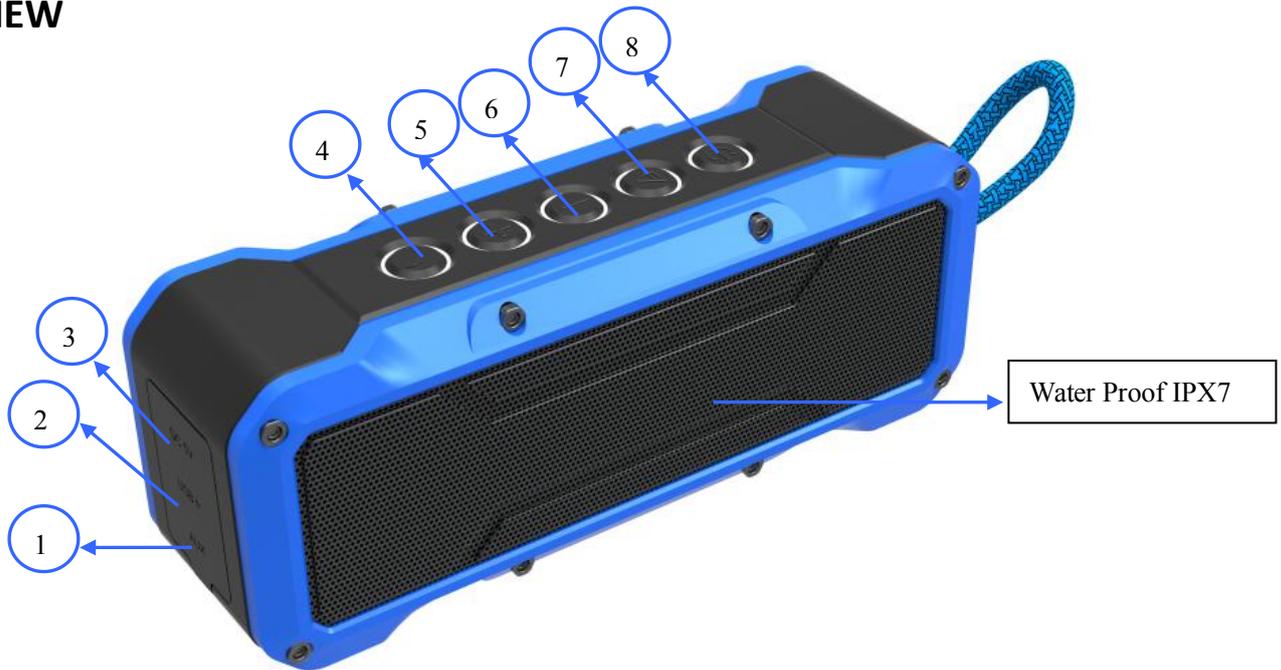

- ① USB-OUT; ② MICRO USB charging and indicator; ③ AUX IN; ④ Hands-free button;  
⑤ volume up/skip forward; ⑥ Play/Paus; ⑦ Volume down/skip back; ⑧ Power on/off

### BLUETOOTH OPERATION

1. Long press the power button two seconds to turn on the speaker. The white breath light will flash 2 times every one second to detect Bluetooth enabled devices near you. The white breath light will solid if Bluetooth connected to any other devices.
2. The speaker will power off if there is no Bluetooth device is detected within 5 minutes.
3. Pair the speaker with the desired Bluetooth device.
4. Play/pause as desired by pressing ►||.
5. Long press – to select tracks downwards, short press to decrease the volume.
6. Long press + to select tracks upwards, short press to increase the volume
7. When you want to play music or movie from another Bluetooth device, disconnect the speaker by long pressing ►|| and connect to new devices.

### AUX PLAYBACK OPERATION

1. Turn on the speaker.
2. Insert an 3.5mm audio cable into the aux jack on the back of the speaker, connecting to any audio device such as mobile phones or computers with the other port.
3. Play/pause as desired by pressing ►||.
4. Long press – to select tracks downwards, short press to decrease the volume.
5. Long press + to select tracks upwards, short press to increase the volume.

### CHARGING THE SPEAKER

The speaker has a built-in Lithium battery. The battery is rechargeable and provides approx 8 hours' continuous operation when fully charged.

Use the micro-USB cable to charge the speaker. The speaker has four battery levels and the four red indicator light will keep solid when the speaker is fully charged.

## SPEAKER PHONE OPERATION

Press  to answer an incoming call.

Press  to hang up.

Keep pressing  to reject an incoming call.

Double press  to redial the last phone number.

## USB CHARGE OUT

USB output from speaker will be able to negotiate the proper charge current for Apple and Android devices.

## SPECIFICATION

Product Model : SRO6266

Bluetooth Specifications : Bluetooth V4.2

Transmission Distance : ≤10M (depending upon operation environment and devices to which it connects)

USB Recharge Voltage: DC 5V

USB-OUT charging current/voltage: 500-1000mA/DC 5V

Built-in Battery: 18650 Lithium battery 4000mAh

Output Power: 13W\*2+3W\*2

Product Dimensions: 224\*78\*78mm

## COMPATIBILITY

Wireless: Devices configured with Bluetooth 4.2 or higher version such as IPAD, IPHONE (at least the second generation IPHONE installed the IPHONE software 3.1), IPOD TOCH and MAC as well as a majority of intelligent phones or computers that support Bluetooth.

Bluetooth V4.2 including agreements as: A2DP, AVRCP, HFP

## TROUBLESHOOTING

Faults / Phenomena	Solutions
Unable to pair up with other devices	<ol style="list-style-type: none"><li>1. Check whether the speaker is still in the process of search or switch it off and then restart.</li><li>2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Please turn them off.</li></ol>
The sound is rather low or distorted	<ol style="list-style-type: none"><li>1. Check the Bluetooth device's volume and then adjust it to a proper level.</li><li>2. Recharge the battery</li></ol>
The music stops from time to time	<ol style="list-style-type: none"><li>1. Check whether the speaker's effective transmission range is exceeded or there is an obstacle standing between the speaker and other Bluetooth devices.</li></ol>
The Bluetooth indicator remains off	<ol style="list-style-type: none"><li>1. It suggests the battery power drops quite low and retry once being recharged.</li><li>2. Turn it on again.</li></ol>

Customer Support Number: 0800 422 274

## **FCC STATEMENT :**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

## **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.