


Fortune Fabric Bluetooth Speaker

Instruction Manual

BT139

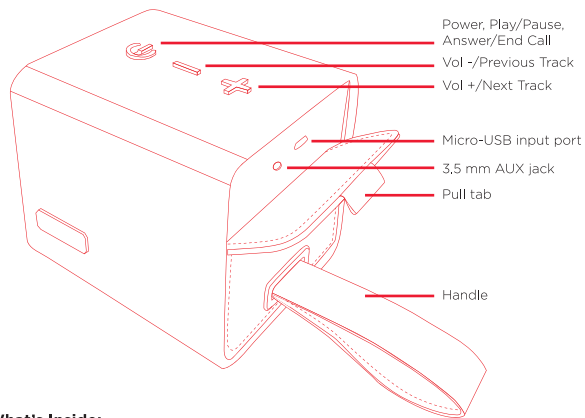

What's Inside:

- 1 x Fortune Fabric Bluetooth Speaker
- 1 x 3.5 mm audio cable
- 1 x Micro-USB charging cable
- 1 x Instruction Manual

Tech Specifications

Bluetooth Specifications: Bluetooth V2.1+EDR
Transmission Distance: $\leq 10\text{M}$ (depending upon operation environment and devices to which it connects)
Battery Capacity: 500mAh/3.7V
Frequency Response: 90Hz-20KHz
Sensitivity: 80db \pm db

• Helpful Tips:

- Do not turn the volume to a high level constantly as this could shorten the service life of the product or impair your hearing.
- When encountering any issues during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components.
- The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

• Bluetooth Operation:

- Press the power button for 3 seconds to turn the speaker on. The LED indicator will flash to detect Bluetooth enabled devices near you. The indicator will go off if no Bluetooth devices detected within 5 minutes.
- Follow the instructions on the bluetooth device, and pair the speaker with the desired device.
- When you want to play audio from another Bluetooth device, disconnect the speaker and restart the Bluetooth speaker and re-pair.

• Phone Call Operations:

- Press the power button to answer an incoming call, press the power button to end the call.
- Press and hold the power button to reject the call.
- Double click the power button to redial the last phone number called.

• 3.5 mm audio cable:

- Turn on the speaker.
- Pull the pull tab on the speaker to reveal the 3.5 mm aux jack and the micro-USB input port.
- Insert the provided 3.5mm audio cable into the aux jack, connecting to any audio device (phones, computers, etc.)

• Charging the speaker: *approximately 3.5 hours to fully charge. Charge prior to initial use of the speaker.*

- Turn on the speaker.
- Pull the pull tab on the speaker to reveal the 3.5 mm aux jack and the micro-USB input port.
- Insert the provided Micro-USB charging cable into the Micro-USB input port, the LED will light red until fully charged.

Important safety precautions

Please note the following precautions before initial use. Failure to comply may be dangerous and cause damage to your mobile devices.

- If the device does not respond once it is powered on, the battery capacity may be low. Do not over charge the internal battery.
- Do not immerse into water or expose it to moisture or weather conditions.
- Do not drop, knock, or shake. Rough handling can damage the internal precision component and its boards.
- Keep away from children, this device is not a toy.
- Keep away from fire or other sources of heat. Expose to high temperatures may cause it to explode.
- Do not short-circuit, as this may cause damage to the unit. Unauthorized changed or modifications may void your right to use this product.
- While using, always comply with any special regulations that may apply to the area you are in and always turn off your mobile device when its use is prohibited.



made in china

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.