

# BT140 User's Manual




## PRECAUTIONS

1. Please store and use this product at the ambient temperature;
2. Do not expose this product to the rain or damp surroundings;
3. Prevent this product from falling that could result in serious damage;
4. Do not dismantle, repair or modify this product on your own;
5. In order to avoid any risk, do not dispose this product inappropriately or toss it into the fire as there is a built-in lithium battery.

## CONSIDERATE HINTS

1. Do not turn up the volume to a fair high level constantly as this could shorten the service life of this product or impair your hearing;
2. When encountering any fault during operation, please cut off the power supply and disconnect the USB cable to prevent further damage to the speaker or other components;
3. The Bluetooth transmission range or connectivity could be affected by low battery power. In that case, please recharge immediately.

## OVERVIEW

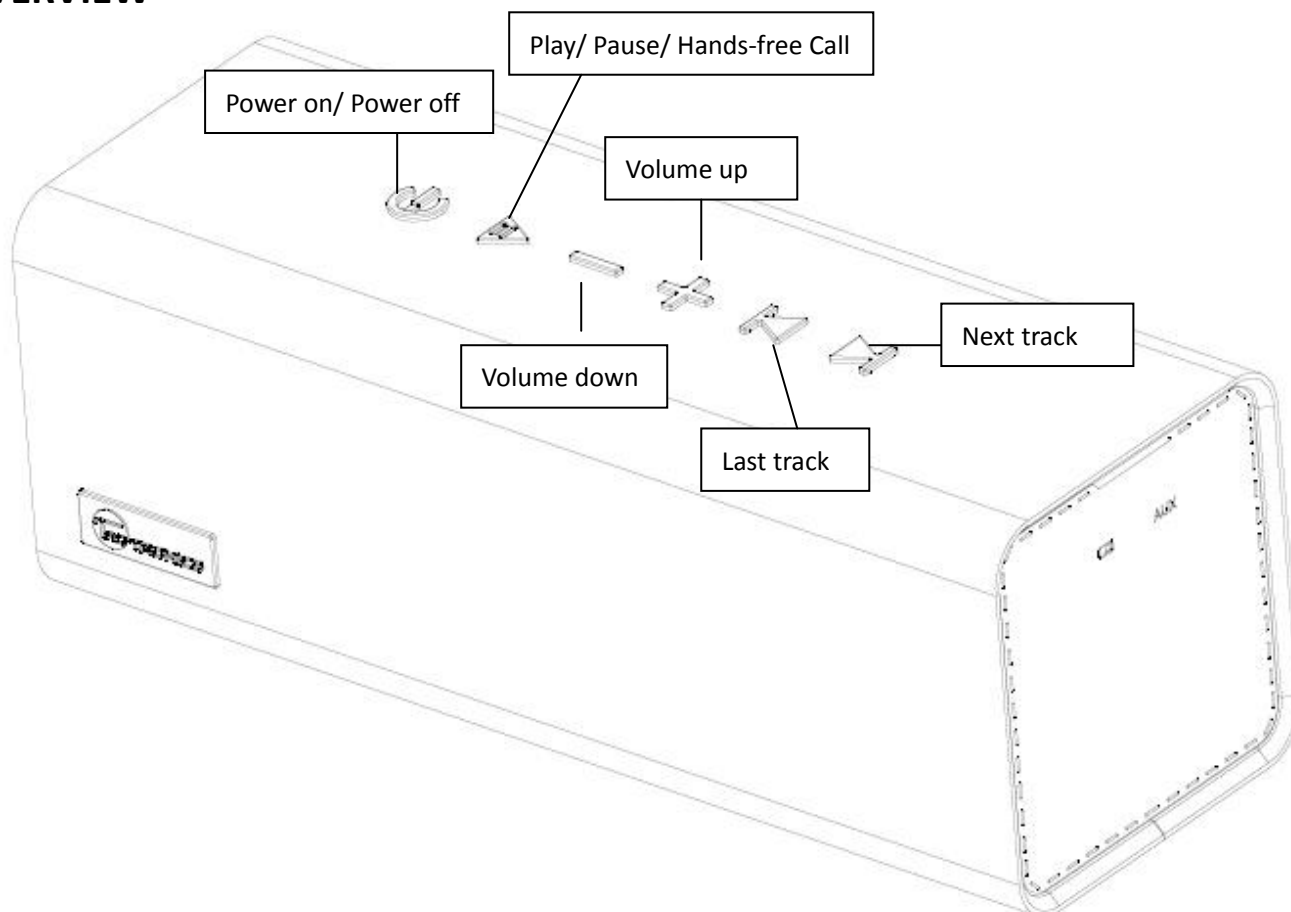

- ⏻ Power on or Power off
- ▶|| Hands-free call control button/Play/Pause
- + Volume up
- Volume down
- ◀ select last track
- ▶ select next track

## BLUETOOTH OPERATION

1. Press ⏻ for 3 seconds to turn on the speaker. The indicator light will flash to detect Bluetooth enabled devices near you. The indicator light will go off if no Bluetooth device is detected within 5 minutes.
2. Pair the speaker with the desired Bluetooth device.
3. Press ▶|| on top of the speaker to play/pause. Press - shortly to decrease the volume, press ◀ shortly to select last track. Press + shortly to increase the volume. Press ▶ shortly to select next track
4. When you want to play music from another Bluetooth device, disconnect the speaker and restart the Bluetooth speaker and re-pair.

## SPEAKER PHONE OPERATION

- Press ▶|| to answer an incoming call; press ▶|| to hang up.  
Keep pressing ▶|| to reject an incoming call.  
Double click ▶|| to redial the last phone number.

## AUX PLAYBACK OPERATION

1. Turn on the speaker.
2. Insert an 3.5mm audio cable into the aux jack, connecting to any audio device such as mobile phones or computers with the other end of the cable.
3. Play/pause as desired by pressing ▶||, control the volume by pressing + or -.

## CHARGING THE SPEAKER

The speaker has a built-in Lithium battery. The battery is rechargeable and provides approx 3.5 hours continuous operation when fully charged.

Use the micro-USB cable to charge the speaker. The red indicator light will glister. The red indicator light will go off when the speaker is fully charged.

## SPECIFICATION

Product Model: **BT140**

Bluetooth Specifications: Bluetooth V4.2

Transmission Distance: ≤10M (depending upon operation environment and devices to which it connects)

USB Recharge Voltage: DC 5V-500mA-1000mA

Built-in Battery: Lithium battery 2500mAh\*2/3.7V

Output Power: 8W\*2

Frequency Response: 90Hz-20KHz

Sensitivity: 80db±2db

Signal to Noise Ratio (SNR): ≥80dB

product standard: 203\*72.8MM

## Accessories

Speaker \* 1

Micro USB charging cable \* 1

Manual \*1

Aux cable\*1

## COMPATIBILITY

Device equipped with BLUETOOTH 4.2 or higher version (for details please refer to the relevant agreements, general specification), such as the IPAD, IPHONE (the second generation and IPHONE with updated IPHONE 3.1 software), IPOD TOUCH, MAC with Bluetooth, and most of smart phone or computer support Bluetooth.

Bluetooth 4.2 including agreements as: A2DP, AVRCP, HFP

## Trouble shooting

<b>Faults</b>	<b>Phenomena</b>	<b>Solutions</b>
Unable to pair up with other devices		1.Check if the speaker is still in the process of search or switch it off and then on. 2.There are too many enabled Bluetooth devices within 10 metres circle that cause difficulty in connection. If so, please turn these Bluetooth devices off.
The sound is rather low or distorted		1.Check the Bluetooth device's volume and then adjust it to a proper level. 2.Recharge the battery
The music stops from time to time		Check whether the speaker's effective transmission range is exceeded or there is an obstacle between the speaker and enabled Bluetooth device.
The Bluetooth indicator remains off		1.It suggests the battery power drops quite low and retry once being recharged. 2. Turn it on again.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.