

User Manual

This manual is to introduce the functions of the device, as well as matter which need attention, Please read this manual before using the device.

Announcements

- Please keep the device from moist and dust.
- Do not put the device in high-temperature environment, especially closed car in hot weather.
- Do not drop or strike the device.
- Do not shake the device violently, especially the LCD screen

part, which will cause abnormal display on the screen.

- Do not disconnect the device from PC when downloading, uploading or formatting, or it will cause programming errors of the device.
- Do not use alcohol, thinner or benzene-chemical to clean the surface of the device.
- Do not use the device in forbidden place, like airplane.
- Please back-up your files in device's memory always, The manufacture is not responsible for the formatting of disk after damage or repair of the device.
- Do not refresh firmware privately without original manufacturer's guidance. The manufacturer is not responsible for the breakdown of the device caused by private firmware refresh.

Table of Contents

1 appearance and button:	3
2 Basic Key Operation	4
3 Port Definition:	5
4 Operation Interface of The Device	5
4.1 Main Interface Description	5
4.2 Application Program Interface	7
4.3 Pre-loaded Applications	8
4.4 State Bar Description	10
5 Touch Panel Usages	11
6 Basic Setting of the Device	12
6.1 WIRELESS&NETWORKS	12

6.1.1 Wi-Fi setting.....	13
6.1.2 Data usage information.....	14
6.1.3 More options.....	14
6.2 Device	17
6.2.1 Sound: Sound Parameters Setting	17
6.2.2 Display: Display Parameters Setting	18
6.2.3 Storage: Storage Parameters Information	19
6.2.4 Battery: Battery Parameters Information	20
6.2.5 Apps: Applications.....	21
6.3 Personal.....	22
6.3.1 Location services:.....	22
6.3.2 Security:	22
6.3.3 Language & input:	23
6.3.4 Backup & reset:	24
6.3.5 Add account.....	24
6.4 System.....	25
6.4.1 Date & time:	25
6.4.2 Accessibility: Miscellaneous Function Setting.....	25
6.4.3 Developer options:	26
6.4.4 About tablet	27
7 Application Management & usage.....	27
7.1 Application Management	27
7.1.1 Install Android Applications.....	27
7.1.2 Applications uninstall	28
7.1.3 Application management.....	28
7.2Applications usage.....	28
7.2.1Browser	28
7.2.2 Camera	29
7.2.3 Video Play& Photo browser.....	30
7.2.4 Music Play	31
8 FAQ	32
9 About Firmware Upgrading.....	33

1 appearance and button:

1.1 Front:



2 Basic Key Operation

Power Button Definition of the Device

2.1 Power Button Usage:

Turn On: Press the power button and hold for 3-5 seconds.

Turn Off: Press the power button and hold for 3-5 seconds, →click OK.

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

2.3 MENU & BACK

MENU: Open the menu option

BACK: In different application program, you can return to last interface by clicking the icon on the left bottom of the main screen

3 Port Definition:

3.1 TF Card:

3.11 Using TF Card: The device supports maximum 32GB TF card.

Insert your card into the TF slot until it clicks into place. It's OK

3.12 Remove TF Card: Use the following methods to move the TF card. Close all applications or documents which have been opened on the card. Tap Settings → Storage → EXTSD → Unmount shared storage → OK. Press the card lightly; it is partially ejected, allowing you to pull the card out.

3.3 Reset: When the device is halted and can't be turned off by POWER button, users can launch the RESET function.

 
3.4 Micro USB: connect PC、charging 、 OTG U-disk、 USB keyboard and USB mouse etc.

3.5 Earphone: 3.5 mm standard earphone jack.


4 Operation Interface of The Device


4.1 Main Interface Description


4.1.1 Press lock icon and move it out of circle, the screen will be unlock.

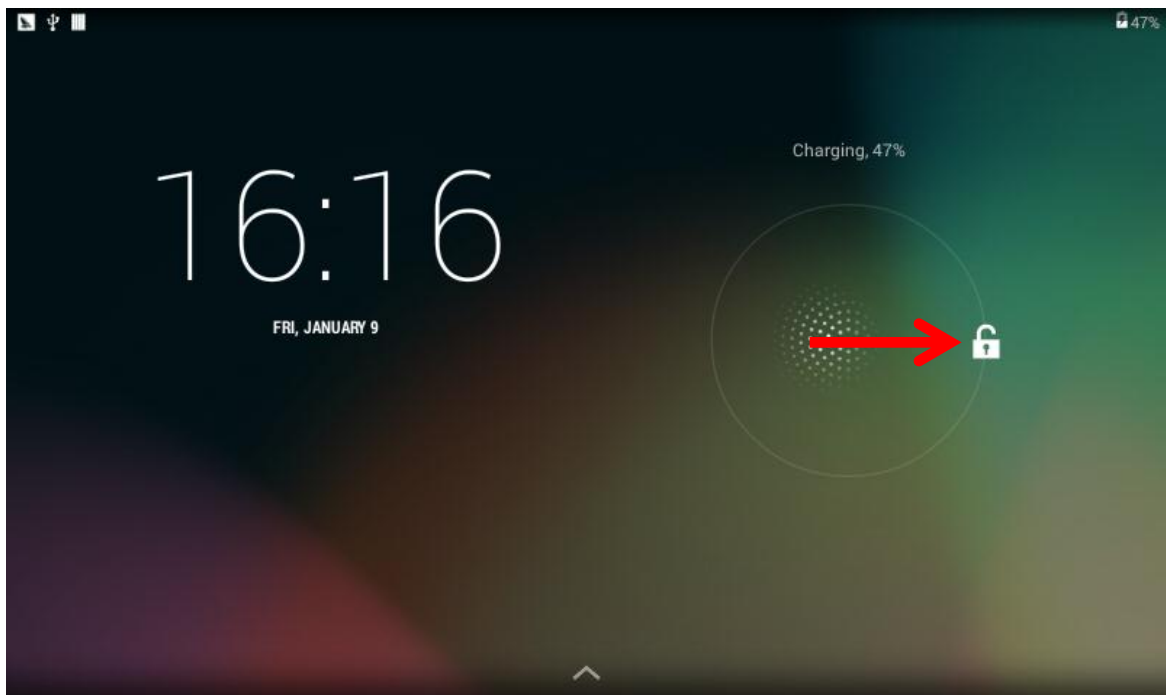


☆ Touch, hold and then slide icons to reposition them on the screen

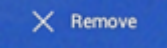  ☆ Touch, hold and slide icons onto  to remove them from the Desktop screen, **As the picture shown:**

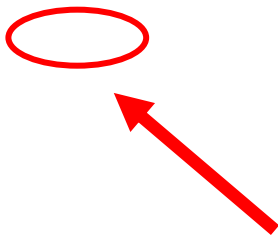

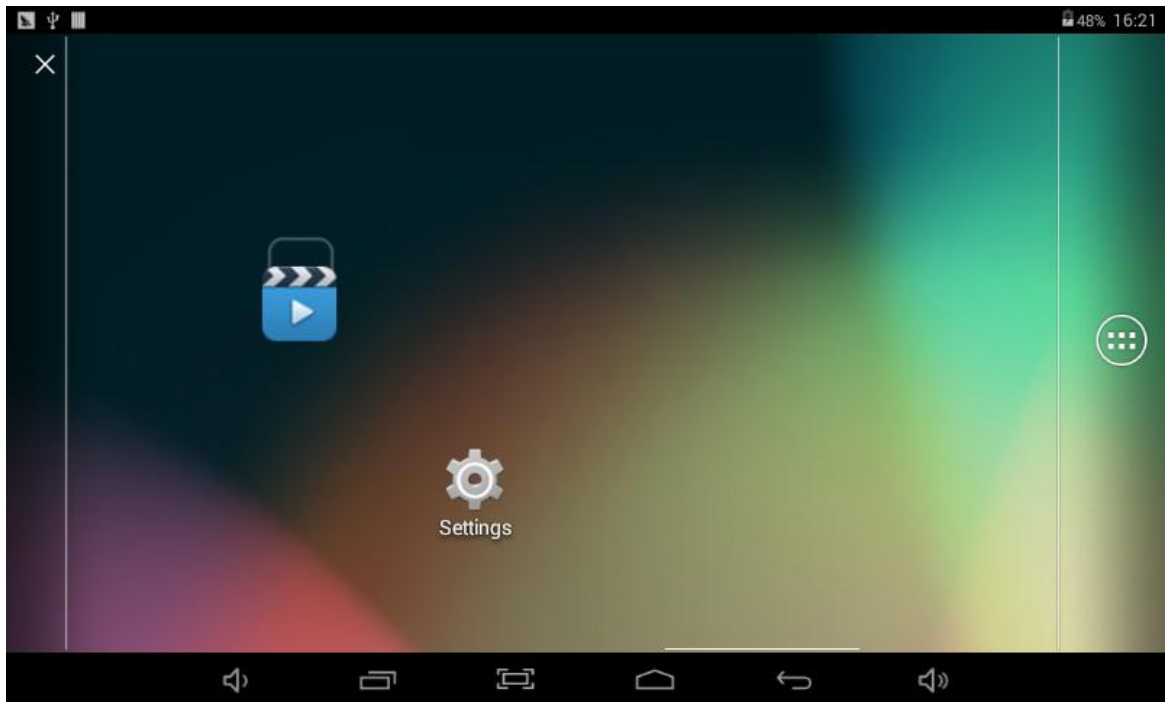

 
4.1.2 Change Wallpaper: Press screen until popup the following interface

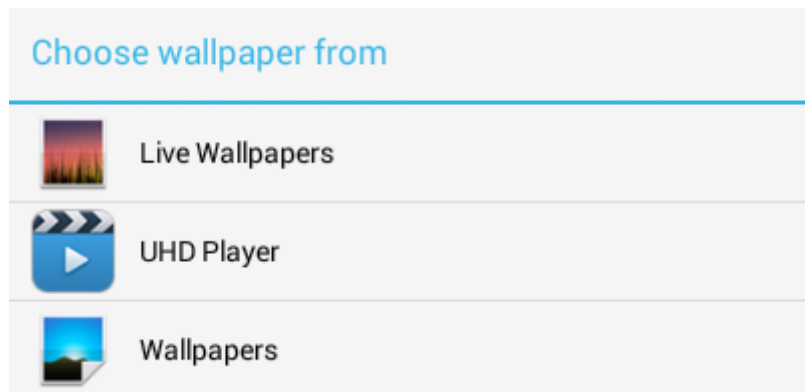


Choose the wallpaper that you need.

4.2 Application Program Interface

  
Enter into Application program Interface to choose the program that



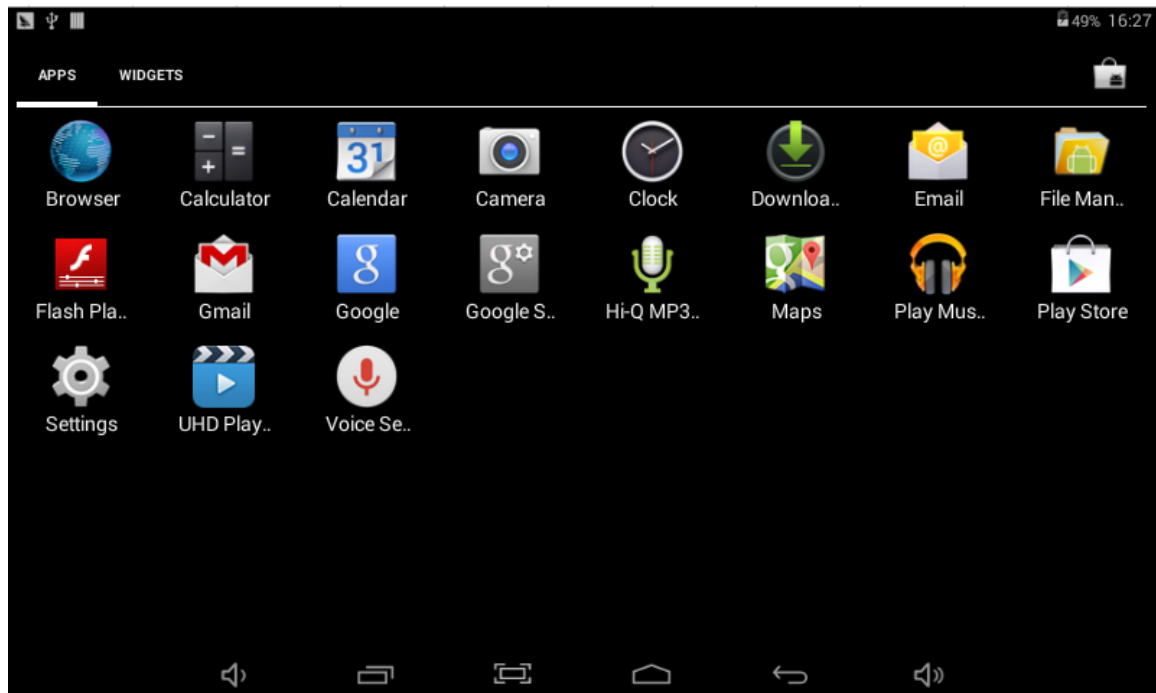





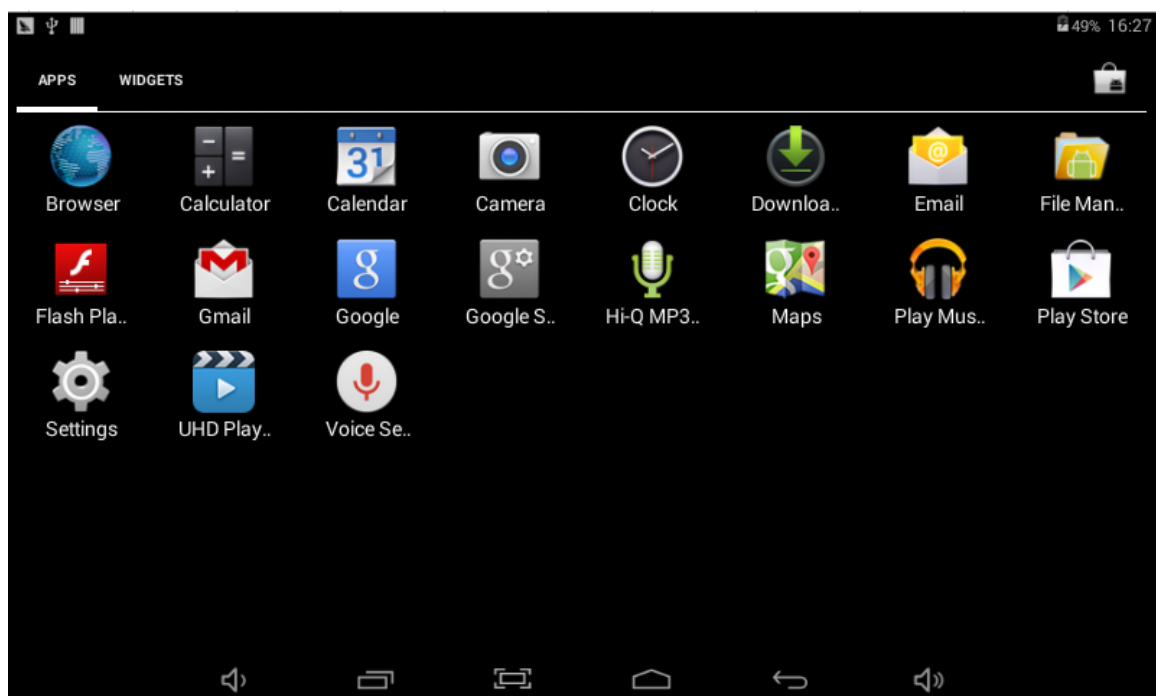

you need to run by clicking the icon  directly:



☆ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.

4.3 Pre-loaded Applications



 <p>Browser</p>	Browser	Access the Internet and “surf the web” whenever desired.
 <p>Calculator</p>	Calculator	Do calculation.
 <p>Calendar</p>	Calendar	Calendar with ability to set events.
 <p>Camera</p>	Camera	Take photos and save to internal memory or your memory card.
 <p>Clock</p>	Clock	Use as alarm clock with scheduled alarms.
 <p>Downloads</p>	Downloads	Downloads record
 <p>Email</p>	Email	Send/Receive email by using your existing email addresses.
 <p>File Manager</p>	File Manager	File manager application for viewing and managing files and apps. Use it to install Android apps, and to backup files to your SD card.
 <p>Flash Player Se</p>	Flash Player	Connect to the adobe Settings Manager.
 <p>Google</p>	Google	Google 搜索工具



 
Maps

Look up electronic map



Navigation

Achieve the navigation function

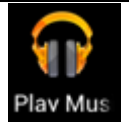

Play music

Play and manage audio files.



Play Store

Download and install the app



Settings

Multiple settings for personalizing and enhancing your Device.



Player





Video **display** tools

4.4 State Bar Description




Icons descriptions

	Back key
	Home page key
	Multiple tasks viewer
	USB connection information
	Screenshot

	To reduce the volume
	Increase the volume
	Time & Date information
	Battery & Network information


5 Touch Panel Usages


- This device with 7 inch screen. Following description is about the main interface and introduce how to use touch panel. No matter which interface you are in, you can press lightly to click

the icon  on the left bottom of the screen to return to main interface.


- In different application program, you can return to last interface

by clicking the icon  on the left bottom of the main screen.

 【Note】 : The function of the icon  is the same as the function of the Back button;

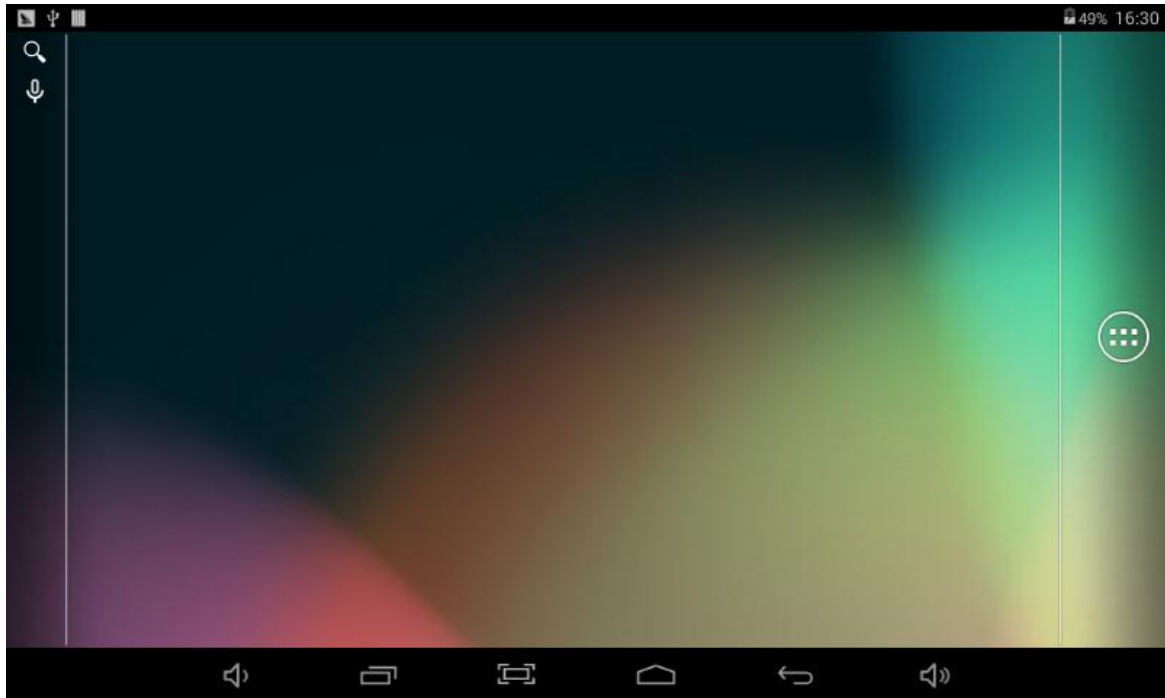

You can enter into the application program interface by clicking

icon  . On the application program interface, you can click the application program icon lightly to run the software

6 Basic Setting of the Device

- Click the  icon in the menu to enter into setting interface

6.1 WIRELESS&NETWORKS

WIRELESS & NETWORKS OUTLINE	WI-FI	WI-FI	Turn On/Off
	Data usage	Data usage	Display Mobile data
	more	Airplane mode	Turn ON or Turn OFF all wireless connection
		VPN	VPN Setting
		Ethernet	Ethernet settings
		Mobile networks	Mobile network settings

 


6.1.1 Wi-Fi setting

- Access setting-Wireless & Networks-Wi-Fi.


6.1.2 Data usage information

- Click Data usage to view Mobile data.

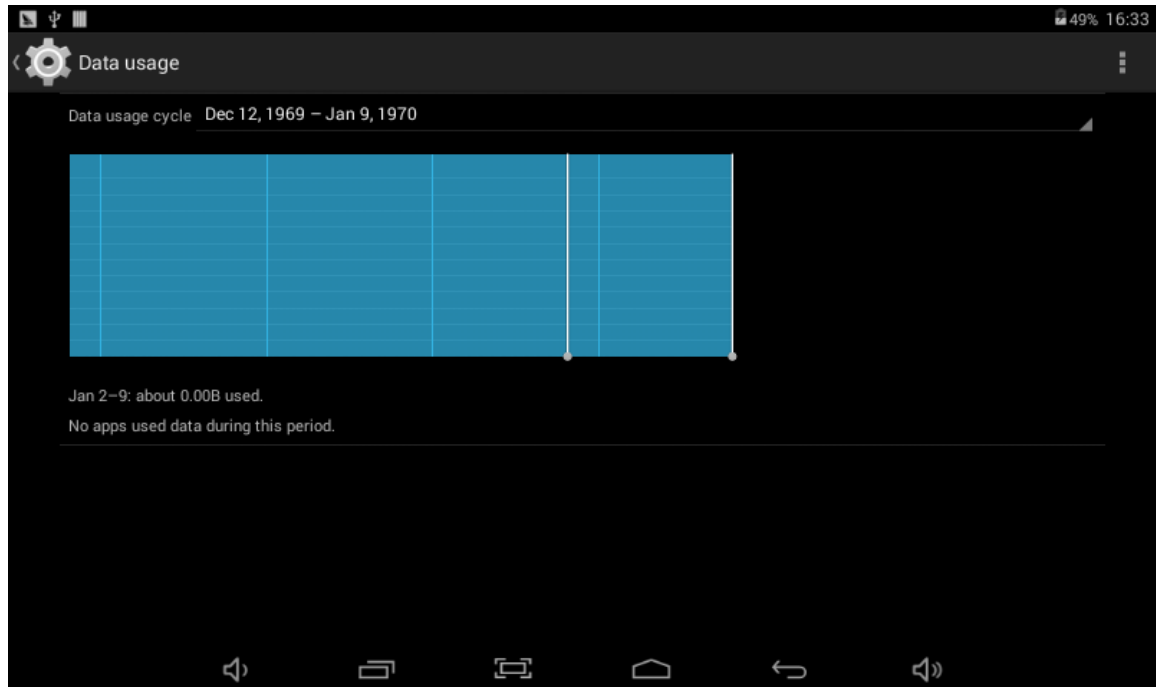


6.1.3 More options

 - Click more...to switch to Ethernet, VPN, Mobile networks , and Supporting information of USB LAN

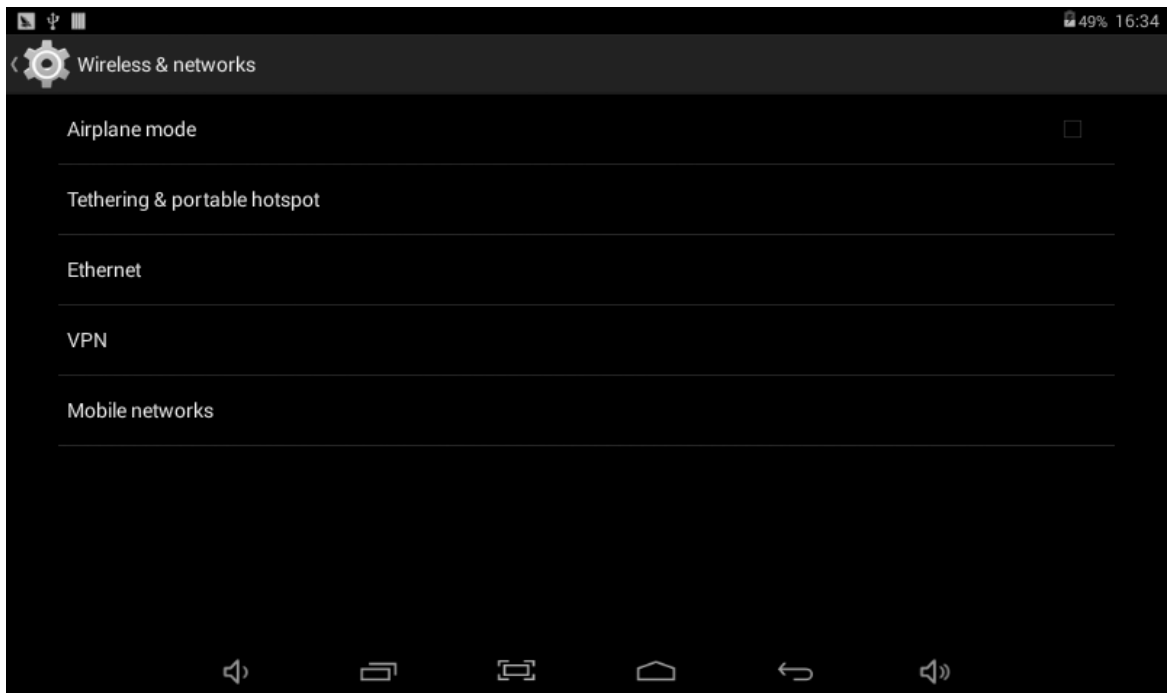

 
- Turn off WIFI, and access More-Mobile networks.

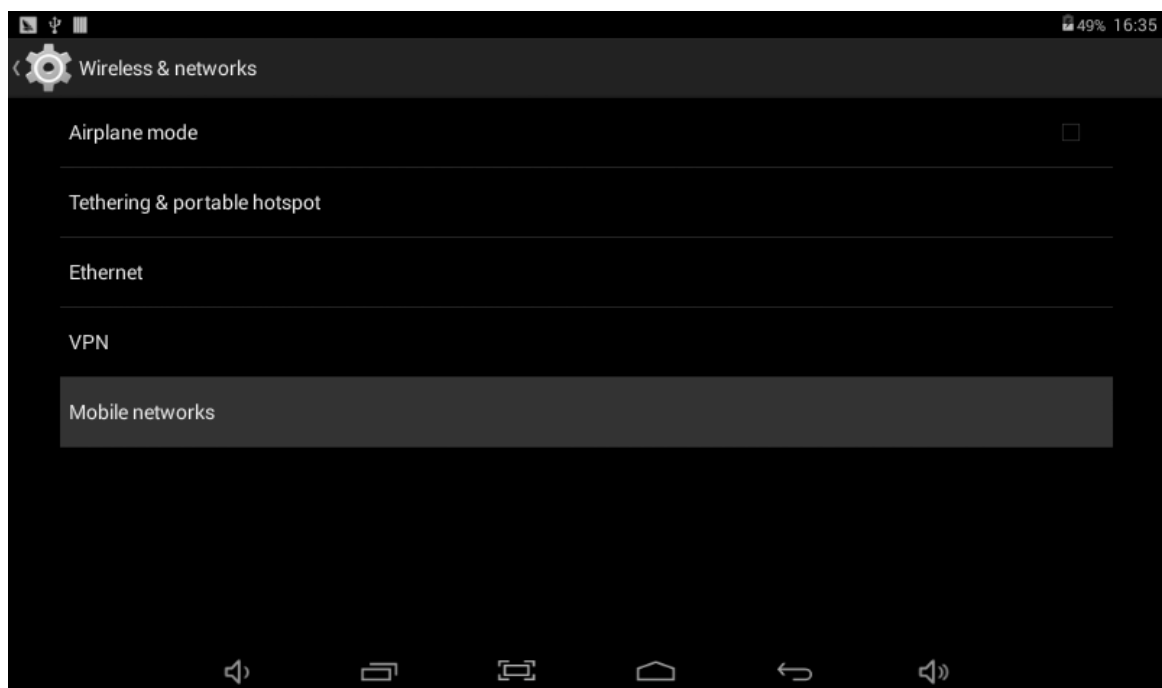


- Make sure Data enabled was chosen.
- Access Network operators, and search networks.
- You can select mobile networks automatically.

2) Network access via Ethernet

 - Turn off WIFI or 3G network, and access Ethernet.

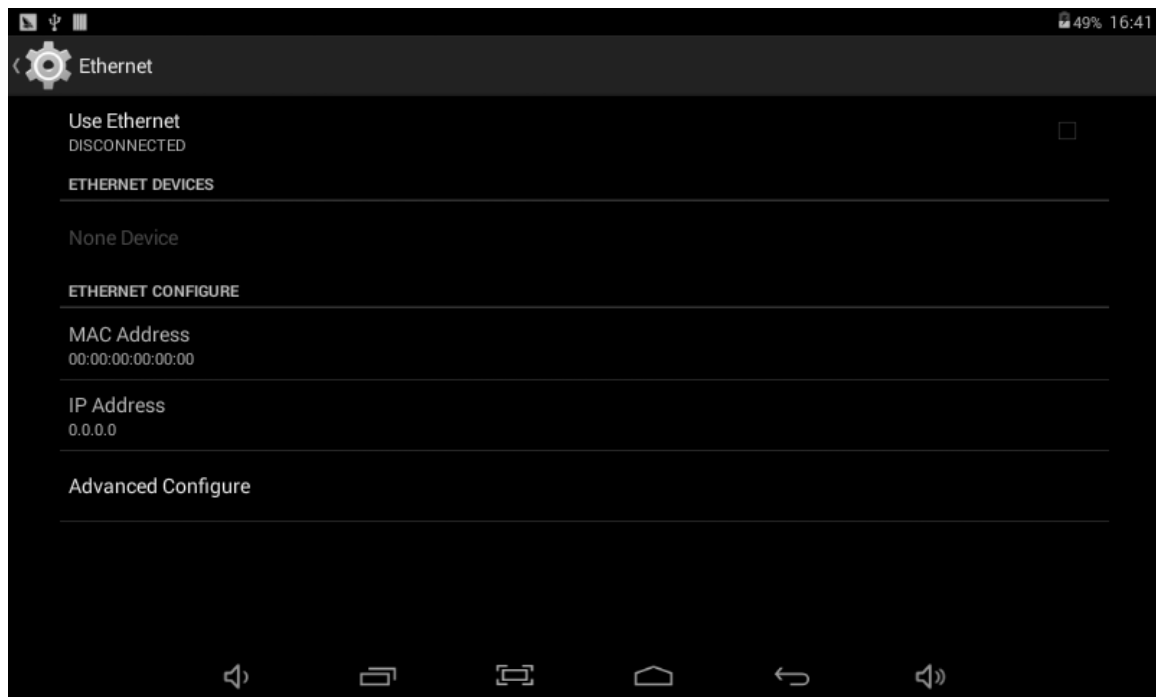

- Make sure Use Ethernet was chosen.

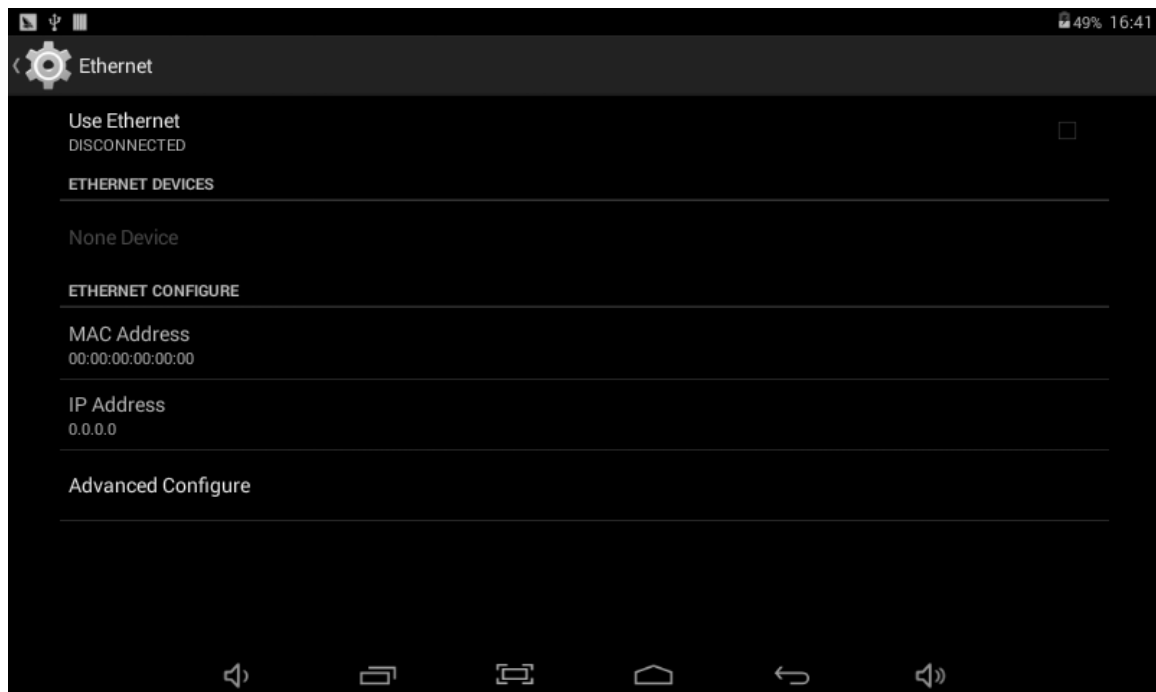 


- Correct Ethernet network via Ethernet USB Adaptor. (The manufacturer does not supply Ethernet USB Adaptor.)

- Ethernet Devices will show available network.


6.2 Device

6.2.1 Sound: Sound Parameters Setting

Sounds	Volumes	Music, video, games, & other media.
		Ringtone & notifications.
		Alarms.
	Default notification	Setting NOTIFICATIONS.
	SYSTEM	Touch sounds
Screen lock sound		

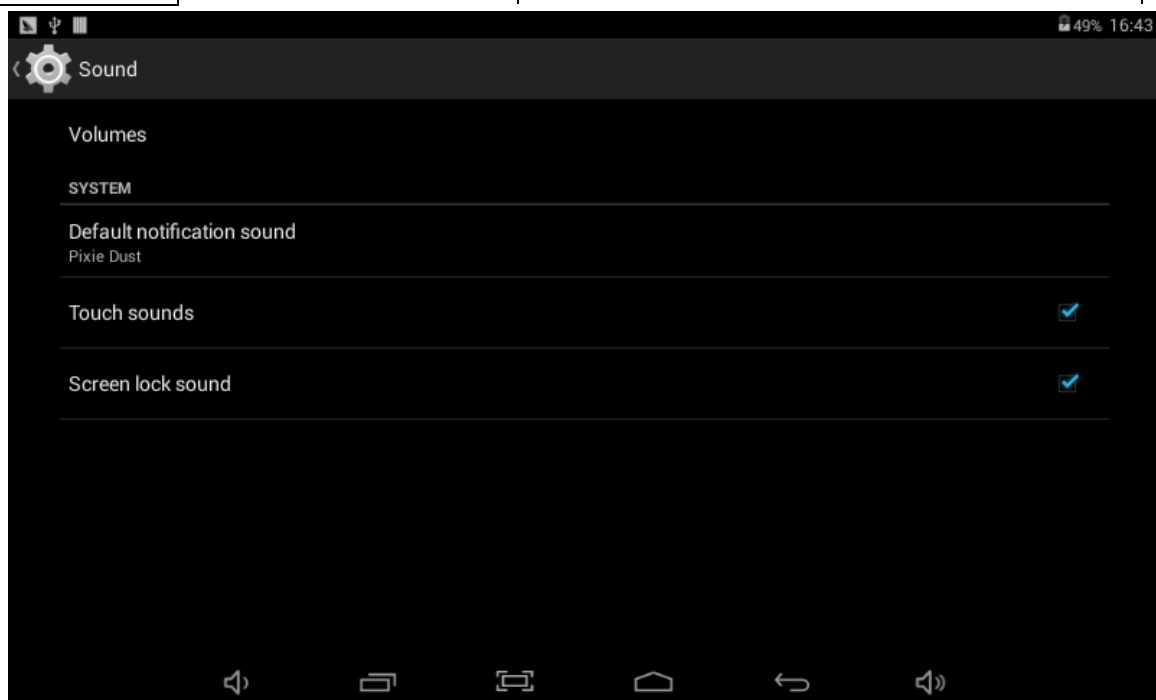 


6.2.2 Display: Display Parameters Setting

Display	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Wallpaper	Choose Live Wallpapers
		Choose Super-HD Player
		Choose Wallpapers
	Sleep	Choose sleep time
	Font size	Small , Normal , Large , Huge
	Accelerometer coordinate system	Default or Special coordinate system
	Screen adaption	Enable screen adaption




6.2.3 Storage: Storage Parameters Information

SD card & device storage	Media Scan	Enable media scanning on SD and USB
	Internal Storage	Display Storage information
	Extsd	Micro SD information
	USBHOST1	USBHOST1 Storage information

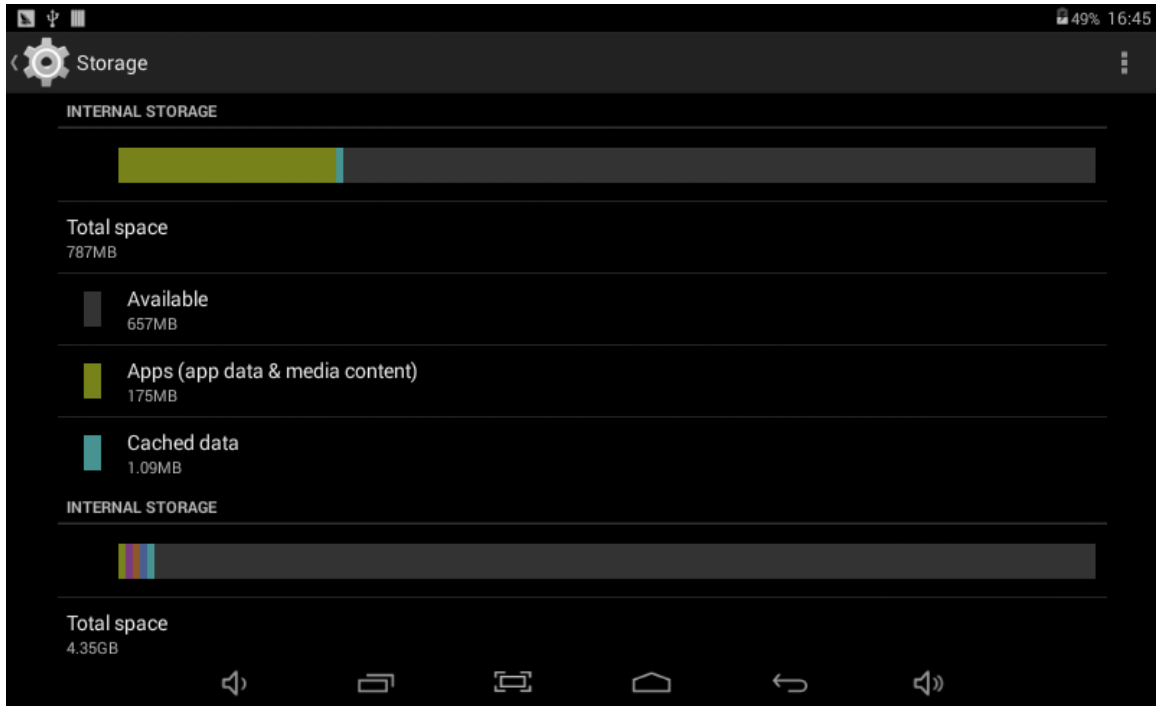 


 6.2.4 Battery: Battery Parameters Information

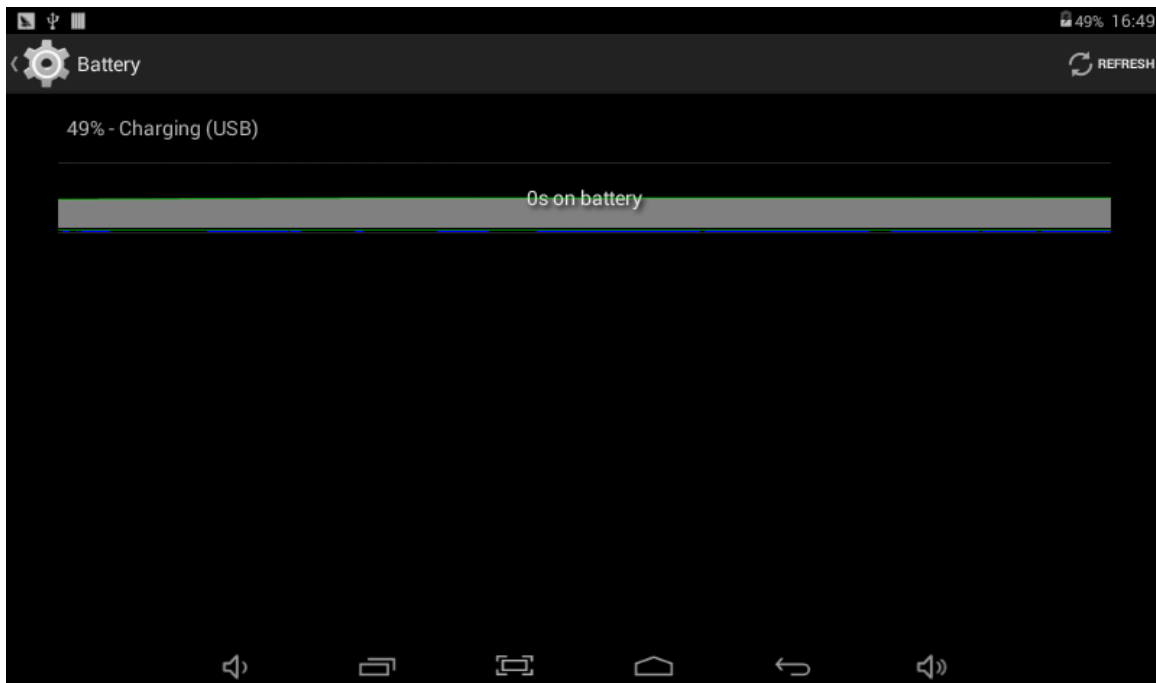


6.2.5 Apps: Applications

 Program Information, including DOWNLOADED, ON FLASH, RUNNING, ALL four item;

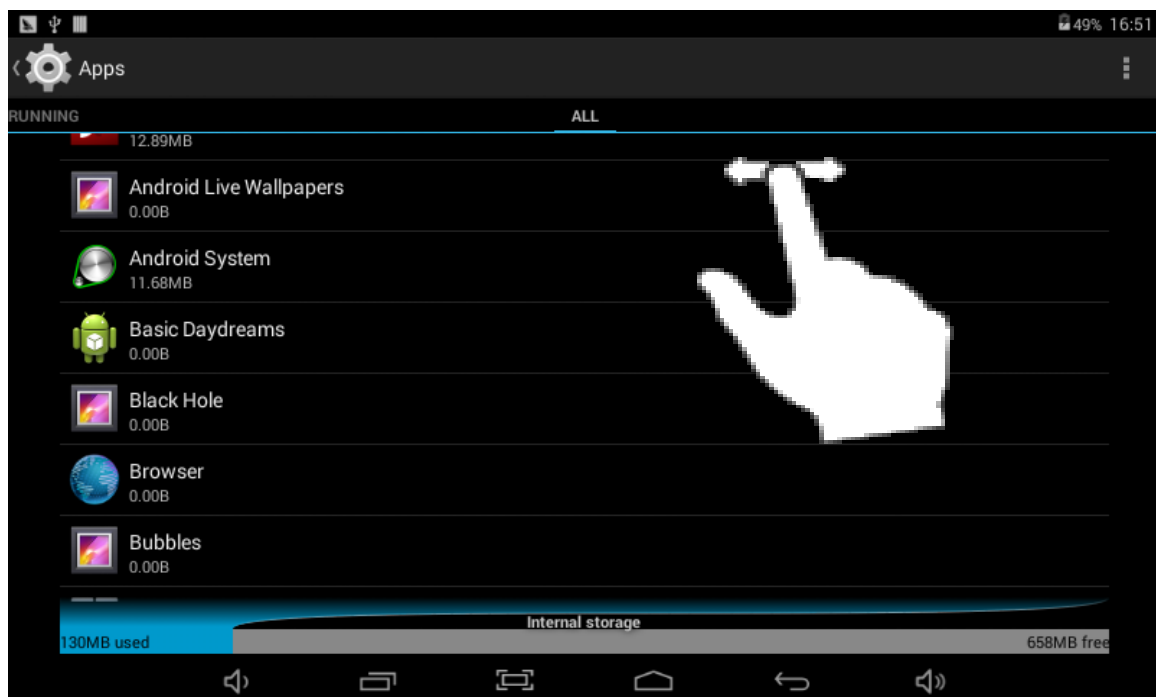


6.3 Personal

 6.3.1 Location services:

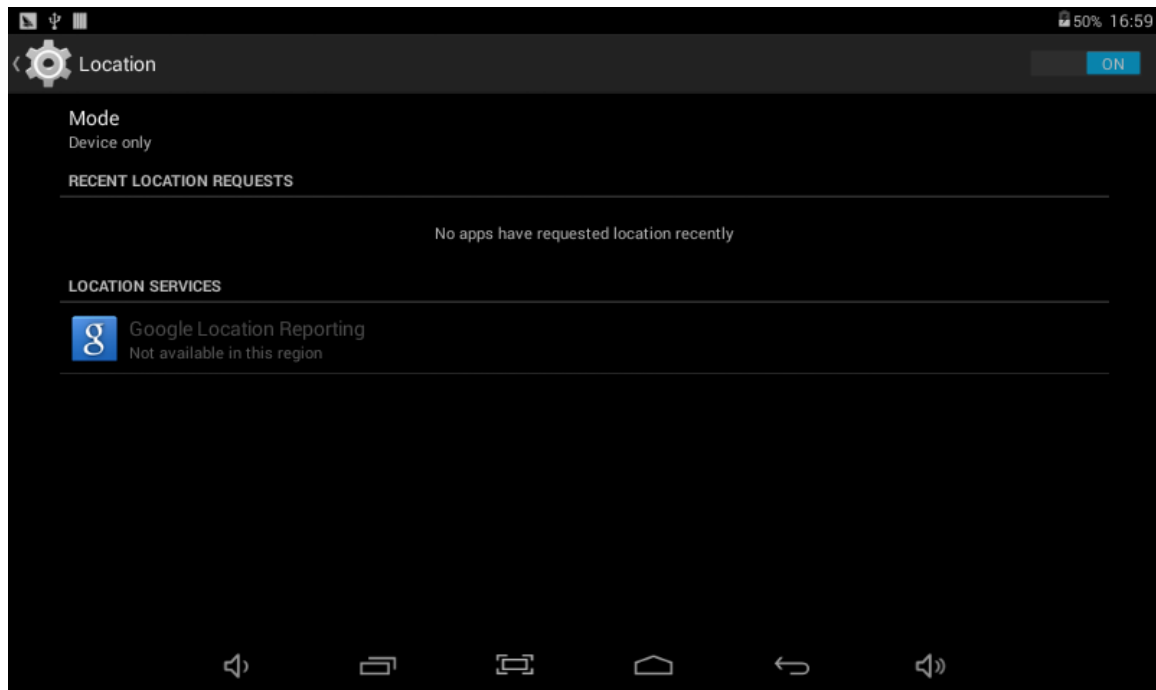


 6.3.2 Security:

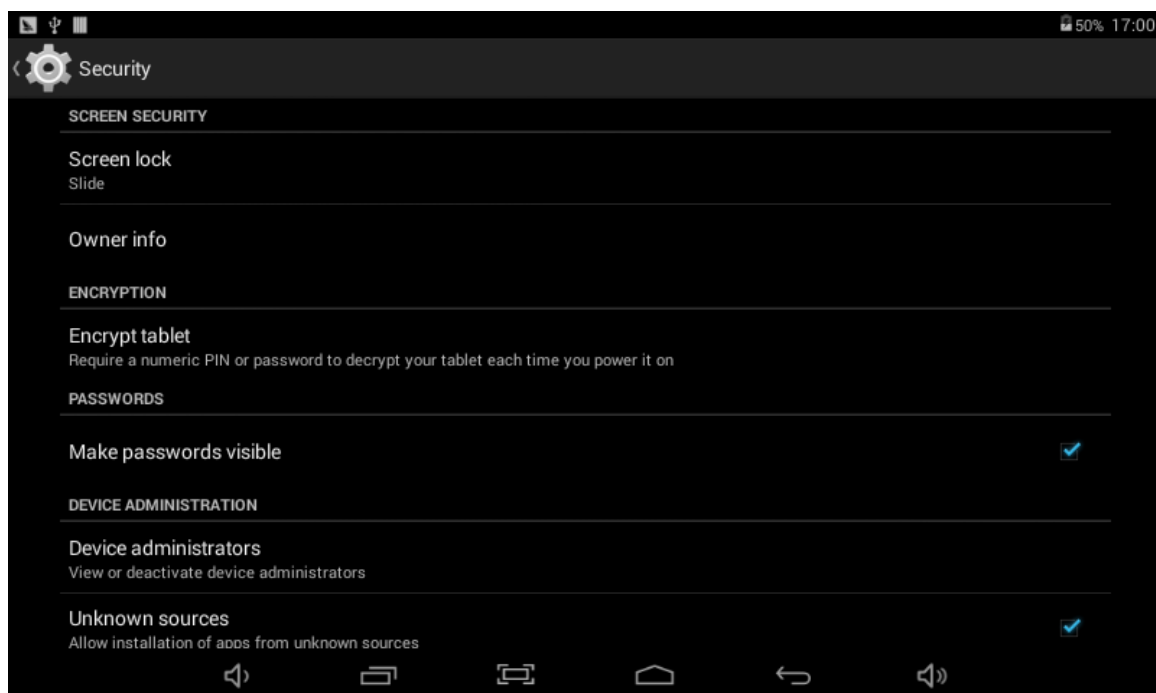


6.3.3 Language & input:


Language & keyboard	Select language	Select the language and region according to your location.
	Keyboard & Input Methods	Android keyboard/Google speech-to-text/Japanese IME/Google Pinyin input
	Speech	Voice search
		Text-to-speech output

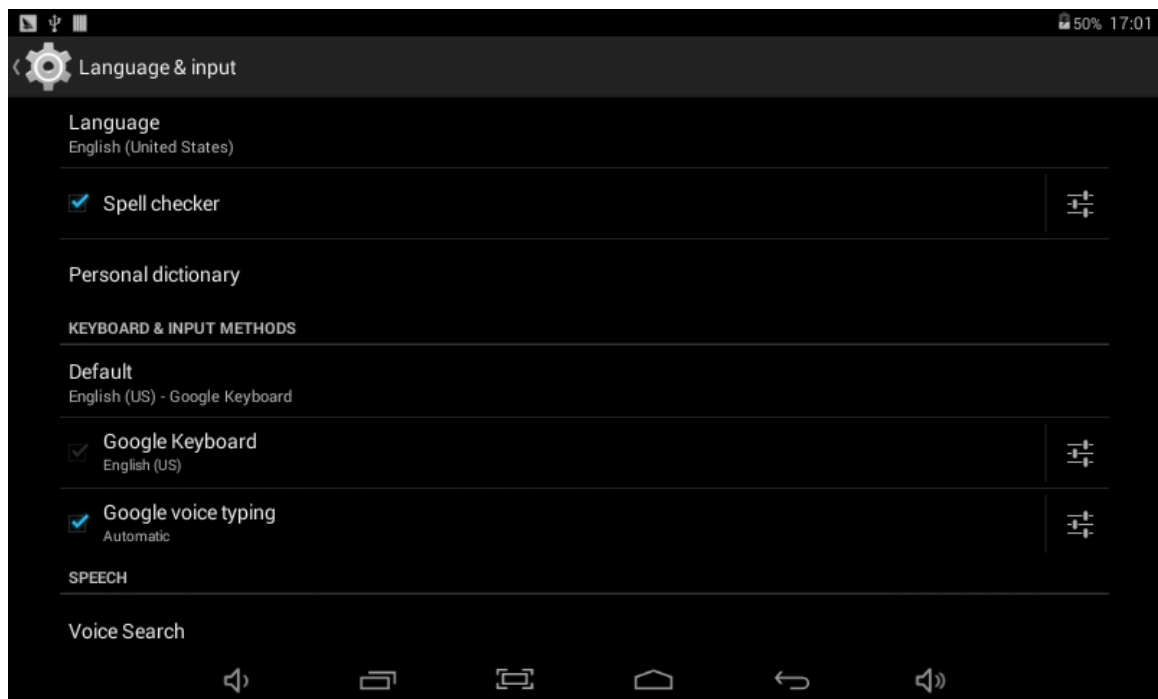 

 6.3.4 Backup & reset:

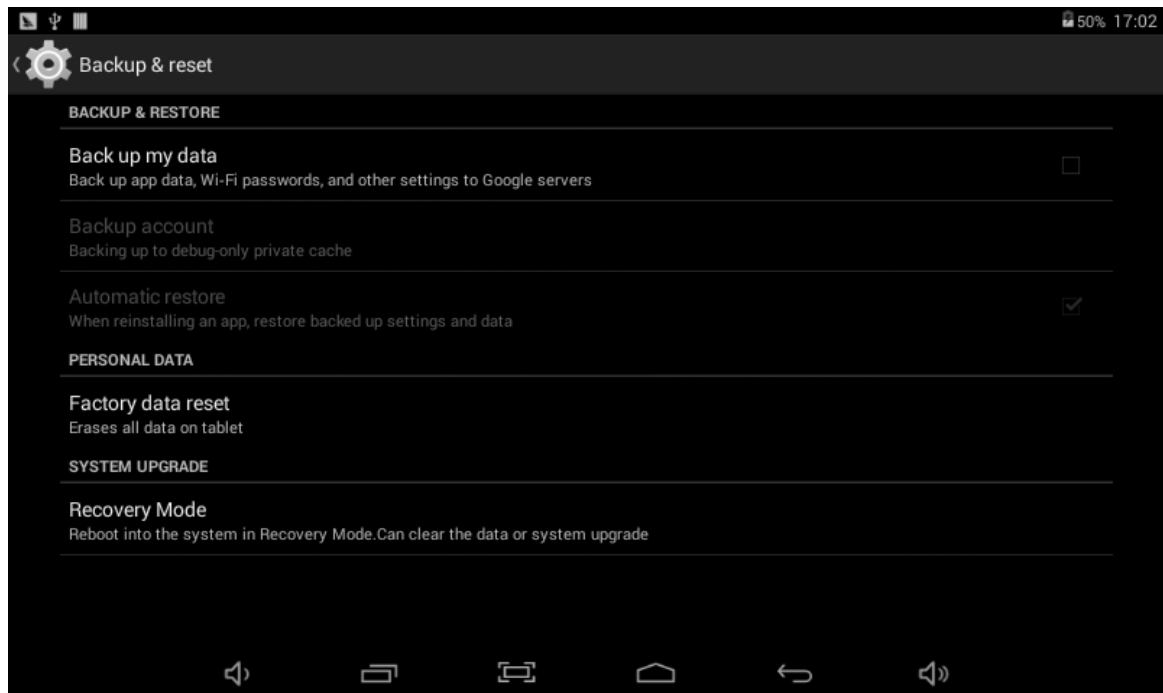

 
6.3.5 Add account

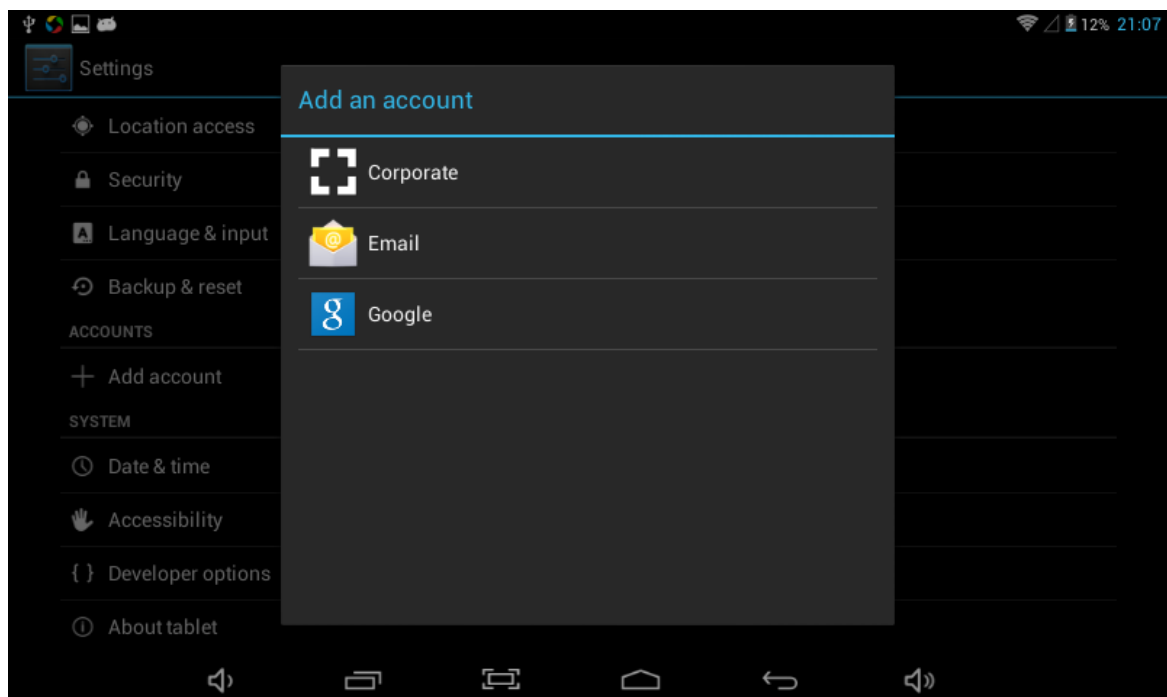

6.4 System

6.4.1 Date & time:

Date & time	Automatic date & time	Use network-provided time.
	Automatic time zone	Use network-provided time zone.
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.

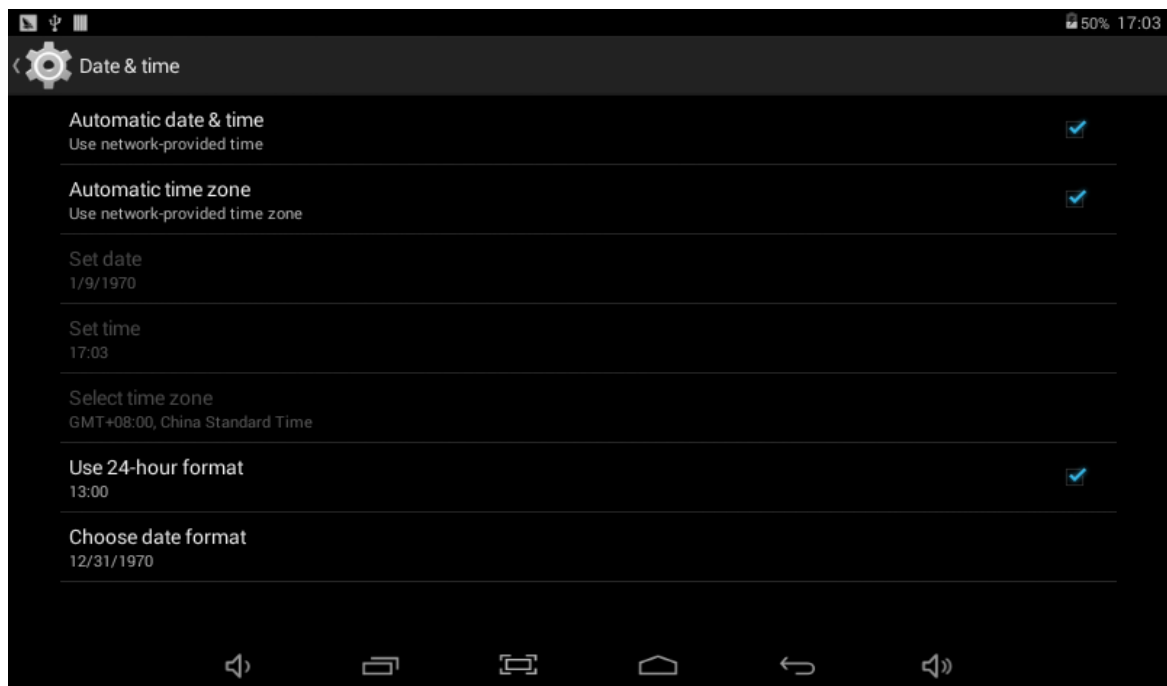 

6.4.2 Accessibility: Miscellaneous Function Setting


Accessibility	SERVICES	services
	SYSTEM	Large text
		Auto-rotate screen
		Speak passwords

	Touch & hold delay
	Install web scripts allow /Not allow



6.4.3 Developer options:

Developer options	USB debugging	Development device ID, Stay awake...
	User Interface	Strict mode enabled ,Pointer location...
	Apps	Background process limit...

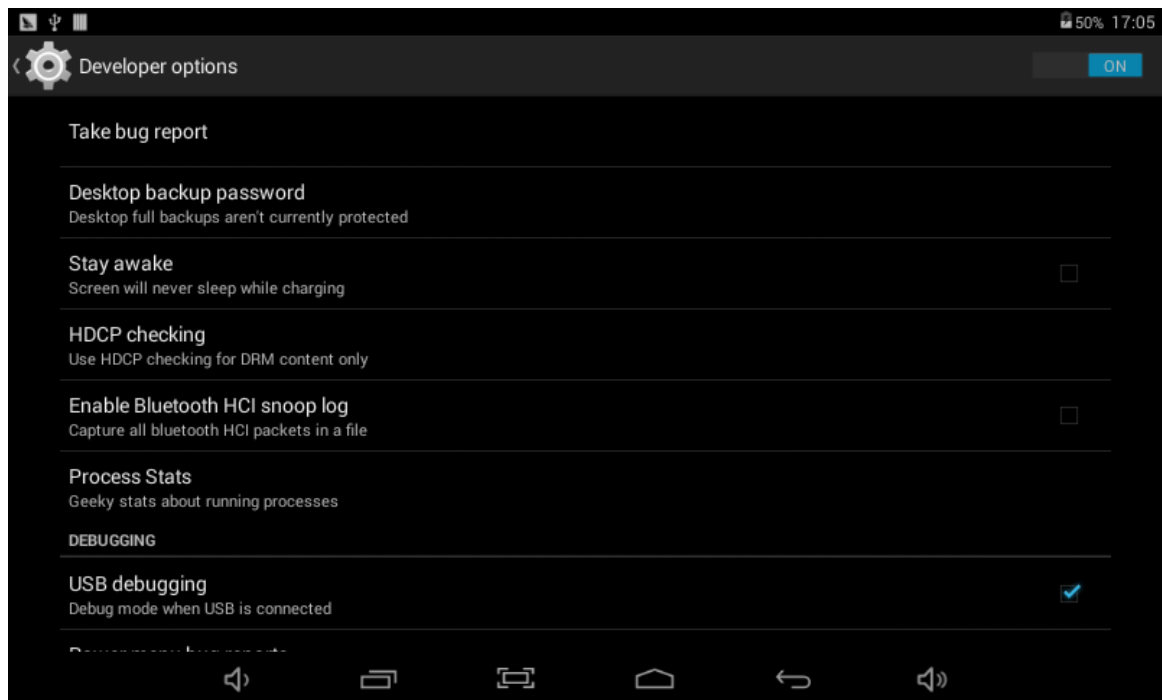 


6.4.4 About tablet

The information is about parameters, including model No. firmware version ect.

7 Application Management & usage

7.1 Application Management

7.1.1 Install Android Applications

- Copy APK installation package into device.
- Run File Manager , find the package and click it.
- Choose install to continue.
- If the application already exists in the device, choose OK to

replace it by latest versions of package.

7.1.2 Applications uninstall


- Go to setting-Apps-All.
- Choose the application and click it.
- Choose uninstall.

 
7.1.3 Application management

- Go to setting-Apps-All.
- Choose the application and run Force stop, Uninstall, Clear data or Move to SD card.

 
7.2 Applications usage

7.2.1 Browser

 
- Users can connect to the Internet through a browser.
- Click the browser icon on the Desktop , and then you can open the Web browser.

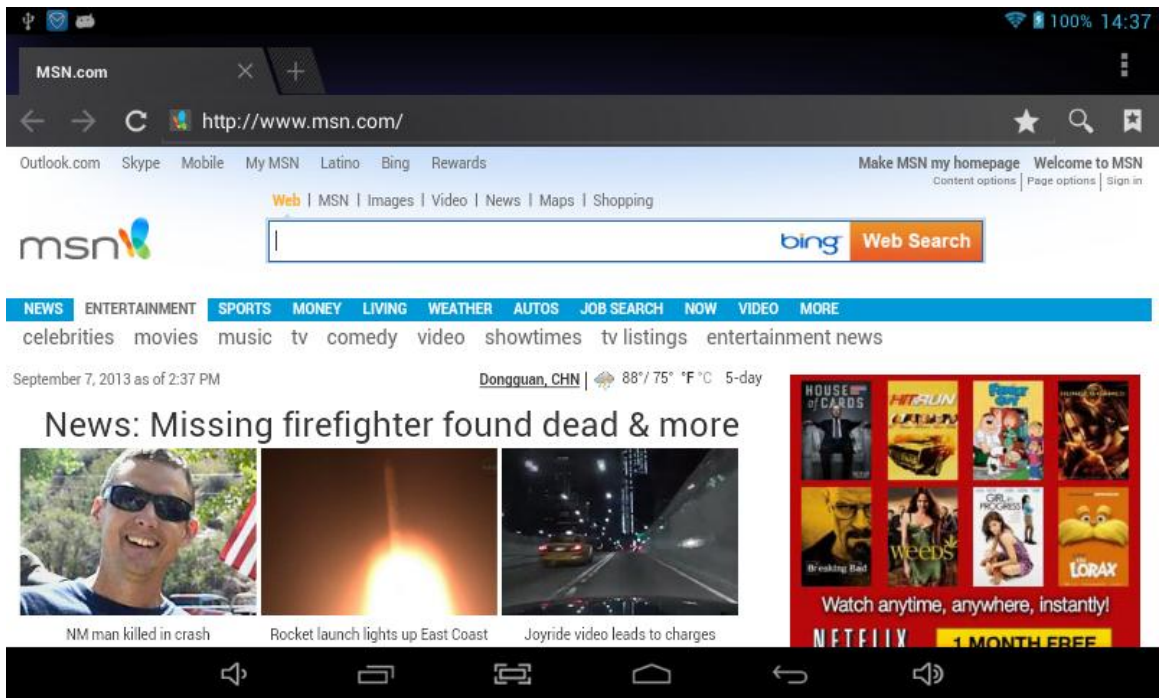



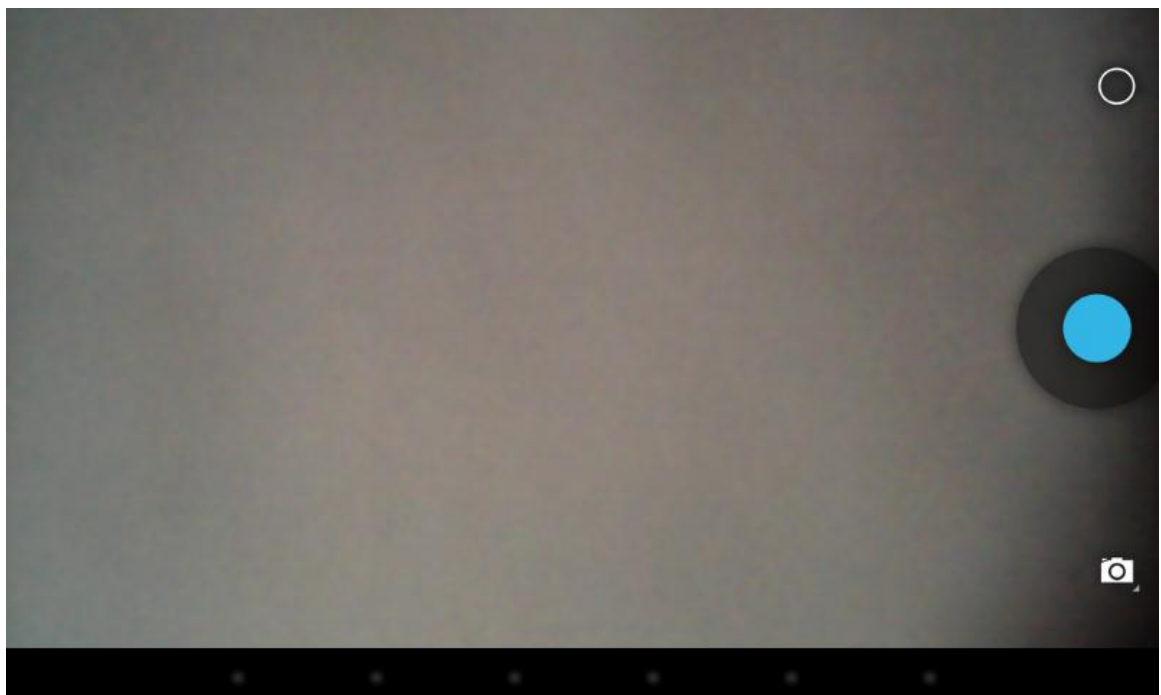




7.2.2 Camera




- Photos Mode



- Click Blue Circle  to take picture.
- Click  to access photographing options.
- Click the thumbnail picture to view saved pictures.
- Click  to switch to video recording mode.
- Video Recording Mode 
- Click Red circle  to start video recording, click it again to stop and save the video.
- Click  to access video recording options
- Click the thumbnail picture to view saved videos.
- Click  to switch to photos mode.

 
7.2.3 Video Play& Photo browser


- Click the player icon  to enter the video player & Photo browser interface, or open the video/photo files from File Manager directly.

* The device supports the following formats of video files: AVI (H.264, DIVX, XVID, rm, rmvb , MKV (H.264, DIVX, XVID), WMV, MOV, MP4 (H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263, H.264) (support 1080P) and more...

- When there is no video in the playlist, system will automatically

load the video files from the memory card after running video player.

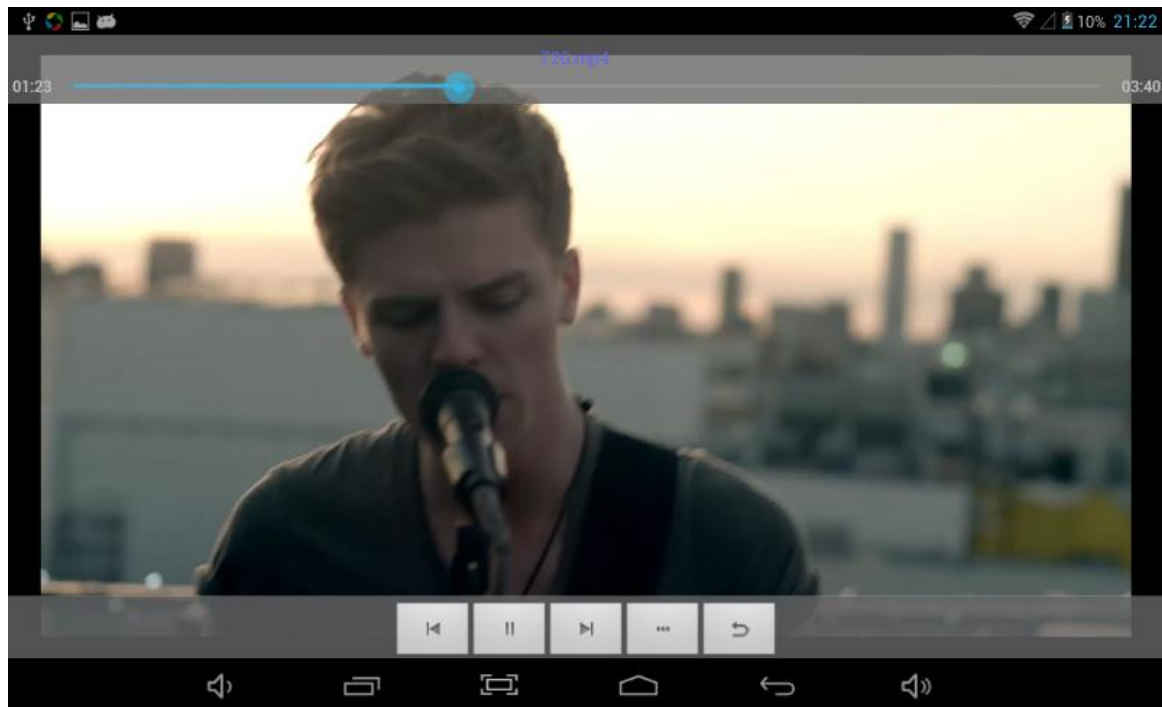

- Click the progress bar  , you can adjust the playback progress.

* Image formats supported: JPG, JPEG, GIF, BMP, and PNG


- Picture browser support multipoint touch, realize the function of zoom in and zoom out

7.2.4 Music Play

- Click the Music player icon to enter the music player interface, or open the music files from File manage directly.
- The device supports the following formats of audio files:
MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,APE,3GP,WAV,

and more.

 - When there is no audio in the playlist, system will automatically load the audio from the memory card after running music player.

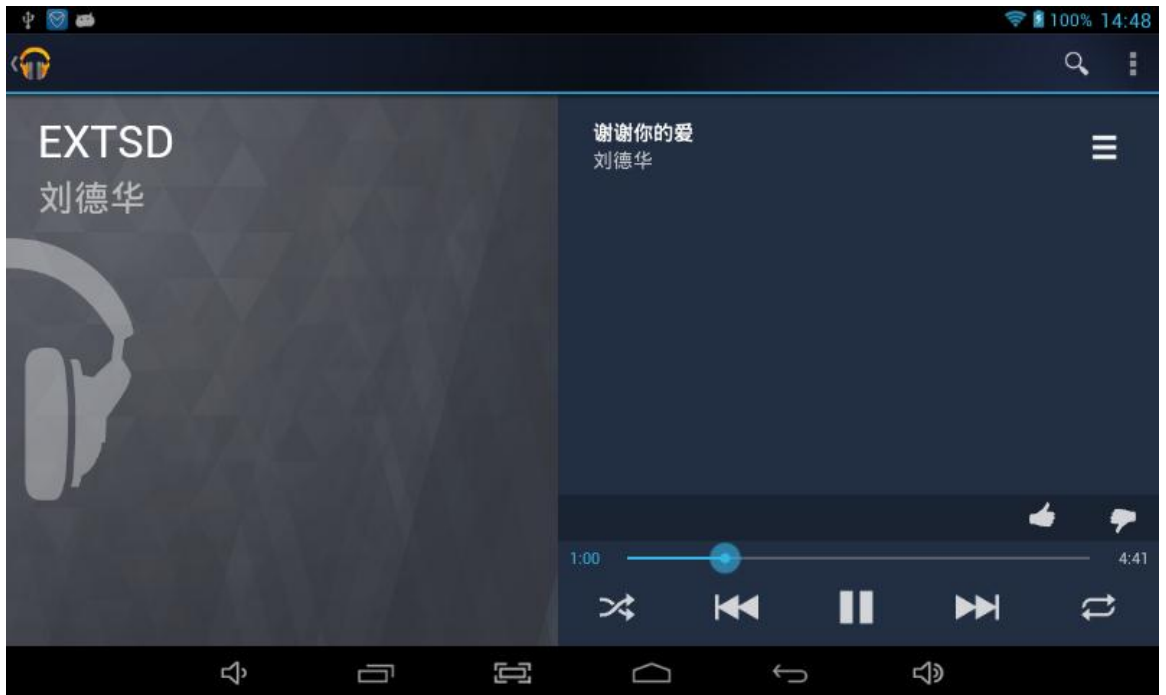


- Click the progress bar , you can adjust the playback progress.

8 FAQ

8.1 How can I change languages if i mistakenly choose an unknown language?

8.1.1 Find setting icon  and access Settings

8.1.2 Choose icon  to language&input setting, the first options is language setting.

8.2 How can I change input?

Access Setting-Language&input--, and set default input.

8.3 I already installed some applications, but I can't find them now, why?

Some applications are installed in external TF card, so if you fetched out the TF card from the device, you will not see these applications.

8.4 There are problems of your system, many popup of error.

8.4.1 Restart the device by POWER button, or Reset, Use a stick to prick the reset for 5 seconds, and restart the device.

8.4.2 If you have restarted the device and error popup still exist, you can check active applications to see if there is any unknown

8.4.3 There may be virus in the device, please install security applications and protect your device.

9 About Firmware Upgrading

We do not suggest any form of private firmware flashing without guidance of the original manufacturer. The original manufacturer is not responsible for any possible breakdown of the device caused by user's private firmware flashing.

10 Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.