
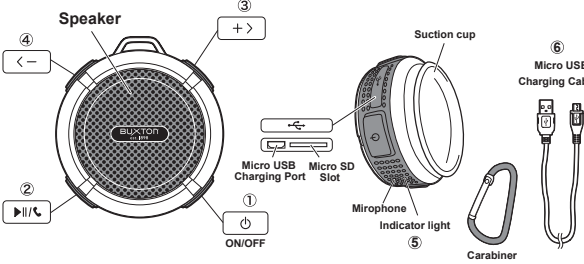


Size:270x90mm (风琴折正反两面印刷)

<p style="text-align: center;">WIRELESS SPEAKER</p>  <p style="text-align: center;">USER MANUAL</p> <p>Read Instructions Carefully read all safety instructions and the user manual before operation.</p> <p>Power Source Only use the supplied power cable. Using other power cables may cause damage to the unit or potentially start a fire. Avoid installing the speaker in a location with high humidity or in a location where liquid may spill onto the speaker. Liquid may cause a short circuit which can result in electric shock or fire.</p>	<p>Do not Expose to Heat Sources Do not install near any heat sources such as radiators, stoves or other appliances that can generate heat.</p> <p>Do not expose to Dust Do not use the speaker in dusty areas as dust can impair electronic components.</p> <p>Cleaning the Unit Unplug the speaker before cleaning. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.</p> <p>Lightning Unplug the speaker during lightning storms to prevent damage.</p> <p>Modifications & Attachments Never add any attachments and/or equipment without the approval of the manufacturer. Unauthorized modifications may result in fire, electric shock or other personal injury.</p> <p>Ventilation Do not block any ventilation holes.</p> <p>Do Not Open Speaker Case There are no serviceable parts inside the speaker. Modifying any parts may result in fire, electric shock or other personal injury.</p> <p>Product Overview</p>	 <p>Button Description</p> <ol style="list-style-type: none"> Power switch On/Off <ul style="list-style-type: none"> Press for 3 seconds to power on/off The unit will turn off automatically after 5 minutes if no audio devices are paired Pause/Play/Answer button <ul style="list-style-type: none"> Press for pause, press again for play music under Bluetooth playing mode. Press the Phone button to answer or end phone calls for handsfree use Volume Up / Next song <ul style="list-style-type: none"> Short press for next song Long press for volume up Volume Down / Next song <ul style="list-style-type: none"> Short press for previous song Long press for volume down
---	---	---

<p>5. LED indicator – built-in battery status</p> <ul style="list-style-type: none"> Blue LED flashing – Before pairing successfully, pairing and playing. Blue LED solid – Playing pause and after pairing successfully. Red LED solid - charging, when charging is finished, it will turn off <p>6. Micro USB charging port underneath a waterproof and dustproof cover Insert SD card to play music from your Micro SD card. Note: If the volume is low, turn the volume up on your device. Warning: If using outdoors or near liquids, always ensure the covers are closed and undamaged.</p> <p>Accessories included 1 PC Micro USB charging cable 1 PC Carabiner (To attach speaker to backpack, belt etc.)</p> <p>Charging the Speaker</p> <ol style="list-style-type: none"> Locate the protective USB cover on the right side of the speaker and lift the flap to expose the USB port. Connect the Micro USB cable into the speaker. Plug the other end into a 5V USB charger or computer USB port. Charge for 2 to 3 hours. When the speaker is charging, the red indicator light will be visible on the bottom edge of the speaker. After the speaker has completed charging, the light will turn off. Remove the USB cable from the speaker. Cover the USB Port on the speaker using the protective cover. <p>Pairing the Speaker</p> <ol style="list-style-type: none"> Make sure the speaker and your Bluetooth-enabled device (smartphone or table) are no more than 1 meter (3 feet) apart for the initial pairing process and ensure the speaker is turned off. 	<ol style="list-style-type: none"> Press and hold the Power Button until you hear an indicator tone and the blue indicator light flashes rapidly. Your speaker is now in pairing mode. The method of pairing varies by device. Please consult your Bluetooth-enabled device's manual for pairing instructions. Search for Bluetooth device "BT SPEAKER" and select to pair. Once successfully paired, the blue light will remain solid. <p>Specifications: Battery capacity: 250mAh Output power: 4Ω 3W Transmission distance: ≤10 meters Charging method: Micro USB 5V Input: DC 5V 500mA Charging time: As the input power is different, usually 1-3 hours Operating time: approx. 3 hours at 70% volume playing.</p> <p>Tips: Please make sure the speaker is in power off mode. When trying to activate the pairing mode:</p> <ol style="list-style-type: none"> Turn on your mobile phone and activate the Bluetooth function. Search for Bluetooth devices. "BT SPEAKER" will show up. Pair your device with "BT SPEAKER". If password is needed, type in 0000, after "BT SPEAKER" is paired with your device, connect it to your device. <p>Notes & Tips: Once this speaker is paired and connected to your mobile phone, next time when you switch on this speaker, it will connect to your mobile phone automatically as long as the Bluetooth in your mobile phone is on.</p>	<p>Troubleshooting</p> <table border="1"> <thead> <tr> <th>Issue</th> <th>Cause</th> <th>Solution</th> </tr> </thead> <tbody> <tr> <td>Cannot switch the speaker on</td> <td>Battery needs charging</td> <td>Charge the battery</td> </tr> <tr> <td>Unable to pair the speaker</td> <td>Speaker is already switched on, and it is not in pairing mode.</td> <td>Refer to the section of "Pairing BT SPEAKER to mobile phone or other device"</td> </tr> </tbody> </table> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. <p>Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>	Issue	Cause	Solution	Cannot switch the speaker on	Battery needs charging	Charge the battery	Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode.	Refer to the section of "Pairing BT SPEAKER to mobile phone or other device"
Issue	Cause	Solution									
Cannot switch the speaker on	Battery needs charging	Charge the battery									
Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode.	Refer to the section of "Pairing BT SPEAKER to mobile phone or other device"									

044-15-1178'17
STYLE# SM-51412
MADE IN CHINA