


WN01B01




*WeLoop*

Quick Start Guide

## I Buttons and operations

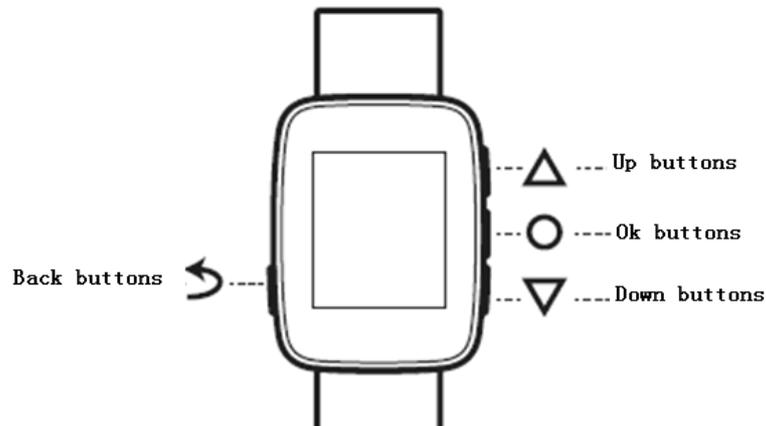


- Up/ Down buttons—under standby mode, press Up/ Down buttons to select the display mode of time & date; When there is information, press it to check the message content.
- OK button — under standby mode, press OK button to enter the main menu, coordinating with the Up& Down buttons, you can set Bluetooth, Music, Camera, Notification, Display and Time&Date respectively.
- Back button — under standby mode, press Back button to display the watch current status, When there is information, press Back button to neglect it; When phone call comes in, press it to shut down the vibration alert; after setting of the menu, press Back button to save the settings and exit the menu.

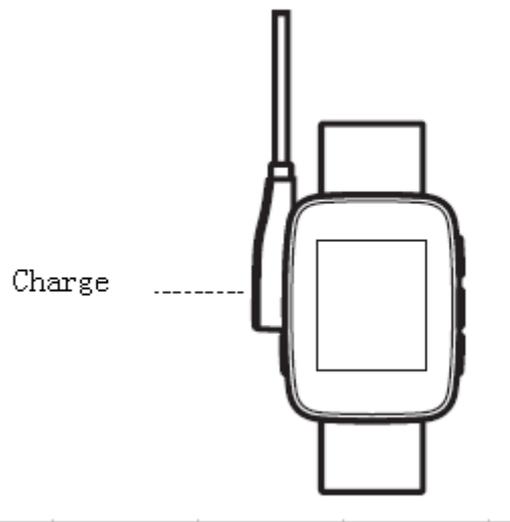

- Use a standard USB port to charge your device.
- Your "WeLoopBlack" is of 5ATM waterproof level, suitable for swimming, surfing, rafting and other outdoor sports. It is recommended to use a soft damp cloth for cleaning, and disinfection agents can be used if necessary.

## II Connection introduction

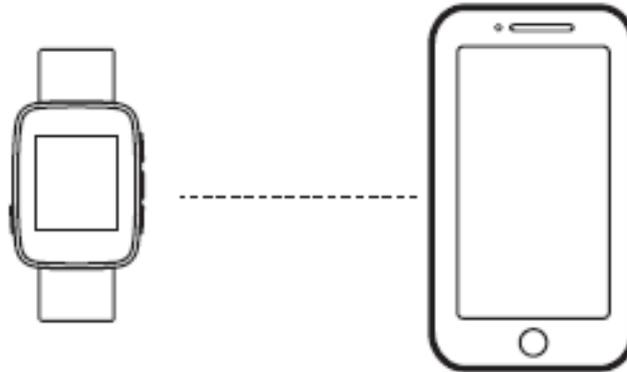

### Step 1

#### Download the application WeLoopBlack

- For iOS users: search WeLoopBlack application in the App Store compatible with iPhone 5S 7's, iPhone 5, and iPhone 4S iOS
- For Android users: search WeLoopBlack application in Play Store compatible with LG Nexus 5(Android 4), Nexus 4, Samsung Galaxy S5, Galaxy S4, Galaxy Note III, HTC One, One M8, SNOY Xperia Z1, Z1 Compact, Z Ultra, and Z2

### Step 2

- Press down the Back button to display the product ID of the smart watch, run WeLoopBlack on the phone, and select corresponding product ID to connect.

### III Function introduction



 **Bluetooth** — select the connected phone model to disconnect it and search for phones (when select Find/Forget option, the phone will sound to confirm the orientation)

 **Music** — play music in iOS device, press OK button to play/ pause the music, press Up / Down button to select the previous / next music

 **Camera** — run camera in WeLoopBlack, and then press Up/Down button to switch between photo mode and video mode, press OK button to take a photo or start/stop video recording

 **Notification** — receive message, phone calls, text and email alert from phone information center

 **Sports&Fitness** — calculate the user's physical activity every day, press the Up/Down button to check health records in a week

### **FCC Certification Requirements**

**Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.**

**The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.**

**This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**