



PRISM COLOR VIDEO MONITOR

Birth & Up

08096

User Guide



At Safety 1st, we're not only about safety, we're also about your satisfaction. If you have any questions, please call our Consumer Relations department and let us help. We want to hear from you. 1-800-544-1108 or email us at consumer@safety1st.com.

! WARNING:

Please read the following instructions and warnings carefully. Keep these instructions for future reference. Tools needed: Flat Head Screwdriver (not included)

 **DANGER!**

To prevent electric shock, NEVER use the Transmitter or Receiver near water, such as a bathtub, sink, laundry tub, in a wet basement, etc.

 **WARNING!**

To prevent strangulation with power cord, never place transmitter within reach of child.

Important!

- Please read all warnings and assembly instructions carefully before using the video monitor.
- Parent Unit is a receiver. Baby unit is a transmitter.
- Check your child's activity at regular intervals, as this monitor will not alert parents to the silent activities of a child.
- To prevent entanglement with the adapter cord, NEVER PLACE THE CORD IN OR NEAR A CRIB OR PLAYPEN. DO NOT place the Receiver anywhere its AC adapter cord is near children.
- ALWAYS KEEP TRANSMITTER, RECEIVER AND AC ADAPTERS OUT OF REACH OF CHILDREN
- This product is not a medical monitor and its use should not replace adult supervision.
- Check the reception regularly.
- NEVER use the Transmitter or Receiver near water. For example, do not use near a bath tub, bathroom sink, laundry tub, kitchen sink, in a wet basement, etc.
- Always unplug the AC adapters from wall outlets during long periods of non-use.
- Position the Transmitter, Receiver and AC adapters to allow adequate ventilation and prevent these components from overheating.
- To prevent overheating, keep the Transmitter, Receiver and AC adapters away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat. Also keep these components out of direct sunlight.
- Use only the AC adapters provided. Use of any other adapters may damage the Transmitter and/ or Receiver. Plug the AC adapters into standard household current only (120V AC outlet)! To prevent entanglement and overheating, DO NOT use extension cords.
- The AC adapters may become slightly warm to the touch during operation. This is normal.
- Position the AC adapter cords so that they are not walked on or pinched by items placed upon or against them, paying particular attention to cords at AC adapter plugs, wall plugs and the point where the cords attach to the Transmitter and Receiver.
- The LEDs emit IR (infra red) light that is not harmful.
- This product should be serviced only by qualified service personnel at Dorel Juvenile Group when:
 - An AC Adapter or its plug is damaged
 - The Transmitter or Receiver has fallen
 - Liquid has spilled into the Transmitter or Receiver, or
 - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance.
- DO NOT attempt to service this product beyond that described in the Troubleshooting section. All other servicing should be referred to qualified personnel at Dorel Juvenile Group.

 **WARNING** 


TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE. NEVER ATTEMPT TO OPEN THE CASE OF THE PRODUCT. THIS IS DANGEROUS AND WILL VOID THE WARRANTY.



Parent Unit



Baby Unit

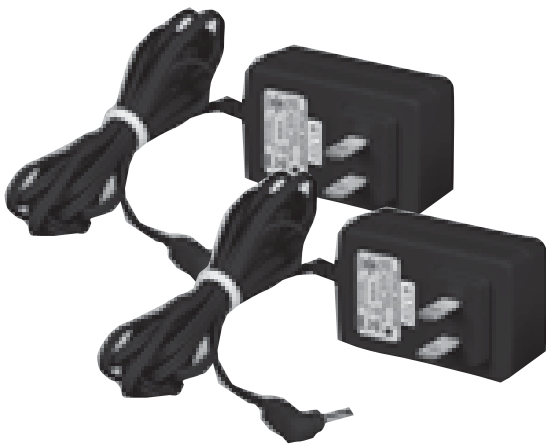

2 AC Adapters



AAA Rechargeable Battery Pack

(already installed in Parent Unit)

Parent Unit

- A Video Screen
- B Sound Light Bar
- C Room Temperature Button
- D Quick View On/Off Button
- E Power On/Off Button
- F Select Button
- G More Bright/Scroll Right
- H Less Bright/Scroll Left
- I Zoom In /Scroll Up
- J Zoom Out/Scroll Down
- K AC Adapter Jack
- L Volume Control

- M Belt Clip
- N Speaker

Baby Unit

- O Camera Lens
- P Base
- Q Temperature Probe
- U Power On/Off
- R Microphone
- S AC Adapter Jack
- T Nighttime Viewing Lights

QUICK START



1 Connect AC adapter to the side of the Parent Unit.



2 Connect AC adapter to the back of the Baby Unit.



3 Plug Parent Unit and Plug Baby Unit into wall to charge or to operate AC power.



4 Turn Parent Unit on. Hold down Power On/Off button until light comes on.



5 Turn Baby unit on. Hold down Power On/Off button until light comes on.



- Place the Baby Unit 4 to 6' (1.5 to 2m) away from the baby.
- To reduce audio feedback, position the Parent and Baby Units far enough away from each other to avoid interference. Turning the volume down will help.
- This monitor has indoor/outdoor range. During use of the monitor, if the sound quality deteriorates you may be reaching the limits of the monitor's range. If this happens, you will need to move the Parent Unit closer to the Baby Unit. You can verify using the link icon.
- Adjust the volume to a comfortable level for your environment.
- Night Vision lets you see the baby in a darkened room. The video display during this time is in black and white. For best view of your baby in a dark room, increase brightness control until desired brightness is achieved.
- Baby Unit can also be wall mounted. (See pg. 13.)

More Features, More Functions

Once you've set up your monitor and powered on, it's time to learn about the innovative parent convenience features your monitor has to offer. Keep reading to explore these many features, including Voice Activation, Quick View, Room Temp, setting up multiple cameras and more. You can set it up for increasing levels of monitoring when you need it, you can make adjustments that conserve battery life—you can even use it as an alarm clock.

Let's get started!

SOUND LIGHT BAR

The sound light bar will illuminate red from left to right as baby gets louder.




VOLUME ADJUST

Volume button is on side of Parent Unit. To adjust volume, press up (+) or down (-). Volume bars will display on screen. No bars means Parent Unit is on mute.



Video Display

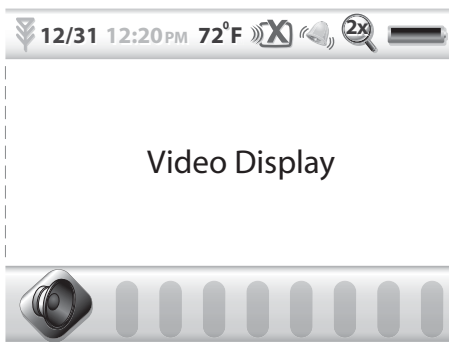

Video Display


mute mode



Volume Control is on side of Parent Unit

ROOM TEMP

Press Room Temp button for quick read of baby's room temperature. Date and time are also displayed. Screen times out after 5 seconds.

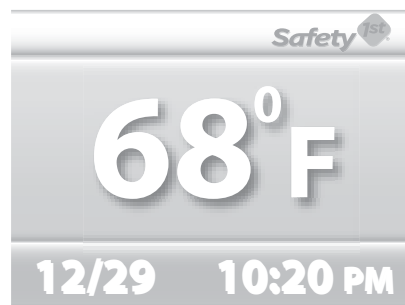


QUICK VIEW



If Parent Unit is programmed to Video Time Out mode, where the screen is not visible, press Quick View button to see baby. Screen will time out based on the setting programmed (5, 15, or 30 seconds). If programmed to Always On, pressing the Quick View button will either turn the screen on or off.

CONTROL PANEL

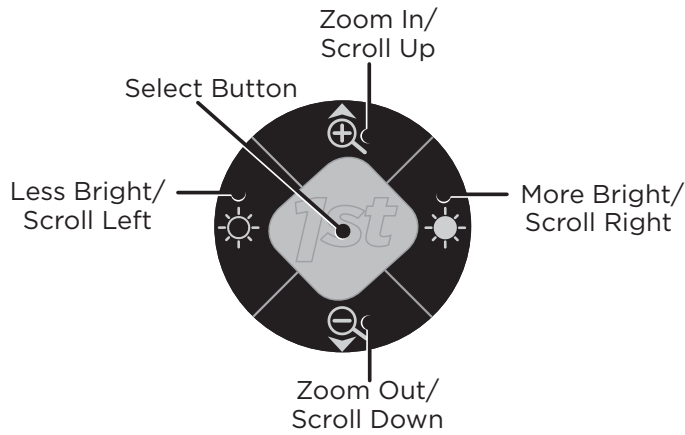



ZOOM

1x, 2x, 4x.




BRIGHTNESS

 1-8.

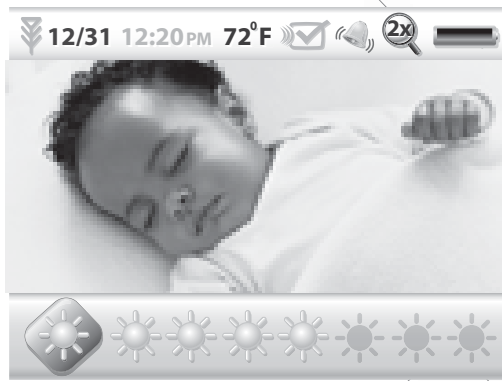

Scroll up/down for desired zoom setting. Scroll left/right for desired brightness setting.

MENU BAR

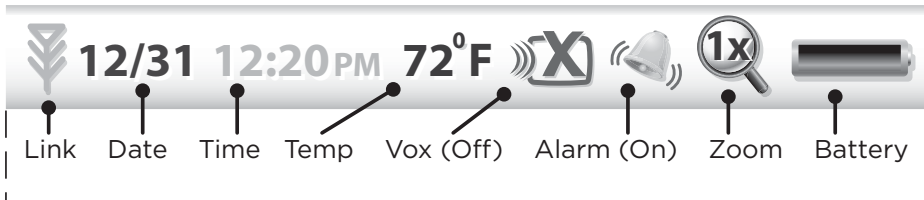

LINK INDICATOR




OUT OF RANGE:
will display when out of range



IN RANGE:
will display when units are linking

MAIN MENU

Press Select Button, Menu of options comes up to allow you to personalize your settings.

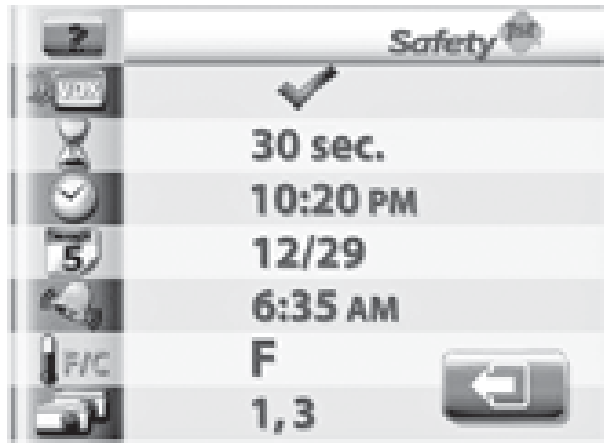


VOX

What is VOX? VOX is voice activation. Voice/audio can be suppressed when limited monitoring is needed. For example, when baby is sleeping, you may not need to hear every gurgle or squirm and may wish to monitor baby using just the Sound Light Bar. In VOX mode, the voice/audio will activate when baby gets louder or starts crying.

Press Select, you will be on the Vox icon. Then Press up/down to the desired voice activation. Press Select. A check mark will appear next to the selection. Scroll down to Exit icon and press Select to return to main menu.

Exit =

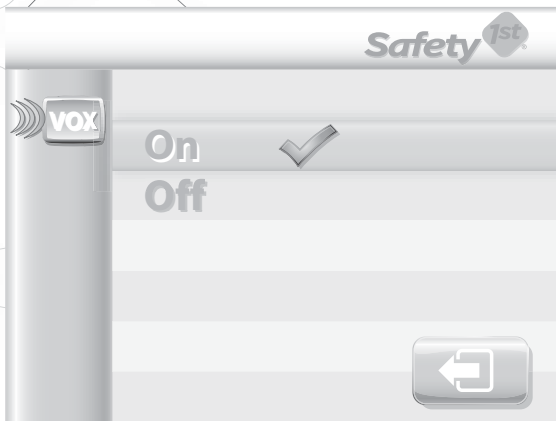

MENU BAR CONFIRMATION




VOX On



VOX Off

VIDEO TIME OUT

To conserve battery life, you may choose to program your monitor to time out video intervals. There are four options for video timing; you can select how long you want the screen to view. Scroll to Video Time Out icon and press Select. Scroll up/down to your desired setting. Press Select. A check mark will appear next to the selection. Scroll down to Exit icon and press Select to return to main menu.



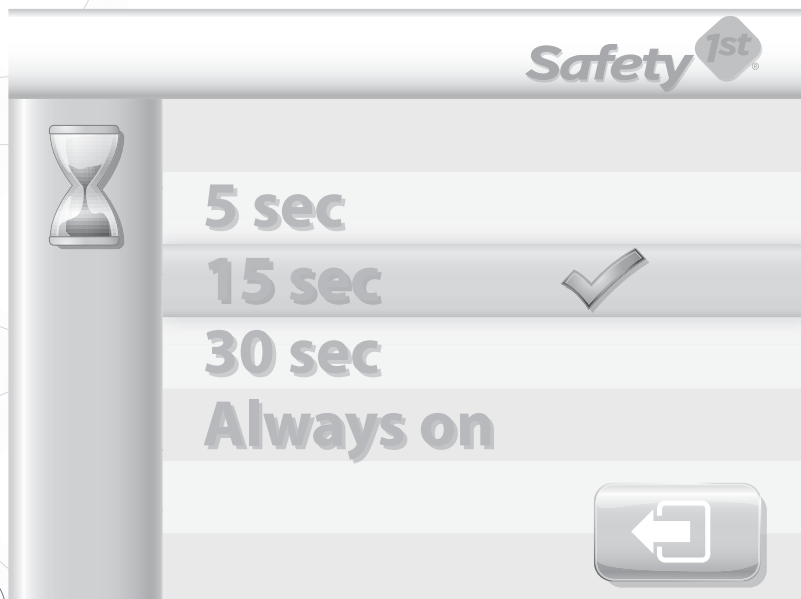


Exit =



CLOCK

Scroll to Clock icon and press Select. Scroll right to increase or left to decrease hours.

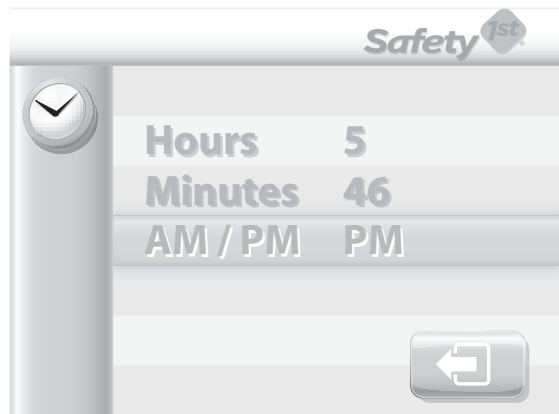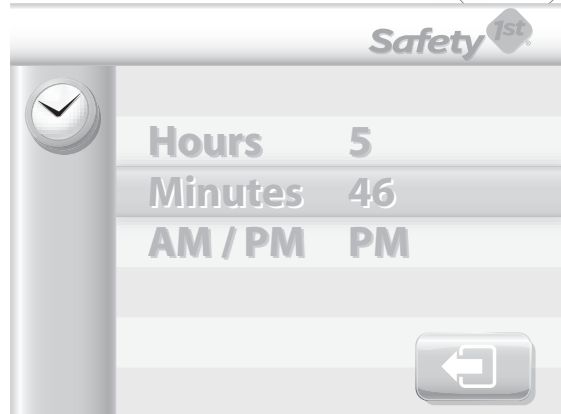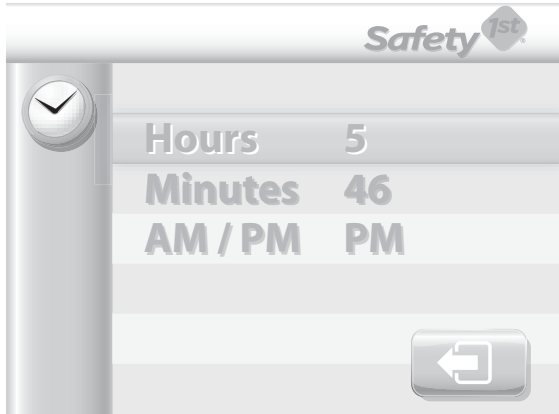

Scroll down to Minutes. Scroll right to increase or left to decrease minutes.


Scroll down to AM/PM. Scroll right or left to change AM/PM setting.

Scroll down to Exit icon and press Select to return to main menu.

Exit = 

DATE


Scroll to Calendar icon, press Select.

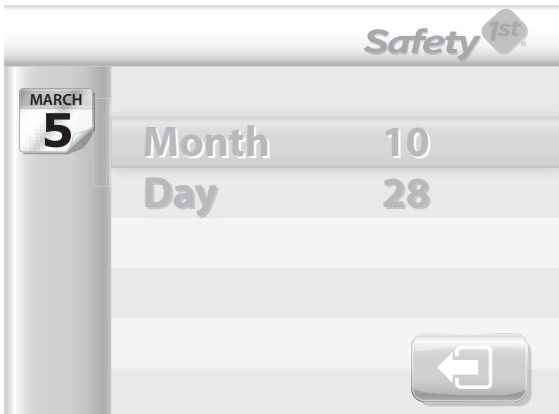

Scroll right or left to select month.

Scroll down to Day. Scroll right or left to select day.

Scroll down to Exit icon and press Select to return to main menu.

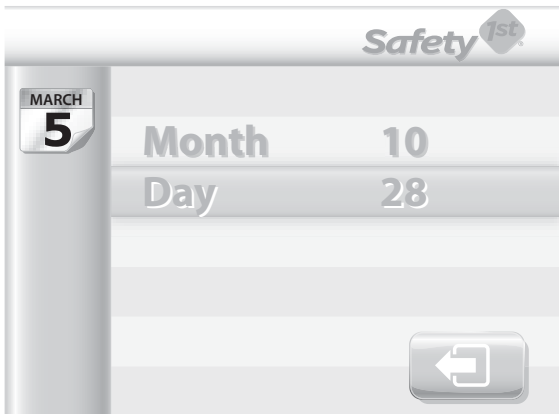

Exit = 

ALARM

Scroll to Alarm icon and press Select.
Follow same procedures as you did for setting the time and date in this menu.



Additional feature that needs to be set in this menu is Recurrence. After scrolling to Recurrence, Press right/left buttons to choose Once, Daily or Off setting. Scroll down to Exit icon and press Select to return to main menu.

When the Alarm is activated, a screen will pop up allowing you to select the option you wish to use. Options are OFF or 5 minute reminder.

Alarm will time out in 30 seconds if no action is taken. It will alarm again in 30 seconds until an option is chosen. If Remind is selected, alarm will activate again in 5 minutes.



MENU BAR CONFIRMATION

 



Main screen will display an Alarm icon when Alarm function is set.

TEMPERATURE F/C


You can select either Fahrenheit or Celsius.

Scroll to F/C and press Select. Scroll up/down to the desired setting. A check mark will appear next to the selection. Scroll down to Exit icon and press Select to return to main menu.

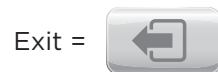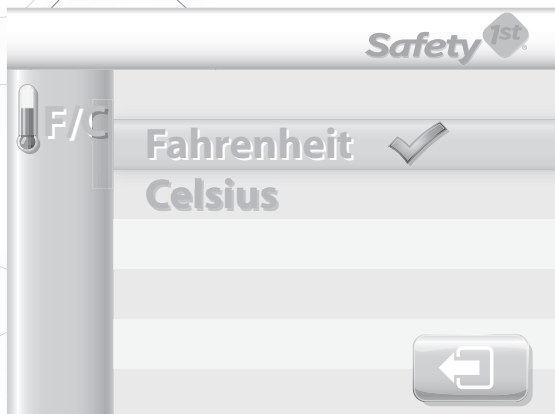

CAMERAS

(Only for use if adding multiple cameras) Scroll to Cameras icon and press Select. Menu will show current status of cameras programmed and turned ON. Monitor supports up to 4 cameras. If you wish to purchase additional cameras, please call our Consumer Relations department at 1-800-544-1108 or visit us online at www.safety1st.com

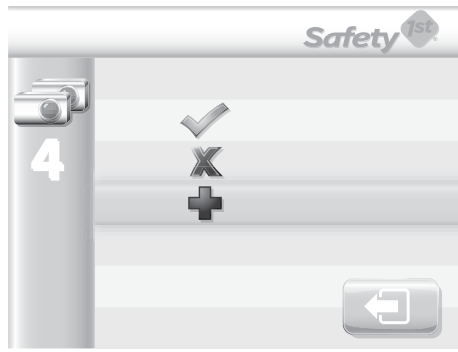

If multiple cameras are selected, the video will switch between cameras approximately every 10 seconds for 2 cameras selected, approximately every 5 seconds for 3 or 4 cameras selected.

TO PROGRAM A CAMERA INTO THE SYSTEM

Select camera to be added. Menu comes up giving you the option of turning the camera ON/OFF (ON=✓, OFF=X, program=+) or programming a new camera in this location.

If you select program+: Program icon will begin to flash indicating it is linking with the camera.

Set up camera you want to add, but don't hit plus symbol yet.

-Turn camera on.

-Use tool (any sharp leading edge) to press small inset button in camera battery compartment for 2 seconds.

-Camera will rapid flash blue power LED.

-Press program button on receiver (+)

-Camera and receiver are programming. Can take up to 10 seconds.


If programming successful, screen will display image and menu bar will indicate program successful (✓). If unsuccessful, image will come back to program menu.

TURNING CAMERAS OFF AND ON

-You can turn off cameras that are programmed. Select camera number, then select the X bar. Unit will now only scroll to camera selected. To turn back on, go to camera number and select ✓ bar. You do NOT need to reprogram camera.

-If you are scrolling between cameras and one camera is turned off, image on screen will appear black. We recommend you turn on camera unit or turn off camera selection in Parent unit.

-Use caution on camera to not push button inset in battery compartment. Pressing this will erase camera from Parent Unit.

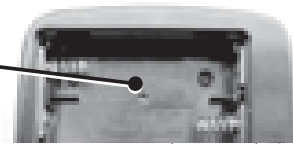

HELP

As long as your monitor is with you Help is just a click or a phone call away. Press Select, scroll up and press Select again to bring up a HELP screen with our web address, consumer@djgusa.com, or toll-free phone number, (800) 544-1108.



Exit = 


TURNING MONITOR OFF

-To turn off either the Parent or Baby Unit, press and hold the Power On/Off Button for 3 seconds.

For more help and resources call 1-800-544-1108 or visit www.safety1st.com

NIGHT VISION

Night Vision lets you see the baby in a darkened room. The video display during this time is in black and white. For best view of your baby in a dark room, increase brightness control until desired brightness is achieved.

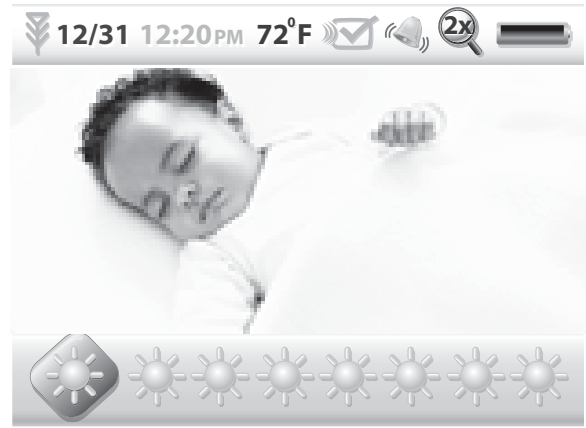


BATTERY CHARGING

With power off: When plugging in Parent's Unit, Safety 1st screen will come on for 2 seconds, then a large flashing green battery will fill the center of the screen indicating charging. Also, the blue ring around the Power On/Off button will flash.

After approximately 10 seconds, the flashing battery turns off leaving a black screen, while the blue ring will continue to flash. Once charging is complete, a large flashing black battery will flash on screen for 10 seconds, then screen will go black and blue light ring will turn off.

With power on: When plugging in Parent Unit, it will boot up normally. The battery icon on the top menu bar will flash green to black and the blue light ring will flash blue. This will continue during charging cycle. When charging is complete, battery in menu bar will turn to solid black and the blue light ring will remain solid blue.

 Battery Flashing Green

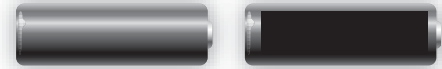

LOW BATTERY

With power on, the unit will have a large flashing red battery that pops up on a black screen to let the user know the battery is dying. Unit will sound quick beeps as well. This red battery will flash for 5 seconds, then return to normal video use for 30 seconds and the battery icon in the menu bar will flash red. Sequence will start again until unit is plugged in or turned off. You need to plug in the unit within about 10 to 15 minutes after flashing red battery starts or battery power will fail.


Battery Flashing Red



BATTERY CAUTION!

- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Check that all contact surfaces are clean and bright before installing batteries.
- The supply terminals are not to be short-circuited.
- DO NOT submerge any part of the product in water.
- Dispose of batteries safely.
- Remove batteries when stored for long periods of non-use.
- Unplug power cord before replacing batteries.
- Use only the adapters supplied with this product. Incorrect adapter polarity or voltage can seriously damage the product.
- THERE IS A RISK OF EXPLOSION IF THE BATTERIES ARE REPLACED BY AN INCORRECT TYPE.
- Use 3.6V AAA rechargeable battery pack ONLY for Parent Unit.

Figure 1

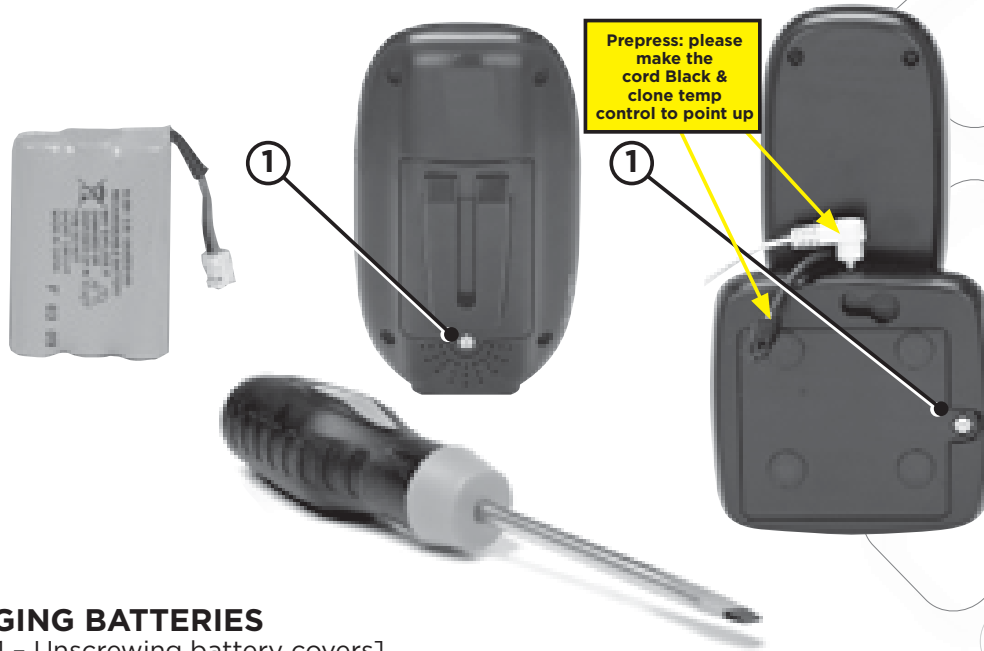


CHANGING BATTERIES

[Figure 1 - Unscrewing battery covers]

Unscrew battery covers (Figure 1) to remove and insert 4 AAA alkaline batteries in the camera (optional). Rechargeable battery pack is included in the Parent's unit. Secure each battery cover with the screw.

Contact Consumer Relations at 1-800-544-1108 to order a new battery pack. Use reference number 08096.

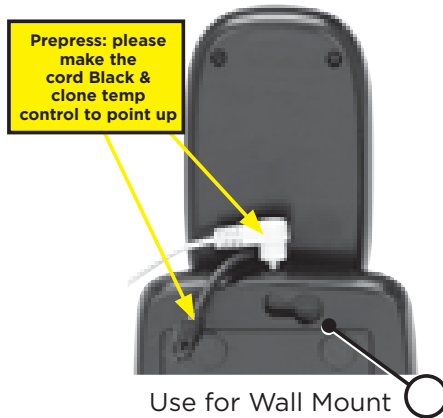

WALL MOUNTING THE CAMERA

Mounting the Baby Unit on a wall is similar to mounting a lightweight picture.

- Install a screw with a 5/16 head into the wall.
- Hang at the opening in back of the Unit.

TO TEST THE RECEPTION

IMPORTANT:

The first time you use your monitoring system two adults should test it in the following way:

Place the Parent Unit at least 20' (6m) away from the Baby Unit.

Have an adult speak into the Baby Unit at various levels (soft to loud) while another adult checks the Parent Unit for the proper sound and picture reception.

Try the Parent Unit in every location that it will be used.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unit has no sound/picture	<ul style="list-style-type: none"> - Volume is too low - Sound is off [symbol] - Out of range - Display is in power save mode - VOX mode 	<ul style="list-style-type: none"> - Adjust the volume - Bring Parent Unit closer to Baby's Unit - Press [View icon] and hold for 2 seconds - Turn VOX off
Low Battery LED turns on, unit emits beeping sound	<ul style="list-style-type: none"> - Batteries are low 	<ul style="list-style-type: none"> - Recharge/replace batteries or use AC adaptor
On/Off button does not illuminate	<ul style="list-style-type: none"> - Unit is not turned on - Batteries are dead - Power is turned off 	<ul style="list-style-type: none"> - Push the button on the front of Receiver to the ON position - Charge battery/Make certain any light switches that control power to the wall outlet are on (when using AC) - Check AC Adapter jack-to-socket and plug-to-outlet connections
Audio feedback (squealing)	<ul style="list-style-type: none"> - Parent Unit is too close to the Baby Unit 	<ul style="list-style-type: none"> - Move the Parent Unit further away from Baby Unit - Turn down volume on Parent Unit to Mute to get minimum feedback
Weak sound coming from Parent's Unit	<ul style="list-style-type: none"> - Volume too low - Battery may be low - Baby is too far away from Camera on Baby Unit 	<ul style="list-style-type: none"> - Adjust volume - Change batteries - Move the Camera within 4' to 6' of Baby - Make certain nothing is blocking camera microphone
Picture is not clear	<ul style="list-style-type: none"> - Picture is blurry or not centered 	<ul style="list-style-type: none"> - Move camera location - Make sure video is not in Zoom mode
Picture is Black & White during the day	<ul style="list-style-type: none"> - Room is too dark 	<ul style="list-style-type: none"> - Add more light to the room

Contact Consumer Relations at 1-800-544-1108 to order a new battery pack. Use reference number 08096.

FCC STATEMENT

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning this equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by Dorel Juvenile Group can void your authority to operate this equipment.

ONE YEAR LIMITED WARRANTY

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Prism Color Video Monitor) is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted on front page and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse.

This warranty excludes any liability other than that expressly stated previously, including but not limited to any incidental or inconsequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.

Thank you for purchasing a Safety 1st product. We are not only about safety, we're also about your satisfaction. If you have any questions or comments, please call our Consumer Relations department at 1-800-544-1108 or e-mail us at consumer@djgusa.com.

We hope you love this product!