

Clear Connection Rechargeable Nursery Monitor

Owner's Guide



Thank you for purchasing the Safety 1st Clear Connection Rechargeable Nursery Monitor. This is a state-of-the-art system that combines some of the most unique features that any baby monitor offers. We are confident that you will appreciate its many highlights. As you will soon learn there are many more features...

The Baby's Unit (Transmitter) has continuous transmission that clearly sends your baby's sounds to the Parent's Unit. This gives you the ability to continue with your daily activities throughout the house or yard and at the same time monitor your baby.

The Parent's Unit (Receiver) remains with you wherever you go to pick up the sounds that are transmitted from the Baby's Unit. It conveniently clips to your belt or easily stands on a table.

Both units are completely portable or AC powered. The AC Adapter allows the receiver and transmitter to be plugged into any standard electrical outlet for use with your household electricity. For convenient use without an outlet, use a rechargeable battery pack for the Parent's unit and a 9 volt alkaline battery for the Baby's unit (Batteries not included).

We are sure that you will find the Clear Connection Nursery Monitor convenient and easy to use. To insure that you will benefit from all of the great features that our monitor offers, and to make sure that it is used properly, we urge you to:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE NURSERY MONITOR
KEEP THESE INSTRUCTIONS FOR YOUR FUTURE REFERENCE
IF YOU HAVE ANY QUESTIONS, CALL OUR TOLL FREE CONSUMER RELATIONS NUMBER: (800) 723-3065

CAUTION:

- THE CLEAR CONNECTION RECHARGEABLE NURSERY MONITOR IS NOT INTENDED TO REPLACE RESPONSIBLE AND PROPER PARENTAL SUPERVISION.
- YOU SHOULD CHECK YOUR CHILD'S ACTIVITY AT REGULAR INTERVALS AS THIS MONITOR WILL NOT ALERT PARENTS TO THE SILENT ACTIVITIES OF A CHILD.

Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN!

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK,
DO NOT REMOVE COVER OR BACK.
NO SERVICEABLE PARTS INSIDE.
REFER TO SAFETY 1ST CONSUMER RELATIONS: (800) 723-3065.
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK,
DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.

READ INSTRUCTIONS: All the safety instructions should be read before the Nursery Monitor is operated.

RETAIN INSTRUCTIONS: The safety instructions should be retained for future reference.

HEED WARNINGS: All warnings on the Nursery Monitor and operating instructions should be adhered to.

FOLLOW INSTRUCTIONS: All operating instructions should be followed.

WATER AND MOISTURE: The Nursery Monitor should not be used near water, for example, near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, etc.

VENTILATION: The Nursery Monitor should be placed so that its location or position does not interfere with proper ventilation for the unit. For example, it should NEVER be situated on a bed, sofa, rug or similar surface that may block ventilation.

HEAT: The Nursery Monitor should be kept away from heat sources such as radiators, heat registers, stoves or other appliances that produce heat.

AC POWER SOURCE: The Nursery Monitor should be connected only to the AC Adapters supplied with the unit.

POWER CORD PROTECTION: The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, convenience receptacle, and at the point it exits from the AC adapters.

CLEANING: Use a dry cotton cloth to keep the Nursery Monitor free from dust. **DO NOT USE WATER!**

NON-USE PERIODS: The power cord of the Nursery Monitor should be unplugged from the outlet when unused for long periods of time. The batteries should also be removed during these periods.

OBJECT AND LIQUID ENTRY: Care should be taken so that objects do not fall onto the product, and liquids are not spilled into the enclosure through the openings.

DAMAGE REQUIRING SERVICE: The Nursery Monitor should be serviced by qualified personnel when:

- A: The power supply cord or plug has been damaged;
- B: Objects have fallen or liquid has been spilled onto the product;
- C: The Monitor has been exposed to rain;
- D: The Monitor does not appear to operate normally or exhibits a marked change in its performance;
- E: The Monitor has been dropped or the enclosure damaged.

THE USER SHOULD NOT ATTEMPT TO SERVICE OR REPAIR THE MONITOR. ALL SERVICING SHOULD BE REFERRED TO SAFETY 1ST CONSUMER RELATIONS: (800) 723-3065.

KEEP ALL PARTS OF THIS MONITOR OUT OF REACH OF CHILDREN! DO NOT MOUNT IN OR ON CRIB!

 
CAUTION: THE CLEAR CONNECTION RECHARGEABLE NURSERY MONITOR IS NOT INTENDED TO REPLACE PROPER ADULT SUPERVISION. YOU SHOULD CHECK YOUR CHILD'S ACTIVITY AT REGULAR INTERVALS AS THIS MONITOR WILL NOT ALERT PARENTS TO THE SILENT ACTIVITIES OF A CHILD.

 
Contents

Parent's Unit (Receiver)
Recharging Stand

Baby's Unit (Transmitter)
AC Adapter

Features and Components

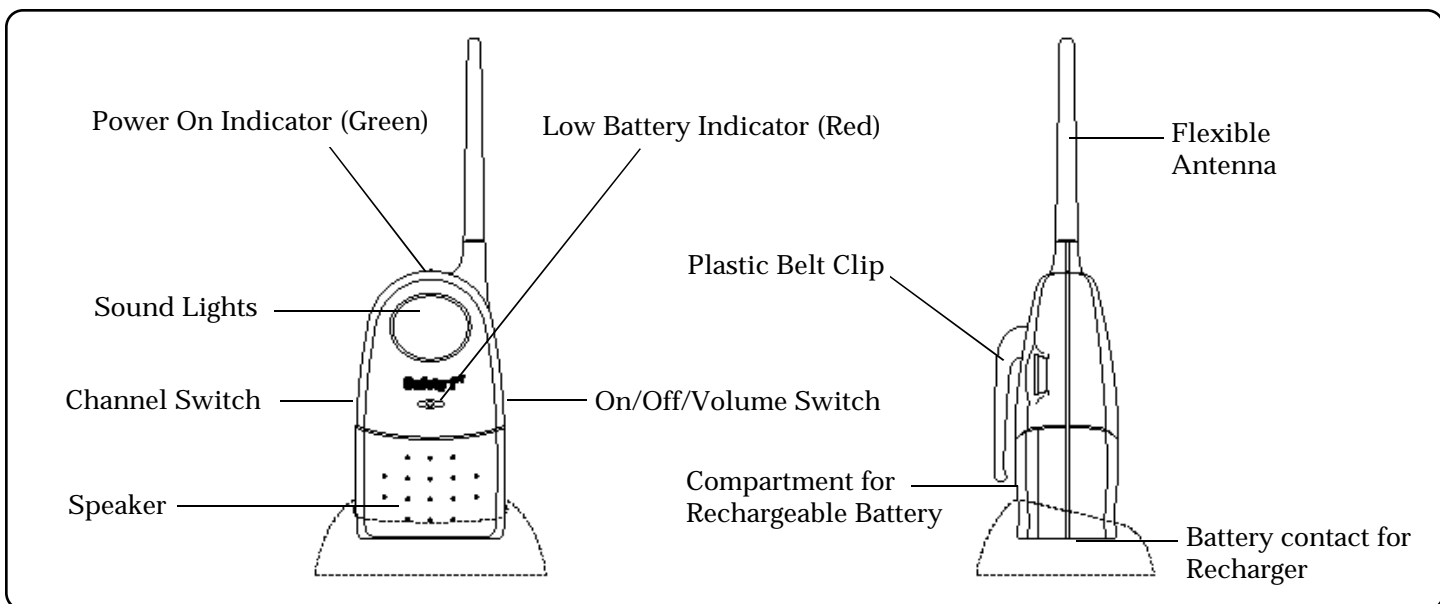

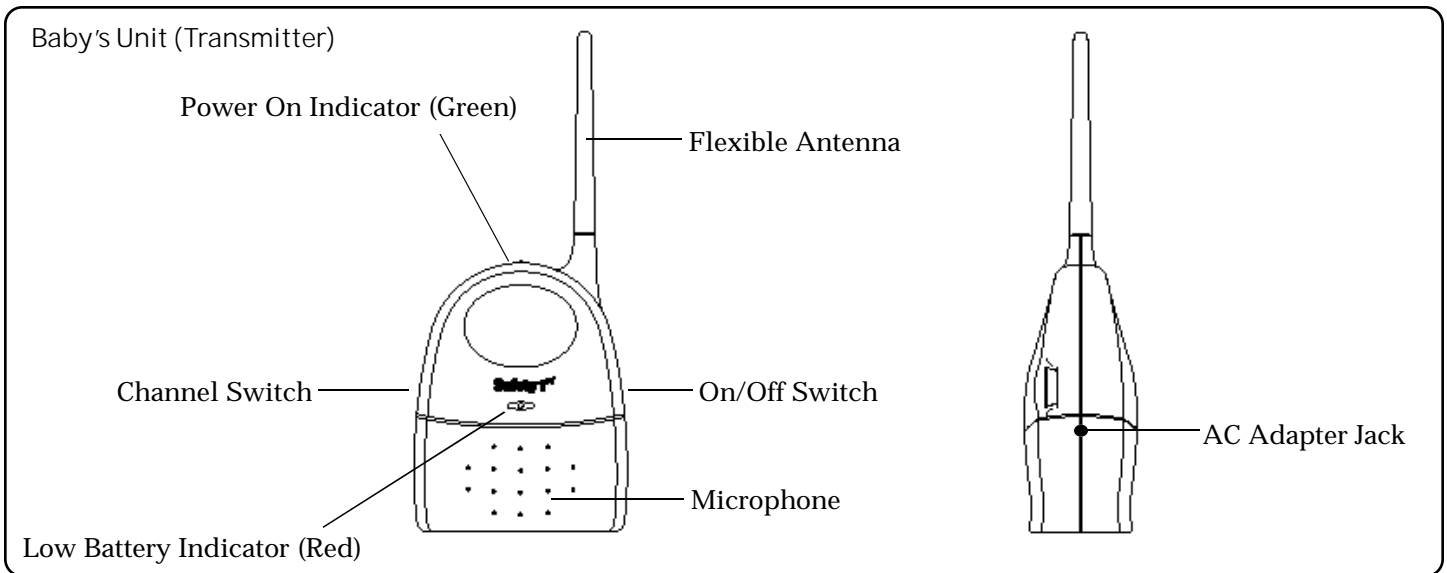

AC Adapter

The AC Adapter is a low voltage power source that allows you to use your household electricity to run the Baby's Unit when you want to conserve battery life. It connects to the AC Adapter Jack in the Baby's Unit, and plugs into any standard electrical outlet in your home.

Caution: This adapter was made with a specific design for Safety 1st Clear Connection Rechargeable Monitor. It cannot be used with any other appliance. Never use a different type of adapter with this monitor.

AC Adapter

Operating Your Rechargeable Monitor

Follow these instructions to operate your Clear Connection Rechargeable Monitor. Reference the illustrations provided on pages 2 and 3 for the location of all features described in these instructions.

Baby's Unit:

STEP 1 Remove screw from battery cover on Baby's Unit (Transmitter) and remove cover.

STEP 2 Insert a 9-volt battery into the battery compartment by snapping the battery contacts into the corresponding connectors on the battery clip in the unit. (Figure 1)

Note: The low battery indicator illuminates when the batteries need to be replaced.

STEP 3 Replace the battery cover and insert and tighten the screw.

STEP 4 Plug the adapter into an electrical outlet, then plug the round end of the adapter into the Baby's Unit

Note: If you experience a power failure, the Baby's Unit (Transmitter) will automatically switch to battery power. The unit will revert to AC power when power is restored

STEP 5 Set the On/Off switch to "On" position. Power on indicator should be illuminated.

STEP 6 Set the Baby's unit to setting "A". If you experience static or noise interference, switch both units to setting "B".

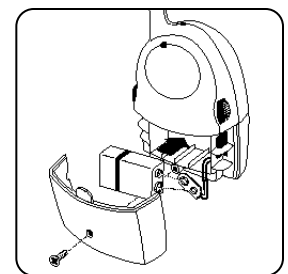 


Figure 1

For best results, place the Baby's Unit on a table near the crib. It should be facing the baby's head as close to the crib as possible, but out of baby's reach.

Parent's Unit: Initial Charging

It is very important that you place the Parent's Unit (Receiver) with the unit turned "Off" in the charging stand. Allow battery to charge for at least 4 hours before first use. This will ensure that your battery is fully charged. The green LED light on the charging stand will illuminate when the receiver is placed into it and the charging contacts are engaged.

Using the Parent's Unit:

STEP 1 Place the Parent's Unit at least 10 feet from the Baby's Unit.

STEP 2 Place the charging stand in a location where the Receiver will remain in high use, for example, bedroom, kitchen, etc.

STEP 3 Plug the charging stand into electrical outlet.

STEP 4 When the Receiver is in the charging stand, the battery will continue to charge during normal operation.

STEP 5 Turn the Parent's Unit "OFF" and leave unit in charging stand when not in use. This will allow the battery to receive a complete charge.

Note: If you experience a power failure, the Parent's Unit (Receiver) will automatically switch to battery power. The unit will revert to AC power when power is restored.

STEP 6 Set the Parent's Unit to setting "A". If you experience static or noise interference, switch both units to setting "B".

Note: Confirm the Parent's Unit and Baby's Unit are set to the same setting (A or B). Adjust the volume so you can hear your baby at all times.

LED Sound Level Light Indicators

The three (3) LED's in the center of the Parent's Unit light up to display the sound level coming from your baby. These sound level indicators are preset in the factory and are not affected by the volume setting. This feature allows you to see the relative volume level of your baby's sounds. It is most effective if you are in a noisy environment and may not be able to hear the sounds clearly. The louder the sound, the more LED's will light up.

Recharging the Battery

Low battery indicator will illuminate when it is time to recharge the battery.

Place the receiver in battery stand making sure it is seated properly

We recommend that you recharge the battery overnight. The receiver will operate while recharging.

Using the AC Adapter

The AC Adapter should be used on the Baby's Unit whenever possible to increase the life of the batteries. Unit will automatically convert to AC operation when used with the AC Adapter. It is not necessary to remove batteries during AC operation. Unit will automatically switch back to battery power when disconnected from the adapter.

Replacing the Rechargeable Battery

The Parent's Unit (Receiver) requires 1 Ni-Cad rechargeable 3.6volt,300 mAh battery pack. To ensure that you are purchasing the proper replacement battery pack, we recommend that you bring the existing battery pack with you to reference. It is critical that the connector on the end of the battery pack is identical to the connector on the enclosed battery pack. (Figure 2)

STEP 1 Unscrew the battery door located on the back of the Parent's Unit(Receiver).

STEP 2 Remove the Ni-Cad rechargeable battery pack from thebattery compartment by gently disengaging the two connectors. (Figure 3)

STEP 3 Discard the old Ni-Cad rechargeable battery pack promptly.

STEP 4 Reconnect the new battery pack by re-engaging the two connector ends. (Figure 4)

STEP 5 Screw the battery door back on to the Parent's Unit (Receiver). Ensure that the door is securely fastened.

STEP 6 Place the Parent's Unit (Receiver) in the charging stand with the unit turned "OFF". Allow the battery to charge for at least 4 hours prior to use.

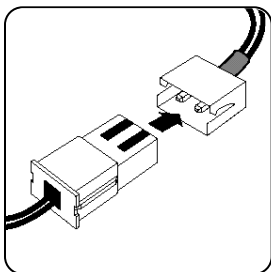 


Figure 2

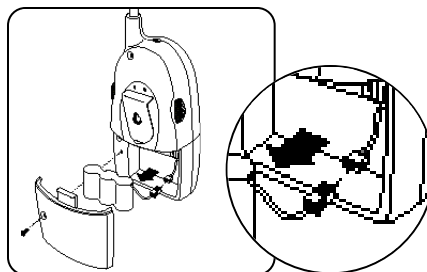 


Figure 3

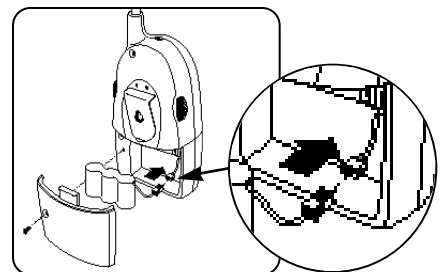 


Figure 4

Operating Tips

- Make sure that both units are on the same channel. Even though you may hear your baby's sounds, proper use of this system requires that both units must be on the same channel. If the units are on different channels, the signals from the Baby's Unit may still be strong enough to be picked up by the Parent's Unit, but there will be a lot of static.
- When unit is not in use, remove AC Adapter and be sure the power dial is "Off".
- Use your Baby's Unit AC Adapter when you will be in the same location for most of the day. Use of the adapter provides maximum power to the unit and provides additional antenna length.
- When using the AC Adapter with household electricity, make sure the outlet has power. Some electrical outlets are powered through a wall switch in the room. If the Baby's Unit is plugged in and turned "On", the power indicator light should be lit. If it is not, try turning the wall switch in the room "On".

Troubleshooting Your Rechargeable Monitor

Problem	Possible Cause	Solution
<ul style="list-style-type: none"> • Power indicator light not working • Power is not getting to the unit 	<ul style="list-style-type: none"> • Battery may be dead, 9 volt battery needs to be replaced, or rechargeable battery needs to be recharged • Make sure wall outlet is working. • Rechargeable battery needs to be replaced. 	<ul style="list-style-type: none"> • Recharge battery overnight. • Make sure battery is fully charged. • May need new battery in baby unit.
<ul style="list-style-type: none"> • Static or interference in the signal transmission 	<ul style="list-style-type: none"> • Baby's and Parent's Units may be set on different channels • Appliances with loud fans near units may be blocking transmission • Unit may be under fluorescent lights • Local interference from electrical or radio frequency appliance near your location 	<ul style="list-style-type: none"> • Make sure both units are on the same channel (A or B) • Turn off the appliances that may be causing interference • Reduce the distance between the two units or turn off lights • Switch channel setting on both Parent's and Baby's Units
<ul style="list-style-type: none"> • Parent's Unit is making loud noises 	<ul style="list-style-type: none"> • Units are too close together 	<ul style="list-style-type: none"> • Parent's Unit needs to be at least 10 feet (3 meters) away from the Baby's Unit
<ul style="list-style-type: none"> • Parent's Unit is picking up noises from outside your home 	<ul style="list-style-type: none"> • Neighbors may have a baby monitor or cordless phone 	<ul style="list-style-type: none"> • Change both units to the alternate channel (A or B)
<ul style="list-style-type: none"> • Weak sound coming from unit 	<ul style="list-style-type: none"> • Batteries may be weak • Units may be too far away from each other 	<ul style="list-style-type: none"> • Check batteries, replace if necessary • Move the units closer to each other

If you have any questions or comments, please call our toll free Consumer Relations number: (800) 723-3065. We guarantee all of our Safety 1st products. If you are not completely satisfied, please return with proof of purchase to:
 Safety 1st, Inc., 210 Boylston Street Chestnut Hill, MA 02467 USA
 Safety 1st, Inc., 804, Rue Deslauriers, Ville St-Laurent, Québec, H4N 1X1 Canada
 Safety 1st, Inc., Europe Ltd. Osopad House, Shenley Road Borehamwood, Herfordshire WD1TE, Great Britain
 Made in CHINA to Safety 1st quality specifications. ©1998 Safety 1st, Inc.

IMPORTANT!

Please do not return this product to the store!
Your questions and comments are important to us!

Thank you for purchasing this quality product from Safety 1st. We are confident you will be pleased with its many features and performance. If you are having any problems assembling, installing, or using this product, please call us. We will be very happy to answer any questions that you may have. Many times there is a simple solution to any problem that may occur. Talking to us directly will be convenient and save you time.

Call our Consumer Relations Department toll-free at (800) 723-3065
9:00 am to 5:00 pm (EST) Monday - Friday.
We will gladly answer any and all of your questions
about this product.