

## TechTouch Digital Color Video Monitor



Thank you for purchasing a Safety 1st product. We are not only about safety, we're also about your satisfaction. If you have any questions or comments, please call our Consumer Relations department at 1-800-544-1108 or e-mail us at [consumer@safety1st.com](mailto:consumer@safety1st.com)

Please read the following instructions and warnings carefully.  
Keep these instructions for future reference.

Tool needed: Flathead Screwdriver (not included)

©2013 Cosco Management, Inc. All Rights Reserved. Todos derechos reservados.  
[www.djgusa.com](http://www.djgusa.com) (800) 544-1108 [www.safety1st.com](http://www.safety1st.com) Made in CHINA.  
Hecho en CHINA. Styles and colors may vary. Los estilos y los colores pueden variar.  
Distributed by (distribuido por) Dorel Juvenile Group, Inc., 2525 State St., Columbus,  
IN 47201-7494 Dorel Distribution  
Canada, 873 Hodge, St. Laurent,  
QC H4N 2B1



10/7/13  
4358-6519

### ⚠️ WARNING!

Strangulation Hazard - Children have STRANGLED in cords. Keep cords out of reach of children more than 3 feet (0.9 m) away.



**⚠ WARNING!**

For indoor use only. To reduce the risk of fire or electrical shock, do not expose this product to water or moisture. NEVER attempt to disassemble the product. This is dangerous and will void the warranty.

**⚠ CAUTION!**

This monitor is not intended to be used as a medical monitor and its use should not replace proper adult supervision. You should check your child's activity at regular intervals as this monitor will not alert parents to the silent activities of a child.

**⚠ CAUTION!**

To protect your privacy, always turn the monitor off when not in use. Although encryption makes it less likely that sound and video can be decoded by other devices outside your home, it is not a guarantee.

**Important!**

- Please read all warnings and assembly instructions carefully before using the video monitor. Parent Unit is a Receiver. Baby Unit is a Transmitter.
- Check your child's activity at regular intervals, as this monitor will not alert parents to the silent activities of a child.
- To prevent entanglement with the adapter cord, NEVER PLACE THE CORD IN OR NEAR A CRIB OR PLAYPEN.
  - DO NOT place the Receiver anywhere its AC adapter cord is near children.
- ALWAYS KEEP TRANSMITTER, RECEIVER AND AC ADAPTERS OUT OF REACH OF CHILDREN
- This product is not a medical monitor and its use should not replace adult supervision.
- Check the reception regularly.
- NEVER use the Transmitter or Receiver near water. For example, do not use near a bath tub, bathroom sink, laundry tub, kitchen sink, in a wet basement, etc.
- Always unplug the AC adapters from wall outlets during long periods of non-use.
- Check to make sure outlet plates are not unusually hot to the touch. If they are, immediately unplug cords from these outlets. Check that all outlet connections are in good condition so that adapter is not loose or that no wiring is exposed. Have a qualified, licensed electrician check the wiring as soon as possible.
- Position the Transmitter, Receiver and AC adapters to allow adequate ventilation and prevent these components from overheating.
- To prevent overheating, keep the Transmitter, Receiver and AC adapters away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat. Also keep these components out of direct sunlight.
- Certain electronic devices are sensitive to magnetic fields and may be damaged permanently or temporarily disabled if exposed to a magnetic field that is too strong. Video screen will become distorted and/or discolored if exposed to a strong magnetic field.
- Use only the AC adapters provided. Use of any other adapters may damage the Transmitter and/or Receiver. Plug AC adapters into standard household current only! (120V AC) To prevent entanglement and overheating, DO NOT use extension cords.
- The AC adapters may become slightly warm to the touch during operation. This is normal.
- Position the AC adapter cords so that they are not walked on or pinched by items placed upon or against them, paying particular attention to cords at AC adapter plugs, wall plugs and the point where the cords attach to the Transmitter and Receiver.
- To remove AC adapter from the outlet, firmly grasp the adapter "brick." DO NOT pull on the cord, as this could damage it.
- The LEDs emit IR (infra red) light that is not harmful.
- This product should be serviced only by qualified service personnel at Dorel Juvenile Group when:
  - An AC Adapter or its plug is damaged
  - The Transmitter or Receiver has fallen
  - Liquid has spilled into the Transmitter or Receiver, or
  - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance.
- DO NOT attempt to service this product beyond that described in the Troubleshooting section. All other servicing should be referred to qualified personnel at Dorel Juvenile Group.

Important Warnings . . . . . 2  
 Features & Components . . . . . 4  
 Icon Description/Features . . . . . 4  
 Installing & Charging Batteries . . . . . 5  
 Quick Start Guide . . . . . 6 & 7

Using Your Monitor:

Parent Unit (Receiver)

- Power On/off Button . . . . . 8
- Lock Screen/Unlock Screen . . . . . 8
- Tri-Color Sound Lights (5 LEDs) . . . . . 8
- Auto-Rotation Screen . . . . . 8
- Zoom Control . . . . . 8
- Pan/Tilt Control . . . . . 9
- Brightness Control . . . . . 9
- Status Bar . . . . . 9
- Volume Control . . . . . 10
- Talk to Baby Button . . . . . 10
- Quick View - Video On/Off Button . . . . . 10
- Belt Clip & Stand . . . . . 10
- Toolbox . . . . . 10
- Secondary Touchscreen Menu . . . . . 10
- Clock Menu . . . . . 11
- Temperature Display . . . . . 11
- Help Button . . . . . 11


Camera (Baby Unit)

- Adding Additional Cameras . . . . . 12
- Camera Button . . . . . 12
- To Add a Camera . . . . . 12
- To Disable/Recativate a Previously Added Camera. 13
- Auto-Scan on/Off Toggle Button . . . . . 13
- Nightlight Button . . . . . 13

Use & Care . . . . . 14

- Proper Positioning . . . . . 14
- Check Reception . . . . . 14
- Wall Mounting the Camera . . . . . 14
- Care and Cleaning . . . . . 14

Safety Instructions . . . . . 15  
 Troubleshooting . . . . . 16 & 17  
 FCC Statement . . . . . 18  
 Warranty . . . . . 19

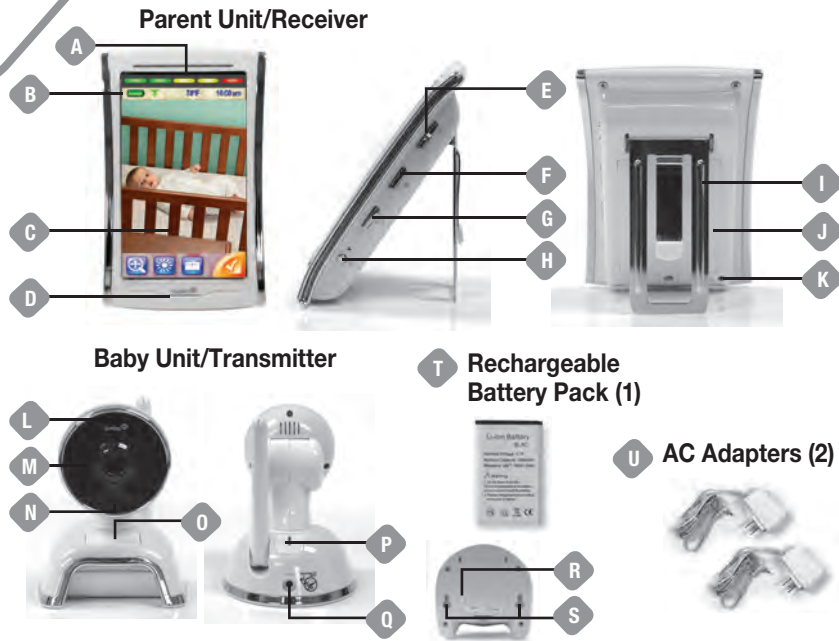


Parent Unit (Receiver)

Baby Unit (Transmitter)

- A Sound Lights (LEDs)
- B Status Bar
- C 4.3 inch Touchscreen
- D Speaker
- E Volume Control Button
- F Quick View Button
- G Talk to Baby Button
- H Power On/Off Button
- I Belt Clip/Stand
- J Battery Compartment
- K AC Adapter Jack

- L Motorized Camera (Pan/Tilt)
- M Nighttime Viewing Lights
- N Microphone
- O Nightlight Button
- P Power On/Off Button
- Q AC Adapter Jack
- R Pairing Button
- S Wall Mount Attachment

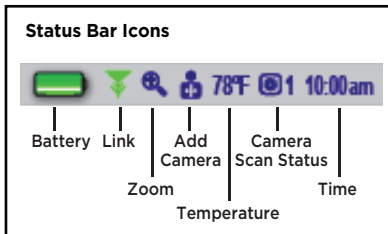

Icon	Icon Description/Feature
	Power On/Off
	Lock Screen/Unlock Screen
	Zoom
	Pan & Tilt
	Brightness
	Volume
	Talk to Baby
	Quick View - Video On/Off
	Toolbox
	Clock
	Temperature
	Help
	Camera
	Nightlight

Battery Installation & Use:  
(Rechargeable Battery for Parent Unit)

**IMPORTANT:**

Parent Unit will not operate unless rechargeable battery pack is installed first.

To maximize battery life, charge a new rechargeable battery pack in Parent Unit for 12+ hours before first use. You may operate Parent Unit with an AC adapter while charging batteries.



Figure 1

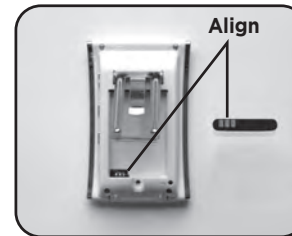


Figure 2



Figure 3



Figure 4

**PARENT UNIT BATTERY INSTALLATION:**

- Lift Belt Clip/Stand.
- Unscrew battery cover and remove from Parent Unit (Figure 1).
- Align connectors of the Parent Unit and rechargeable battery pack (Figure 2).
- Place rechargeable battery pack inside Parent Unit (Figures 3 & 4).
- Secure battery cover with its screw.

To order a new rechargeable battery pack, contact Consumer Relations at 1-800-544-1108. Use reference code number MO140.

**CAUTION!**



- **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard (carbon zinc), or rechargeable (lithium-ion) batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries are to be removed from the unit.
- Keep batteries out of child's reach. Swallowing a battery could be fatal.
- Used batteries should be disposed of properly.  
Do not dispose of batteries in fire - they may explode or leak and cause injury.
- Remove batteries when stored for long periods of non-use.
- **DO NOT** use monitor system in portable mode when batteries are low.
- Ensure that the battery compartment is completely secure after replacing batteries.
- Check that all contact surfaces are clean and bright before installing batteries.




- Place Baby Unit more than 3 feet (0.9 m) away from your baby.
- To reduce audio feedback, position both Parent and Baby Unit far enough away from each other to avoid interference. Turning the volume down will help.
- This monitor has indoor/outdoor range. During use of the monitor, if the sound quality deteriorates, you may be reaching the limits of the monitor's range. If this happens, you will need to move Parent Unit closer to Baby Unit.
- Adjust the volume to a comfortable level for your environment.
- Day/Night Auto Viewing lets you see the baby in a darkened room. The video display during this time is in black and white. For best view of your baby in a dark room, increase brightness control until desired brightness is achieved.
- Baby Unit can also be wall mounted. (See page 14.)

**IMPORTANT:**

Parent Unit will not operate unless rechargeable battery pack is installed first.

To maximize battery life, charge a new rechargeable battery pack in Parent Unit for 12+ hours before first use. You may operate Parent Unit with an AC adapter while charging batteries.

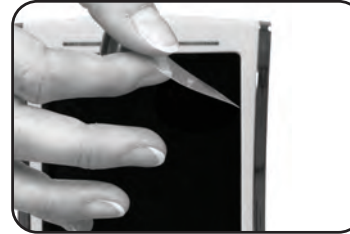


1 Remove protective cling from Parent Unit. Discard after you remove.



2 Connect AC adapter to the back of Baby Unit.

**⚠ WARNING!**


Strangulation Hazard - Children have **STRANGLED** in cords. Keep cords out of reach of children more than 3 feet (0.9 m) away.

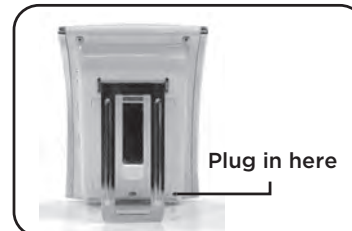

3 Connect AC adapter to the back of Parent Unit.



4 Plug Parent Unit and plug Baby Unit into wall to operate AC power.

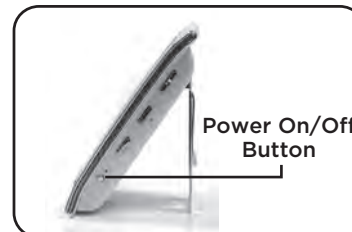

5 Hold down Power On/Off Button approximately 3 seconds to turn Parent Unit on. To turn off Parent Unit, hold down Power On/Off Button approximately 3 seconds again.




6 To turn Baby Unit on/off, hold down Power On/Off Button.

**Parent Unit (Video/Receiver):****POWER ON/OFF BUTTON** 

Power On/Off Button is on the right side of Parent Unit. To power on, press and hold button until Power LED illuminates and Safety1st logo appears on screen. To power off, press and hold button until Safety1st logo appears and Power LED powers off.

**LOCK SCREEN/UNLOCK SCREEN**

The Lock Screen function is provided to prevent accidental adjustments to the view. Touch the touchscreen once to bring up Lock Screen. Lock Screen appears. Touchscreen is disabled except for Lock Icon and Quick Pan Button. Press the Lock Icon for 2 seconds to unlock screen.

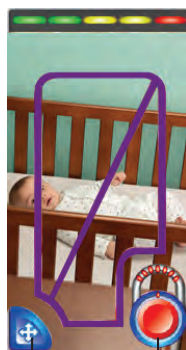

Quick Pan Button

Lock Button

**TRI-COLOR SOUND LIGHTS (5 LEDs)**


As baby's voice gets louder, the sound lights will illuminate from 1 light up to 5 lights. Low sound is one LED (green) illuminated and rises incrementally as baby's noise level increases until all 5 LEDs are illuminated (green - yellow - red).

**AUTO-ROTATION SCREEN**

Touchscreen self adjusts to portrait or landscape orientation. You can adjust the chosen view by rotating the Parent Unit by hand.

**ZOOM**

Touch the Zoom Icon, zoom overlay screen appears. To zoom: Tap the "+" or "-" zoom slider button to zoom incrementally, or press and hold the "+" or "-" zoom slider button to zoom in continuously to maximum zoom. Press "Check" button to confirm and return to prior screen. Adjusted status appears in status bar.

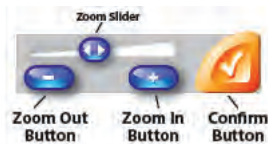**Parent Unit (Video/Receiver): (continued)****PAN & TILT** 

Touch the Pan Icon, pan arrows and pan overlay screen appear.


**To Pan:** Tap the pan arrows (up, down, left or right) to pan the view of your baby. Image will adjust incrementally, or press and hold the pan arrow to pan continuously to maximum pan range. Blue bar will appear and pan arrow will vanish when end of view has been reached. Press "Check" button to confirm and return to prior screen.

**BRIGHTNESS** 

Touch the Brightness Icon, darken/brighten overlay screen appears. Tap the "darken" or "brighten" slider button to adjust brightness incrementally, or press and hold the "darken" or "brighten" slider button to adjust continuously to maximum level. Brightness slider button will move as image is adjusted. The "darken" and "brighten" buttons will darken when end of brightness range has been reached. Press "Check" button to confirm and return to prior screen.

**STATUS BAR**

The Status Bar is visible in Lock Screen mode, and for the first 8 seconds of viewing mode. Battery charge status, link to camera status, zoom, camera, temperature, scanning status (auto-scan/manual scan) and time set in status bar corresponds to current camera activated.

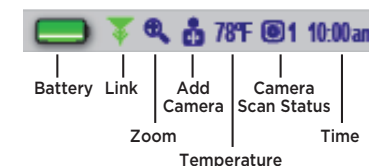

**Parent Unit (Video/Receiver): (continued)****VOLUME CONTROL** 

Volume Control Button is on the right side of Parent Unit. To adjust volume, press up (+) or down (-). Volume bars will display on screen. Yellow dashlight icon: Volume levels 1 - 3, Green dashlight icon: Volume levels 4 - 9, Red dashlight icon and no bars means Parent Unit is on mute.

**TALK TO BABY** 

Talk to Baby Button is on the right side of Parent Unit. Press and hold Talk to Baby Button to transmit speech to baby. The Talk icon appears on screen until button is released.

**QUICK VIEW - VIDEO ON/OFF** 

Quick View Button is on the right side of Parent Unit. Press the Quick View Button to shut-off the video screen. The Parent Unit will go into Powersaver Mode. Press again to bring back full video.

**BELT CLIP & STAND**


The Belt Clip is convenient for portability. You can clip the Parent Unit to your belt or waistband. The Belt Clip also easily converts to a table-top stand.

**TOOLBOX** 

Touch the Toolbox Icon on the Primary Menu, Secondary Menu screen appears.

**SECONDARY TOUCHSCREEN MENU**

- Touch-activated Icons:
  - Clock Button/Set Time
  - Camera Button  
Program/Add Camera(s)
  - Temp Button/(°F/°C) Setting
  - Help Button
  - Confirm/return to previous

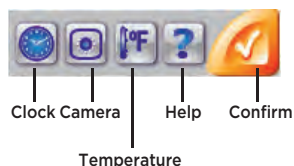**Parent Unit (Video/Receiver): (continued)****CLOCK MENU** 

Touch the Clock Icon, clock overlay screen appears. To set clock, press and hold the hour button to set current hour. Press and hold the minute button to set current minutes. Press and hold the am/pm/hrs button to continuously scroll through the am/pm/hrs and minutes to set time. Press "Check" button to confirm and return to prior screen. Time set appears in status bar.

**TEMPERATURE** 

Touch the Temperature Icon to change current (°F) Fahrenheit temperature reading to (°C) Celsius temperature reading. Temperature appears in status bar.

**HELP BUTTON** 

Touch the Help Icon to get our Customer Service contact information.

## Camera (Baby Unit):

### POWER INDICATOR

The power indicator is a green LED that indicates that the unit is on and functioning.

### ADDING ADDITIONAL CAMERAS

Note: This product can accept up to 4 cameras. To order an additional camera (#MO140), please contact our Customer Service Department by phone at 1-800-544-1108 or visit [www.safety1st.com](http://www.safety1st.com)

- Plug the AC adapter into AC jack on the Camera and the other end into a standard wall outlet.



### CAMERA BUTTON

Touch the Add Camera button. From here, you can: Disable a previously added camera, reactivate a previously added camera, add a new camera and program a camera.



### TO ADD A CAMERA

Tap the next available camera button (+) and follow the prompts on screen: Press pairing button on new camera to add, linking prompts appear on screen for a few seconds while camera and Parent Unit link up. Camera image becomes visible on screen and camera icon changes to green. Press “Check” button to confirm and return to prior screen.

- **USE WITH MULTIPLE CAMERAS INSTALLED**  
Press the Quick View Button to fast-forward between Cameras if in Auto-Scan mode.
- **HOW TO PAUSE AUTO-SCAN**  
If more than one Camera is in use, double-click the Quick View Button on a chosen camera view. Auto-scanning will pause for 1 - 5 minutes. The status bar, camera battery icon and sound lights will correspond to the camera in view.
- **POWERSAVER MODE**  
Press and hold Quick View Button to shut-off the video screen. The Parent Unit will go into Powersaver Mode. Press again to bring back full video.

## Camera (Baby Unit): (continued)

### TO DISABLE/REACTIVATE A PREVIOUSLY ADDED CAMERA

Toggle between the “green icon” and “red icon” button to activate/deactivate the highlighted camera. Video screen fades to blue when camera is deactivated. Note: Deactivating a camera does not affect programmed settings.

### AUTO-SCAN ON/OFF TOGGLE BUTTON

Auto-Scan Mode allows monitor to automatically cycle through all cameras that are currently programmed and active. Touch the Auto-Scan Toggle button. Toggle between the Auto-Scan button (green icon) and Manual Scan button (red icon) to activate/deactivate the auto-scan feature. Press “Check” button to confirm and return to prior screen. Adjusted status appears in status bar.



### NIGHTLIGHT

Tap Nightlight Button on front of Camera to turn On/Off.

**PROPER POSITIONING**

**IMPORTANT:** When choosing locations to set up the Baby Unit and Parent Unit, follow these guidelines:

- For best sound quality, place Baby Unit 3 feet (0.9 m) away from the baby.
- Adjust volume dial on Parent Unit to appropriate level to minimize feedback.
- During use of the monitor, sound quality deteriorates as you reach the limits of the monitor's range. If this happens, you will need to move the Parent Unit in closer proximity to the Baby Unit.

**IMPORTANT – CHECK RECEPTION:**

The first time you use your monitoring system, two adults should test it in the following way:

- Place Parent Unit at least 20' (6m) away from Baby Unit.
- Have an adult speak into Baby Unit at various levels (soft to loud) while another adult checks Parent Unit for the proper sound and picture reception. Try Parent Unit in every location that it will be used.

**Wall Mounting the Camera:**

Mounting the Baby Unit on a wall is similar to mounting a picture.

1. Make 2 marks horizontally in your desired location on the wall. Make certain location is close to power source and any wiring is not accessible by children.
2. Install 2 screws (5/16" head) in the wall where you made the marks.
3. Carefully place base of Baby Unit on screw and gently slide to the left until Baby Unit is securely in place. Confirm attachment to wall before letting go of Baby Unit.
4. Plug in AC adapter. Ensure all wiring is properly positioned to avoid all contact and/or accessibility by children. Recommend battery power use if cable poses possible hazard.



Use for  
Wall Mount

**Care and Cleaning**

Use a soft, dry cloth to keep your monitor free from dust. DO NOT immerse product in water.

**Cleaning Camera Lens:**

1. With a soft brush, such as a clean makeup brush, carefully brush away any dust and dirt particles that may be on your Camera lens. Do not skip this step as a small bit of sand or dirt left behind could scratch your lens in the next steps.
2. Take a cotton swab and lightly moisten it with clean water. Carefully swab around the inside edges of your lens.
3. With a dry portion of a lens cloth or soft non-abrasive tissue, buff the lens in a circular motion to dry.

**Helpful Hints**

Use household electricity whenever possible. When the AC Adapter is used with your household electricity, you will find that the power is stronger and more consistent than when you rely solely on the battery. Range and sound quality also depends on the construction of your house. Steel reinforced wall, for example, reduces the effective range of the monitor. Conserve the battery so you will have power when you don't have easy access to AC outlets.

**When not using the Unit, remove AC Adapter and be sure the power button is "OFF".** When you are not using the AC Adapter, remove it from the Unit and store it in a safe, dry place until you need it again. If the AC Adapter is plugged into the Parent Unit but not being used in an electrical outlet, the AC Adapter will prevent battery operation of the Unit.

**When using the AC Adapter with household electricity, make sure the outlet is "ON".** Some electrical outlets are powered through a switch in the room. If the Baby Unit is plugged in and turned "ON", the power indicator light should be lit. If it is not, try turning the light switch in the room "ON".

**Safety Instructions**

**VENTILATION:** The Monitor should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or placed in an enclosed installation, such as a book case or cabinet that may impede the flow of air through the ventilation openings.

- Position the Transmitter, Receiver and AC adapters to allow adequate ventilation and prevent these components from overheating.

**HEAT:** The Monitor should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat. Also keep these components out of direct sunlight.

**POWER SOURCE:** The Monitor should be connected to a power supply only of the type described in these operating instructions.

**POWER CORD PROTECTION:** The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, convenience receptacle, and at the point it exits from the Monitor. **NOTE: Do not place adapter under a window where a child might use it to step on and reach something that might be dangerous.**

- Check to make sure outlet plates are not unusually hot to the touch. If they are, immediately unplug cords from these outlets. Check that all outlet connections are in good condition so that adapter is not loose or that no wiring is exposed. Have a qualified, licensed electrician check the wiring as soon as possible.

**OBJECT AND LIQUID ENTRY:** Care should be taken so that objects do not fall onto, and liquids are not spilled into the enclosure through the openings.

**DAMAGE REQUIRING SERVICE:** The Monitor should be serviced by qualified service personnel when:

- A. The power supply cord has been damaged; or
- B. Objects have fallen or liquid has been spilled into the product; or
- C. The Monitor has been exposed to rain; or
- D. The Monitor does not appear to operate normally or exhibits a marked change in its performance; or
- E. The Monitor has been dropped or the enclosure damaged.

**THE USER SHOULD NOT ATTEMPT TO SERVICE OR REPAIR THE MONITOR. ALL SERVICING SHOULD BE REFERRED TO SAFETY 1<sup>ST</sup> CUSTOMER SERVICE DEPARTMENT: (800) 544-1108.**



PROBLEM	POSSIBLE CAUSE	SOLUTION
Power LED does not illuminate	<ul style="list-style-type: none"> <li>- Parent or Baby Unit is not turned On</li> <li>- Battery pack is dead</li> </ul>	<ul style="list-style-type: none"> <li>- Turn Parent or Baby Unit on. Hold down Power On/Off Button until all LEDs come on</li> <li>- Charge or replace batteries</li> </ul>
No power is getting to my Parent/Baby Unit	<ul style="list-style-type: none"> <li>- Adapter is not receiving electrical power</li> <li>- Electrical power is not getting to Parent/Baby Unit</li> </ul>	<ul style="list-style-type: none"> <li>- Make certain any light switches that control power to the wall outlet are on when using AC adapter</li> <li>- Check AC adapter jack-to-socket and plug-to-outlet connections</li> <li>- Check for pinched wire</li> </ul>
Parent Unit has no sound	<ul style="list-style-type: none"> <li>- Volume is too low</li> <li>- Sound is Off</li> <li>- Out of range</li> <li>- Something is blocking microphone</li> </ul>	<ul style="list-style-type: none"> <li>- Adjust the volume</li> <li>- Bring Parent Unit closer to Baby Unit</li> <li>- Remove obstruction from front of Camera</li> </ul>
My Parent Unit shows a black screen/no video	<ul style="list-style-type: none"> <li>- Video Time Out has turned off screen</li> <li>- Baby Unit may be turned off</li> </ul>	<ul style="list-style-type: none"> <li>- Press Video On/Off Button to turn back ON</li> <li>- Turn Baby Unit ON</li> <li>- Video Monitor will time out after 2 minutes when not plugged into AC outlet</li> <li>- Remove obstruction from front of Camera</li> </ul>
Video is not in color	<ul style="list-style-type: none"> <li>- Room is too dark which has activated Day/Night Auto Viewing. This may happen during the twilight hours of the day or if room is darkened for example with shades down.</li> <li>- Baby is being monitored at night in a dark nursery</li> </ul>	<ul style="list-style-type: none"> <li>- Add more light to the room</li> <li>- Day/Night Auto Viewing is activated in the dark allowing you to view baby in black &amp; white only</li> </ul>
Picture is not clear	<ul style="list-style-type: none"> <li>- Picture is blurry or not centered</li> </ul>	<ul style="list-style-type: none"> <li>- Make sure protective cling is removed from front of Baby Unit and Parent Unit</li> <li>- Move Camera location</li> <li>- Make sure video is not in Zoom mode</li> </ul>

Parent Unit is continuously beeping	<ul style="list-style-type: none"> <li>- Baby Unit is not turned On</li> <li>- Parent Unit is too far away from Baby Unit</li> </ul>	<ul style="list-style-type: none"> <li>- Verify that Baby Unit is On</li> <li>- Verify that Parent Unit is within range of Baby Unit</li> </ul>
Audio feedback (squealing)	<ul style="list-style-type: none"> <li>- Parent Unit is too close to Baby Unit</li> </ul>	<ul style="list-style-type: none"> <li>- Move Parent Unit further away from Baby Unit</li> <li>- Turn down volume on Parent Unit to mute to get minimum feedback</li> </ul>
Weak sound coming from Parent Unit	<ul style="list-style-type: none"> <li>- Volume too low</li> <li>- Battery may be low</li> <li>- Protective cling is still on Parent Unit or Baby Unit</li> <li>- Speaker or microphone could be blocked</li> </ul>	<ul style="list-style-type: none"> <li>- Adjust volume</li> <li>- Recharge batteries</li> <li>- Make certain nothing is blocking camera microphone</li> <li>- Remove protective cling</li> </ul>
Low Battery LED turns on red	<ul style="list-style-type: none"> <li>- Batteries are low</li> </ul>	<ul style="list-style-type: none"> <li>- For Video Parent Unit and Baby Unit, recharge battery using AC adapter</li> </ul>
There is a delay in my audio/video signal	<ul style="list-style-type: none"> <li>- To properly protect the user from interference, you may perceive a slight delay in sound and video if you are next to the user while looking at the image</li> </ul>	<ul style="list-style-type: none"> <li>- This delay is normal as the monitor encodes and decodes the information to protect your privacy.</li> <li>- Normal operation</li> </ul>
Product battery life seems shorter than expected	<ul style="list-style-type: none"> <li>- Parent Unit was not charged properly</li> <li>- Parent Unit was not fully charged</li> </ul>	<ul style="list-style-type: none"> <li>- Refer to battery charging instructions on page 5</li> <li>- Use Video On/Off Button feature (See page 9) to extend battery life</li> <li>- Fully charge battery</li> </ul>
I'm hearing strange noises on my Parent Unit	<ul style="list-style-type: none"> <li>- The microphone can pick up ambient noise in the room like air conditioning, heating systems and low volume electrical equipment. This could interfere with the quality of the sound output</li> </ul>	<ul style="list-style-type: none"> <li>- Look for any noise source in the baby's room. Remove noise source or move Baby Unit away from the source</li> </ul>

## FCC Statement

### Radio and Television Interference

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation. For body worn operation, this product has been tested and meets the FCC RF exposure guidelines when used with the belt clip supplied or designed with this product. Use of other accessories may not ensure compliance with the FCC exposure guidelines.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning this equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with minimum distance 20 cm (8 in.) between the radiator & your body.

**WARNING:** Changes or modifications not expressly approved by Dorel Juvenile Group can void your authority to operate this equipment under the Federal Communications Commission rules..

## One (1) Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this Monitor is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted below and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product s within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse.

This warranty excludes any liability other than that express stated previously, including but not limited to, and incidental or consequential damages.

**SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.**

Thank you again for purchasing a Safety 1st product. We are not only about safety, we're also about your satisfaction. If you have any questions or comments, please call our Consumer Relations department at 1-800-544-1108 or e-mail us at [consumer@safety1st.com](mailto:consumer@safety1st.com).