

PROGRAMMING ADDITIONAL REMOTES REQUIRE AT LEAST ALREADY PROGRAMMED REMOTE

Programming Instructions:

A new remote can be programmed to the vehicle when there is one existing remote already programmed. Have all new remote keys cut by a locksmith, hardware store or dealer before beginning programming.

To program additional remotes, you should have all existing and new remotes present when programming.

1. With the vehicle turned OFF, place all existing remotes in the cup holder.
2. Insert the emergency mechanical key of the new remote into the driver's door lock cylinder located on the outside of the driver door. ***(The emergency key is located in the bottom of the remote. There also could be a plastic cover over the lock. If so insert the mechanical key in the opening on the bottom of the cover and gently pry up removing cover from the lock cylinder).***
3. Turn the key to the unlock position five times within ten seconds. The Driver Information Center (DIC) displays "Ready for Remote #2, 3, or 4."
4. Place the new remote into the remote learning pocket. ***(The remote learning pocket is located inside the center console storage area or under the cup holder. If the remote learning pocket is located in the center console, you will need to remove the storage tray to access the remote learning pocket. If the remote learning pocket is located in the cup holder, you will need to remove the cup holder to access the remote learning pocket).***
5. Press the ignition start button. When the remote is learned, the DIC display will show that it is ready to program the next remote.
6. Remove the new remote from the remote learning pocket and press the unlock button.

To program additional remotes, repeat Steps 4 through 6. When all additional remotes are programmed, press and hold the ignition start button for 30 seconds to exit the programming mode.

FCC WARNING

Statement 15.19(a)(3): This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by Dorman Products Inc. could void the user's authority to operate the equipment.

IC WARNING

PROGRAMMING ADDITIONAL REMOTES REQUIRE AT LEAST ALREADY PROGRAMMED REMOTE

FVIN 6399108IC

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1) This device may not cause interference. 2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs sans licence qui sont conformes aux RSS exempts de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est soumis aux deux conditions suivantes: 1) Cet appareil ne doit pas provoquer d'interférences. 2) Cet appareil doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement indésirable de l'appareil.