





PhoneEasy

341gsm

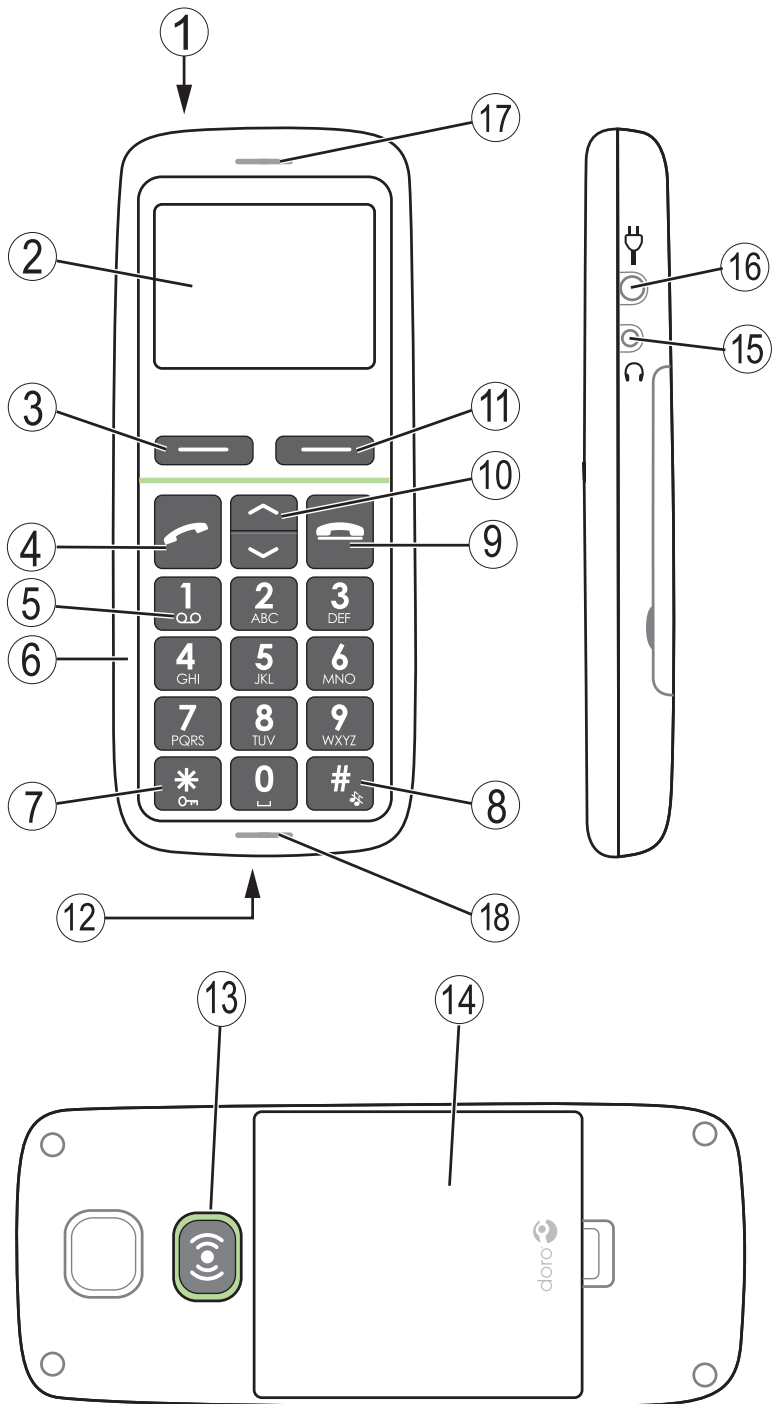

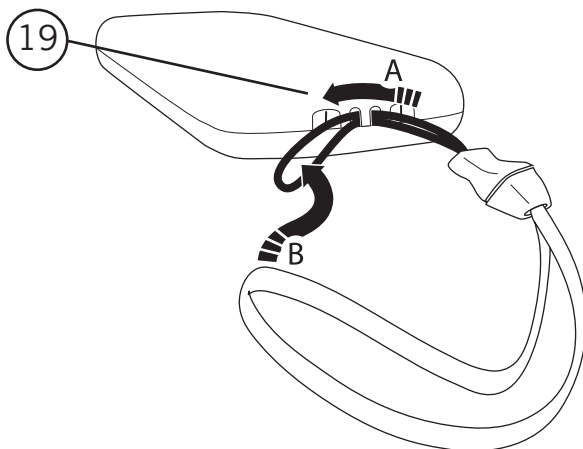

English

1. Power on/off
2. Display
3. Left soft key
4. Call key
5. **1** / Voice mail
6. Numeric keypad
7. ***** / Key lock
8. **#** / Change profile
9. End call
10. Arrow keys
11. Right soft key
12. Charging contacts (for use with charging stand)
13. Emergency call key
14. Battery cover
15. Headset socket
16. Charging socket
17. Loudspeaker
18. Microphone
19. Lanyard

Contents

Installation	3
Installing the SIM card and battery	3
Charging	4
Operation	5
Activating the phone	5
Making a call	6
Making a call from the Phonebook	6
Receiving a call	6
Volume control	6
Display symbols	7
Additional functions	8
Call options	8
Call waiting	9
Call information	9
Call log	9
Phonebook	10
Key lock	12
Headset	12
SOS calls 999/911/112	12
Silent mode	13
Emergency Call key	13
Text input	14
SMS messaging	15
Creating and sending messages	15
Outgoing messages (Outbox)	15
Incoming messages (Inbox)	16

Settings	18
Time & date	18
User setup	19
User profile (rings & tones).	20
Blocking functions	22
Emergency	22
Voice mail	23
Speed dial	24
Call setup.	24
SMS settings	26
Network setup	27
Services	27
Security settings	28
Task reminders	30
Calculator.	30
Safety instructions	31
Troubleshooting	34
Care and maintenance	38
Warranty and technical data	39

Installation


Warning!

Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM card and battery

The SIM card holder is located behind the battery.

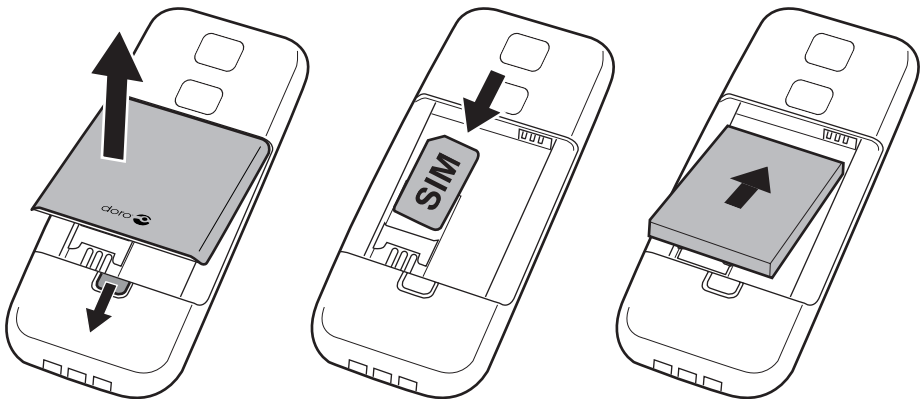

1. Remove the battery cover and the battery if it is already installed.
2. Insert the SIM card by carefully sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut-off corner is pointing upwards. Take care not to scratch or bend the contacts on the SIM card.
3. Insert the battery by sliding it into the battery compartment with the contacts facing upwards to the right.
4. Replace the battery cover.





Charging

Warning!

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low,  is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to the wall socket and to the charging socket .

If the phone is turned on when the charger is connected to the phone  is displayed briefly in the display and  when it is disconnected. The battery charge indicator is displayed while charging.

If the phone is turned off when the charger is connected to the phone only the battery charge status indicator will be shown in the display.

It takes approximately 3 hours to fully charge the battery.

 is displayed when charging is completed.

Note!

To save power the LCD backlight goes off after a short while but the phone is still charging. Press any key to illuminate the display.

Full battery capacity will not be reached until the battery has been charged 3–4 times.

The ambient temperature must be in the range 0 °C to +40 °C when charging.

Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.

Operation

Activating the phone

Press and hold **(I)** on the top of the phone to turn it on/off. The following messages may be displayed:



SIM card missing or incorrectly inserted.



SIM card damaged or not valid.

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN:** is displayed. Enter the PIN code and press **OK** (**(=)** upper left corner of keypad).

Delete with **Clear** (**(=)** upper right corner of keypad).

Note!

If PIN and PUK codes were not provided with your SIM card, please contact your network operator.



Trials: # shows the number of PIN attempts left. When no more attempts remain, **SIM blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

1. Enter the PUK code and confirm with **OK**.
2. Enter a new PIN code and confirm with **OK**.


Changing the language, time and date

The default language is determined by the SIM card. See [Settings](#) on how to change language, time and date.



Making a call

1. Enter the phone number. Delete with **Clear**.
2. Press  to dial. Press **Abort** to cancel dialling.
3. Press  to end the call.




Note!

When making international calls, press  twice for the international prefix "+". Always use "+" before the country code (instead of 00 or similar) for best operation.

Making a call from the Phonebook



1. Press **Name** to open the phonebook.
2. Use the arrow keys  /  to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see [Text input](#).
3. Press **Call** to dial the selected entry, or press **Back** to return to standby mode.

Receiving a call














1. Press  to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternately, press  to reject the call directly.
2. Press  to end the call.

























See also [Call options](#).

Volume control

Use the arrow keys  /  to adjust the sound volume, during a call. The volume level is indicated on the display.

Display symbols

	Signal strength		Headset connected
	Ring only		Missed call
	Vib only (vibration only)		Keylock on
	Vib & ring		Battery level
	Vib -> ring		Roaming (in other network)
	Light only (no ring/no vibration)		New message
			Alarm active

	SIM card missing		Charger connected
	SIM card error		Charger disconnected
	Mute		Headset connected
	Unlocking keypad		Headset disconnected
	New SMS message		Handsfree on
	SOS calls only		Handsfree off
	OK (confirmed)		Warning
	Query		Error
	Battery level low		Charging (animated)
	Calling		Call ended
	Incoming call		Missed call
	Searching		Call on-hold


Additional functions

Call options

During a call the soft keys¹ give access to additional functions:



Options (left soft key)

A menu with the following options is displayed:

Hold single call	Hold the current call
End single call	End the current call (same as )
New call	Call another number (three-party call)
Phonebook	Search the phonebook
Msg centre	Write or read SMS messages
Mute	Disable the microphone (mute)

SPK on (right soft key)


Activates handsfree mode, which allows you to speak without holding the phone.

Speak clearly into the microphone at a maximum distance of 1 meter (3 feet). Use the arrow keys  /  to adjust the loudspeaker volume.

Press **SPK off** to return to normal mode.

Note!

The handsfree function allows only one person at a time to talk. Switching between talk/listen is triggered by the sound of the person talking. Loud noises (music, etc.) in the background may interfere with the handsfree function.

1 **Soft keys**  have multiple functions. The current key function is shown above the soft key on the display.

Call waiting

An alert tone will be heard if there is an incoming call while talking. To put the current call on hold and answer the incoming call, press **Options**.

This service must be activated, see [Settings/Call setup](#).

Call information








During a call, the called or calling phone number and the elapsed call time is displayed.

If the identity of the caller is withheld, **Unknown** is displayed.

Call log

Answered, missed, and outgoing calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling



1. Press .
2. Use the arrow keys  /  to scroll through the call list.
 -  = Incoming call
 -  = Outgoing call
 -  = Missed call
3. Press  to dial the number or press **Options** for the following settings:

View	Show details for the selected call
Delete	Delete the call
Delete all	Delete all calls in the call log
Save	Save the number in the Phonebook

Phonebook

The phonebook can store 100 entries with 3 phone numbers in each entry.


Creating a phonebook entry

1. Press **Menu**, scroll to  and press **OK**.
2. Select **-New contact-** and press **Add**.
3. Select **Name** and press **Edit**.
4. Enter a name for the contact, see *Text input*. Delete with **Clear**.
5. Press **Done**.
6. Select **Mobile**, **Home number** or **Office number**, and enter the phone number, then press **Save**.
7. Press  to return to standby mode.

Note!

For international phone numbers, always use "+" before the country code (instead of 00 or similar) for best operation.



Managing phonebook entries

1. Press **Menu**, scroll to  and press **OK**.
2. Select an entry and press **Options**.
3. Select one of the following options and press **OK**.

View

Show details for the selected call.

Edit

1. Edit the name/number. To edit the name, you first need to press **Edit**. Use  /  to move the cursor. Delete with **Clear**.
2. Press **Save**.

Add new

See *Creating a phonebook entry* above.

Call

Press **OK** to call the contact.

Send SMS

Press **OK** to write an SMS message, see *SMS messaging*.

Top 10 setting

Press **OK** then **Add** to set the entry as one of the first 10 numbers in the phonebook. To delete a Top 10 entry, select the entry in the Top 10 list and press options, then **Delete**.

Delete

Press **OK** to delete the selected phonebook entry. Press **Yes** to confirm or **No** to abort.

Delete all

Select **From SIM** or **From Phone** and press **OK** to delete all phonebook entries from the SIM card or phone memory.

Enter the phone code and press **OK** to confirm.

Copy all

Select **From SIM** and press **OK** to copy all phonebook entries from the SIM card to the phone memory. Press **Yes** to confirm or **No** to abort.

Select **From Phone** and press **OK** to copy all phonebook entries from the phone memory to the SIM card. Press **Yes** to confirm or **No** to abort.


Storage


Select **SIM** or **Phone** and press **OK** to select the default storage for new phonebook entries.

Send vCard

Select **Send by SMS** and press **OK** to send the selected phonebook entry as a vCard via SMS. Enter the phone number of the recipient (or press **Search**) and press **OK** to send.

Key lock

Press and hold  to lock/unlock the keypad.

Incoming calls can be answered by pressing  even if the keypad is locked. During the call, the keypad is unlocked. When the call is ended or rejected, the keypad is locked again.

See [Settings](#) for key lock options.

Note!

The emergency number 999, 112 and 911 can be dialled without unlocking the keypad.

Headset

When a headset is connected, the internal microphone in the phone is automatically disconnected.

When receiving a call you can use the answer key on the headset cable to answer and end calls.


Warning!

**Using a headset at high volume can damage your hearing.
Adjust the sound volume carefully when using a headset.**

SOS calls


Warning!

Mobile phones such as this unit use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, you should never rely solely on a mobile phone for very important calls such as medical emergencies.

When the phone is turned on, the right soft key shows **SOS** before the SIM card is activated or if the phone lock is on. Press **SOS** and then press **Yes** to automatically call 911. Press **No** to return to the activation screen. If you pressed **Yes** by mistake, press **Abort** immediately to abort. As long as the phone is switched on, it is always possible to place an SOS call by entering **911** followed by .

Most – but not all – networks accept calls to 911 without a valid SIM card. Sometimes an emergency call cannot be placed due to network, environment or interference issues.


Silent mode

Silent mode is a fixed profile with SMS and ring signals disabled, while vibration and key tone settings are unchanged. Press and hold  to activate/deactivate Silent mode.

See also [Settings/User profile \(rings & tones\)](#).

Emergency Call key

To make an emergency call, press and hold the Emergency Call key on the back of the phone for 3 seconds, or press it two times within 1 second. The phone will send an emergency SMS text message to all numbers in the **Emergency numbers list**. The phone will then dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialed.

Dialling is repeated 3 times or until the call is answered, or until  is pressed.

The Emergency Call function must be activated before use. See [Settings](#) on how to activate this function, enter Emergency Numbers, and edit the emergency SMS message.

Note!

When an emergency call is activated the phone is pre-set to handsfree mode.

Automatic calls to 911 is normally not allowed. Do not save this number in the list of numbers to be called automatically. Some private security companies can accept automatic calls from their clients. Always contact the security company before programming in its number. The function is set to interact with most voice mail systems to avoid that the call sequence is interrupted.

Warning:


Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Text input


Text is entered by pressing the numerical keys repeatedly to select characters. When writing SMS messages in some languages you can use the Smart ABC (eZiType™) input method which uses a dictionary to suggest words. See [Settings](#) on how to change input method.

Entering text

Press the key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.


Press  for a list of special characters. Select the desired character and press **OK** to enter it.



Use the keys  /  to move the cursor within the text.

Press  to cycle upper case, lower case and numerals.

Entering text with Smart ABC


Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed. Use the arrow keys to select a word, then press **OK** and continue with the next word.

If none of the suggested words are correct, press  to change to manual input mode. The icon on the top left of the display indicates the input mode:

 ABC	UPPER CASE with SmartABC
 abc	lower case with SmartABC
ABC	UPPER CASE
abc	lower case
123	Numerals

SMS messaging

Creating and sending messages

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Write message** and press **OK**.
3. Type your message (see *Text input*) then press **Done**.
4. Select one of the **Send options** below and press **OK** to confirm.

Save and send	Send the message and save it in the Outbox
Send only	Send the message without saving
Send to many	Add more recipients for the message


If **Send to many** was selected, do the following:

1. Select **Recipients** and press **OK**.
2. Select one of the empty entries and press **Edit**.
3. Enter a phone number or press **Search** to open the phonebook. After entering or selecting a number, press **OK**.
4. Repeat step 2–3 to add additional recipients. When finished, press **Done**.


Note!

For international phone numbers, always use "+" before the country code (instead of 00 or similar) for best operation.

Outgoing messages (Outbox)

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Outbox** and press **OK**.
3. Select a message and press **OK**. Use the arrow keys to scroll the message up/down.
4. Press **Options**, see *Incoming messages (Inbox)*.

Incoming messages (Inbox)

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Inbox** and press **OK**.
3. Select a message from the list and press **Read**. Use the arrow keys to scroll the message up/down.
4. Press **Options**.

Send (Outbox)

Select one of the **Send options** and press **OK** to confirm, (see *Creating and sending SMS*).

Reply (Inbox)

Type your reply, then press **Done**.
The message will be sent immediately.

Delete

Press **Yes** to delete the message, or **No** to return to the menu.

Edit

Edit the message, then press **Done** to show the **Send options** (see *Creating and sending messages*).

Forward (Inbox)

Shows the **Send options**.

Delete all

Press **Yes** to delete all messages in the Inbox. Press **No** to return to the menu.

Use number

Displays all phone numbers contained in the message as well as the number of the sender.

1. Use the arrow keys to select one of the displayed numbers.
2. Press **Options**.
3. Select one of the following options and press **OK**.

Call	Call the selected number
Save	Save the number in the phonebook
Send SMS	Write a new SMS message


Settings

Note!


The settings described in this chapter are carried out in standby mode.

Time & date

Setting the time and date


1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set time** and press **OK**.
4. Enter the time (HH:MM), then press **OK**.
5. Select **Set date** and press **OK**.
6. Enter the date (YYYY/MM/DD), then press **OK**.

Setting the time/date format

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set format** and press **OK**.
4. Select **Time Format** and press **OK**.
5. Select **12 hours** or **24 hours** and press **OK**.
6. Select **Date Format** and press **OK**.
7. Select the desired date format and press **OK**.

Setting Auto time on/off


To set the phone to automatically update the time and date according to the current time zone, select **On**. (Does only work with some operators.)

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Auto time** and press **OK**.
4. Select **On/Off** and press **OK**.

User setup


Changing the language

The default language for the phone menus, messages etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Language** and press **OK**.
4. Scroll up/down to select a language, then press **OK**.


Display information

In standby mode the display can present date, time, and the connected network, or just the time.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Idle display** and press **OK**.
4. Select **Clock only** or **All info** and press **OK**.

Display backlight

Sets the delay time before the display backlight is turned off.


1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **LCD backlight** and press **OK**.
4. Select **15 sec.** or **30 sec.** and press **OK**.

User profile (rings & tones)


The phone has 3 available user profiles. Each profile can have different settings for ring signals, ring volume, etc.

Silent is a fixed profile with SMS and ring signals disabled, while vibration and key tone settings are unchanged. Press and hold **#** to activate/deactivate **Silent**.


Selecting a user profile

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User profiles** and press **OK**.
3. Select a user profile and press **Options**.
4. Select **Activate** and press **OK**.

Tone setup


1. Press **Menu**, scroll to  and press **OK**.
2. Select **User profiles** and press **OK**.
3. Select a user profile and press **Options**.
4. Select **Customise** and press **OK**.
5. Select **Tone setup** and press **OK**.
6. Select **Ring tone** and press **OK**.
7. Select one of the available tones, the tone will be played. Press **OK** to confirm, or press **Back** to discard changes.
8. Set up the **Alarm**, **SMS tone** and **Keypad tone** in the same way.

Ring volume

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User profiles** and press **OK**.
3. Select a user profile and press **Options**.
4. Select **Customise** and press **OK**.
5. Select **Volume** and press **OK**.
6. Scroll up/down to change the ring volume, then press **OK**.


Alert type (ring/vibrate)

Incoming calls can be signalled by a ring tone and/or vibration, or by light only.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User profiles** and press **OK**.
3. Select a user profile and press **Options**.
4. Select **Customise** and press **OK**.
5. Select **Alert type** and press **OK**.
6. Select the desired signalling mode and press **OK**.


Warning and error tones

Warning and error tones are used to alert the user of low battery power, phone and SIM card errors, etc.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User profiles** and press **OK**.
3. Select a user profile and press **Options**.
4. Select **Customise** and press **OK**.
5. Select **Extra tone** and press **OK**.
6. Select a tone and press **On/Off** to enable/disable it.
7. Press **Done** to save.

Blocking functions

You can disable some functions to simplify use of the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Block function** and press **OK**.
3. Select each function you want to disable and press **On**.
4. Press **Done** to confirm.

Emergency

Settings for the Emergency Call key function.

See also [Operation/Emergency call](#).

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Emergency** and press **OK** for the following settings:

Activation

Select one of the following options and press **OK**.

Off	Emergency call key disabled.
On Normal	Emergency Call key enabled. To activate, hold key for >3 seconds, or press 2 times within 1 second.
On (3)	Emergency Call key enabled. To activate, press key 3 times within 1 second.

Numbers list

The list of numbers that will be called when the Emergency Call key is pressed.

To add a new emergency number, select **Empty** and press **Add**. Repeat until you have max. 5 emergency numbers.

See [Phone book](#) on how to add names/numbers.

To edit or delete an existing entry, select it and press **Options**.

Message


The SMS text message to be sent when the Emergency Call key is pressed. Enter/edit text, then press **OK** to save.

Alarm information

Please read this important safety information before enabling the Emergency Call function:

Be careful about including numbers with automatic answering in the call list, as the alarm sequence stops once the call is answered.



Voice mail

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Voice mail** and press **OK**, then **Options**.
3. Select **Connect** and press **OK** to call the voice mailbox.

The voice mailbox can also be called by pressing and holding **1**.

If no number has been added yet, the line will show **Empty**.

Adding or editing the voice mailbox number

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Voice mail** and press **OK**.
3. Select **Empty** and press **Options**.
4. Select **Edit** and press **OK**.
5. Press **Edit** and enter the name and then press **Done**.
6. Press .
7. Enter the phone number to your voice mailbox.
8. Press **Save** to save the number.


Note!

The voice mailbox number is provided by your network operator.

Speed dial

The numerical keys **0** and **2–9** can be used for speed dialling.

Adding speed dial numbers

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Speed dial** and press **OK**.
3. Select **0** and press **Add**.
4. Select an entry from the phonebook and press **OK**.
5. Repeat to add speed dial entries for keys **2–9**.

To speed dial an entry, press and hold the corresponding number key.

To edit an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Call setup

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Call setup** and press **OK** for the following settings:

Caller ID

Controls display of your phone number on the recipients phone. Select an option and press **OK**.

Set by network	Use default setting by the network
Hide ID	Never show your number
Send ID	Always show your number

Call waiting

Select an option and press **OK**. See also *Operation - Call waiting*.

Activate	Enables the function
Deactivate	Disables the function
Query status	Displays if the service is active or not

Call divert

Set up which calls should be diverted.

Select a condition and press **OK**, then select **Activate**, **Deactivate** or **Query status** (see *Call waiting* above) for each.

Div. voice calls	Diverts all voice calls.
Div. unreach	Diverts incoming calls if the phone is turned off or out of range.
Div. no reply	Diverts incoming calls if unanswered.
Divert if busy	Diverts incoming calls if the line is busy.
Cancel diverts	Do not divert calls

Call barring

The phone can be restricted to disallow certain types of calls.

Note!

To change these settings a password is needed. Contact your network operator to get the password.

Outgoing calls	Press OK then select:
All calls	User can answer incoming calls but not dial out.
Internat. calls	User can not call international numbers.
Int. except home	User can not call international numbers except to the country associated with the SIM card.
Incoming calls	Press OK then select:
All calls	User can dial out but not receive incoming calls.
When roaming	User can not receive incoming calls while roaming (operating in other networks).
Cancel all	Cancel all call barring (password needed)
Set barr. PW	Change the barring password (password needed)

Answer mode

Select **Any key** and press **On** to be able to answer incoming calls by pressing any key.

SMS settings

1. Press **Menu**, scroll to  and press **OK**.
2. Select **SMS settings** and press **OK** for the following settings:

Predictive text

1. Press **OK**.
2. Select **On/Off** to enable/disable it, and press **OK**.
3. Select a dictionary (language) to enable Smart ABC/eZiType™, see [Text input](#), and press **OK**.

Profile set

This number is needed to use the SMS function. The number can be obtained from the network operator.

1. Add/edit the message service phone number. Use the side keys to move the cursor. Press **Clear** to erase.
2. Press **Save** to save the new number.


Memory status

Displays the percentage of memory space used in the SIM card and phone memory.

Pref. storage

1. Select **SIM** to store messages on the SIM card, or **Phone** to store messages in the phone memory.
2. Press **OK** to confirm.

Network setup

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Network setup** and press **OK**.
3. Select one of the following options and press **OK** to confirm.


Automatic	Network is selected automatically.
Manual	A list of available network operators is displayed (after a short delay). Select the desired operator and press OK .

Services

This menu may contain pre-programmed services from your network provider.

* Depending on network support and subscription.

Security settings

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Security** and press **OK**.

SIM lock

The SIM card is protected with a PIN code (Personal Identification Number). The phone can be set to ask for the PIN code on startup.

Select **On/Off** and press **OK** to enable/disable SIM card lock.

Note!

You need to input the current PIN code to disable/enable SIM lock.

Phone lock



Select **On/Off** and press **OK** to enable/disable the Phone lock.

Note!

*You need to input the current Phone code to change this setting. The default Phone code is **1234**.*

Keypad lock

Select one of the following options and press **OK**.

Auto key lock	Select the time delay for automatic keypad locking and press OK to confirm.
Unlock mode	Select Single key to unlock the keypad with  or Dual key to unlock with right soft key and  . Press OK to confirm.

PIN / PIN2 / Phone password

To change the PIN codes or the phone lock password:


1. Enter the current code and confirm with **OK**
2. Enter a new code and confirm with **OK**.
3. Enter the new code again and confirm with **OK**.

Reset

Resets the phone to the factory settings.

Input the phone lock password and press **OK** to reset.

Alarms




1. Press **Menu**, scroll to  and press **OK**.
2. Select **Alarms** and press **OK**.
3. Select one of the alarms **Alarm 1 – Alarm 5**, then press **Edit**.
4. To disable an alarm select **Off**, to enable it select **On**, then press **OK**.
5. Enter the alarm time using the keypad, then press **OK**.
6. For a single occurrence, select **Single** and press **OK**.
7. For a repeated alarm, select **Repeated** and press **OK**.
Scroll through the list of weekdays and press **On/Off** to enable/disable the alarm for each weekday, then press **Done**.
8. Enter a description for the alarm (see *Text input*), then press **Save** to save the alarm.

Note!

*The alarm function will work even when the phone is switched off. Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.*

*Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.*

Task reminders

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tasks** and press **OK**.
3. To add a new task, press **Add**.
4. Enter a date for the task, then press .
5. Enter a time for the task, then press .
6. Press **Edit**, enter a description for the task (see *Text input*), then press **Done**.
7. Press **Save** to save the task.




At the recorded date/time, an alert tone will be played and the task description will be shown on the display.

Note!

*The tasks function will work even when the phone is switched off. Do not press **Yes** when wireless phone use is prohibited or when it may cause interference or danger.*

Calculator

The Calculator can perform basic math operations.

1. Press **Menu**, scroll to  and press **OK**.
2. Enter the first number. Use  to enter decimal points.
3. Use the arrow keys to select an operation (+ - * /) and press **OK**.
4. Enter the next number and press **OK**.
5. Repeat steps 2–4 as necessary. The result is shown after each entry. Alternatively, select  and press **OK** to calculate the result.

Troubleshooting

Phone cannot be switched on

Battery charge low

Connect the power adapter and charge the battery for 12 hours.

Battery incorrectly installed

Check the installation of the battery.

Failure to charge the battery

Battery or charger damaged

Check the battery and charger.

**Battery recharged in temperatures
< 0°C or > 40°C**

Improve the charging environment.

**Charger incorrectly connected to
phone or power socket**

Check the charger connections.

Standby time decreases

Battery charge capacity too low

Install a new battery.

**Too far from base station, phone is
constantly searching for signal**

Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.

Failure to place or receive calls

Call barring activated

Deactivate call barring. If this does not solve the problem, contact the network operator.

PIN code not accepted

**Wrong PIN code entered too many
times**

Enter the PUK code to change the PIN code, or contact the network operator.

SIM card error**SIM card damaged**

Check the condition of the SIM card. If it is damaged, contact the network operator.

SIM card incorrectly installed

Check the installation of the SIM card. Remove the card and reinstall it.

SIM card dirty or damp

Wipe the contact surfaces of the SIM card with a clean cloth.

Failure to connect to network**SIM card invalid**

Contact the network operator.

No coverage of GSM service

Contact the network operator.

Signal too weak

See *Weak signal* below.

Weak signal**Too far from base station**

Try again from another location.

Network congestion

Try calling at a later time.

Echo or noise**Regional problem from bad network relay**

Hang up and redial. This may switch to another network relay.

Failure to add a contact**Phonebook memory full**

Delete contacts to free up memory.

Failure to set a function**Function not supported or subscribed from network**

Contact the network operator.

Safety Instructions

Warning!

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 7/8 of an inch (2.2cm) from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the unit more than 6 inches (15cm) from their pacemaker when the it is turned on
- Should not carry the unit in a breast pocket
- Should use the ear opposite the pacemaker to minimize the potential for interference

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has gas pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Emergency calls

Warning!

Mobile phones such as this unit use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, you should never rely solely on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit while in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

Driving safely²

Warning!

Use of this unit alone or with headphones (even if used only in one ear) while driving a motor vehicle or riding a bicycle is dangerous and is illegal in some areas, and the user should not engage in such conduct. Driving while operating a mobile phone is distracting and could cause serious injury or death.

If you decide to use this unit while driving or riding a bicycle, keep in mind the following guidelines:

- **Give full attention to driving and to the road.**
Using a mobile device while driving may be distracting. If you find it disruptive or distracting while operating any type of vehicle, riding a bicycle, or performing any activity that requires your full attention, pull off the road and park before making or answering a call if driving conditions require.
- **Get to know your phone and its features such as phone book, call memory, and speakerphone.**
These features help you to place your call without taking your attention off the road. See the applicable portion of this user's guide for more information.
- **Use a hands-free device.**
Add an extra layer of convenience and safety to your unit with one of the many hands-free accessories available.
Use of a headset or other hands-free device may be legally required.
Several states have in recent years passed laws making it unlawful to operate a motor vehicle while talking on a wireless phone without use of a headset, speakerphone, or other hands-free device. County and municipal ordinances may also limit or ban wireless conversations for automobile drivers. You should therefore check the status of such laws in your area and in locations to which you travel by car, whether or not you otherwise follow the preferred safety practice of routinely using a hands-free device.
For SMS text messaging, it is a recommended safety practice that you never send or view received text messages while driving; in California, and likely other states in the future, SMS messaging by a driver is also a legal violation.
- **Position phone within easy reach.**
Keep your eyes on the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
- **Assess the traffic before dialing, or place calls when you are not moving or before pulling into traffic.**
Try to plan calls when your car will be stationary. Never dial, send SMS text messages, or enter other text while you are driving. Driving while operating a mobile phone is distracting and could cause serious injury or death.

2 Adapted from CTIA-The Wireless Association ®

- **Let the person you are speaking with know you are driving.**
If necessary, suspend the call in heavy traffic or hazardous weather conditions. Driving in rain, sleet, snow, ice, fog, and even heavy traffic can be hazardous.
- **Do not take notes, look up phone numbers, or perform any other activities that require your attention while driving.**
Jotting down a to-do list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- **Do not engage in stressful or emotional conversations that may be distracting.**
Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

RF exposure information (SAR)

This model phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.686 W/kg and when worn on the body, as described in this user guide, is 0.590 W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea/fccid> after searching on

FCC ID: WS5DOR0341G

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 5/8 inch (1.5 cm) from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 5/8 inch (1.5 cm) from your body when the phone is switched on.

*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. SAR values may vary depending on national reporting requirements and the network band.

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 1.5cm between the radiator & your body.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

TTY compatibility

This unit does not support TTY signaling. If you intend to connect a TTY to the unit, this unit should not be purchased and, if already purchased, it should be returned for a refund.

FCC ID: WS5DOR0341G

IC: 8175A-DOR0341GSM

Disclaimer and Limitation of Liability

Doro AB and its affiliates, licensees and retailers assume no responsibility for any damage or loss resulting from the use of this guide. Doro AB and its affiliates, licensees and retailers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. Doro AB and its affiliates, licensees and retailers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all important data on other media to protect against data loss.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL DORO AB OR ANY OF ITS AFFILIATES, LICENSEES AND RETAILERS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED. THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY, OR CONTENTS OF THIS DOCUMENT. DORO AB RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

FCC/INDUSTRY CANADA NOTICE

This device complies with part 15 of the FCC Rules. This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules/Canadian ICES-003. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Doro has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Care and Maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- Maintain the battery and phone during operation between 32° F - 86° F (0° C - 30° C). **If the phone and battery become too warm or too cold, the phone and battery may not work temporarily, even if the battery is fully charged.** Subjecting the phone and battery to excessive temperatures can create a safety hazard resulting in fire, explosion or other hazards.
- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per IEEE-Std- 1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.

- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.

The advice above applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Battery disposal and recycling information

When the battery in this unit has reached the end of its useful life, please dispose of it according to your local environmental laws and regulations. For information about recycling cell phone batteries, go to: <http://www.rbrc.org>



The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When the battery in this unit has reached the end of its useful life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your unit will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Warranty and Technical Data

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

Support

For assistance, please contact:

Telephone: 1-888-551-doro (1-888-551-3676)

TTY/TDD: 1-888-561-doro (1-888-561-3676)

E-Mail: support.usa@doro.com

Further information are available on our website: www.doro.com

Specifications

Network: 850/1800/1900 Triple Band

Dimensions: 4.9 in x 2 in x .24 in (125 mm x 52 mm x 6 mm)

Weight: 3.4 oz (95 g) (including battery)

Battery: 3.7V/800 mAh Li-ion battery

© 2009 Doro AB. All rights reserved.

eZiType™ is a trademark of Zi Corporation.

vCard is a trademark of the Internet Mail Consortium.

English (US)

Version 1.0

www.doro.com

