

LNG (MAIN BOARD)

USER MANUAL – Appendix A

List of approved antennas for use with LNG (Main Board):

1. Whip antennas with a gain less than 1.5 dBi (902-928 MHz)

Note that other antennas are not permitted to be attached to the LNG (Main Board).

Note:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by Duncan Parking Technologies, Inc. could void the user's authority to operate the equipment and are not permitted.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.