

CJ6DCFC009001

User Manual

Draft

July 2003

Table of Contents

Your Phone's Features	2
Turning Your Phone On and Off	3
Turning Your Phone ON	3
Turning Your Phone OFF	3
Making and Answering Calls	4
Making Calls.....	4
Answering Calls	4
Signal Strength.....	4
Body-Worn Operation	5

Your Phone's Features

1. **LED (green/red)** blinks green for incoming calls; blinks red for notifications (messages, voicemail, and alerts).
2. **Camera Lens** lets you take pictures with auto focus function.
3. **Flash** helps you take pictures clearly at dark places.
4. **Sub Display** lets you monitor the phone's status.
5. **Main Display** shows the phone's menus and various features.
6. **Left Softkey** allows you to select an action or item at the bottom left of the main display.
7. **Navigation Key** scrolls through menus and displays the next or previous menu option. Also acts as a shortcut key for Web, Find Name in Phone Book, My Menu, and Downloads.
8. **TALK** allows you to place or to answer a call.
9. **Volume Keys** adjust the volume during a call or mute the ringer of an incoming call.
10. **Side Camera Key** activates Camera mode and takes a picture.
11. **Speakerphone Key** activates Speakerphone mode.
12. **MENU** accesses the phone's main menu.
13. **Right Softkey** allows you to select an action or item at the bottom right of the main display.
14. **Headset Jack** allows you to plug in an optional headset for hands-free use.
15. **END (Power)** allows you to power the phone on or off, to end calls, or to return to standby mode from any screen.
16. **OK** allows you to select highlighted menu items and to confirm actions.
17. **Camera/Video Key** activates Camera/Video mode and takes a picture.
18. **BACK** allows you to clear an entry or to back up within a menu.

Turning Your Phone On and Off

Turning Your Phone ON

1. Fully extend the antenna to receive the best reception.
2. Press **[END]** for two seconds. (The phone will display “Searching for Service” until it locates a signal, then it will automatically enter standby mode – the phone’s idle state. At this point, you’re ready to begin making and receiving calls.)

Turning Your Phone OFF

= Press **[END]** for two seconds until the screen reads “Powering Off.”

Making and Answering Calls


Making Calls

1. Make sure your phone is on.
2. Enter a phone number. If you make a mistake while dialing, press **[BACK]** to erase one digit at a time or press and hold **[BACK]** to erase the entire number.
3. Press **[TALK]**.
4. When you're finished, press **[END]**.

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to your voicemail.
2. When your phone rings or vibrates, answer the call by pressing **[TALK]**.
3. To end the call, press **[END]**.

Signal Strength

You can see the strength of your signal by the signal indicator () on your phone's display screen. Call quality and signal strength are always best when the antenna is fully raised. If you're inside a building, being near a window may give you better reception.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint approved carrying case, holster or other accessory. If you do not use a body-worn accessory, ensure the antenna is at least 0.59 inches (1.5 cm) from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines. For more information about RF exposure, visit the FCC Web site at www.fcc.gov.

Body-worn Operation

This device was tested for typical body-worn operations with the BC-9900 belt-clip and LB-9900 holster models, offered by Audiovox as an accessory to this phone, and found to comply with FCC RF exposure requirements. Third-party belt-clips, holsters and similar accessories should be avoided, as they have not been tested and may not comply with FCC RF exposure limits.

For more information about RF exposure, please visit the FCC website at www.fcc.gov .