Nano Receiver Wireless Laser Mouse

USER'S GUIDE



Please DO NOT direct the laser beam at anyone's eye.

CAUTION: To use this product properly, please read the user's guide before installation


Federal Communication Commission Interference Statement

FCC Caution: You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Functional Introduction

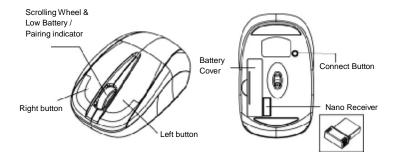


Installing the batteries


Step 1: Take the battery cover off.

Step 2: Insert the batteries as shown inside the battery compartment.

Step 3: Replace the cover.

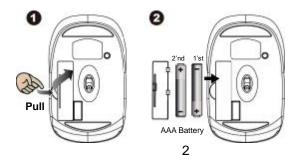

Nano Receiver

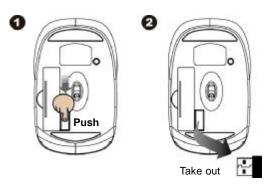

Setup the Connection between the Receiver and the Mouse

1. Plug the Nano receiver into the USB port of your computer.



- 2. Insert the batteries into the mouse, then follow the steps below.
- 3. If the mouse is not working, please put it into pairing mode.
- 4. Pairing: Re-plug the Nano receiver into the USB port of your computer. If the mouse does not work after 10 seconds, then press the connect buttons on the mouse again. (Nano receiver has auto pairing

function).

- 5.The LED indicator on mouse flashes steadily when it is in pairing mode and stops blinking when it is successfully paired with the receiver. The mouse remains off afterwards.
- 6. When the battery is low, the Low Power indicator blinking.

During pairing

