

# MANUAL FOR INSTALLATION AND OPERATING INSTRUCTION

Model : Primo

## CONTENTS

1. PAGER STANDARD FEATURES ..... 5
2. BUTTONS ..... 6
3. DEFINITION AND TYPE OF ICONS ..... 7
4. INSERTING / REPLACING BATTERY ..... 8
5. SELECTION OF ALERT MODE..... 9
6. OVERVIEW OF OTHER BUILT IN FUNCTIONS ..... 11
7. SELECTING BEEP/CHIRP/MELODY ALERT ..... 12

8. KEY TONE ON / OFF .....	13
9. ERASE ALL .....	14
10. SETTING THE TIME AND DATE .....	15
11. SETTING THE ALARM .....	16
12. SETTING AUTO ON / OFF .....	18
13. TURNING ON/OFF THE PAGER .....	20
14. RECEIVING AND READING MESSAGE .....	21
15. READING STORED & LOCKING MESSAGES .....	23
16. LOCKING AND UNLOCKING MESSAGE .....	26
17. DELETING MESSAGE .....	29

## **1. PAGER STANDARD FEATURES**

The PRIMO provides the following features as standard:

1. 1 line display (1 line x 12 digit)
2. Total memory capacity : 400 digits (20digit x 20 messages)
3. Locks up to 20 message
4. 3 Standard alert modes : Sound, Vibrate & Silent
5. 4 Beep, 1 Chirp & 8 Melody alerts
6. Key tone On/Off
7. Real time clock(12 hours) with calendar date display
8. Alarm clock
9. Delete individual message or erase all
10. Message time stamping
11. Service area indication

 
- 12. Automatic Power On/Off
- 13. Low battery indication
- 14. Back lighting
- 15. Reminder Alert

Caution : Any change or modifications in constructions of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## 2. BUTTONS


The pager has 2 push buttons (Read and select buttons) for the pager controls and operations.

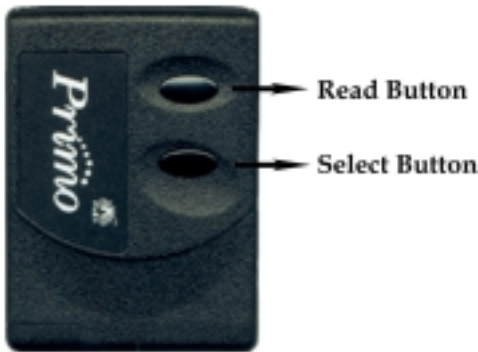

- A. Read Button  
Read message and set the pager function mode.
- B. Select Button  
Turn the back light on and enter into the function change mode.


## 3. DEFINITION AND TYPE OF LCD ICONS



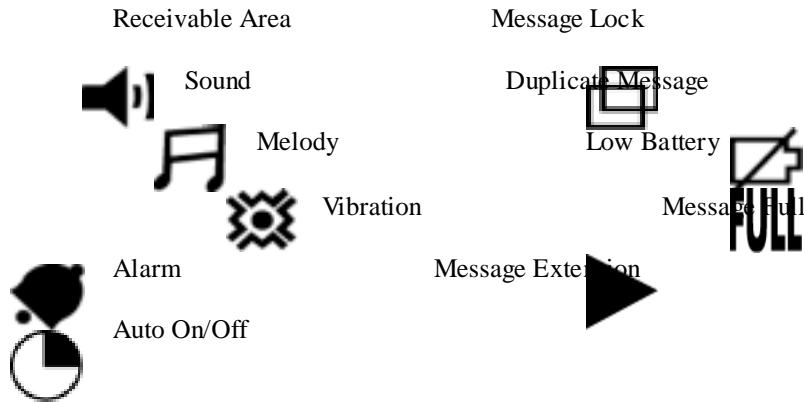

#### 4. INSERTING / REPLACING BATTERY


1. Slide the battery locking switch to the unlock position.
2. Slide the battery cover and open it upward.
3. Insert the battery paying attention to the battery polarity marked in the rear plate of the pager.
4. Close and Slide back the battery cover, slide the battery locking switch to the locked position.

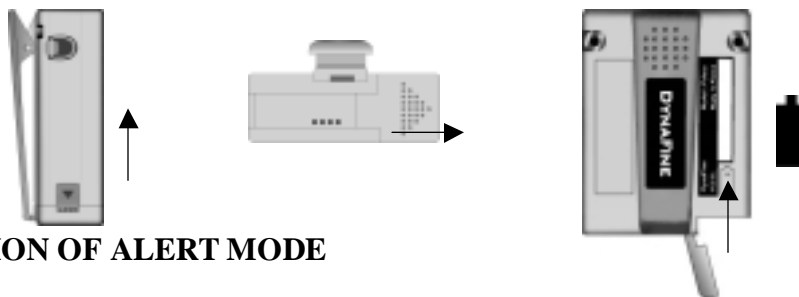

#### 5. SELECTION OF ALERT MODE

- Sound Mode, Vibration Mode, Silent Mode -

You can change the alert mode in a serial order of Sound Mode, Vibration Mode and Silent Mode. After inserting battery, the initial alert mode is Sound Mode.

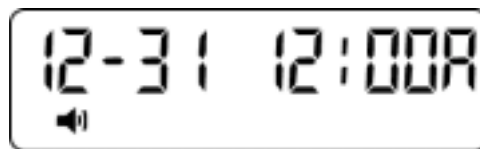


<Alert Tone Mode>

If you want to change sound Mode to Vibration Mode, press the SELECT button twice, then "VibRATE ?" will appear.




If you press the SELECT button once more, the pager will return to the standby mode displaying the current time and the vibration icon will appear indicating the change was made.

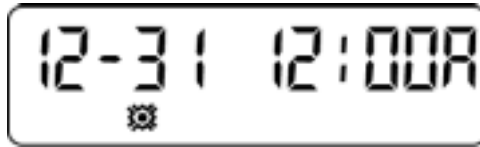

<Vibration Mode>

As this, you can also change Vibration Mode to Silent Mode or Silent Mode to Alert Tone Mode in the same manner.

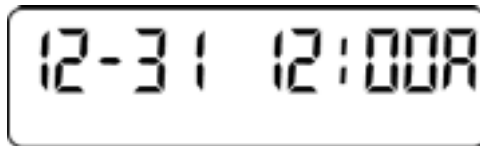

<Silent Mode>

## 6. OVERVIEW OF OTHER BUILT IN FUNCTIONS

The PRIMO has 7 menu functions. These are “SET MELODY”, “KEY TONE ON/OFF”, “ERASE ALL”, “SET TIME”, “SET ALARM”, “SET AUTO ON/OFF”, “POWER OFF”.



By pressing the SELECT button twice and the READ button once you’ll enter into the menu functions.

## 7. SELECTING BEEP/ CHIRP/ MELODY ALERT

Press the SELECT button twice and the READ button once to the “SET MELody ?” mode.

You can choose any one of desired beep tone, chirp or melody.


Press the SELECT button again the current tone will sound and its corresponding number will appear as displayed below.

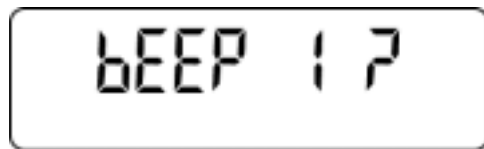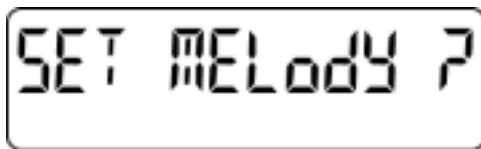


If you press the SELECT button once more, the next alert tone number is displayed and the corresponding alert tone will sound. Press SELECT button to select the desired alert. Pager returns to standby after that.

## 8. KEY TONE ON / OFF

Press the SELECT button twice and the READ button twice, “KEY TonE ?” menu will appear.

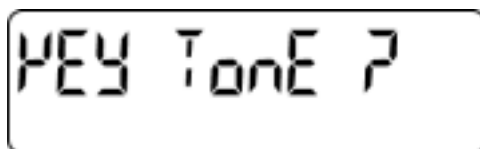

If you press the SELECT button, the current setting will be displayed and blinking.

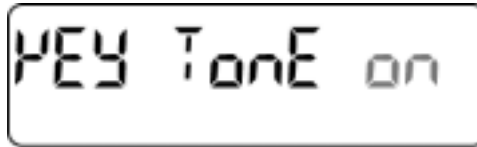


KEY TONE on

To change “ON/OFF” setting, press the READ button and the setting will be toggled between “On” and “Off”.


After selecting “On” or “Off”, press the SELECT button to return to the standby mode.

## 9. ERASE ALL

If you want to erase all stored unlocked messages, press the SELECT button twice and the READ button three times to the “ERASE ALL” mode. Press the SELECT button once and the “DELETED” is displayed and all stored messages except locked messages are erased.

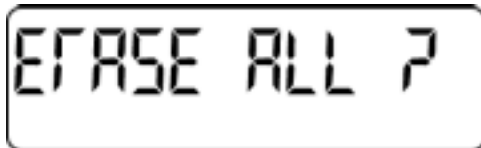


ERASE ALL ?

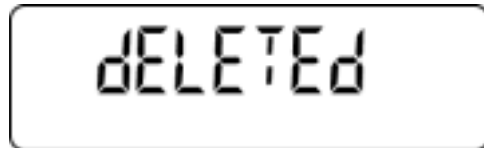

DELETED


## 10. SETTING THE TIME AND DATE

Press the SELECT button twice and the READ button four times, “SET TIME ?” menu will appear.

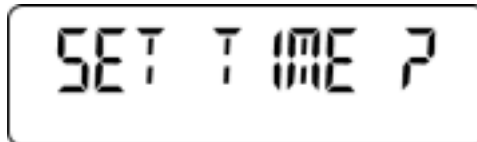

SET TIME ?

Press the SELECT button, and the month number will be blinking, press the READ button to the desired month and then press SELECT button.

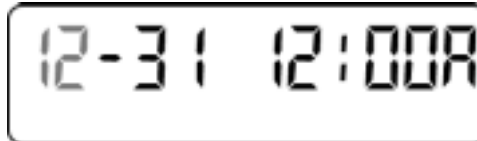


12-31 12:00A


After that the day number will be blinking and you can set the desired day. Repeat the procedure for hour, minute, and AM/PM selections.

## 11. SETTING THE ALARM

Press the SELECT button twice and the READ button five times, “SET ALARM ?” menu will appear. Press the SELECT button and “ALARM OFF” will be displayed.



SET ALARM ?

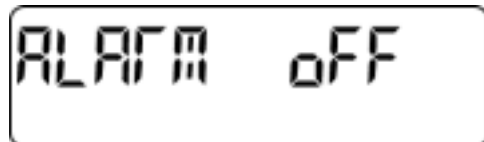


ALARM OFF

This can be toggled between “ON” and “OFF” by pressing the READ button.



If you want to use the ALARM function, select “ALARM ON” and press the SELECT button, and you can set the desired ALARM time by the procedure in “SETTING TIME”.

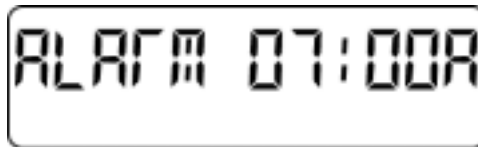

If you press the SELECT button in the state of displaying “ALARM OFF”, pager will return to the standby mode.

## 12. SETTING AUTO ON/OFF


Press the SELECT button twice and the READ button six times, “SET Auto?” menu will appear.



Press the SELECT button, “Auto OFF” will be displayed.




If you want to use the AUTO ON/OFF function, select “Auto on” by pressing the READ button, press the SELECT button, and you can set the desired AUTO ON/OFF time by the procedure in “SETTING TIME”.

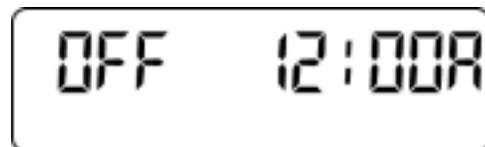


If you press the function button in the state of displaying “Auto OFF”, the pager will return to the standby mode.

### 13. TURNING ON/OFF THE PAGER

Press the SELECT button twice and the READ button seven times, the "PoWER oFF" menu will appear.

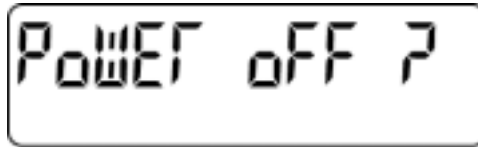


Press the SELECT button again and the pager will be off.

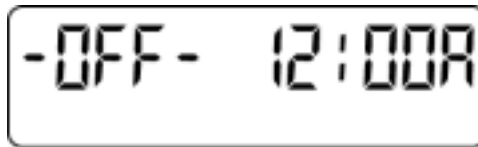


If you want to turn on your pagers that is off, press the READ button for one second, and two short beep emit and the pager enter into the standby mode.

### 14. RECEIVING AND READING MESSAGES


When a message received by your pager, the alert will last for 8 seconds, and the received message is displayed as below for example.

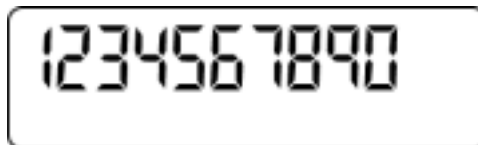

If you press the SELECT button or the READ button the alert stops.  
If the message is exactly the same as one in memory, the duplication icon will appear.

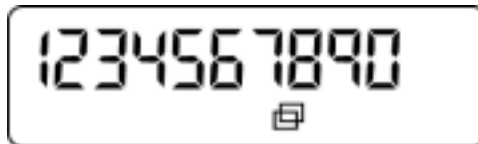

In the standby mode if there are unread messages, the LCD is displayed as below instead of displaying the current time.

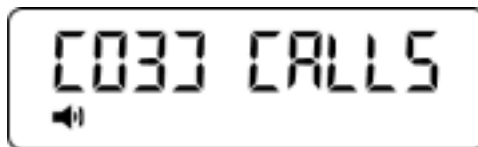


The number between the brackets is the number of unread messages.




## 15. READING STORED & LOCKED MESSAGES


Press the READ button, the message is displayed on the LCD as below.  
Messages are from the most recent to the oldest messages in memory.

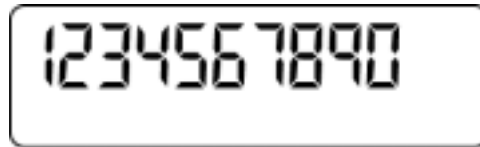


If the stored message is more than 12-characters long, the message extension icon will appear.

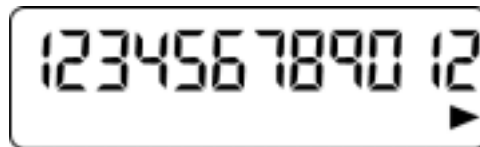

If you press the READ button again, the rest of message will be displayed.

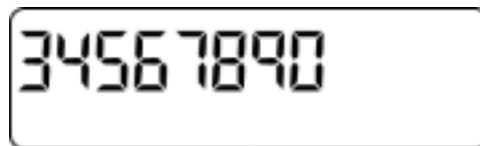


If you press the READ button after reading the message, the following information will be displayed.

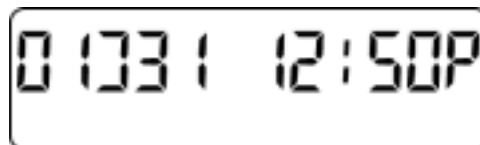


01]: storage number  
31 : Date message received  
12:50P : Time message received.

Press the READ button and the next message will be displayed.  
You can read the locked message after you read all the stored messages.  
In case of locked messages, the locked icon will appear and there is no information of the message.

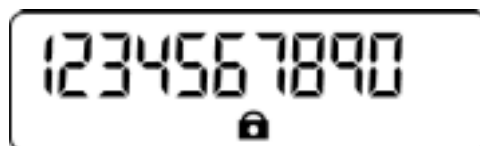


If the current message is the last one, the pager returns to the standby mode.  
If there are no stored messages, "No CALL" will be displayed.

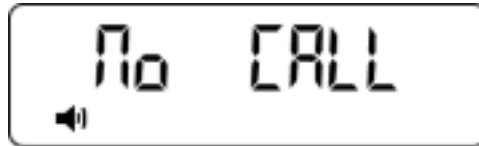


## 16. LOCKING AND UNLOCKING MESSAGE


To lock a stored message, press the READ button to the message you want locked, press the SELECT button once in the state of reading a message, and the pager ask you whether you want to lock the message or not.

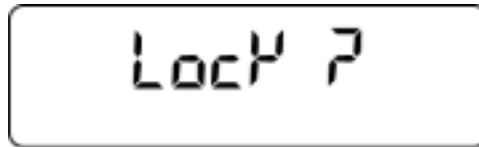


If you press the READ button, the message is locked and "LocKEd" is displayed.

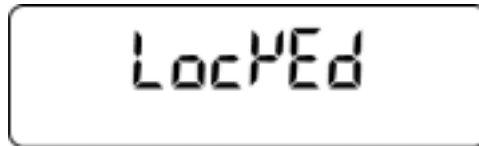

If the message is exactly the same as one being already locked, "duPLICATE" will be displayed.


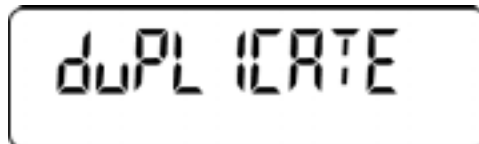


If the locked message is full (20 messages), "MSG FuLL" will be displayed.

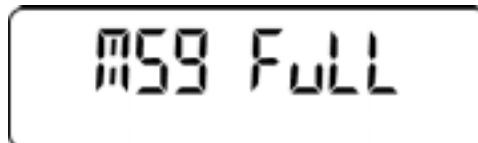

(NOTE: The pager will lock 20 messages and still receive additional 20 messages.)

To unlock a locked message, press the buttons in the same order as one in the above locking process, "UnLock ?" will be displayed. If you press the READ button, the message is unlocked and "UnLocKEd" is displayed. If you press the SELECT button not the READ button, the message is displayed again.

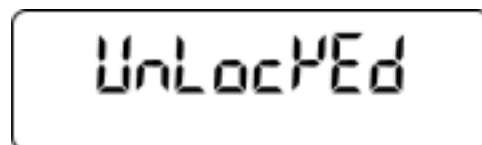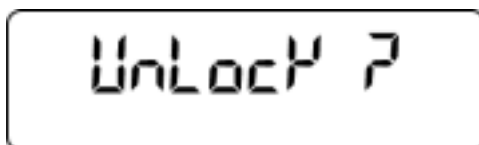

## 15. DELETING MESSAGE

To delete a message selectively, press the function button twice in the state of displaying the message you want to delete, and “dELETE ?” is asked to you.



At this time if you want to delete the message, press the read button and the message is deleted and “dELETED” is displayed. If you press the function button, the message is displayed again.

