

# User Manual

# WELCOME

Thank you for purchasing ACQUA Mobile Phone. This guide describes the basic functions of ACQUA cell phone to help you better use this phone.

The content of this manual is correct. But some of the manual may be different from the mobile phone because of the difference of software, SIM card or service provider . Some features require phone support, please check carefully for use. The company retains the right to amend the technical specifications without notice.

## Contents

<b>WELCOME</b> .....	ii
<b>GETTING STARTED</b> .....	4
BATTERY USE.....	4
Installing the battery.....	4
Charge the battery.....	4
SIM CARD INFORMATION.....	5
Installing the SIM card.....	5
Access codes.....	5
INSERT MEMORY CARD.....	6
EARPHONE.....	6
<b>STANDBY MODE</b> .....	6
PHONE LAYOUT.....	7
ENTER TEXT.....	8
<b>CALL FUNCTIONS</b> .....	9
MAKE A CALL.....	9
To make an international call.....	9
To Make a call from the phonebook.....	9
ANSWERING OR REJECTING AN INCOMING CALL .....	10
To answer the incoming call.....	10
To reject an incoming call.....	10
To send message (SMS) during a call or conference call.....	10
CALL WAITING.....	10
MAKE A CONFERENCE CALL.....	10
TIPS FOR CALL OPTIONS.....	11

<b>MAIN MENU</b> .....	<b>11</b>
OVERVIEW OF MENU FUNCTIONS.....	11

<b>PHONEBOOK</b> .....	<b>12</b>
SEARCH.....	12
ADD NEW CONTACT.....	12
CALLER GROUPS.....	12
SPEED DIAL.....	12
BLACKLIST.....	12
COPY ALL.....	12
MOVE ALL.....	13
DELETE ALL CONTACTS.....	13
SETTINGS.....	13

### MESSAGES13

WRITE MESSAGE.....	13
Text Message.....	13
Multimedia message.....	13
INBOX.....	13
DRAFTS.....	13
OUTBOX.....	13
SENT MESSAGES.....	14
DELETE MESSAGES.....	14
BROADCAST MESSAGE.....	14
MESSAGE SETTINGS.....	14

### CALL CENTER.....14

CALL HISTORY.....	14
Missed calls.....	14
Dialed calls.....	14
Received calls.....	14

Delete Call Log.....	15
CALL SETTINGS.....	15

### SETTINGS.....16

USER PROFILE.....	16
PHONE SETTINGS.....	16
NETWORK SETUP.....	17
SECURITY SETTINGS.....	17
SIM Security Setup.....	17
Phone lock.....	18
Auto Keypad Lock.....	18
Change Password.....	18
RESTORE FACTORY SETTINGS.....	18

### MULTIMEDIA.....18

CAMERA.....	18
IMAGE VIEWER.....	19
VIDEO RECORDER.....	19
VIDEO PLAYER.....	19
AUDIO PLAYER.....	19
SOUND RECORDER.....	20

### ORGANIZER.....21

FILE MANAGER.....	21
FUN & GAMES.....	21
SERVICES.....	21
Data account.....	21
Internet.....	22
SIM Tool Kit.....	22
EBOOK READER.....	22
CALCULATOR.....	23

CALENDAR.....23  
 ALARM.....23  
**FM RADIO.....24**

◆ Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials. Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.

◆ In a thunderstorm, do not use the phone while charging, or use the phone outdoors, to avoid being struck by lightning or other damage.

◆ Do not leave the battery in hot places, it may cause fire or explosion.

◆ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

◆ Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

◆ Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.

◆ Do not attempt to open the phone's casing. Non-expert handling of the phone may cause damages to your phone. If the phone or any of its

accessories are not working properly, take them to your nearest qualified service center. The personnel there will assist you, and if necessary, arrange for the phone to be repaired.

◆ Use only accessories and charging devices approved by the phone manufacture! Otherwise you risk serious damage to health and property. The

battery could explode, for instance.

◆ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

◆ The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery. Do not continue to use the broken USB data cable or battery charger.

◆ If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

◆ Do not use mobile phones when driving. When driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

◆ Keep the phone and all its parts and accessories out of the reach of small children and pets. They accidentally damage these things or choke on small parts.

◆ Do not clean the phone while charging the

phone. You may be electric-shocked if you use the phone while charging the phone with the USB data cable or the battery charger. Make sure to disconnect the USB data cable or the charger before using the phone.

◆ Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

◆ Dispose of worn out batteries and phone in accordance with local provisions!

◆ Extreme heat or cold ;Avoid temperatures below 0°C/32°F or above 40°C/104°F

## Getting started

You need to insert the SIM card and charge the battery before using the phone.

### Battery use

To extend the battery life of your device:

1. Use the standard wall charger to charge the battery for the first time.
2. During the first 3-4 charge cycles, charge the battery until the battery indicator on the display stops scrolling.
3. Avoid partial charging. Also, wait for the battery to discharge completely before charging it again.
4. Charge the battery using the USB cable only if the recommended wall charger isn't readily available.
5. Avoid keeping the device on vibrate mode.

### Installing the battery

1. Mobile phones with built-in battery can by professional maintenance engineers replacement. If using the wrong type of battery, may explode. Please be sure to according to the manufacturer's instructions to handle used batteries.

2. Replace the battery. Align the contacts of the battery with the corresponding connectors in the battery compartment.

### Charge the battery

To charge the device battery:

1. Take the USB cable from the device packaging, and attach it to power adapter. Now connect the power adapter into a standard AC wall outlet.

2. Connect the micro USB connector on the cable into its designated port on the device (left side). The battery level indicator on the device screen will start scrolling horizontally to indicate that the battery is being charged.

**NOTE:** Exercise extreme caution while connecting the charger to the device. The connectors on the charger and on the phone may get damaged if too much force is applied while connecting them. If the battery is completely discharged, it may take a while before the on-screen charging indicator starts scrolling.

3. When the battery is fully charged, the battery level indicator on the device screen will stop scrolling horizontally. Once charging is complete, disconnect the charger from the device, and then from the wall outlet.

### SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

Be careful to handle, insert or remove the SIM card since the SIM card and the contacts inside can easily be damaged by scratching or bending.

**Note :** Before installing/removing the SIM card,

**always make sure that the phone is switched off.**

### **Installing the SIM card**

Insert the SIM cards into their respective slots.

Make sure that the contact area on the cards is facing the connectors on the device.

### **Access codes**

There are access codes for your SIM card. These codes help you to protect the phone against unauthorized use.

When requested for any of the code explained below, key-in the appropriate code (displayed as asterisks) and press the OK key.

#### ● **PIN**

The Personal Identification Number or PIN (4-8digits) protects your SIM card against unauthorized use. The PIN comes with the SIM card; see the SIM card instruction provided with your card.

If you enter an incorrect PIN three times in succession, the code will be disabled and cannot be used until you re-enable it by entering the PUK.

#### ● **PUK**

The 8-digit PUK (Personal Unblocking Key) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or in case you have lost it, please contact your service provider.

To re-enable your PIN, proceed as follows.

1. Key-in the PUK and press the OK key.
2. Enter a new PIN of your choice and press the OK key.
3. When the Confirm New PIN message is

displayed, key-in the same code again and press the **OK** key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Please contact your service provider for a new card.

### **Insert memory card**














Insert memory card. Take compatible micro SD card, and place it into its slot.

### **Earphone**

Connect the micro USB connector on the cable into its designated port on the device (top).

### **Standby mode**

In the main display, you may see several icons displayed on your status bar. The meaning for each icon is explained below:

	Vertical bars indicate the signal strength of the GSM network signal. Five bars indicate that your current position has the best reception.
	Indicates new text message(s).
	Indicates that the SIM call divert is activated.
	Indicates a missed call in SIM
	Indicates that the alert type of your phone is set as ring.
	Indicates that the alert type of your phone is set as vibrate.
	Indicates that the alert type of your phone is set as ring and vibrate.
	Indicates that the alert type of your phone is set as vibrate then ring.
	Indicates that the alert type of your phone is set as mute.
	Indicates your phone is locked.
	Indicates that the alert type of your phone is set as headset.
	Indicates the alarm clock is set.
	Indicates the battery charge level.

## Phone layout





No.	Key note	Functional Description
1	Left soft key (LSK)	Press to perform the function currently displayed in the lower left corner of the screen. Long press to activate the flashlight
2	Right soft key (RSK)	Press to perform the function currently displayed in the lower right corner of the screen.
3	Send key	Press to make a call. Hold to redial the last number called.
4	End key	To hand up on a call during a call or power on/off.
5	OK key	Confirm key
6	Navigation keys	In the standby mode, quick access to (Up key) QQ (Left key) Music Player (Right key) SMS (Down key) MSN Move the cursor to select the menu you want.
7	Numeric keypad	Input numbers or characters
8	receiver	receiver
9	LED	Flashlight
10	USB port Earphone jack	USB port Earphone jack
11	Mic	Mic
12	Reset button	Reset button
13	LED open	Flashlight key to open
14	loudspeaker	loudspeaker
15	viewfinder	viewfinder

## Enter text

### ABC, T9, Number, and Symbol modes

You can enter text in some features such as Messages, Phonebook, or Calendar, using ABC mode, T9 mode, Number mode, and Symbol mode.

You can enter text by pressing the alphanumeric keys on the phone.

### Text Input Options:

While you are in text editing mode, you will be in several modes.

When you see [Option] and [Clear] in the soft key, press the soft key (left) for option: you can save the entry or change the Text Input Method. To erase a character, press the soft key (right) next to the character you want to erase.

### T9 Text Editing Mode

T9 Text Editing Mode is a predictive text input mode that allows you to key in any character using single keystrokes.

While you are in T9 editing mode, press the alphanumeric key once for one character. You will see T9 suggested words.

For example, press 4,3,5,5 and 6 key to enter "hello" in English word mode. T9 predicts the word that you are typing, and it may change with each key that you press. And press the [Select] soft key (left) to select the word you want to write.

**You can define the default Input Method of your phone and change input methods time to time.**

To define your preferred input method, go to **Phone Setup** sub menu in **Settings** menu. Then select

**Preferred Input Method.** Once you set the preferred input method, next time you edit in text input mode, the **setting** will be applied until you change to another.

If you want to change the text input method temporarily, in the text input mode, press [**Option**] soft key, and select "Input Method" from the option.

- You can change the text input method with the [#] key; the input methods will swap when you press the [#].

- Press the [\*] key to select Symbols.
- Press and hold the [\*] key to activate silent profile mode..

- Press [1] to enter periods or apostrophes automatically.

- Press [0] to insert a space , long press to enter "+|plw" in idle screen..

## Call functions

### Make a call

This gives you information about the calling service supported in your phone.

In standby mode, key in the number, including the area code, and press send key. Your phone will dial out based on your default dial setting.

### To make an international call

For international calls, long press [0] for the

international prefix (character +).

Key in the country code, area code and the phone number.

Press send key to call.

### To Make a call from the phonebook

In the standby mode, press right soft key (RSK) to enter Phonebook. Scroll to the desired contact name or type the name in the input box, and then press send key to make the call.

You can also press Menu and choose Phonebook submenu. Use navigation keys to select Search option. You can directly select a name from the phonebook list or enter the name in the quick search field. Then press send key to make the call.

### Answering or rejecting an incoming call

#### To answer the incoming call

- Press send key to answer the call.

#### To reject an incoming call

- Press end key to reject the call.

### To send message (SMS) during a call or conference call

You are also allowed to send SMS during an incoming call.

- Select Options and Messages.
- Under Messages menu, select Messages and press OK. Select Write Messages. For details on SMS, please see "To write a SMS".

### Call waiting

You can answer another incoming call while you have a call in progress.

During a call, press left soft key (LSK) to enter the

**Option** menu to hold the current call and switch to the new incoming call. You can swap back anytime by pressing left soft key (LSK) again and select **Swap**.

### Make a conference call

You can make conference call while you have multi calls in progress.

1. In the standby mode, select SIM card.
2. Make a call to the first participant.
3. Press **Options** and call the second participant during an active call, and select **New call** to make a new call during an active call.
4. Press LSK and select **Conference**. This joins the calls to the conference.
5. Repeat steps 2 and 3 to allow new participants to be connected to the conference call.
6. Press **Options** and select **End All** to end the call. Or press end key..
7. Any call (participant) can be disconnected by pressing **Options** and select **End single call**.

### Tips for call options

A call can be connected to any single caller by pressing **Options**. When you press **Options** during an active call, you would have following functions as listed in below:

- **Hold single call:** put a call on hold
- **End single call:** end a call.
- **New Call:** make a new call during an active call.
- **Phonebook:** shortcut to **Phonebook** menu.
- **Messages:** shortcut to **Messages** menu to write text message.
- **Sound Recorder:** to record your conversation

during an active phone call.

- **Mute:** set On/ Off to mute the call during the conversation.
- **DTMF:** set On / Off for DTMF (Dual Tone Multi-Frequency) tone dialing system.

During a conference call, you can use the following functions also:

- **Swap:** switch between calls on hold and active.
- **Conference:** make a multi-party conversation.
- **End all calls:** end a multi-party call.

## Main menu

To access Menu mode, press **[Menu]** in Idle mode.

Some menus are operator, network and subscription dependent.

## Overview of menu functions

<p><b>Basic menu</b></p>	<p>Phonebook Messages Call center Settings Multimedia Organizer FM radio</p>
--------------------------	--

## Phonebook

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook. To access this menu, press **[Menu]** in Idle mode and select **Phonebook** or press RSK key to enter **Phonebook**.

### Search

Search names and numbers saved in the

#### Phonebook.

Select the one you wish to call, and press Send Key to make a call.

In the search mode, you might press key to change the input method.

### Add New Contact

Use this menu to add a new contact to Phonebook, SIM card, private phonebook.

### Caller groups

There are five default caller groups on the phone. You can edit each group's name, caller ring tone, caller picture, caller video in the group settings. You can add, delete a member (all members) in the specified group. With the caller group function, you can send a message to all members of a group at the same time.

### Speed dial

If you assign the number to one of the speed dialing

keys (from 2 to 9 ) saved in the phonebook list, you can call the phone number by long pressing the key in the standby mode.

### Blacklist

Allows you to filter and block incoming calls or messages.

Your phone provides the following options for

#### Blacklist:

- **Settings:** Allows you to reject calls, SMS, and MMS from SIM card. You can select to reject from the blacklist, accept only from contact, or all.
- **Blacklist:** Allows you to add or edit phone numbers on the Blacklist.

**Reject Log:** Allows you to check reject log on calls or messages.

### Copy All

Allows you to copy contacts among two different storage locations, such as from Phone to SIM card or SIM card to Phone.

### Move All

Allows you move all contacts information to different storage location.

### Delete all contacts

You can delete all phonebook data in SIM card, or Phone.

### Settings

Your phone provides you various setting options to

personalize your phone, including **Owner number**, **Memory status**, **Preferred storage** and so on.

## Messages

Use the Messaging menu to send and receive short messages and multimedia messages. You can also use a voice-mail, MSN, and cell broadcast message features. To access this menu, press [Menu] in Idle mode and select Messages. Message functions are available depending on network services that your service provider supports.

### Write Message

#### Text Message

Use this menu to create and send a message.

#### Multimedia message

Use this menu to create and send a multimedia message.

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, and audio, from phone to phone or from phone to e-mail.

#### Note:

- The maximum size allowed for a message can differ, depending on your service provider.
- Depending on the file type or DRM (Digital

Rights Management) system, some files may not be able to be forwarded.

### Inbox

This folder stores all of the messages you have received, except for e-mails.

### Drafts

This folder stores messages you have saved to send at a later time.

### Outbox

You can view the messages that the phone has failed to send.

### Sent messages

This folder stores messages you have send.

### Delete messages

This folder helps you to delete all messages in selected folder as Inbox, Outbox, Draft and Delete All Folders.

### Broadcast Message

This network service allows you to receive the broadcast messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in your area.

For more information about broadcast message topics, please contact your service provider.

**Note:** This service may not be available on all

networks. For more information about the available subjects, please contact your network service provider.

## Message Settings

Within the Message Settings sub-menu, you can define default values on common parameters for mobile-originated messages.

## Call Center

Enter the call center menu, you can check out call history, setting general call settings and setting auto answer and record. To access this menu, press [Menu] in Idle mode and select Call center .

## Call history

Use this menu to view the calls you have dialed, received, or missed, and the length of the calls. You can also check the cost of your calls, if the SIM card supports this function.

## Missed calls

In **Call Record** menu, choose **Missed Calls**, and press **OK** to view the records. This menu displays the most recent received calls that you did not answer.

## Dialed calls

This menu displays the most recent calls you have dialed.

## Received calls

This menu displays the most recent calls you have

received.

## Delete Call Log

All call record can be deleted. You may select deletion of all latest talk record or only missed calls, dialed calls or received calls in the checklist.

## Call settings

This option enables you to set the general call settings of the phone.

### The options are:

- **Caller ID:**—Set by network, Hide ID or Send ID.
- **Call waiting:** You can activate this function or deactivate it, and also view the current settings via query.
  - **Call divert:** You can set to forward the incoming call in different conditions and enable to Activate/Deactivate call diversion and check the Query status.
  - **Call barring:** In order to activate this service, it requires the services provided by the network service provider. When you change barring password, you need to input the old password.
  - **Line switching:** Enables you to touch Line ½ for the phone.
- **Advanced settings:**
- **Auto redial :** You can touch to redial the number automatically when a call is not connected.
- **Call time reminder :** After setting this function to 'on', it will offer a warning tone towards the single or

periodic setting as your own during the call process, so you will be reminded of the call time at periodic intervals during a call.

- **Reject by SMS** : When this feature is enabled and you reject a call, an SMS text message will be send to the calling party.
- **Answer mode** : Including Cover answer any key(there are two answer mode in the headset mode,they are any key,auto) .

## Settings

The Settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default values.

To access this menu, press **[Menu]** in Idle mode and select **Settings**.

### User profile

The available profiles are General, Silent, Meeting, Outdoor, Headset, and Bluetooth. You can also set the tone, volume, alert, ring, and so forth with **Options**, **Customize** option, so that whenever you receive an incoming call or a new message, you can customize the use of your phone to different types of call environments.

### Phone settings

You have following options listed under phone settings:

**Date and Time**:Let you set time zone, time and date, time and date format and so forth on the phone.

**Schedule power on/off**: Let you set a particular time on the phone when the phone should power on/off itself.

**Language**: This phone allows you to set a language for the display in this phone.

**Preferred input methods**: This enables you to touch the text input method.

**Display settings**: Under Display you can set a host of different characteristics of the Wallpaper, Screen saver, standby mode.

**Shortcut**: The phone allows you to customize shortcuts for phone functions frequently used. Press the navigation left key to enter Shortcut menu.

**Dedicated Key**: This function allows you to re-assign the quick-access-feature default setting in 4-way navigation keys.

**Flight Mode**: Switch into flight mode while being on board, screening off partial function of telecom , normal mode or decide on when boot up .

**Other settings**: You can set a host of different characteristics of LCD backlight.

### Network setup

Network Setup helps you in Network Selection, selection of Preferred Network, and GPRS connection for SIM

### Network Selection

The Network Selection feature enables you to select automatically or manually the network used

when roaming outside of your home network.

**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

## Security Settings

Use this menu to protect the phone against unauthorized use by managing the several access codes of your phone and SIM card.

There are six types of security setting categories, and you can optimize security mode by choosing sub menus in “Security Settings” in “Settings” menu. These security settings will help you to keep privacy and to prevent other people from using the phone without your permission.

## SIM Security Setup

This function allows you to activate password to protect your phone against unauthorized use.

Your phone provides the following selections for your option:

- **PIN Lock:** This function allows you to lock the phone with a specific SIM card. The feature is designed to prevent the use of your SIM cards by means of another person’s phone if your SIM cards lost. You can switch on or off to activate the PIN Lock function.
- **Fixed Dial:** This function dials only the numbers in the fixed dialing number (FDN). To save and edit numbers on the list, you need the PIN2 code.
- **Barred Dial:** Allows you to switch on or off

restricted call function. However, you need to check if your SIM supports this function.

- **Change Password:** Allows you to change PIN code.

## Phone lock

You can switch on or off to activate the phone lock function to protect your phone. If you switch Phone Lock on, you need to enter the password to set the request on. The default password is “0000”.

## Auto Keypad Lock

This allows you to lock the phone’s keypad to prevent accidental key pressed. In **Auto Keypad Lock** submenu, select the time that after the last key press will be disabled, and press **OK**.

## Change Password

Allows you to change the phone lock password.

## Restore factory settings

This feature would reset the phone to the same settings as those configured at the factory. In this case, it does not delete the downloaded objects and phonebook records.

You will need to input password to restore factory settings. The initial password is 1122.



## Multimedia

### Camera

To take a picture, press Options in the preview mode, you can adjust the setting.

**Photo Album:** You can review pictures you have taken by pressing OK.

**Camera settings:** Set EV/Banding/Delay timer/Cont. short.

**Image settings:** Set Image size/Image quality.

**White balance:**  
Auto/Daylight/Fluorescent/Incandescent

**Scene mode:** Auto/Night  
Effect settings: Normal/Grayscale/Sepia/Sepia green/Sepia blue/Color invert

**Storage:** Allows you to select the storage for saving images.

**Restore default:** This menu allows you to restore to the camera's default settings.

### Image viewer

All images can be reviewed from the phone or memory card. You may choose to view your images in **List Style** or **Matrix Style**.

Your phone provides the following selections

for your option:

- **View:** Allows you to view the pictures saved in **Photo Album**.
- **Delete:** Allows you to delete the pictures in the **Photo Album**.
- **Send:** Allows you to forward a photo image via MMS or Bluetooth
- **Browse style:** Allows you to select between **List Style** or **Matrix Style** when you browse pictures.
- **Rename:** Allows you to rename the file.
- **Delete all:** Allows you to delete the pictures in the **Photo Album**.
- **Sort by:** Allows you to view the related information about the selected image.

### Video recorder

In Multimedia menu, select Video Recorder and press OK. You can press ok key to start recording and press RSK to stop recording. On the preview mode, you can press Options. you can adjust the settings.

**Camcorder settings:** Night mode, Banding.

**Restore default:** Restore default settings.

### Video player

Play videos stored on the micro SD card or the phone memory. The supported video formats are 3GP and MP4. Press Options to perform additional functions.

### Audio player

You may enter the music player via main menu or

use the side quick key for quick access. Another way to access the music player is through the navigation left key. You may listen to the music, speech, or even listen to an English lesson in MP3 and AAC format. You may also download the music content via USB or other connection. Music tracks must be saved in **My Music** folder in **File Manager** in order to be automatically detected and added into the default play list. You may listen to the music through the headset or loudspeaker. The user-friendly interface is specially designed to enable users to control, play, pause, and stop the music player as you wish.

If you are a first-time user, your music player will automatically detect and add all the music tracks into the default play list. When you use the music player next time, select any music track to access the following options:

- **Now Playing:** Allows you to view a list of now playing.
- **My Play lists:** Allows you to create 2 play lists according to your personal preference, in addition to the default play list. Select one song in any play list, and access the following options:
  - **Tracks:** Allows you to view my play lists.
  - **Settings:** Allows you to turn on auto refresh play list. In the **Music Player** menu, choose **Settings**. The setting options include:
    - **Player Settings**
    - **List auto gen.:** You can choose to refresh play list automatically or not.

**Repeat:** You can choose to repeat all songs, one songs or turn off this function.

**Shuffle:** This function is to mix the music tracks with different order.

**Background Play:** This function allows the phone to play the music continuously if you go back to the idled mode.

## Sound recorder

With this menu, you can record sound in AMR, WAV and AWB format and use it as ring tone, message tone, caller ring tone, alarm tone.

Your phone provides the following selections for your option:

- **Record:** Allows you to record the sound during your phone call or other situation.
- **Play:** Allows you to play the sound record.
- **Append:** Allows you to record in the same file.
- **Rename:** Allows you to rename a file.
- **Delete:** Allows you to delete the file saved in the **Voice Recorder**.
  - **Delete all :** Allows you to delete all file saved in the **Voice Recorder**.
  - **Settings:** Allows you to choose your preferred storage, file format, and audio quality.
    - **Set As:** Allows you to set the sound record file as ring tone, message tone, caller ring tone, or alarm tone.
    - **Send:** Allows you to forward the file to user profile or share with friends via MMS.

## Organizer

### File manager

In this menu, you can manage images, audio, music, photos, and other contents you have downloaded. Two menus will be displayed: Phone, Memory. Scroll to **Phone** and press **Options**, the options include: **Open** and **Format**. Scroll to **Memory card** and press **Options**, the options include: **Open**, **Rename**, **Memory Status** and **Format**.

### Fun & Games

This phone is built with three creative games ( Copter, Puzzle, Chicken). You may use the navigation keys to select the game you like to play. Then press **OK** to select the game.

You can also adjust the game setting at the beginning when you enter the game menu. The **Game Setting** in the phone offers the following options: **BGM**: Allows you to run on or off the sound effect while playing games. **Sound effect**, **Vibration**, **Volume**.

### Services

Service describe in the following are supported by your service provider.

Service describe in the following are supported by your service provider. If you cannot connect either one of those services, you might contact with your

service provider for further information.

### Data account

Default data accounts based on major operators at the time this phone is manufactured are provided.

### GSM data

Press **Edit** to change the data account settings, including: Account Name, Number, User Name, Password, Line Type, Speed and DNS.

### GPRS

Press **Edit** to change the data account settings, including: Account Name, APN, User Name, Password and so on.

### Internet

The Wireless Application Protocol (WAP) on your phone allows you to access the wireless web. Using the web browser, you can access up-to-date information and a wide variety of media content.

**Note**: To activate wap service, you need to contact your service provider.

To access this menu, press **[Menu]** and select **Services** then **Internet**.

### Homepage

Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser, press end key.

## Bookmarks

You can use this menu to save URL addresses to quick access a web site.

## Go to address

You can edit URL addresses to access a web site.

## Recent pages

You can view the recent pages you have visited.

## Setting

If the settings have made by the service provider, you may begin immediately.

If the accessed profiles have been assigned by your service provider, select a profile and activate it. Otherwise, you may key in setting manually. For appropriate settings, contact your network operator or service provider.

## SIM Tool Kit

In addition to the functions available in the phone, your service provider may offer additional applications such as weather or stock market information via the SIM card. This function is only supported when SIM card inserted.

## Ebook reader

You can read any file in TXT format saved in the memory card. Just copy the file in the folder of [eBook] in the memory card under the directory [File

management], and run the ebook feature. If the file is not in the folder, just “open the electronic book” through the options of the file, and the file will be moved to the folder automatically.

## Calculator

The calculator applies simple calculate function such as addition, subtraction, multiplication and division.

## Calendar

This feature allows you to keep track of your schedule and event saved in the calendar. You can also switch on the alarm with the task for reminding.

Your phone provides the following selections for your option:

- **View:** To view the note stored in a specified date.
- **View all:** To view all notes stored in a specified date.
- **Add event:** To add a new event in a specified date.
- **Delete event:** To delete a specific task, multiple tasks or all tasks.
- **Jump To Date:** To jump to a specific date.

## Alarm

This function allows you to set the alarm to ring at the time specified. The alarm clock works even when the phone is switched off.

- In the menu, choose **Alarm Clock** and press **OK**.
- Press **Edit** to set alarm time.
- To set the alarm, directly input the hours and minutes via numeric keys, using either 12-hour or 24-hour time format. You can change the time format from 24-hour to 12-hour in Time Format under Date And Time submenu of Settings menu.
  - Choose **Once/ Mon-Fri/ Mon-Sat/ Everyday** in Repeat option for your ring mode, and press Done.
  - In Audio Tone option, you may customize the alarm tone from Audio selections provided or from an FM Radio channel. Press the navigation left/right keys to switch between **Audio/ Radio** options.

## FM radio

To listen to the FM radio on your phone connects the compatible headset connector on the left side of the phone. Note that the quality of the radio broadcast depends on the radio station's coverage in that particular area.

When the radio is on, press **LSK** key and select:

- **Stations:** To save the channel you have found, press and select edit. Key in the name of the channel and frequency press OK. You can save 9 radio channels in the handset.
- **Set Frequency:** If you know the frequency of the radio channel you would like to listen to (between 87.5 and 108.0 MHz), key it in press OK.

- **Auto Search:** If you want to search radio channel, press Yes when Preset list confirm message show up. The search stops when channels has been found and show channel in Channel list.

- **Settings:** FM radio setting options:  
**Background play:** Turn on/off Background play function.

- **On:** allow radio continuing playing when exit FM radio

- **Off:** when user exits FM radio, radio will stop.

- **Record format:** Select the record format, AMR/WAV.

- **Audio quality:** Adjust audio quality.

- **Record storage:** save the radio file in the phone or memory card

- **Record:** Beginning record FM radio.
- **Append:** To append new radio with the already existing file.
- **File list:** Show amount of record files.

**Note: Before use FM radio, please insert the headset first.**

**FCC RF EXPOSURE INFORMATION:**

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

**BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

**RF Exposure Information:**

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is **1.061W/kg**, next to the head is **1.107W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or maximum over 50°C ,the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.