



[www.icemobile.net](http://www.icemobile.net)

# Marine

## User manual

Thank you for purchasing the ICEMOBILE device  
Please read the instructions in this manual carefully to  
keep your mobile phone in an optimal state.

## **User Information**

Our company's products have obtained 3rd party certification and have passed waterproof tests before they leave our factory.

Water droplets on the screen may affect touch screen sensitivity, causing operation errors. Please wipe dry any water droplets before continuing to use.

## **Disclaimer**

To the extent permissible under applicable laws, ICEMOBILE will not compensate for any special, attached, indirect and secondary damages that are produced by using relevant content and descriptions in this manual, as well as pay for any loss of profit, data, goodwill or expected

savings. Maximum liability on suffering any loss is limited to the purchase price paid by you (Damages will be compensated according to provisions of applicable laws unless it is a case of personal injury).

## Safety matters and environment protection



Please use hands-free devices to make or receive phone calls while driving, or use the mobile phone after parking the vehicle.



Turn off the mobile phone onboard airplanes and confirm that the alarm clock or auto power-on settings are cancelled, so as to prevent auto power-on.



**Medical Devices:** Please turn off the mobile phone in case you are near medical devices that are marked with "wireless devices are forbidden" or in case you are in a hospital.



**Waste batteries** should be placed in battery recycling bins and should not be discarded.



Avoid using the mobile phone under too high or too low temperature environments. Avoid exposing the mobile phone under intense sunlight or high humidity environments during thunderstorms.



**During vehicle refueling:** Please don't use this device near petrol stations, flammable fuel and chemicals.



Ensure the battery cover, lock screw, screw hole rubber plug, earphone and USB rubber plugs are perfectly closed while using near water, or in case the phone may get drenched, so as to ensure the phone remains water proof and dust proof.



Avoid using at explosive blasting areas: Turn off the mobile phone at any blasting site and follow relevant regulations.



Original package accessories: Please use original package accessories and batteries to ensure optimum performance. Please do not connect any incompatible accessories.



Please use the mobile phone within mobile phone network coverage area.



Do not disassemble the mobile phone. Please visit authorized service centers for any maintenance requirements.



Emergency calls: You can use the mobile phone to directly dial 112 to connect to local emergency services.



Data backup: Please back up important information that is stored on the device to avoid data loss.

## 1. Getting Started

definition for direction key

Left: contextual model

Right: Message

Up: Music

Down: Alarm clock

Middle key: Main menu



- 1.Flashlight
- 2.Earphone jack and USB battery charging port
- 3.Earpiece;
- 4.Flashlight shortcut button
- 5.SIM2 dial button
- 6.SIM1 dial button
- 7.Direction button
8. "\*" Keypad unlock
- 9.Back button
- 10.FM shortcut button
- 11.Hang-up button
- 12.Long-press "#" key to enter silent mode;
- 13.Used to enter spaces while typing
- 14.Microphone
- 15.Volume "+"
- 16.Volume "-"
- 17.Rear camera
- 18.Loudspeaker
- 19.Screw lock

## ■ 1.2.Installing and removing SIM card/Micro SD-card and Battery:

- 1.Open the back cover: First, rotate battery cover lock screws to the left until cover is loosened. Remove back cover and then remove battery.



- ⓘ Turn battery cover lock screws to the left until it's loosened

- 2.Put the SIM card and Micro-SD Card chip-sides facing down into corresponding card slots, and lock them properly.



- 3. Push the battery contact-end down against the mobile phone's battery contacts as per arrow-1 direction, and then lock the battery by pressing into the battery slot as per arrow-2 direction.



- 4. Install the back cover and fasten



- ⓘ Turn battery cover lock screws to the right until the cover is fastened

Ensure battery cover, battery cover lock screw, screw hole rubber plugs, earphone and USB rubber plugs are perfectly closed to prevent water and dust from entering. There will be no specific mention of this cautionary notice again in the remainder of this manual.

- ⓘ Please turn off the mobile phone and disconnect the battery charger from the phone prior to installing / uninstalling the SIM card.

### ■ 1.3.Mobile Phone Specifications

Phone Type	Three Proof, Feature Phone
Frequency	GSM : 850/900/1800/1900MHz
Size	124.5x54x20.6mm
Weight	140g
Default memory capacity	ROM : 64MB RAM : 32MB Micro-SD card maximum supported 16GB

Display	2.0 QCIF(176×220)
Dual SIM Dual Standby	Dual SIM Dual Standby
Network type	GPRS, WAP
Battery capacity	2000mAh
Call time	GSM is approximately 15 hours
Stand-by time	About 330 hours (depends on actual network conditions )
MMS/address book	Supported
Speaker phone	Supported
Call forwarding / call waiting	Depends on network support
Camera (video recording)	Camera Supports: 0.3 MP

Video player	Supported audio file formats: MP3,MIDI,AMR,AAC,WAV, Supported video file formats: MPEG4,3GP,MP4,AVI,MJPG
Sound recorder / FM	Supported
Earphone jack type supported	3.5mm earphones
Bluetooth	2.0
Waterproof level	Ip68

#### ■ 1.4. Waterproof Usage Instructions

Waterproof USB plug, screw plug: Please ensure USB plug and screw plugs are fastened to ensure the mobile phone is completely waterproof.

#### ● Preparation before putting in water

- 1.The battery cover must be closed before entering water (For details, refer to “Installing and removing SIM card/Micro SD-card and Battery”)

2.Ensure there are no hairs, sand grains or other particles in the soft rubber cover surrounding the phone, as this will affect how tightly the cover is closed.

### ● **Maintenance after removing from water**

1. After removing from water, do not uncover the phone body until it is completely wiped dry by towels or tissue papers.

2. Open the cover facing downwards to prevent any water remaining in the cover slots from entering the phone's body.

3. Shake away water drops from the phone's speaker, earpiece and microphone after the entire phone has been removed from water, and then place to dry in open air. Do not use electric hair driers to dry the phone.

### ● **Forbidden:**

1. Do not use the phone in hot springs or hot water, as the waterproof soft rubber cover will be affected by high temperature leading to water entering the phone.

2. Do not open the battery cover if the phone's body is not completely dry. Please remember at all times.

3. Do not use detergents or other chemical substances to wash the phone; only use clean water.

### **2.Startup and shutdown**

Ensure mobile phone battery is charged and properly installed. Short press (start / shutdown button) for 2-3 seconds to start or shutdown the phone.

### **3.Standby and unlock**

Short press the red hang-up button to lock the phone; Short press the red hang-up button+ flashlight shortcut button+ "\*"key to unlock the device.

### **4.Set time and date**

1. < Main Menu > → < Setup > → < Phone Settings > → < Time and Date >.

2. Select < Time/Date Settings >, Manually input time and press "ok" key.

3. Switch on or off < Use 24-hour System >, to set time format.



4. Select <Set Date>, manually input date, and press “ok” key.
5. Select <Format Setting> to choose the appropriate date format.

## 5. Making calls

1. In standby mode, directly input the appropriate phone number and press the “dial button”; select SIM 1 or SIM 2 dial buttons, if two SIM cards are installed, and use the current SIM card dial button, if one SIM card is used.
2. You can also select the appropriate contact from the phone book and dial their number.
3. You can also select the appropriate contact from the call log and dial their number.

## 6. Answering the phone

Press <dial button> to answer a call, and press <hang-up button> to end a call.

## 7. Messaging

Press <left soft button> or <OK button> and select SMS or MMS to enter message writing interface.  
Press < “#” key> to switch input method while typing.

- 7.1. Inbox  
You can view the received SMS in the Inbox.
- 7.2. Draft  
You can view saved drafts in the draft box.
- 7.3. Outbox  
You can view sent and saved, failed to send and saved after editing SMS' in the Outbox.
- 7.4. Sent message  
You can view sent SMS in the Sent box.

## 8. Calculator

Use 1-9 keys to input the number that needs to be calculated and “#” key to input decimal point; Press right soft button to clear last input step-by-step or to clear results; Press OK button to get the results.

Note: This calculator's precision is limited. It's only meant for simple calculations.

## 9. Calendar

This function can help remind you of preset calendar events with an alarm. You can also record your schedule using the calendar. Scroll and highlight the appropriate date: Please press OK button to check the schedule if you want to check all of the day's calendar events.

## 10. Alarm

When the mobile phone is switched off, the alarm continues to work only if the battery has sufficient charge. You can set up to 5 alarms, which are turned off by default. One or all the alarms can be turned on according to your requirement. Each alarm can be set individually.

The mobile phone will emit an alarm tone at the appropriate alarm time. Press Stop to switch off the alarm. If you press Snooze, the phone will suspend ringing.

## 11. Contextual Settings Profiles

Your mobile phone provides many kinds of settings that are contextual, so that you can define some settings according to different events and environments. First, please setup your personalized settings for a contextual profile based on your needs. You can then launch the profile anytime you require. The available contextual profiles can be divided into Standard, Silent, Meeting and Outdoor.

## 12. Camera

You can use this function to capture photos using the built-in camera and adjust camera settings. All photos captured by the camera are saved in the JPG format. Please use appropriate software to view the photos after downloading them to a computer.

If there is insufficient storage space to take new photos, you need to delete some old photos or other files using the "File Management" function, to release storage space.

## 13. File Management

Fault	Possible Causes
Doesn't start up	The battery may be out of charge. The battery may not be installed properly.
SIM card doesn't work	Clean SIM card if it's dirty. Reinstall SIM card. Exchange the SIM card if it's damaged.
Poor signal	Check the signal strength indicator on the display screen.

<p>Can't use phone to call</p>	<ol style="list-style-type: none"> <li>1. You may have set “conceal own number”, but your network operator doesn't provide this service</li> <li>2. Strong signal interference exists in the surrounding environment</li> <li>3. You may have activated call barring function</li> <li>4. You may have activated Line 2, but your network operator doesn't provide this service.</li> </ol>
<p>The battery can't be charged</p>	<ol style="list-style-type: none"> <li>1. The battery is completely discharged, in which case the battery charges only after being connected with the charger for some time.</li> <li>2. Battery performance has deteriorated.</li> </ol>

FCC RF EXPOSURE INFORMATION:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information: SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new mobile phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5cm from the body.