

**GSM Mobile Phone**

**Brand: Ice Mobile**

**Model: RING Viento II**

**FCC ID: C89RINGVIENTO**

# Content

<b>1</b>	<b>General Information</b> .....	<b>4</b>
1.1	Profile.....	4
1.2	Safety Information .....	4
1.3	Safety warning and Attentions .....	4
<b>2</b>	<b>Your phone</b> .....	<b>7</b>
2.1	Phone overview.....	7
2.2	Functions of Keys .....	8
2.3	Technical specifications .....	9
<b>3</b>	<b>Getting started</b> .....	<b>10</b>
3.1	Installing the SIM Cards and the Battery .....	10
3.2	Installing T-Flash Card.....	13
3.3	Charging the Battery .....	13
3.4	Powering On/Off the Mobile Phone .....	16
3.5	Linking to the Network .....	16
3.6	Adapting volume.....	16
3.7	Dialing Calls .....	16

3.8	Using the Headset .....	18
<b>4</b>	<b>Input method .....</b>	<b>18</b>
4.1	Icons for Input Methods.....	18
4.2	To Shift Entry Methods.....	19
4.3	Numeric Input .....	19
4.4	English input and numeric input: .....	19
4.5	Inserting a Symbol .....	20
<b>5</b>	<b>Using the Menus.....</b>	<b>21</b>
5.1	Messages .....	21
5.2	Phonebook.....	28
5.3	Calendar .....	31
5.4	Services .....	32
5.5	Multimedia.....	34
5.6	Camera .....	37
5.7	Video recorder.....	37
5.8	Mobile TV.....	38
5.9	FM Radio .....	38
5.10	Audio Player .....	39

5.11	Games .....	39
5.12	Facebook .....	40
5.13	Ebuddy .....	40
5.14	Alarm .....	40
5.15	Task .....	40
5.16	Calculator .....	41
5.17	File Manager .....	41
5.18	Manage Connections .....	43
5.19	Settings .....	43
5.20	Call center .....	46
5.21	Application .....	52
5.22	User Profiles .....	54
5.23	Lock keypad .....	55
5.24	Power off .....	55
<b>6</b>	<b>Appendix .....</b>	<b>56</b>
6.1	Appendix 1: Troubleshooting .....	56

# 1 General Information

## 1.1 Profile

Please read this pamphlet carefully in order to make your phone in perfect condition.

Perfectly combining humanized design and fine art, this mobile phone provides a streamlined outlook, comfortable hand-feeling, pleasant sounds and MP3 player which bring convenience and fun to your work.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

## 1.2 Safety Information

If your phone has lost or been stolen, notify the telecommunication office the SIM card is disabled (network support is required). This can avoid economic loss caused by unauthorized use.

Please take measures as following to avoid your phone being unauthorized use:

- Set PIN code of SIM card
- Set phone password

## 1.3 Safety warning and Attentions

### Safety warning

➤ **ROAD SAFETY COMES FIRST**

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!

> **SWITCH OFF IN AIRCRAFT**

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky. Please make sure that your mobile phone is powered off in flight.

> **SWITCH OFF BEFORE ENTERING RISKY AREAS**

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

> **OBSERVE ALL SPECIAL REGULATIONS**

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

> **INTERFERENCE**

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

> **QUALIFIED SERVICE**

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

> **ACCESSORIES AND BATTERIES**

Use only approved accessories and batteries.

➤ **USE SENSIBLY**

Use only in a normal and proper manner.

➤ **EMERGENCY CALLS**

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

*Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.*

Precautions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

- Keep the mobile phone and all its fittings beyond children's reach.
- Keep the mobile phone dry. Keep away from rain, moisture, liquid or other substances that may corrode electronic circuits.
- Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.

- Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.

## 2 Your phone

### 2.1 Phone overview



-7-



## 2.2 Functions of Keys

The mobile phone provides the following keys:

- ◆ Dial key  
Press it to originate a call on SIM card 1 by entering the called number or selecting a contact from the phonebook; or press it to receive an incoming call; or press it in standby state to show the latest call records.
- ◆ End key  
Press it to end a call being dialed or end an ongoing call; or press it to exit the menu and return to the standby state; or hold it for two or three seconds to power on or off the mobile phone.
- ◆ Left and right soft key  
The bottom line on the screen displays the functions of the Left and Right soft key.
- ◆ Delete key  
Press it to delete a character before cursor.
- ◆ Linefeed  
This key helps to switch to another line when the interface is in the edit interface.
- ◆ MP3 shortcut key  
Press this key in the idle screen to access to audio player interface.
- ◆ Message shortcut key  
Press this key in the interface to enter writing message interface.
- ◆ Space key  
Press it in the edit interface to get a blank.

◆ **Sym key**

Press it in the edit interface to input a symbol.

◆ **a key (2) :** Press it to switch between input methods.

◆ **Alt:** Press it in the edit interface to switch to symbol input on the keypad.

◆ **Number keys, letters, \* key and # key**

Press number keys 1 through 9 in input or edit state to input numbers and characters; or press a number key after entering a menu to choose the corresponding menu item; or hold any of number keys 2 through 9 for over two seconds in standby state to fast dial the corresponding telephone number in the speed-dial number list (need to set in advance).

*Note: Holding number key 1 on standby will call the voice mailbox service center. The voice mailbox center number, however, must be preset.*

Press letter keys in the edit interface to input corresponding letters.

The # key and the \* key represent different functions in different states or different function menus.

Hold the # key up to 2s in standby state to activate or deactivate the silent mode.

Press and hold the \* key up for 2s to input "+" in standby interface. When the symbol "+" appears, press the \* key quickly to input "P" or "W". "P" and "W" are used for calling the extension; "+" are used for dialing an international call.

*Note: The difference between characters "W" and "P" is that "P" means pausing three seconds and then sending the DTMF whereas a window pops up after "W" inputting, asking you whether to send the DTMF.*

### **2.3 Technical specifications**

Phone

Dimensions (W×D×H):99.5X55X13.5(MM)

Lithium battery: 800mAh

Please refer to their labels for other data related to the battery and the charger.

## 3 Getting started

### 3.1 Installing the SIM Cards and the Battery

An SIM card carries useful information, including your mobile phone number, PIN (Personal Identification Number), PIN2, PUK (PIN Unlocking Key), PUK2 (PIN2 Unlocking Key), IMSI (International Mobile Subscriber Identity), network information, contacts data, and short messages data.

Note:

*After powering off your mobile phone, wait for a few seconds before removing or inserting an SIM card.*

*Exercise caution when operating an SIM card, as friction or bending will damage the SIM card.*

*Properly keep the mobile phone and its fittings such as the SIM cards beyond children's reach.*

Installation

- ◆ Hold the End key for a while to power off the mobile phone
- ◆ Push the back cover above the battery and remove it.
- ◆ Pull the left battery buckle outward and then lift the battery away.
- ◆ Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing downward, till the SIM card cannot be further

pushed in.

- ◆ Aim the positive pole and negative pole of the battery at the battery connector of the mobile phone, and press the left of the battery to install the battery into the battery tank.

### **Using code**

The mobile phone and the SIM cards support sorts of passwords, in order to prevent the phone and the SIM cards from being misused. When you are prompted to input any of the codes mentioned below, just input the correct code and then press the OK key. If you input a wrong code, press the Right soft key to clear it and then input the correct code. To modify the PIN, PIN2, and/or phone lock code, choose Settings > Security setup > Change password.

#### ◆ **Phone lock code**

The phone lock code may be set to prevent your mobile phone from being misused. In general, this code is provided along with the mobile phone by the manufacturer. The initial phone lock code is set to 1122 by the manufacturer. If the phone lock code is set, you need to input the phone lock code when powering on the mobile phone.

#### ◆ **PIN**

The PIN (Personal identification number, 4 to 8 digits) code prevents your SIM card from being used by unauthorized people. In general, the PIN is supplied with SIM card by the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input wrong PIN code for three times.

Unlocking methods as follows:

-Input the correct PUK according to the screen tips to unlock the SIM card.

-Then input the new PIN and press the OK key.

-Input the new PIN again and then press the OK key.

-If the input PUK is correct, the SIM card will be unlocked and the PIN will be reset.

*Note: The SIM card will be locked if you input wrong PIN code for three times. To unlock the SIM card, you need to input the PUK. In general, the PUK can be obtained from the network operator.*

◆ **PUK**

The PUK code (Personal Unlocking Key, 8digits) is required to change a blocked PIN. It is supplied with SIM card. If not, contact your network operator. If you input wrong PUK code for 10 times, SIM card will be invalid. Please contact the network operator to replace the SIM card.

◆ **PIN2**

The PIN2 code (4 to 8 digits), supplied with SIM card, is required to access some functions such as “call costs setup” and “fixed dialing setup”. Please contact the network operator to verify whether your SIM card supports these functions. If you input wrong PIN2 for three times, the PIN2 will be locked. To unlock the PIN2, input the correct PUK2 as follows:

-Input the correct PUK2 according to the screen prompt to unlock the PIN2.

-Then input the new PIN2 and press the OK key.

-Input the new PIN2 again and then press the OK key.

◆ **PUK2**

The PUK2 code (Personal Unlocking Key2, 8digits), supplied with SIM card by the vendor. If not, contact the network operator. If you input wrong PUK2 for ten times, the PIN2 will be invalid and the corresponding functions cannot be used. Please contact the network operator to replace the SIM card.

◆ **Barring code**

A barring code is required for setting the call barring function. You can obtain this code from the network operator to set the call barring function.

### **3.2 Installing T-Flash Card**

The T-Flash card is a pluggable mobile storage card inside the mobile phone.

To install the T-Flash card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.

To remove the T-flash card, open its latch and slightly press the card inward. The card will automatically pop out. Close the latch.

Note:

- 1. The mobile phone cannot automatically identify the T-flash card being inserted when the mobile phone is powered on. You must power off the mobile phone and then power it on, so that the phone can identify the T-Flash card.*
- 2. The T-Flash card is a miniature object. Keep it out of the reach of children for fear that children swallow it!*

### **3.3 Charging the Battery**

The lithium battery delivered with the mobile phone can be put into use immediately after being unpacked. A new battery will have maximum performance after the first three full charge/discharge cycles.

Battery level indication:

- ◆ Your mobile phone can monitor and display the battery state.
- ◆ Normally the remaining energy of the battery is indicated by the battery level icon at the upper right corner of the display screen.

- ◆ When the battery energy is insufficient, the mobile phone prompts "Battery low". If you have set an alert tone, an alert tone will be given off when the battery level is too low.
- ◆ A charging animation appears when the battery is being charged. When the charging is complete, the animation disappears.

Using a travel adapter:

- ◆ Install the battery into the mobile phone before charging the battery.
- ◆ Connect the adapter of the travel charger with the charging slot in the mobile phone. Ensure that the adapter is fully inserted.
- ◆ Insert the plug of the travel charger to an appropriate power outlet.
- ◆ During the charging, the battery level grids in the battery icon keep flickering till the battery is fully charged.
- ◆ It is normal of the battery to become hot during the charging period.
- ◆ The battery icon does no longer flicker when the charging process ends.

Note:

*Ensure that the plug of the charger, the plug of the earphone, and the plug of the USB cable are inserted in the right direction. Inserting them in a wrong direction may cause charging failure or other problems. Before the charging, ensure that the standard voltage and frequency of the local mains supply match the rated voltage and power of the travel charger.*

Using the Battery

The performance of a battery is subject to multiple factors: radio network configuration, signal strength, ambient temperature, chosen functions or settings, phone fittings, and the voice, data or other application mode you choose to use.

To guarantee the optimal performance of your battery, please stick to the following rules:

- ◆ Use only the battery provided by the vendor. Otherwise, damages or even injuries could be caused during the charging.
- ◆ Power off the mobile phone before removing the battery.
- ◆ The charging process lasts a longer time for a new battery or a battery not in use for long. If the battery voltage is too low to enable the mobile phone to be powered on, charge the battery for a longer time. In this case, the battery icon does not flicker until a long time after the battery enters the charge status.
- ◆ During the charging, ensure the battery is placed in a room temperature environment or in an environment close to room temperature.
- ◆ Immediately stop using the battery if the battery produces odor, overheats, cracks, distorts or has other damage, or if the electrolyte leaks.
- ◆ The battery wears out with use. A longer charging time is required as the battery is put into use for a long time. If the total conversation duration decreases but the charging time increases even though the battery is properly charged, purchase a standard battery from the OEM or use a battery approved by our company. Using any poor-quality fittings will cause harm to your mobile phone or even incur danger!

***Note:** To guarantee your personal safety and protect the environment, do not litter the battery! Return the old battery to the mobile phone manufacturer or place it in specified battery reclamation areas. Do not litter any battery with other rubbish.*

***Warning:** Short-circuits of the battery may cause explosion, fire, personal injury or other severe consequences!*



### **3.4 Powering On/Off the Mobile Phone**

Hold the End key for a while to power on the mobile phone. A power-on animation appears on the display screen.

Input the phone lock code and press the OK key if the mobile phone prompts you to input the phone lock code. The original code is 1122.

Input the PIN and press the OK key if the mobile phone prompts you to input the PIN. The PIN is provided by the network operator for new opening SIM card.


 
Enter the standby interface.

To power off the mobile phone, hold the End key for a while.

### **3.5 Linking to the Network**

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network. After finding a network, the mobile phone enters the standby state. When the mobile phone is registered in the network, the name of the network operator is displayed on the screen. Then you can dial or receive a call.

### **3.6 Adapting volume**

In some broadcaster interface, e.g. Audio player and FM radio, you can press  and  to decrease or increase volume.

### **3.7 Dialing Calls**

In the standby interface, press number keys to input the area code and the telephone number, and then press the Dial key to dial a call. To end the call, press the End key.

◆ **Dialing an international call**

Hold the \* key and input "+". Then input the country code, the area code and the telephone number. Finally, press the Dial key.

◆ **Dialing an extension**

Input the main number, press the \* key for three or four times, input "p" or "w" and then the extension number, and finally press the Dial key.

◆ **Dialing a call to a number in the phonebook**

Enter the phonebook and use the upward and/or downward direction keys to find the telephone number you want to call.

Press the Dial key. The mobile phone automatically dials the chosen telephone number.

◆ **Redialing the last number**

In the standby interface, press the dial key to show the dialed calls.

Press the upward and/or downward direction keys to select a number you want to dial and then press the Dial key.

◆ **Answering incoming calls**

Press the Dial key or the Left soft key to answer an incoming call.

Press the End key to end the current conversation.

To reject an incoming call, press the End key or the Right soft key.

***Note:** If the caller can be identified, the mobile phone will present the calling number. If the calling number exists in the phonebook, the mobile phone will present both the name and the phone number of the caller. If the caller cannot be identified, the mobile phone will present the calling number only. You can answer an incoming call when using a function list or browsing the phonebook.*

### ◆ Using options during a conversation

Select Options during a conversation to pause, end the ongoing call, originate a new call, browse the phonebook, view information, set the mute, set the DTMF, or perform other operations. For details, refer to the menu guide.

### 3.8 Using the Headset

It would enter headset mode automatically when you insert headset to the slot. Make sure of inserting it at the bottom of the slot, or you can't use it normally.

## 4 Input method

This mobile phone provides multiple input methods, including Pinyin input, Smart Pinyin input, strokes input, numeric input, English input in both upper and lower case, and Smart English input in both upper and lower case. You can use these input methods when editing the phonebook, short messages, the memorandum, files and greeting text.

### 4.1 Icons for Input Methods


After you enter an edit window such as a window for editing the phonebook, short messages or the memorandum, an icon is displayed to indicate the current input method:

Numeric input: “123”

English input in upper case: “ABC”

English input in lower case: “abc”

#### 4.2 To Shift Entry Methods

Press a  key to switch between input methods.

#### 4.3 Numeric Input

You can input numbers with the numeric input method. Press a number key to input the corresponding number.

#### 4.4 English input and numeric input:

The keyboards for English input and numeric input are defined in the following table:

Key	Character or Function	Remarks
Number key 1	1W	
Number key 2	2E	
Number key 3	3R	
Number key 4	4S	
Number key 5	5D	
Number key 6	6F	

Number key 7	7Z	
Number key 8	8X	
Number key 9	9C	
Number key 0	0	
Left soft key	Equivalent to OK or Options	
Right soft key	Equivalent to Back or Clear	
End key	Press it to return to the standby interface	

English input:

- Each key is used to represent multiple characters. Quickly and continuously press a key till the character you want appears. Input the next character after the cursor moves.
- Press the **a** key to switch between input methods
- To input a blank, switch to the English input mode (in upper or lower case) and then press number key **0**.
- To clear wrong inputs, press the **Right soft** key.

#### 4.5 Inserting a Symbol

Press the **sym** key to enter the **Select symbol** interface, use direction keys to select a symbol you want.

## 5 Using the Menus

### 5.1 Messages

Short Message Service (SMS) is a network service that requires network support. To send and/or receive short messages, you may need to apply for this service first from the network operator.

This mobile phone supports short message transmission. A short message is first sent to the short message service center in the network and then forwarded to the destination user. If the destination user does not power on its mobile phone or cannot receive short messages (for example, the memory is full), the network will temporarily save this message for a period of time set by the user and the service provider.

The mobile phone can send and receive a chain of text short messages. The sending of a chain of text messages, however, may incur more charges. For further information, please consult the service provider.

If the short message memory is full, a blinking SMS icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

If the destination user has received the short message you sent and the short message delivery report function is activated, the phone will give off a message report alert tone.

***Note:** When a short message is sent through the network, the mobile phone may give a prompt message indicating that the short message has been sent. This indicates that the mobile phone has sent the short message to the short message service center number set in the mobile phone but does not imply that the destination user has received the short message. For further information, consult the service provider*

## Text message

### 5.1.1.1 Writing message

Step 1: Input the content of the short message to be sent.


Select **Options** to perform the following operations:


- ◆ **Send to:** To send the short message.
- ◆ **Input method:** To switch between input methods.
- ◆ **Insert template:** To insert a preset phrase into the short message.

#### Advanced

- ◆ **Insert number:** To insert a number from the phonebook to the short message.
- ◆ **Insert name:** To insert a contact name from the phonebook to the short message.
- ◆ **Insert bookmark:** To insert bookmark into a short message.
- ◆ **Save to drafts:** To save a message you've edited to drafts.

### 5.1.1.2 Inbox

If a new short message arrives, an icon  will be displayed on the screen. If the short message memory is full, you can no longer receive any short message. To receive short messages, delete some or all the existed short messages.

Choosing “outbox”, the short messages in the Inbox are listed on the screen. A short message marked with an icon  indicates that you have unread message.

Press the **OK** key to view the current message.

While browsing a short message, you may select **Options** to perform the following operations:

- ◆ **Reply:** To reply to the short message.
- ◆ **Call sender:** Call the one who sends the short message to you.

- ◆ **Forward:** To forward the short message to others.
- ◆ **Delete:** To delete the short message.
- ◆ **Delete all:** To delete all short messages from the Inbox.
- ◆ **Save as template:** To save the message as template so that you can use it more conveniently.
- ◆ **Mark several:** Mark several short messages so that you can operate some accordant operations on them.
- ◆ **Mark as unread:** To mark the message as unread.

Advanced:

- ◆ **Use number:** To extract all numbers involved in the short message. You can further call the extracted numbers, send a short message to them, or save them in the SIM card or in the mobile phone.
- ◆ **Use URL:** To use the uniform resource locator.
- ◆ **Use USSD:** To extract USSD number of the message
- ◆ **Copy to the phone:** To copy the message to the phone
- ◆ **Move to the phone:** To move the message to the phone
- ◆ **Copy all:** To copy all the message stored in phone memory or SIM card
- ◆ **Move all:** To move all the message stored in phone memory or SIM card

#### 5.1.1.3 Drafts

From the main menu select “**Messages**” to create text message. You can type a message, and you're also able to insert a pre-defined message from “**Templates**”. While writing a message, select “**Options**” to access all the messaging options. You can save your messages that you send often to “**Drafts**”.

#### 5.1.1.4 Outbox

- ◆ Choose **Outbox**. The short messages in the Outbox are listed on the screen.



- ◆ Select a short message and then press the **OK** key to browse the selected short message.
- ◆ While browsing a short message, you may select **Options** to perform the following operations:
  - **Resend:** Send the short message.
  - **Edit:** Edit the short message. After editing the short message, you may send it to a destination address as required.
  - **Delete:** Delete the short message.
  - **Delete all:** Delete the short message.
  - **Save as template:** Save the message as template so that you can use it more conveniently.
  - **Mark several:** Mark several short messages so that you can operate some accordant operations on them.
  - **Advanced:** Please refer to inbox for details.

For details, refer to the section about writing a short message above.

## MMS

Your phone can send and receive MMS which enables you to send message containing picture, ring and text.

When sending a MMS, your message can be viewed with ensuring the addressee owe a phone supporting MMS.

### 5.1.1.5 Writing a message

- a. Choose a new message and input corresponding content
  - \* Addressee: To set phone number or email of the addressee
  - \* Make a copy: To set phone number or email to make a copy
  - \* Confidential letter: To set phone number or email of directory of sending as confidential letter.

- \* **Theme:** To set MMS theme
- \* **Contents:** To edit MMS content. User can add words, pictures, sounds and enclosure.
- b. After entering corresponding content, return to the list of addressees interface, enter **theme options** interface
  - \* **Edit:** To edit the current contents
  - \* **Send:** To send the message you have edited
  - \* **Save:** To save the message to the draft
  - \* **Save to draft:** To save to the draft and send it later
  - \* **Sending options:** To set sending options of the message
  - \* **Exit:** To exit editing of message, user will be asked whether to save or not at the same time.

#### 5.1.1.6 **Inbox**

This menu enables you to view MMS you received. Choose one and press left soft key to enter options as follows:

- \* **View:** To view the MMS content
- \* **Details:** To view the addressee, theme, date and size of MMS
- \* **Reply:** To reply to the addressee
- \* **Reply to all:** To reply to all of the “sender”, “addressee” and “addressee confidential letter”
- \* **Delete:** Delete the MMS you chosen
- \* **Edit:** Edit the short message.
- \* **Forward:** Forward the short message to others.
- \* **Delete all:** Delete all MMS from the Inbox.
- \* **Use number:** To use numbers of MMS

#### 5.1.1.7 Outbox

MMS of outbox would display on the screen while choosing “**outbox**”. You may select **Options** to perform the following operations:

\***View:** To view the MMS content

\***Details:** To view the addressee, theme, date and size of MMS

\***Forward/Resend:** To send MMS to others. “Resend” will prompt if the MMS is unsuccessful sent.

\***Delete:** Delete the MMS you chosen

\***Delete all:** Delete all MMS from the Inbox.

\***Use number:** To use numbers of MMS

#### 5.1.1.8 Drafts

Listing all created MMS which stored in draft. You may select **Options** to perform the following operations:

\***View:** To view the MMS content

\***Details:** To view the addressee, theme, date and size of MMS

\***Send:** To send the MMS you have chosen

\***Edit:** To edit the MMS you have chosen

\***Delete:** Delete the MMS you chosen

\***Delete all:** Delete all MMS from the draft

**Note:** If the addressee isn't set in the draft, “send” won't display in the option menu.

#### 5.1.1.9 Templates

\***User definition:** User can auto define the MMS details

\***Default:** Default MMS details of the phone

#### 5.1.1.10 MMS settings

This function enables you to set the configuration information of sending and receiving MMS as following:

\***Compose:** To set signature of editing mode on or off

\***Send:** To set the validity period, delivery report, read report, priority, spacing interval and sending time of MMS.

\***Retrieve:** To set main net, roam net, delivery report and allowing sending report of receiving MMS

\* **Filter:** For setting anonymous sender and ads.

\***server profile:** For setting net configuration that MMS require. Contact the net operate for details

\***Memory status:** To view Stored state of MMS

#### Broadcast Message

This network service enables you to receive a variety of text messages, such as broadcast messages about weather forecast or road conditions. At present, few networks provide this service. Please consult the network operator.

◆ **Receive mode:** Set it to **On** to enable or **Off** to disable cell broadcast service.

◆ **Read message:** View cell broadcast messages. You can press the **Up** and **Down** direction keys to view these messages.

◆ **Languages:** Select the language in which cell broadcast messages are displayed. The selected language, however, may not be supported by the network operator.

◆ **Channel settings:** Select receiving some types of cell broadcast messages or edit/delete some channel numbers.

#### 5.1.1.11 Templates

Some templates are stored in the mobile phone. They can be edited or deleted. The phrase will be replaced by

a blank after being deleted.

#### 5.1.1.12 SMS Settings

This function enables you to set the default features about the SMS.

- ◆ **Profile settings:** Save or modify the short message service center number required for short message transmission, or obtain it from the network operator.
- ◆ **Voicemail server: Edit:** Edit or delete your voice mailbox number; or select **OK** to save the number.  
**Call voicemail:** Dial the voice mailbox number stored in the voice mailbox number list. Note: In the standby interface, you can press number **1** key to call the voice mailbox after setting the voice mailbox number.
- ◆ **Common settings:** Set the message delivery report and the reply path. After **Delivery report** is set to **On**, the short message service center will send a status report indicating whether the short message you sent has been successfully delivered. This function requires the network operator's support.
- ◆ **Memory status:** View the percentage of the memory seized by the short messages in the SIM card to the total SIM card capacity and the percentage of the memory seized by the short messages in the phone to the total phone capacity.
- ◆ **Preferred storage:** Select the default storage path of short messages, i.e. whether to save short messages to the mobile phone or the SIM cards.
- ◆ **Long text message:** Activate or deactivate this function.

## 5.2 Phonebook

The mobile phone can store up to 200 telephone numbers. The number of telephone numbers that an

SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook. A name stored in the mobile phone can have at most four telephone numbers.

After selecting a telephone number in the phonebook, select **Options** to perform the following operations:

- ◆ **View:** View the content of the telephone number.
- ◆ **Sent text message:** sent message to this number.
- ◆ **Sent multimedia message:** sent multimedia message to this number.
- ◆ **Call:** To call the one who sends the short message to you.
- ◆ **IP call:** To call the one who sends the short message to you by IP call.
- ◆ **Edit:** Edit the telephone number.
- ◆ **Delete:** Delete the telephone number from the phonebook.
- ◆ **Copy:** Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.
- ◆ **Move:** Move the telephone number to the SIM card if it is stored in the mobile phone or to the mobile phone if it is stored in the SIM card.
- ◆ **Send contact:** To send the record through message, multimedia message, Bluetooth and email or store as file.
- ◆ **Mark several:** Mark several short messages so that you can operate some accordant operations on them.
- ◆ **Caller group:** You can set five caller groups, including names, associated sound, associated pictures and members. You can set objects by pressing the left and right direction keys.

#### **Phonebook Settings**

- ◆
- ◆
- ◆ **Fields:** Select the items to be displayed for contacts in the phonebook and the items to be displayed in the interface for adding contacts.
- ◆ **My vCard:** Edit your name card, or send it via a short message, or save it as a file.
- ◆
- ◆ **Preferred storage:** Select the default location where a new number is to be stored, i.e., SIM1, SIM2, or the phone.
- ◆ **Speed dial:** Activate this function, set phone number to number key 2-9, and then you can dial corresponding phone number in the idle screen by long pressing corresponding number key.
- ◆ **My number:** Edit your name card, or send it via a short message, MMS or Bluetooth, or save it as a file.。
- ◆ **vCard version:** To show current copyright information.
- ◆ **Memory status:** Query the memory status.
- ◆ **Copy contacts:** This function helps to copy contacts from phone or SIM card to SIM card or phone.
- ◆ **Move contacts:** This function helps to copy contacts from phone or SIM card to SIM card or phone.
- ◆ **Delete all contacts:** This function helps to delete all contacts from phone , SIM card or delete them one by one.

#### 5.2.1.1 Quick Searching

This function enables you to find contacts quickly. In the **Name** interface, input the first letter of the name. Records of contact whose pinyin is beginning with this letter will appear on the screen. Press the navigation key to view records. Then select one contact to call.

#### 5.2.1.2 Search Contact

This function enables you to view contacts ranked by pinyin. You can search a contact as required from the

phonebook.

In the **Name** interface, input the name of the contact you want to search or the first letter(s) of the name. Press the Left soft key and select Search. All the contacts meeting the search condition are listed. Press the Up and Down direction keys to browse the contacts and select one contact to call.

#### 5.2.1.3 Add New Contact

This function enables you to add contacts to the phonebook. To add a contact to the SIM card or the phone:

- ◆ **To SIM Card:** Add the contact to SIM1. A contact record covers the name and telephone number of the contact.
- ◆ **To phone:** A contact record covers the following items: Name, number, home number, company name, email address, office number, fax number, birthday, caller picture, caller video, associated sound and caller group.

### 5.3 Calendar

You can perform the following operations on the calendar:

- ◆ **View:** To view the travel route of the date which the icon point at. Setting the date, time, remarks, whether to switch on the alarm and ring way of the travel route. Using left/right navigation key to choose alarm way when editing the calendar. You also can delete the calendar in order to add new travel route, which can be sent as message or saved as file.
- ◆ **View all:** To view all travel routes.
- ◆ **Add events:** To add to the date route
- ◆ **Delete events:** To delete the route you have added



- ◆ **Jump to date:** Navigate to the calendar on the specified date.
- ◆ **Go to weekly view :** To view the calendar by week
- ◆ **Print:** You should power on Bluetooth before you print it.

## 5.4 Services

### STK

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

### Internet service

This function enables you to view the internet. Your phone will ask you with existed way. You can start to view only by starting corresponding way.

- ◆ **Home page:** To store a website of home page in each way. The home page will be first viewed when using WAP explore.
- ◆ **Bookmark:** Several bookmarks are inner the phone. Entering the “option” to manage the bookmark as following:
  - **Enter:** To log in the website you chosen
  - **Edit:** To edit the bookmark name and website you chosen
  - **Send:** To send the bookmark as message and MMS
  - **Delete:** To delete the bookmark you chosen

- Delete all: To delete all bookmarks you chosen
  - Add new bookmark: To add new website
  
  - ◆ Recent pages: To view websites you visited latest.
  - ◆ Offline pages: To store the website of web page
  - ◆ Input address: To enter the website ensuring it can be linked
  - ◆ Service inbox: To store information by net auto sending
  - ◆ Settings: To set the net setup, color setup, advanced setup and PUSH inbox
- Note: Consulting the local network operator for related fee and specific setup.

### **Data account**

Set GSM、GPRS account parameter。

- ✧ **GSM data:** Digital communication business, it's used for transmit short message for mobile phone, SIM card should be registered in network operator to activate data service before connecting to network, press left soft key to perform the following operations:
  - Name: Edit GSM account name.
  - Number: Edit GSM account number.
  - User: Enter the connection account number you've applied.
  - Password: Enter service password provided by network operator.
  - Line: Select GSM line, ISDN or simulation.
  - Speed: Select network speed.
  - Area: Enter area address.

- ✧ **GPRS:** General grouping wireless business. Press left soft key to perform the following operations:
  - **Name:** Edit GPRS account name.
  - **GRPS connection point:** Edit GPRS connection point name.
  - **User:** Enter the connection account number you've applied.
  - **Password:** Enter service password provided by network operator.

## 5.5 Multimedia

### Audio Player

The audio player provides four buttons: Play or Pause, Stop, Back, and Forward, corresponding to the OK direction key, left direction key and right direction key. The audio player supports MP3, WAV, MIDI, and IMY formats.

Press the **Left soft** key to open the play list and then choose **Options** to perform the following operations:

- ◆ **Play:** Play the current song.
- ◆ **Details:** View details about the song.
- ◆ **Add to rings:** Add the current song to the ring tone library in user profiles.
- ◆ **Refresh list:** Update the current play list. You need to enable auto generation of the list (by default, the function is enabled).
- ◆ **Setting:** Set auto generation of the list, repeat, random, background play, stereo output of Bluetooth, Bluetooth headset, energetic display style and song lyric.

### Video player

This function enables you play, send, rename, delete, delete all files, rank, save about your video and

movies.

- ◆ Play: To play the movie you chosen.
- ◆ Send: To send this file via Bluetooth or multimedia message.
- ◆ Rename: To rename the video and movies.
- ◆ Delete: To delete the video and movies you chosen.
- ◆ Delete all: To delete video files.
- ◆ Sort by: To rank the video files as your requirement(name, style, time, size)
- ◆ Storage: To store this file to SIM card or the phone.

### **Melody composer**

Compose the melody all by yourself and play it.

### **Image viewer**

- ◆ This function enables you view, edit, slide show, use as, send, rename, delete, delete all files, rank and save about your pictures.
- ◆ View: To view pictures you choose. Press the left/right navigation key to view the previous and the next preview picture.
- ◆ Brower style: To view pictures as list and matrix mode.
- ◆ Send: To send pictures as message, email and Bluetooth.
- ◆ Use as: To use pictures as wallpaper, screen saver, startup screen, shutdown screen and incoming picture.
- ◆ Rename: To rename pictures
- ◆ Delete: To delete a single picture
- ◆ Sort by: To rank the picture as your requirement(name, style, time, size)

- ◆ Delete all files: To delete all pictures
- ◆ Storage: Storing pictures to SIM or the phone.

### **Sound recorder**

The phone support WAV and AMR. The AMR takes the compression algorithm. So in the same memory condition, it has longer recording time than WAV.

Because of having super recording time, user can choose recording format to record from “option” which can be stored to the phone memory and memory card. When choosing the intrinsic record of the phone, to press left key to perform operations as follows:

- Record: To record new recording file
- Play: To play files you chosen
- Append: To make additional record for assigned files of last-level directory(Only support AMR formation)
- Rename: To rename the record files you chosen
- Delete: To delete record files you chosen
- Delete all files: To delete all record files
- Settings: To store the position of record files to the phone or memory stick. To set file formation of records that AMR and WAV are available
- Use as: To add to profiles, message and Bluetooth.
- Send: To send via multimedia message or Bluetooth.

## 5.6 Camera

This function enables you take a picture you want. Roll the phone to align the camera to the picture and then press OK key, which the picture will be stored in the album. On the top of the screen display quick setup as following: Delaying shoot, night mode, photo quality and photo size.

Functions of “option” key as following:

- ◆ Switch to video recorder: Switch to video recorder.
- ◆ Photos: Storing your pictures. To view, edit, slide show, use as, send, rename, delete, delete all files, rank and save about your pictures.
- ◆ Camera settings: Setting shutter sound, exposure compensation, contrast, avoiding flicker, delaying shoot and burst setup to make your phone in perfect condition.
- ◆ Image settings: Press 7 to set the photo quality quickly, press 8 to set the photo size quickly.
- ◆ White balance: To set the white balance as auto, daylight, Fluorescent, Tungsten and incandescent.
- ◆ Scene mode: Auto mode and night mode are available.
- ◆ Effect settings: Normal, grayscale, sepia and sepia blue are available.
- ◆ Storage: Storing pictures to SIM or the phone.
- ◆ Restore default: To set on default.

## 5.7 Video recorder

This function enables you to record dynamic pictures. Adapt the VCR to the scene or the figure, the press OK to start or pause recording. Press STOP to end recording. The phone will prompt you save or not. The function of “option” as following:

Press left soft key to enter record status.

Scan: click<option>or left soft key to open manipulation menu.

- ◆ Camcorder: To set the white balance as auto, daylight, Fluorescent, Tungsten and incandescent.
- ◆ Video settings: Set video quality and size of VCR.
- ◆ Effect settings: Normal, grayscale, sepia and sepia blue are available.
- ◆ Storage: Storing pictures to SIM or the phone.
- ◆ Restore default: To set on default.

## 5.8 Mobile TV

This function enables you watch a TV programme you want. Press OK and it would search TV channels automatically.

TV setup

- ◆ Channel list: Show a list of channels.
- ◆ ATV manual search: To search channels manually.
- ◆ ATV auto search: To search TV channels automatically.
- ◆ TV setup: Select your region, e.g. If you are in Indonesia, you can select Asia, and then select Indonesia.
- ◆ ATV set definition: set a value.

## 5.9 FM Radio

Press the **Left soft key** on the FM Radio page to perform the following operations:

- Channel lists: Set 9 channels on your own. The results of auto search will also be included.

- Manual input: Input any frequency between 87.5 and 108.0.
- Preset auto search: Search channels automatically.
- Settings: Set on or off of the background play list and the loudspeaker of the phone.
- Record: To record new files.
- Append: To make additional record for assigned files of last-level directory.
- File list: Show a list of files you've reserved.

### 5.10 Audio Player

The audio player provides four buttons: Play or Pause, Stop, Back, and Forward, corresponding to the OK direction key, left direction key and right direction key. The audio player supports MP3, WAV, MIDI, and IMY formats.

Press the **Left soft** key to open the play list and then choose **Options** to perform the following operations:

- ◆ **Play:** Play the current song.
- ◆ **Details:** View details about the song.
- ◆ **Add to rings:** Add the current song to the ring tone library in user profiles.
- ◆ **Refresh list:** Update the current play list. You need to enable auto generation of the list (by default, the function is enabled).
- ◆ **Setting:** Set auto generation of the list, repeat, random, background play, stereo output of Bluetooth, Bluetooth headset, energetic display style and song lyric.

### 5.11 Games

A game named F1 race settings is embedded in the mobile phone. For details, refers to the operation



instructions of games.

### **5.12 Facebook**

A value-added business embedded in the phone.

### **5.13 Ebuddy**

A value-added business embedded in the phone.

### **5.14 Alarm**

Five alarm clocks are set but deactivated by default. You can activate one, multiple or all of them as needed. For each alarm clock, the ringing date and the ringing time can be set. When the preset alert time is up, the mobile phone gives off an alert tone whereas the current date and time blinks on the screen. Select **Stop** to stop the ring or **Snooze** to temporarily stop the ring. If you select **Snooze**, the alarm clock will ring four minutes later.

If the preset alert time of an alarm clock is up but the mobile phone is powered off, the mobile phone will automatically power on and ring. Select Stop. A prompt message is displayed on the screen, asking you whether to power on the mobile phone. Select No to power off the mobile phone, or Yes to power on the mobile phone.

### **5.15 Task**

Choosing appointment, telephone and celebrated day to create new memo, which you can view, add, edit, delete, delete overdue task, delete all, jump to date, send route and saved as file. If you have set the alarm for the memo, alarm will sound when time is up, the content of memo will display at the same time.

## 5.16 Calculator

- ◆ Select **Clear** to clear the last inputs or results or hold **Clear** to clear all the inputs.
- ◆ Select **OK** to obtain the calculation results.

Note: This calculator provides limited precision and is only applicable to simple arithmetic calculation.

## 5.17 File Manager

The phone provides a certain space for users to manage files and supports the T-Flash card. The capacity of the T-Flash card is selectable. You can use the file manager to conveniently manage various directories and files on the phone and the T-Flash card. Choose **File Manager**, then press the **Left soft** key to perform the following operations:

### Open

Choose **File manager** to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. When the mobile phone is powered on for the first time or when you have not changed the directory, the root directory contains the default folders only.

Select a folder and then press the **Left soft** key or select **Options** to perform the following operations:

- ◆ **Open**: Open the selected folder.

After selecting a folder and pressing the **Left soft** key, you can perform the following operations:

- **Open**: Open the selected folder.
- **New folder**: Create a folder under the selected folder.
- **Rename**: Rename the selected folder.
- **Delete**: Delete the selected folder.

➤ **Sort by:** To rank stored files. Displaying as ranked

Select a file and then press **Options** to perform the following operations for different type of files:

- ◆ **View/Play:** View or play the selected file. This option may vary with the type of the file selected.
- ◆ **Use as:** To use pictures as wallpaper, screen saver, startup screen, shutdown screen or incoming picture.
- ◆ **Send:** To send files as message, email and Bluetooth.
- ◆ **Details:** Show the date and size of the selected file.
- ◆ **Rename:** Rename the selected file.
- ◆ **Copy:** Copy the file to assigned position. The phone will prompt you that the storage isn't enough to perform the operation.
- ◆ **Move:** To move assigned files to corresponding position
- ◆ **Delete:** Delete the selected file.
- ◆ **Delete all files:** Delete all files from the directory where the selected file is located.
- ◆ **Mark several:** Mark several files and you can perform some operations on them such as delete, send.
- ◆ **Rank way:** To rank stored files. Displaying as ranked

### **Format**

You can use this function to format all the data in the memory. The system will re-create a default folder. The formatted data cannot be recovered. Therefore, think twice before using the formatting function.

## 5.18 Manage Connections

### Bluetooth

- **Activate:** To activate or deactivate Bluetooth as needed.
- **Inquiry audio device:** To inquiry audio devices automatically.
- **Inquiry new device:** To inquiry new devices automatically.
- **Active devices:** To active devices.
- **Settings:** To set on visibility, change device name audio path and so on.
- **About:** It includes the information of the Bluetooth in this mobile phone.

### Dual SIM Card Settings

- ◆ **Dual SIM open:** Both SIM cards are standby if you set this option.
- ◆ **Only SIM1 open:** Only SIM card 1 can be identified if you set this option.
- ◆ **Only SIM2 open:** Only SIM card 2 can be identified if you set this option.
- ◆ **Flight mode:** You can set the phone to Flight mode.

## 5.19 Settings

### Network Setup

Contact the network operator to obtain the following network services:

- ◆ **Network selection:** Set Network selection mode to Automatic or Manual. Automatic is recommended. When Network selection mode is set to Automatic, the mobile phone will prefer the network where the

SIM card is registered. When Network selection mode is set to Manual, you need to select the network operator's network where the SIM card is registered.

- ◆ **Preferences:** Select the preferred networks. By default, the network where the current SIM card is registered will be displayed. Select Options or press the Left soft key to perform the following operations:
  - **Add from list:** Add a network from the list of all the available PLMN networks.
  - **New:** Add a preferred network.
  - **Change priority:** Change the priority of the preferred network.
  - **Delete:** Delete the current preferred network.

*Note: The network setup for SIM card 2 is the same as above.*

### **Security Setup**

This function provides you with related settings about safety use

- ◆ **SIM1 lock:** To set the SIM1 lock, you need to input the PIN. You can set the SIM lock only after inputting the correct PIN. If you set SIM1 lock to On, you need to input the PIN each time you power on the mobile phone. In the case you input a wrong PIN for three consecutive times, you need to input the PIN Unblocking Key (PUK). The PUK is used to unlock and change the locked PIN. To obtain the PUK, contact the network operator.
- ◆ **Fixed dial:** This function requires the SIM card's support and the network operator's support. When the fixed dial function is activated, you can dial only the numbers in the fixed dial list. To activate the fixed dial function, you need to input the PIN2.
- ◆ **Barred dial:** Activate or deactivate the barring of some or all calls. This function requires the SIM card's

support.

- ◆ **Change password:** To change the password.
- ◆ **Phone lock:** The function enables you to lock/unlock the phone. Entering password to switch on or off the phone. Password is required when the phone is locked. The password is 4 to 8 digits.
- ◆ **Auto keypad lock:** The function enables you to lock/unlock the keypad. Setting the auto locking time that 5s, 30s, 1min or 5mins is available. The keypad will be auto locked with no operation during the period.
- ◆ **Change password:** to change the password.

### Phone Setup

**Time and date:** Press the Up and Down direction keys to set the city. Press the Left and Right direction keys to set the date format, the time format, and detail time of the location.

*Note: If you remove the battery from the mobile phone or if the battery energy was exhausted a long time ago, you may need to reset the date and time when re-inserting the battery or powering on the mobile phone after recharging.*

- ◆ **Schedule power on/off:** Set the time when the mobile phone will be automatically powered on or off.  
Alert: Before entering an area where the use of mobile phones is forbidden, make sure that the scheduled power-on function is deactivated to avoid accidents.
- ◆ **Language:** Select the display language for the mobile phone.
- ◆ **Writing language:** Select an input method as preferred method.
- ◆ **Display:** Select images and set them as wallpaper, screen saver, power on display, power off display. You can show date and time on the screen or shut down this function and you can set duration of LCD light

time.

- ◆ **UART settings:** Select SIM1 or SIM2.
- ◆ **Misc. Settings:** Set LCD backlight duration of the phone.

### **Restore Factory Settings**

Choose Settings > Restore factory settings to restore the factory settings. Input the phone lock code and then select OK or press the Left soft key.

Note: The initial phone lock code is 1122.

## **5.20 Call center**

Call history of SIM card 1

### **SIM1 Missed Calls**

You can view a list of the latest missed calls.

**Note:** When the mobile phone indicates that some calls are missed, you can select **Read** to enter the missed calls list. Navigate to a missed call and then press the **Dial** key to dial the number that originated that call.

### **SIM1 Dialed Calls**

You can view the latest dialed calls. Choose **SIM1 dialed calls** and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

### **SIM1 Received Calls**

You can view the latest received calls. Choose **SIM1 received calls** and then select a received call to delete, save, dial, or edit (or send a short message to it).

## Delete SIM1 Call Log

You can delete the latest call records. Choose **Delete SIM1 call log** and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

## SIM1 Call Time

Choose **SIM1 call time** to view the last call time, the total time of all dialed calls and the total time of all received calls, and/or to reset all the time.

- ◆ **Last call time:** View the time duration of the last call.
- ◆ **Total sent:** View the total time of all the dialed calls.
- ◆ **Total received:** View the total time of all the received calls.
- ◆ **Reset all time:** Reset all the above time.

## SIM1 Call Cost

Choose **SIM1 call cost** to view the cost of the last call and the cost of all calls, reset the call cost, modify the maximum cost allowed, and/or set the call tariff.

- ◆ **Last call cost:** View and reset the cost of the last call.
- ◆ **Total cost:** View and modify the total call cost.
- ◆ **Reset cost:** Reset the call cost. To reset the call cost, the PIN2 must be input.
- ◆ **Max cost:** View and modify the maximum call cost allowed. To modify the maximum cost, the PIN2 must be input.
- ◆ **Price per unit:** View and modify the price per unit. To modify the price per unit, the PIN2 must be



input.

**Note:** *The call cost function relates to the SIM card. Some SIM cards do not support this function. The PIN2 is provided by the network operator. To obtain the PIN2, contact the network operator.*

### **SIM1 SMS Counter**

Choose **SIM1 SMS counter** to set the number of short messages sent and the number of short messages received.

- ◆ **Sent:** Reset the number of short messages sent.
- ◆ **Received:** Reset the number of short messages received.

**Note:** *This function does not relate to the SIM card. The number of short messages sent and the number of short messages received do not change even after the SIM card is replaced.*

**Note:** The call history settings of SIM card 2 are the same as SIM card 1.

### **GPRS rate of SIM1**

- ◆ **Last session sent:** Viewing the rate of last session sent
- ◆ **Last session received:** Viewing the rate of last session received
- ◆ **All sessions sent:** Viewing all of the rate of sessions sent
- ◆ **All session received:** Viewing all of the rate of sessions received
- ◆ **Reset counter:** Clearing all rates

### **Call Settings**

#### **5.20.1.1 SIM1 call settings**

- ◆ **Caller ID:** You can select the ID set by the network, hide the ID, or send the ID. By default, the ID set

by the network is chosen.

Note: *This function relates to the network. If you select Hide ID, dialing may fail.* Therefore, make sure that calls can be normally dialed before you choose Hide ID.

#### ◆ **Call waiting**

- **Activate:** After you choose Activate, the mobile phone will contact the network. A moment later, the network will make a response and send a message to acknowledge your operation. If the call waiting function is activated, the network will alert you and the mobile phone screen will display the incoming call number if others are calling you while you are already in a conversation.
- **Deactivate:** If you choose Deactivate, the network will not alert you when others are calling you while you are already in a conversation.
- **Query status:** Query the network to obtain the current call waiting status.

#### ◆ **Call divert**

this network function enables you to forward incoming calls to another number you have previously specified. To set this function, choose Call center > General call settings > SIM1/SIM2 call settings > call divert, and then press the OK key.

- **Divert all voice calls:** Divert all incoming calls to the preset number.
- **Divert if unreachable:** Divert an incoming call to the preset number only when the called party is unreachable.
- **Divert if no answer:** Divert an incoming call to the preset number only when the called party does not answer the call within the specified time.
- **Divert if busy:** Divert an incoming call to the preset number only when the called party is busy.

You can further perform the following operations for the above four functions:

- Activate: Input the diverted-to number and then activate the selected call divert function.
- Deactivate: Deactivate the selected call divert function.
- Query status: Query the network to obtain the current status of the selected call divert function. The mobile phone will contact the network. A moment later, the network will make a response and send the results to the mobile phone.
  - Divert all data calls: Divert all data calls. This function requires the network operator's support.
  - Cancel all divert: Cancel all the set call divert functions. The mobile phone will contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

#### ◆ Call barring

The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator. If the code is wrong, an error message will be prompted on the screen. After selecting a call barring option, continue to select Activate or Deactivate. The mobile phone will prompt you to input the call barring code and then contact the network. A moment later, the network will make a response and send the operation results to the mobile phone.

- Outgoing calls barring
  - ✧ All calls: Bar all outgoing calls. If this option is set, the mobile phone cannot dial any call.
  - ✧ International calls: Bar all international calls. If this option is set, the mobile phone cannot dial any international call.
  - ✧ International calls except to home PLMN: Bar all outgoing calls except those directed to the home PLMN country. If this option is set, the mobile phone can dial only calls destined to the

home PLMN country.

➤ Incoming calls barring

- ✧ All calls: Bar all incoming calls. If this option is set, the mobile phone cannot receive any call.
- ✧ When roaming: Bar all incoming calls when roaming. If this option is set, the mobile phone cannot receive any call when roaming outside the home PLMN.

For each call barring option, you can further perform the following operations:

- Activate: Input the call barring code to activate the selected call barring function.

- Deactivate: Deactivate the selected call barring function.

- Query status: Query the network to obtain the current status of the selected call barring function. The mobile phone will contact the network. A moment later, the network will make a response and send the results to the mobile phone.

➤ Cancel bar: Cancel all the set call barring functions. To do so, you need to input the barring code provided by the network operator.

➤ Change barring code: Change the call barring code. To do so, you need to input the old code.

◆ **Line switching:** Switch to Line 1 or Line 2. By default, Line 1 is used.

*Note: If you choose Line 2, dialing may fail. This depends on the implementation of the network operator.*

◆ **Closed user group:** This function requires network support. For details, consult the local network operator.

**Note:** SIM on the service is required .

SIM2 setup is the same as SIM1 setup.

#### 5.20.1.2 Advanced setup

◆ **Auto redial:** Set it to **On** or **Off** to enable or disable auto redial. If you set **Auto redial** to **On**, the mobile

phone will automatically redial the number a moment later if the called party does not reply. The number of auto redial times can be set to a maximum of 10. In the auto redial period, you cannot dial other numbers. To end the auto redial process, press the **End** key.

*Note: This function requires support from the network operator to which the SIM card is registered.*

- ◆ **IP dial:** Activate or deactivate the IP dial function and add or edit IP numbers.
- ◆ **Call time display:** To display call time or not in a call.
- ◆ **Call time reminder:** To set single or circle tone in a call to make you know the time.
- ◆ **Reject by SMS:** To reject the call by replying him or her a short message.

## 5.21 Application

### Azan alarm

An additional function embedded in the phone.

### Ebook

Ebook enables you to read TXT file. Through the USB connecting line putting files to Ebook folder of phone and T-Flash card.

To find the folder and open the Ebook, You can also open the Ebook to read text directly.

Options explanation:

- Open Ebook: To view the content.
- Update: Update the interface
- Default:

- ◆ **Type:** To set words, italic text.
  - ◆ **Scroll:** To set the text as page or row.
  - ◆ **Auto scroll:** To switch on or off, open auto scroll to read text as page or row automatically.
  - ◆ **Scroll speed:** To set the speed of scrolling.
  - ◆ **Full screen:** To choose switch on or off full screen to read text.
  - ◆ **Choose stored position:** To choose files of phone and memory card.
- Note:** If the memory card is not available, phone is the default item.
- ◆ **Information:** To view the current text
  - ◆ **Delete:** To delete the current text
  - ◆ **Delete all:** To delete all texts stored in the catalog
  - ◆ **Rank:** To choose text ranked by name, type, time and size

**Help:** To view shortcut. Input number to enter into corresponding shortcut.

### **Unit converter**

Convert between Kg and Pound, Km and Mile.

### **Stopwatch**

Typical stopwatch: press “Begin” to start timing.

nWay stop watch: press “Begin” to start timing.

Name list of time group and the final time list would display in the interface so that one can refer to time group or delete records.

## **World clock**

To view city of each time zone, corresponding date and time will display at the bottom of the screen. Press navigation key to choose to view cities. Press Left soft key to switch on or off daylight saving time of other cities.

## **Currency convert**

To store exchange rate, press “OK”, then choose exchange rate setup. Input one rate and press OK. Entering the money amount and press OK, and then choosing exchange to foreign currency.

### **5.22 User Profiles**

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into six scenarios: **General**, **Meeting**, **Outdoor**, **Indoor**, **Silent**, **Headset**, and **Bluetooth**.

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode. There is no option for activating the Headset mode on the screen. For details on operation, refer to **General**. If you set **Headset** > **Customize** > **Answer mode** to **Auto**, incoming calls will be automatically answered.

#### **Activate**

Select **Activate** to activate the selected mode.

#### **Customize**

After choosing one of the above five modes, select **Customize** to edit the following items:

- ◆ **Tone setup:** Set the incoming call tone, power-on prompt tone, power-off prompt tone, message tone, and keypad tone.
- ◆ **Volume:** Set the volume of the conversation tone, the ring tone, the keypad tone.
- ◆ **Alert type:** Select ring, vibrate, ring and vibrate, or ring after vibrate mode.
- ◆ **Ring type:** Set the ring type to **Single**, **Repeat** or **Ascending**.
- ◆ **Extra tone:** Activate or deactivate the warning tone, error tone, network connection tone, and conversation start tone.
- ◆ **Answer mode:** Set whether to answer incoming calls by pressing any key.

After setting all the above items, choose the mode and then select **On**.

*Note: The mobile phone automatically enters the Headset mode when you insert the earpiece.*

*Note: In standby state, hold the # key to switch to the mute mode. To switch back to the original mode, hold the # key again.*

### **5.23 Lock keypad**

Select this function to lock keypad, to unlock keypad, you need to press right soft key and Space key.

### **5.24 Power off**

Select this function to power off the phone, you need to press end key for 2 to 3 seconds to power on or power off the phone.



## 6 Appendix

### 6.1 Appendix 1: Troubleshooting

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

<b>Fault</b>	<b>Cause</b>	<b>Solution</b>
SIM card error	The SIM card is damaged.	Contact your network service provider
	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth

Poor received signal quality	<p>Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.</p>	<p>Move to a place where signals can be effectively transmitted</p>
	<p>Line congestions occur when you use the mobile phone in high-traffic hours</p>	<p>Avoid using the mobile phone in high-traffic hours</p>

The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider

	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone
	Poor contact	Ensure the charger plug is in good contact with the mobile phone

**FCC RF EXPOSURE INFORMATION:**

**WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

**BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

**TIPS ON EFFICIENT OPERATION:**

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

# RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 0.623W/kg, next to the head is 1.006W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.