 




ASSEMBLY

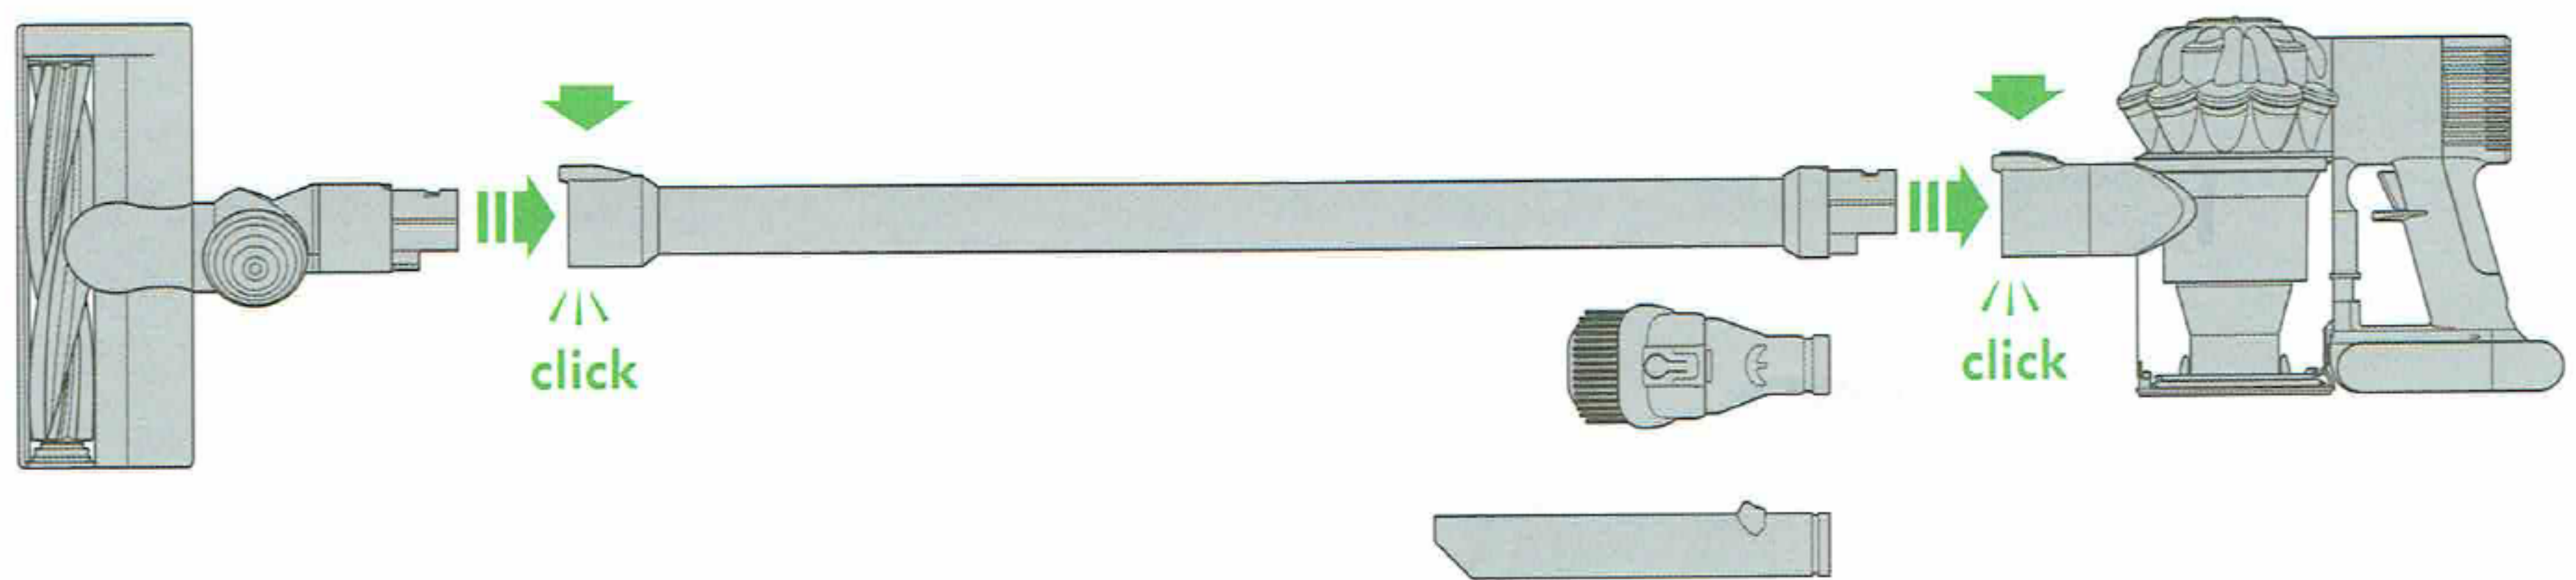


WASH FILTER


Wash filter with cold water regularly or as required.

  
**REGISTER
YOUR DYSON
2 YEAR
GUARANTEE
TODAY**

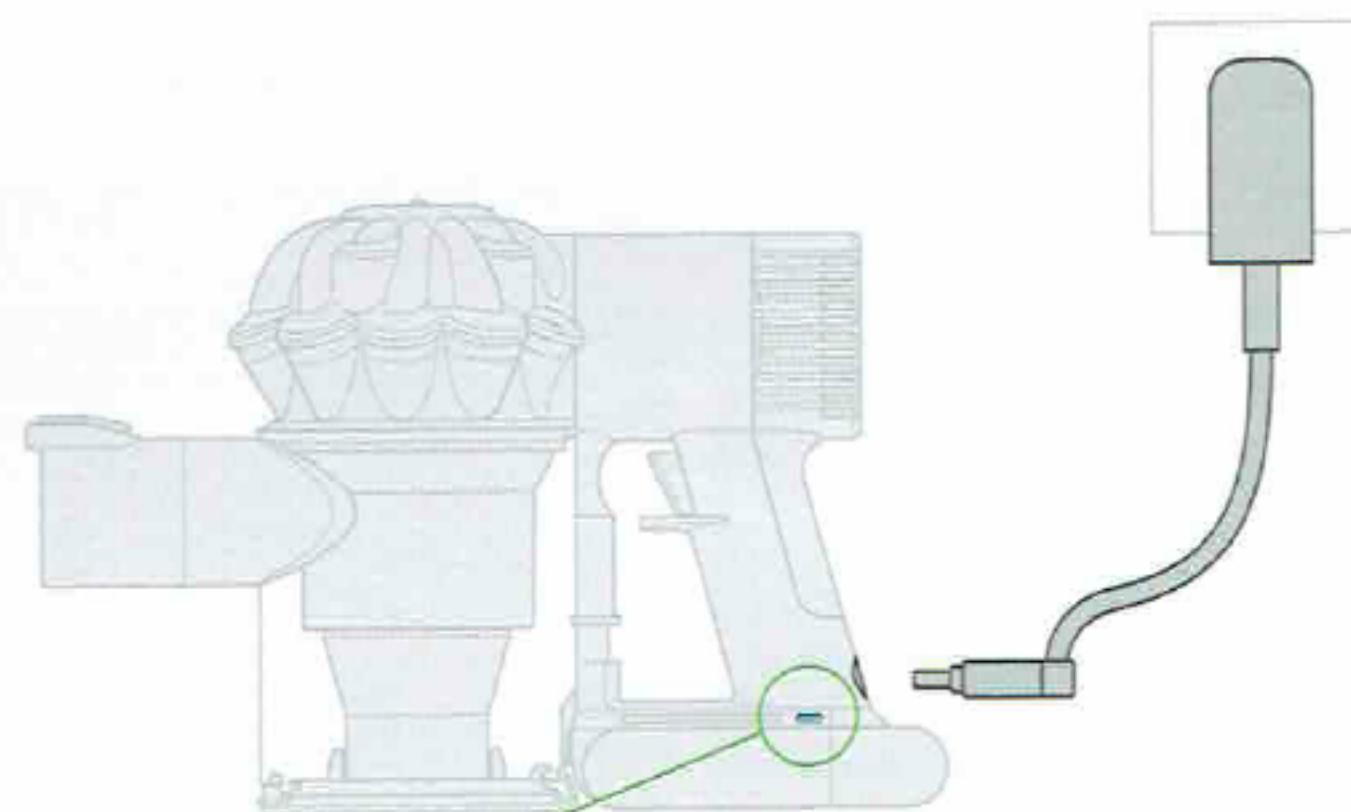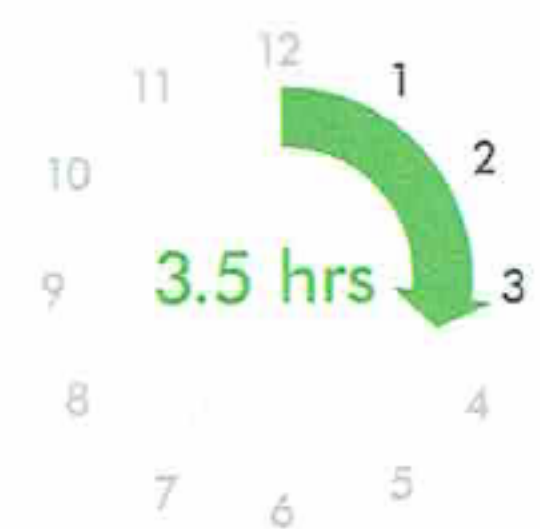

 Charging.

 Not charging – too cold/too hot.

 Fully charged.

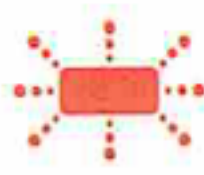 Not charging – contact Helpline.

DYSON CUSTOMER CARE

THANK YOU FOR CHOOSING
TO BUY A DYSON APPLIANCE

Your Dyson appliance will be covered for parts and labour for 2 years from the date of purchase, as detailed in the terms of the Dyson guarantee in this Dyson Operating Manual.

If you have a query about your Dyson appliance, call the Dyson Customer Care Helpline quoting your serial number and details of where and when you bought the appliance. Alternatively, contact us via the website.

Your serial number can be found on your rating plate which is on the main body of the appliance behind the clear bin.

Visit our website to register your Dyson full parts and labour guarantee online.

AU: www.dyson.com.au/register

NZ: www.dyson.co.nz/register

Note your serial number for future reference.



This illustration is for example purposes only.

3 EASY WAYS TO REGISTER YOUR DYSON 2 YEAR GUARANTEE

Register online

Visit our website to register your Dyson full parts and labour guarantee online.

AU: www.dyson.com.au/register

NZ: www.dyson.co.nz/register



Register by phone

Call our dedicated Helpline.

AU 1800 239 766

NZ 0800 397 667.



Register by mail

Complete and return the form to Dyson in the envelope supplied.



IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING

These warnings apply to the appliance, and also where applicable, to all tools, accessories, chargers or mains adaptors.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. This Dyson appliance is not intended for use by young children or infirm persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction by a responsible person concerning use of the appliance to ensure that they can use it safely.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. Use only as described in this Dyson Operating Manual. Do not carry out any maintenance other than that shown in this manual, or advised by the Dyson Customer Care Helpline.
4. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces.
5. Do not handle any part of the plug or appliance with wet hands.
6. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified person in order to avoid a hazard.
7. If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Customer Care Helpline.
8. Contact the Dyson Customer Care Helpline when service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
9. Do not stretch the cable or place the cable under strain. Keep the cable away from heated surfaces. Do not close a door on the cable, or pull the cable around sharp edges or corners. Arrange the cable away from traffic areas and where it will not be stepped on or tripped over. Do not run the appliance over the cable.
10. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. The use of an extension cable is not recommended.
11. Do not use to pick up water.
12. Do not use to pick up flammable or combustible liquids, such as petrol, or use in areas where they or their vapours may be present.
13. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
14. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts, such as the brush bar. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
15. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
16. Use only Dyson recommended accessories and replacement parts.
17. Do not use without the clear bin and filter in place.
18. Unplug when not in use for extended periods and before maintenance or servicing.
19. Use extra care when cleaning on stairs.
20. Do not install, charge or use this appliance outdoors, in a bathroom or within 3 metres (10 feet) of a pool. Do not use on wet surfaces and do not expose to moisture, rain or snow.
21. Use only Dyson chargers for charging this Dyson appliance. Use only Dyson batteries: other types of batteries may burst, causing injury to persons and damage.
22. Do not incinerate this appliance even if it is severely damaged. The battery may explode in a fire.
23. Always turn 'OFF' the appliance before connecting or disconnecting the motorised brush bar.

READ AND SAVE THESE INSTRUCTIONS

THIS DYSON APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY



Do not use near naked flames.



Do not store near heat sources.



Do not pick up water or liquids.



 
Do not pick up burning objects.




Do not put hands near the brush bar when the appliance is in use.

Power mode and run-time

To change the mode, hold the trigger down and press the max button.

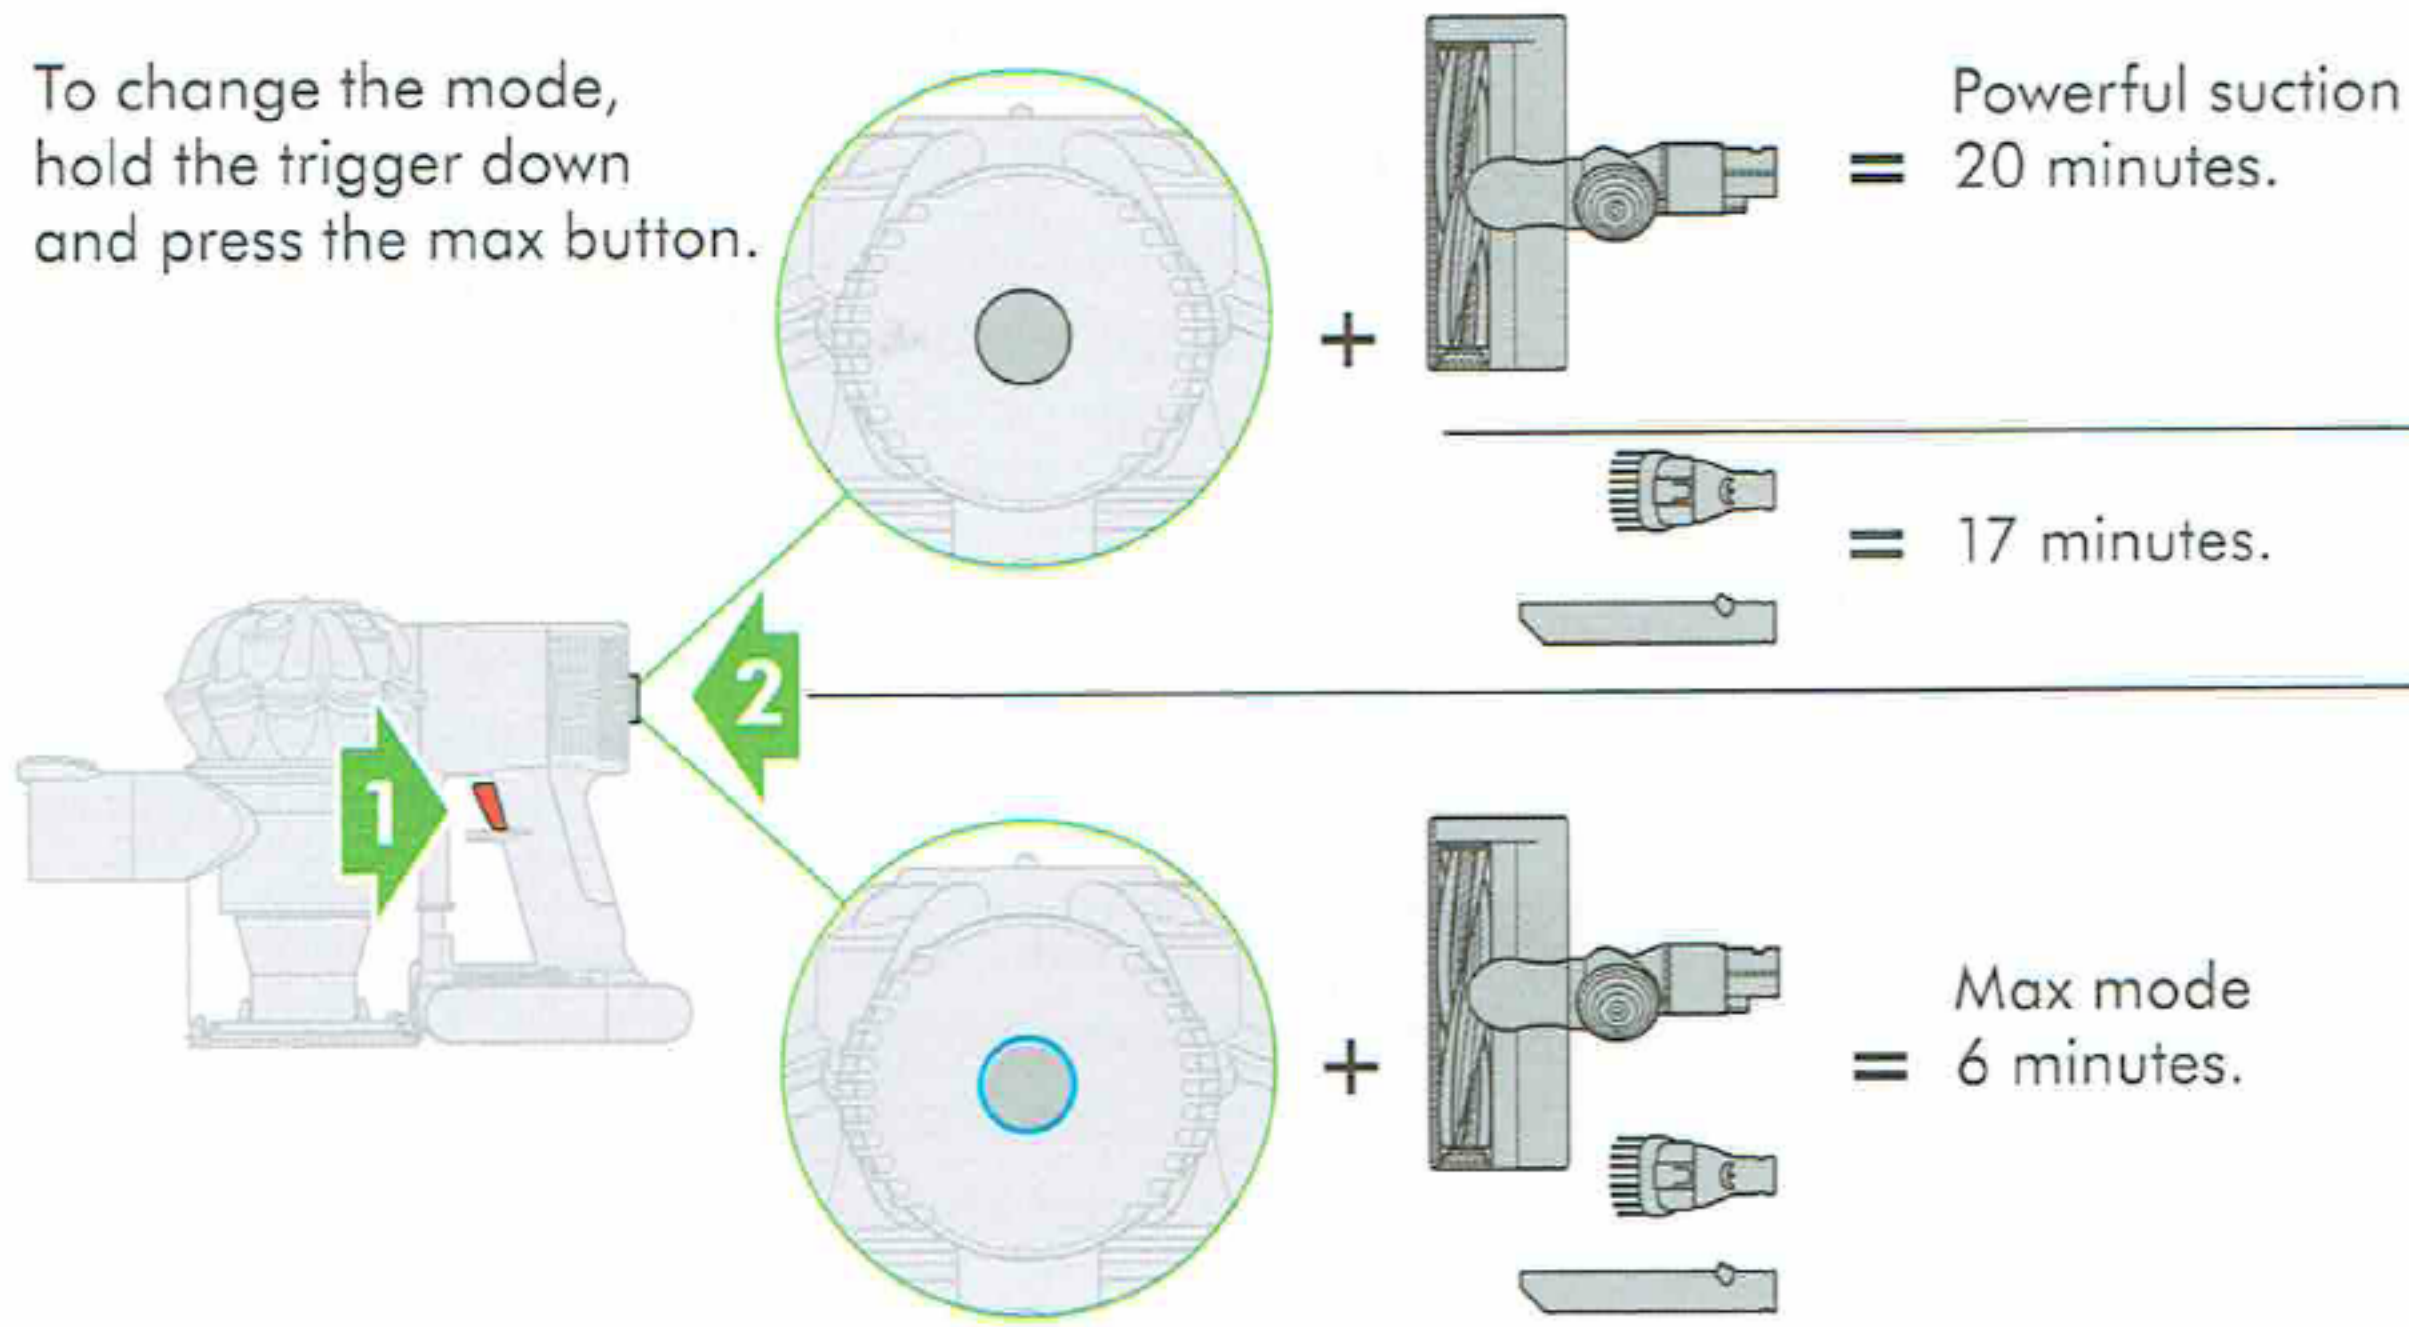


Diagnostics - main body

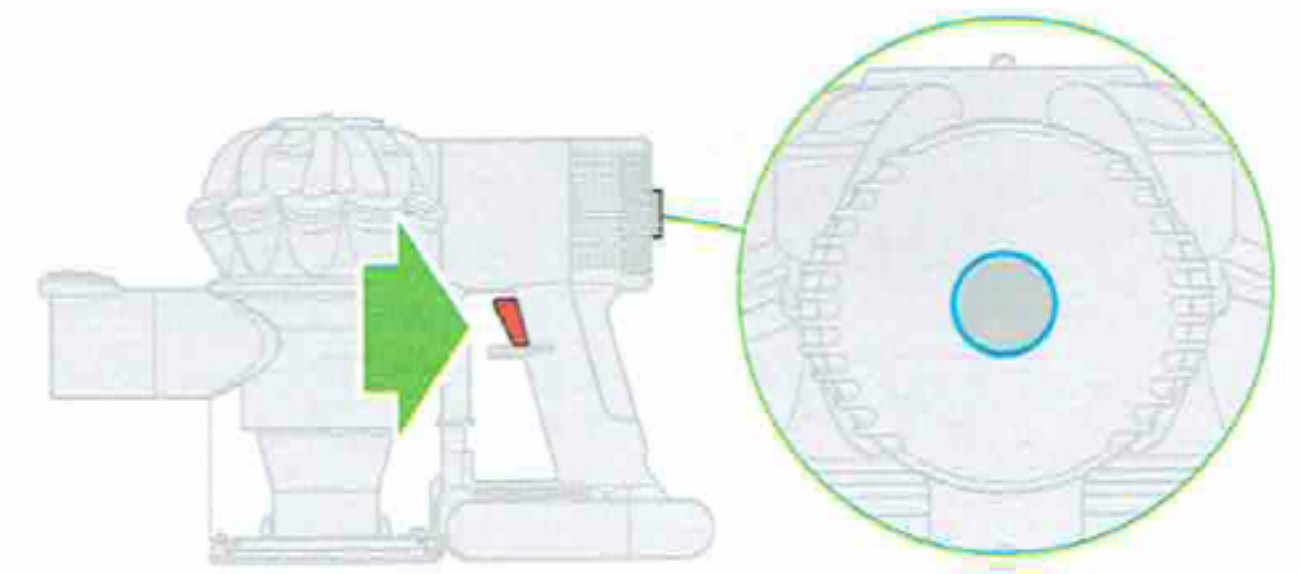 


- Solid blue: Max 'ON'.
- Flashing blue: Low battery warning.
- Fast flashing blue: No power, temporary fault (e.g. check filter or for blockages).

 
Clearing brush bar obstructions

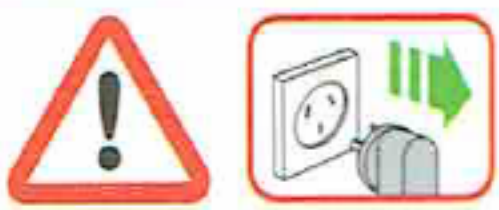




1

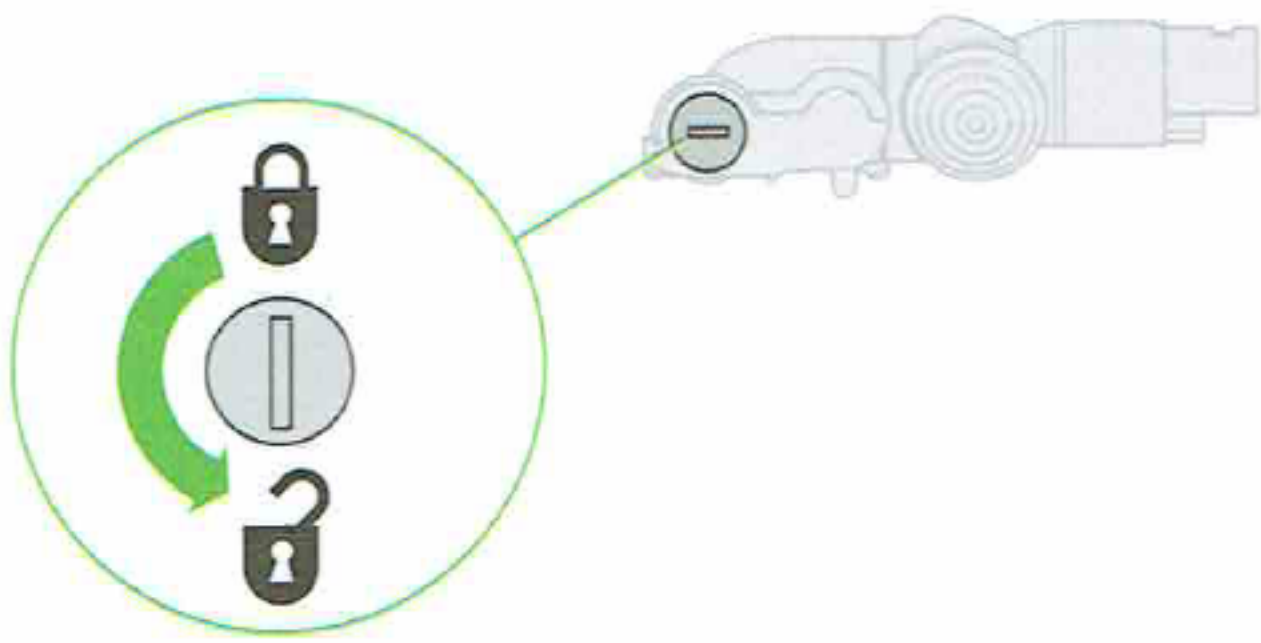 



2

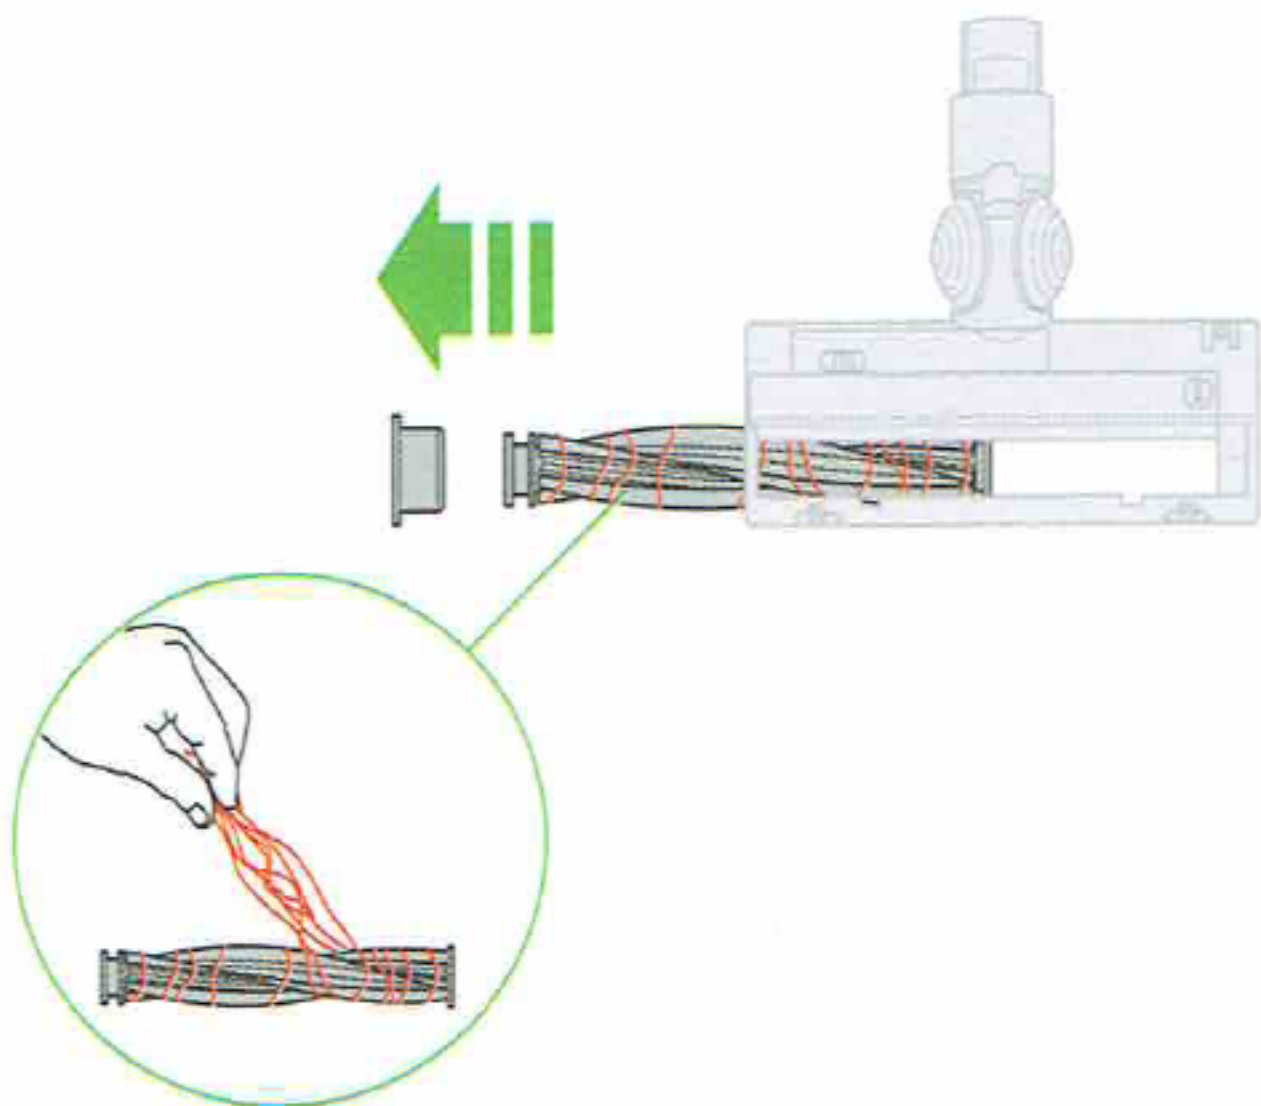 

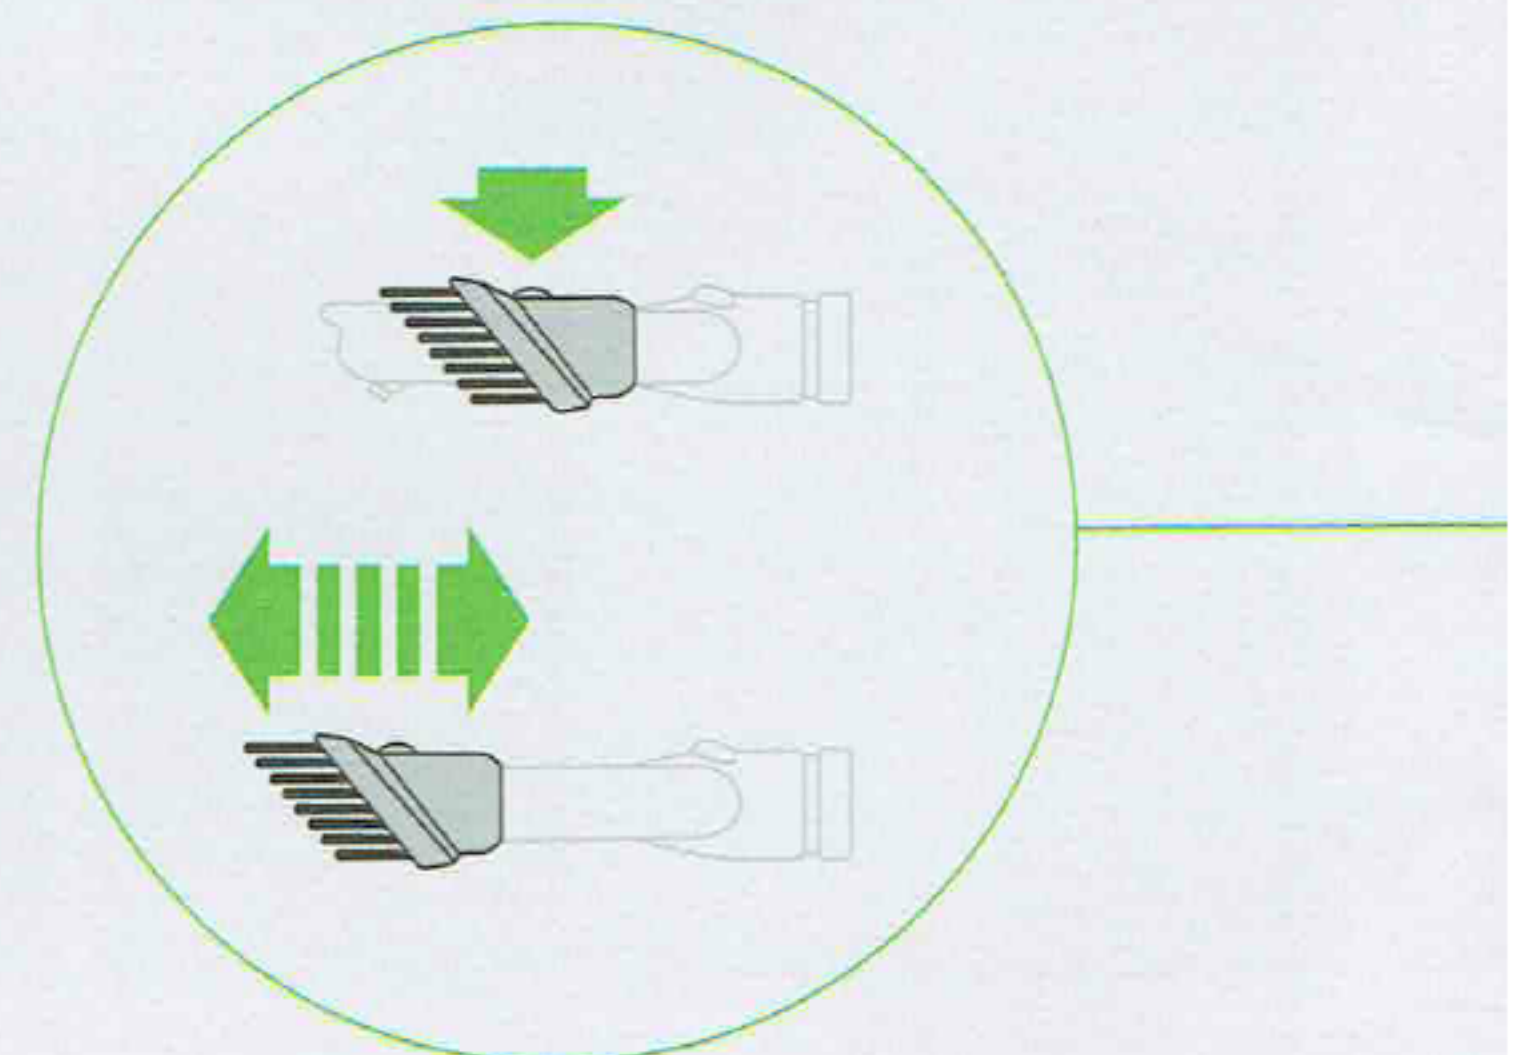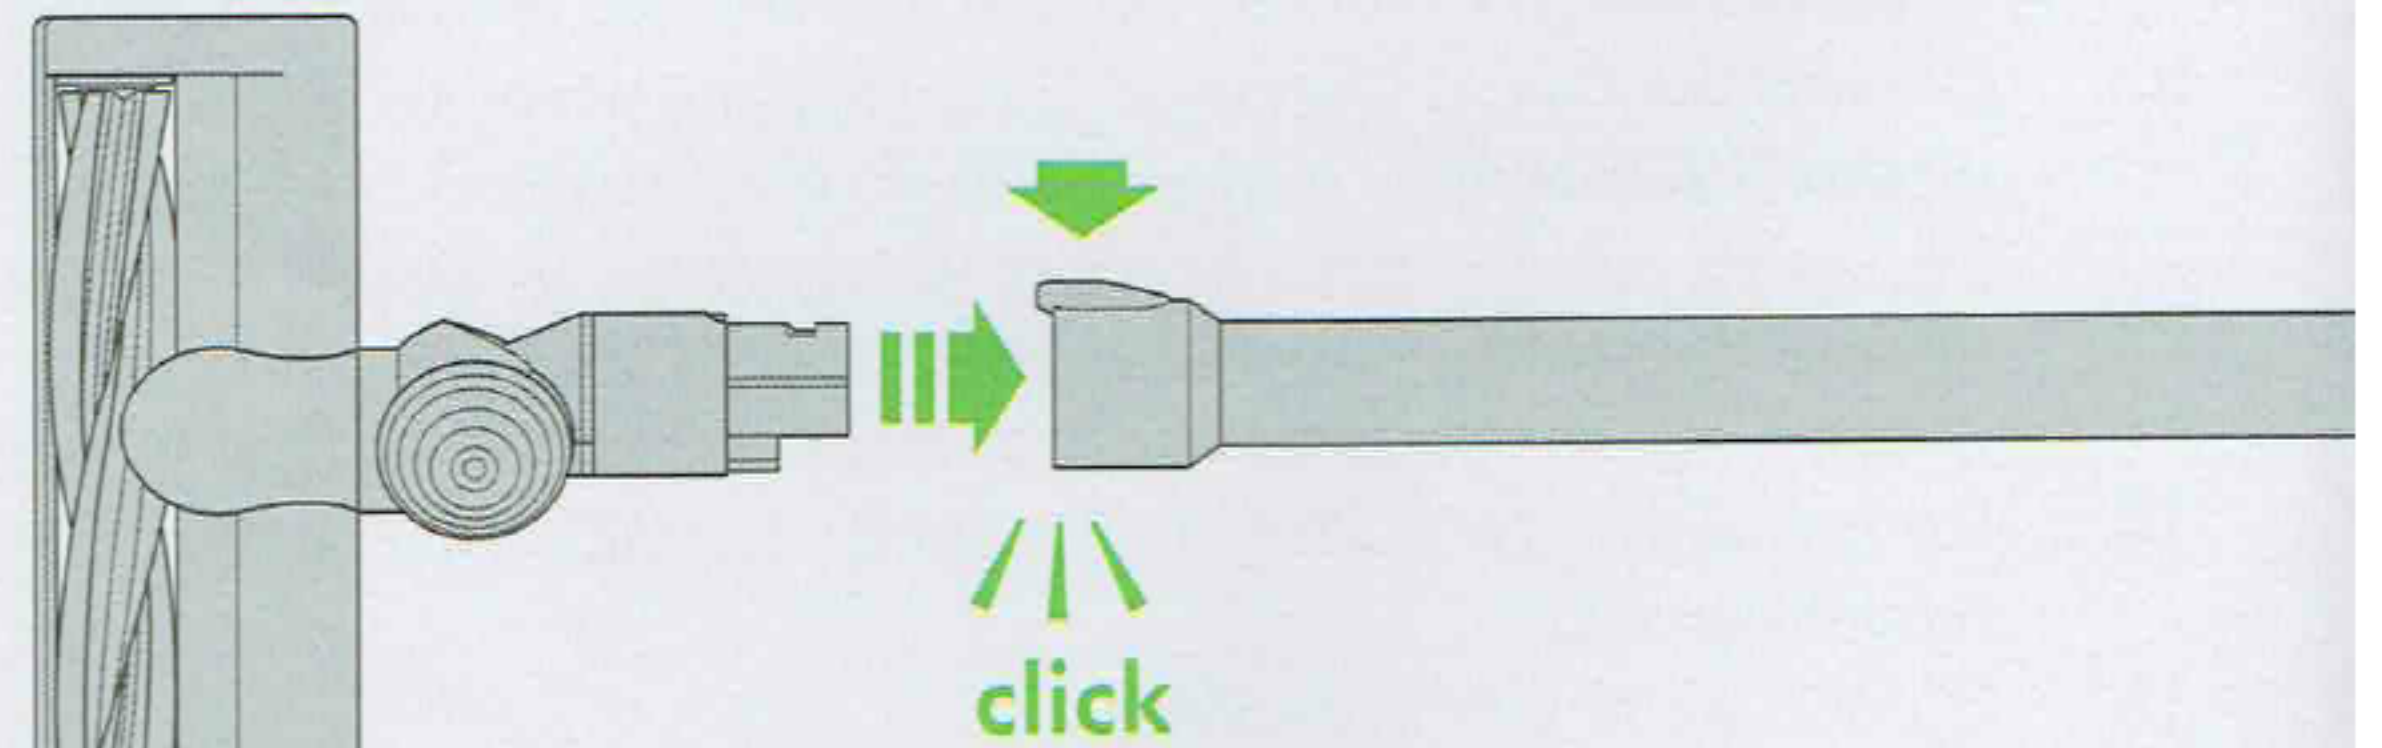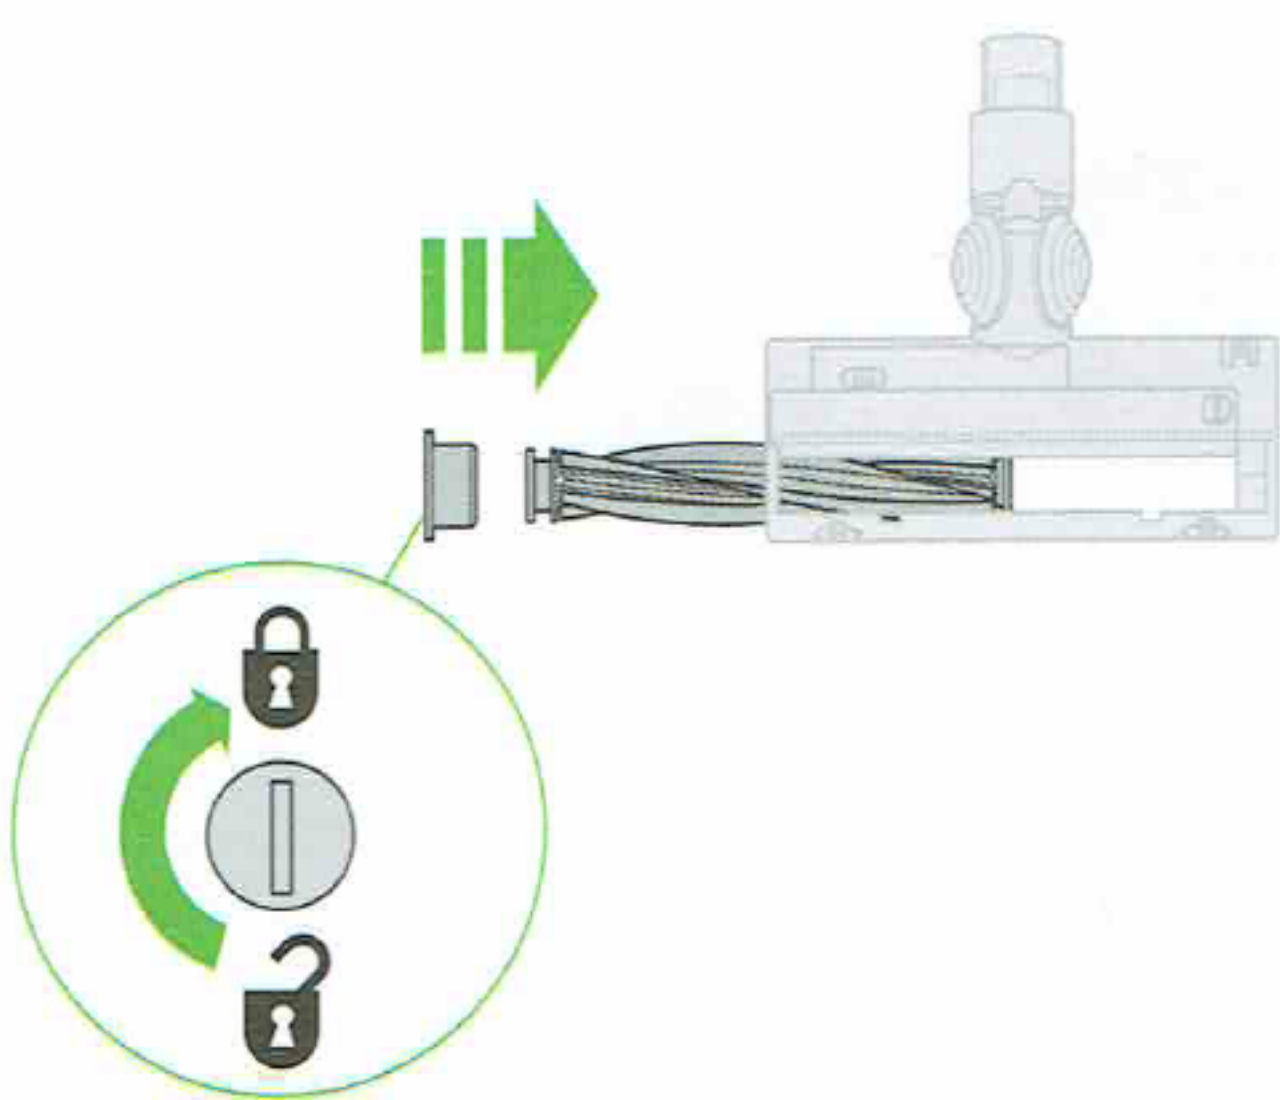   


3

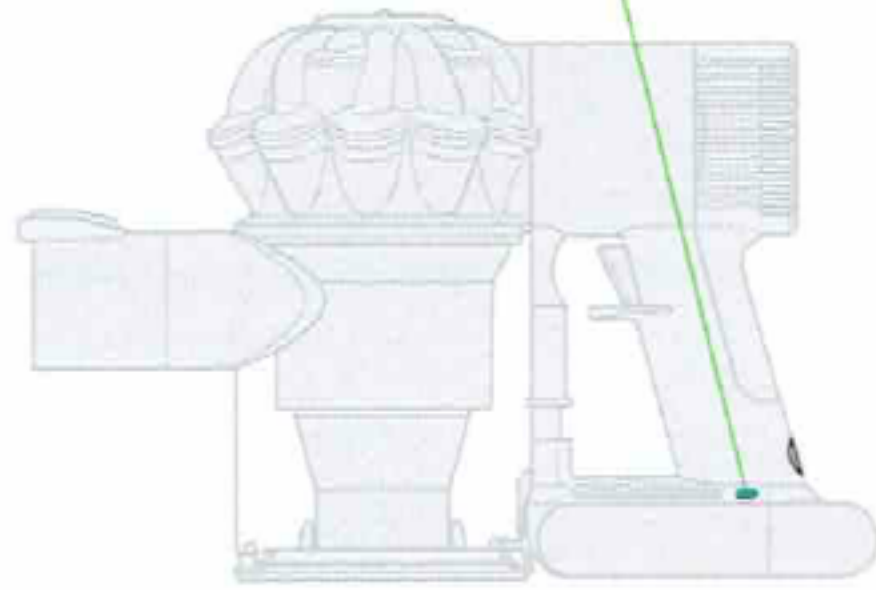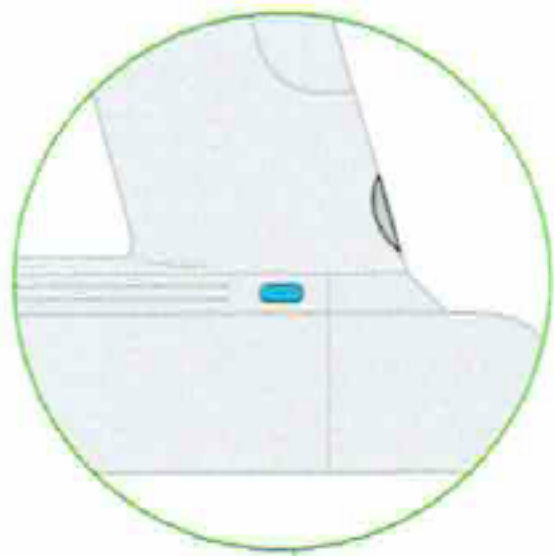  


Diagnostics - battery

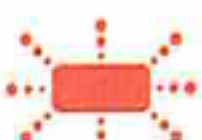


-  Solid blue: On.
-  Flashing blue: No power, charge battery.
-  Flashing amber: No power, temporary fault (e.g. too hot/cold).
-  Flashing red: Fault (ring Dyson Helpline).

 A

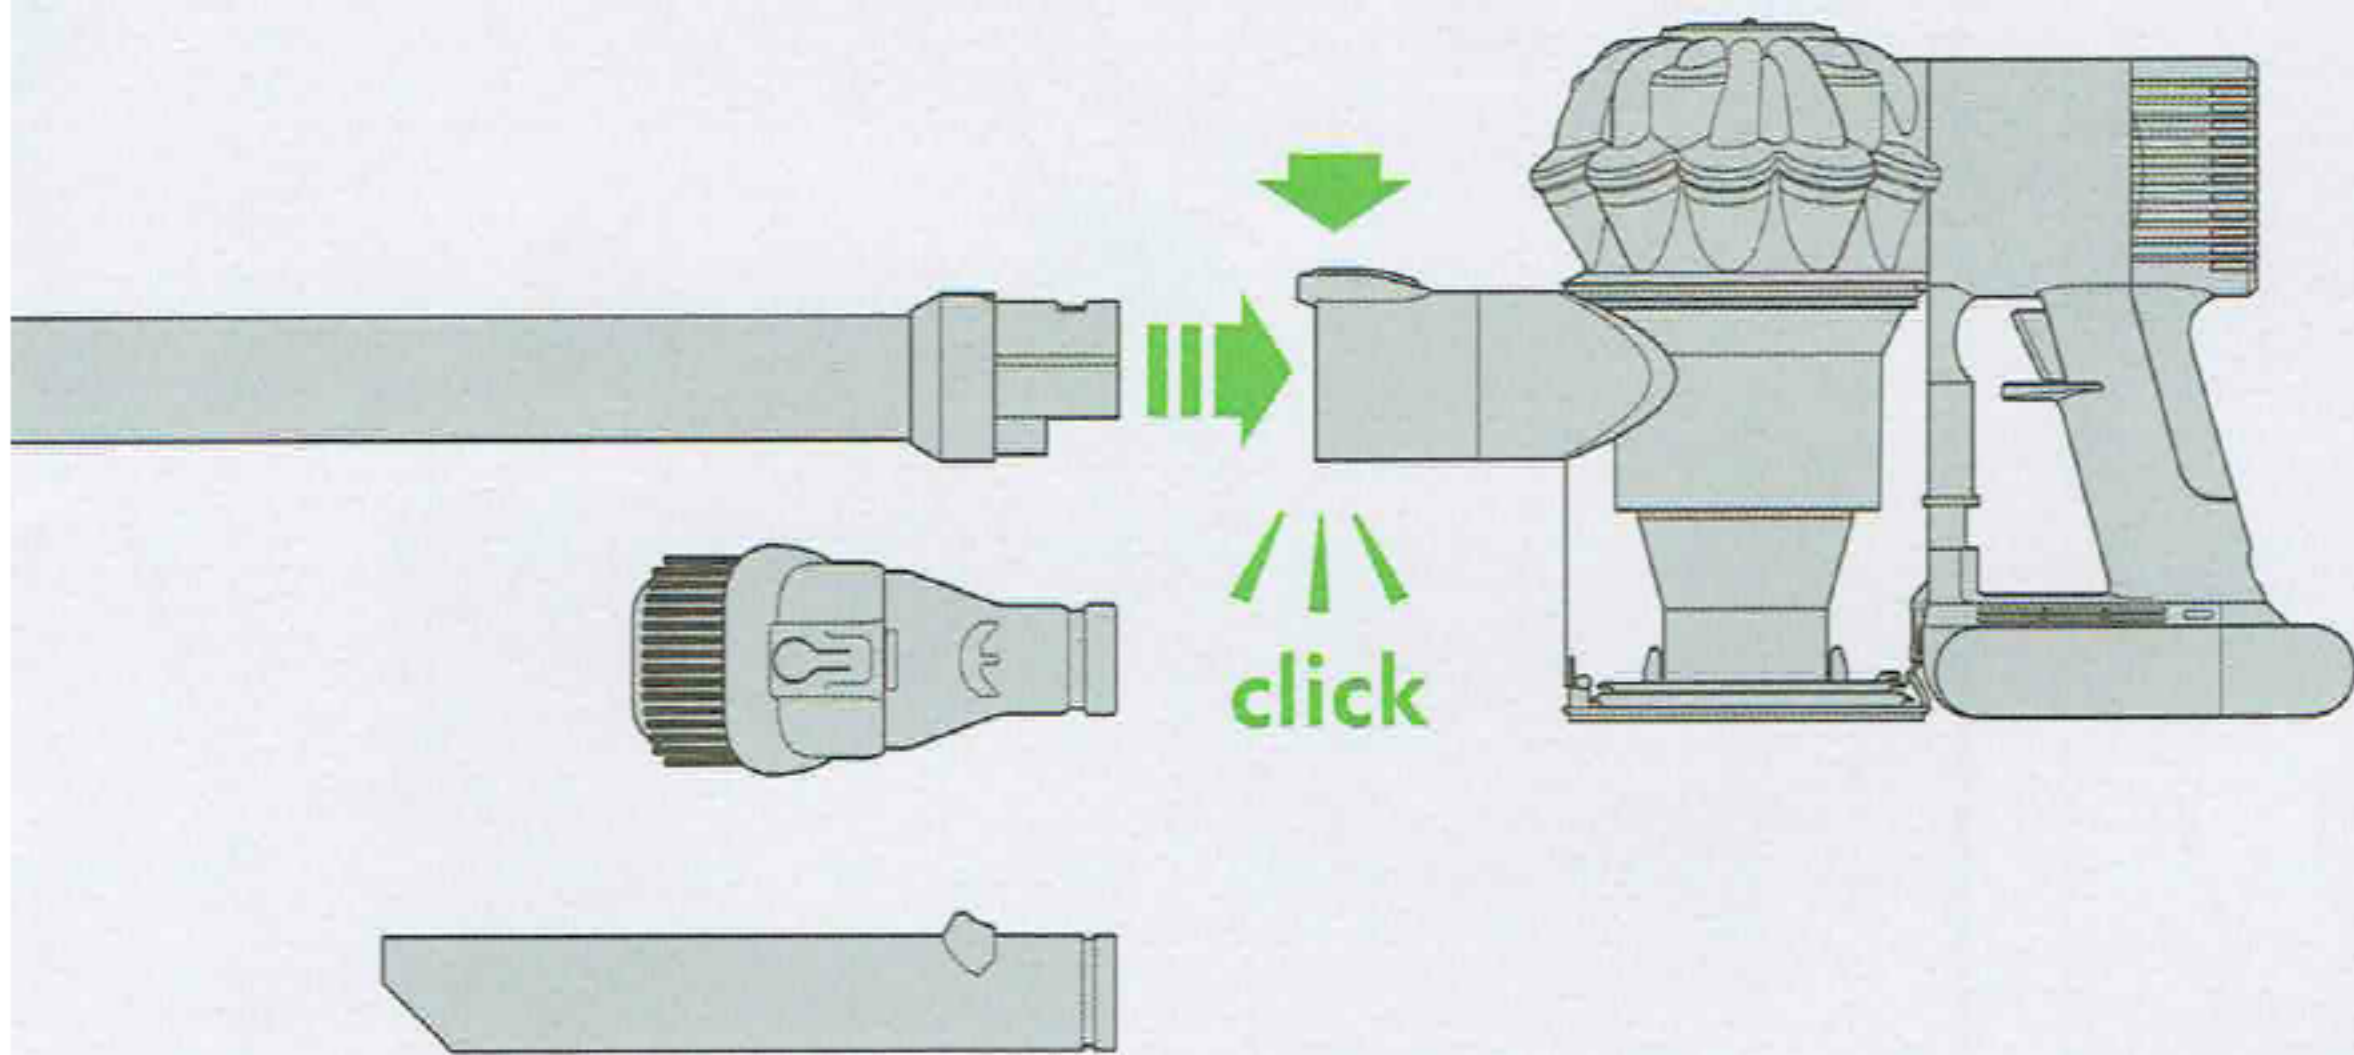

B

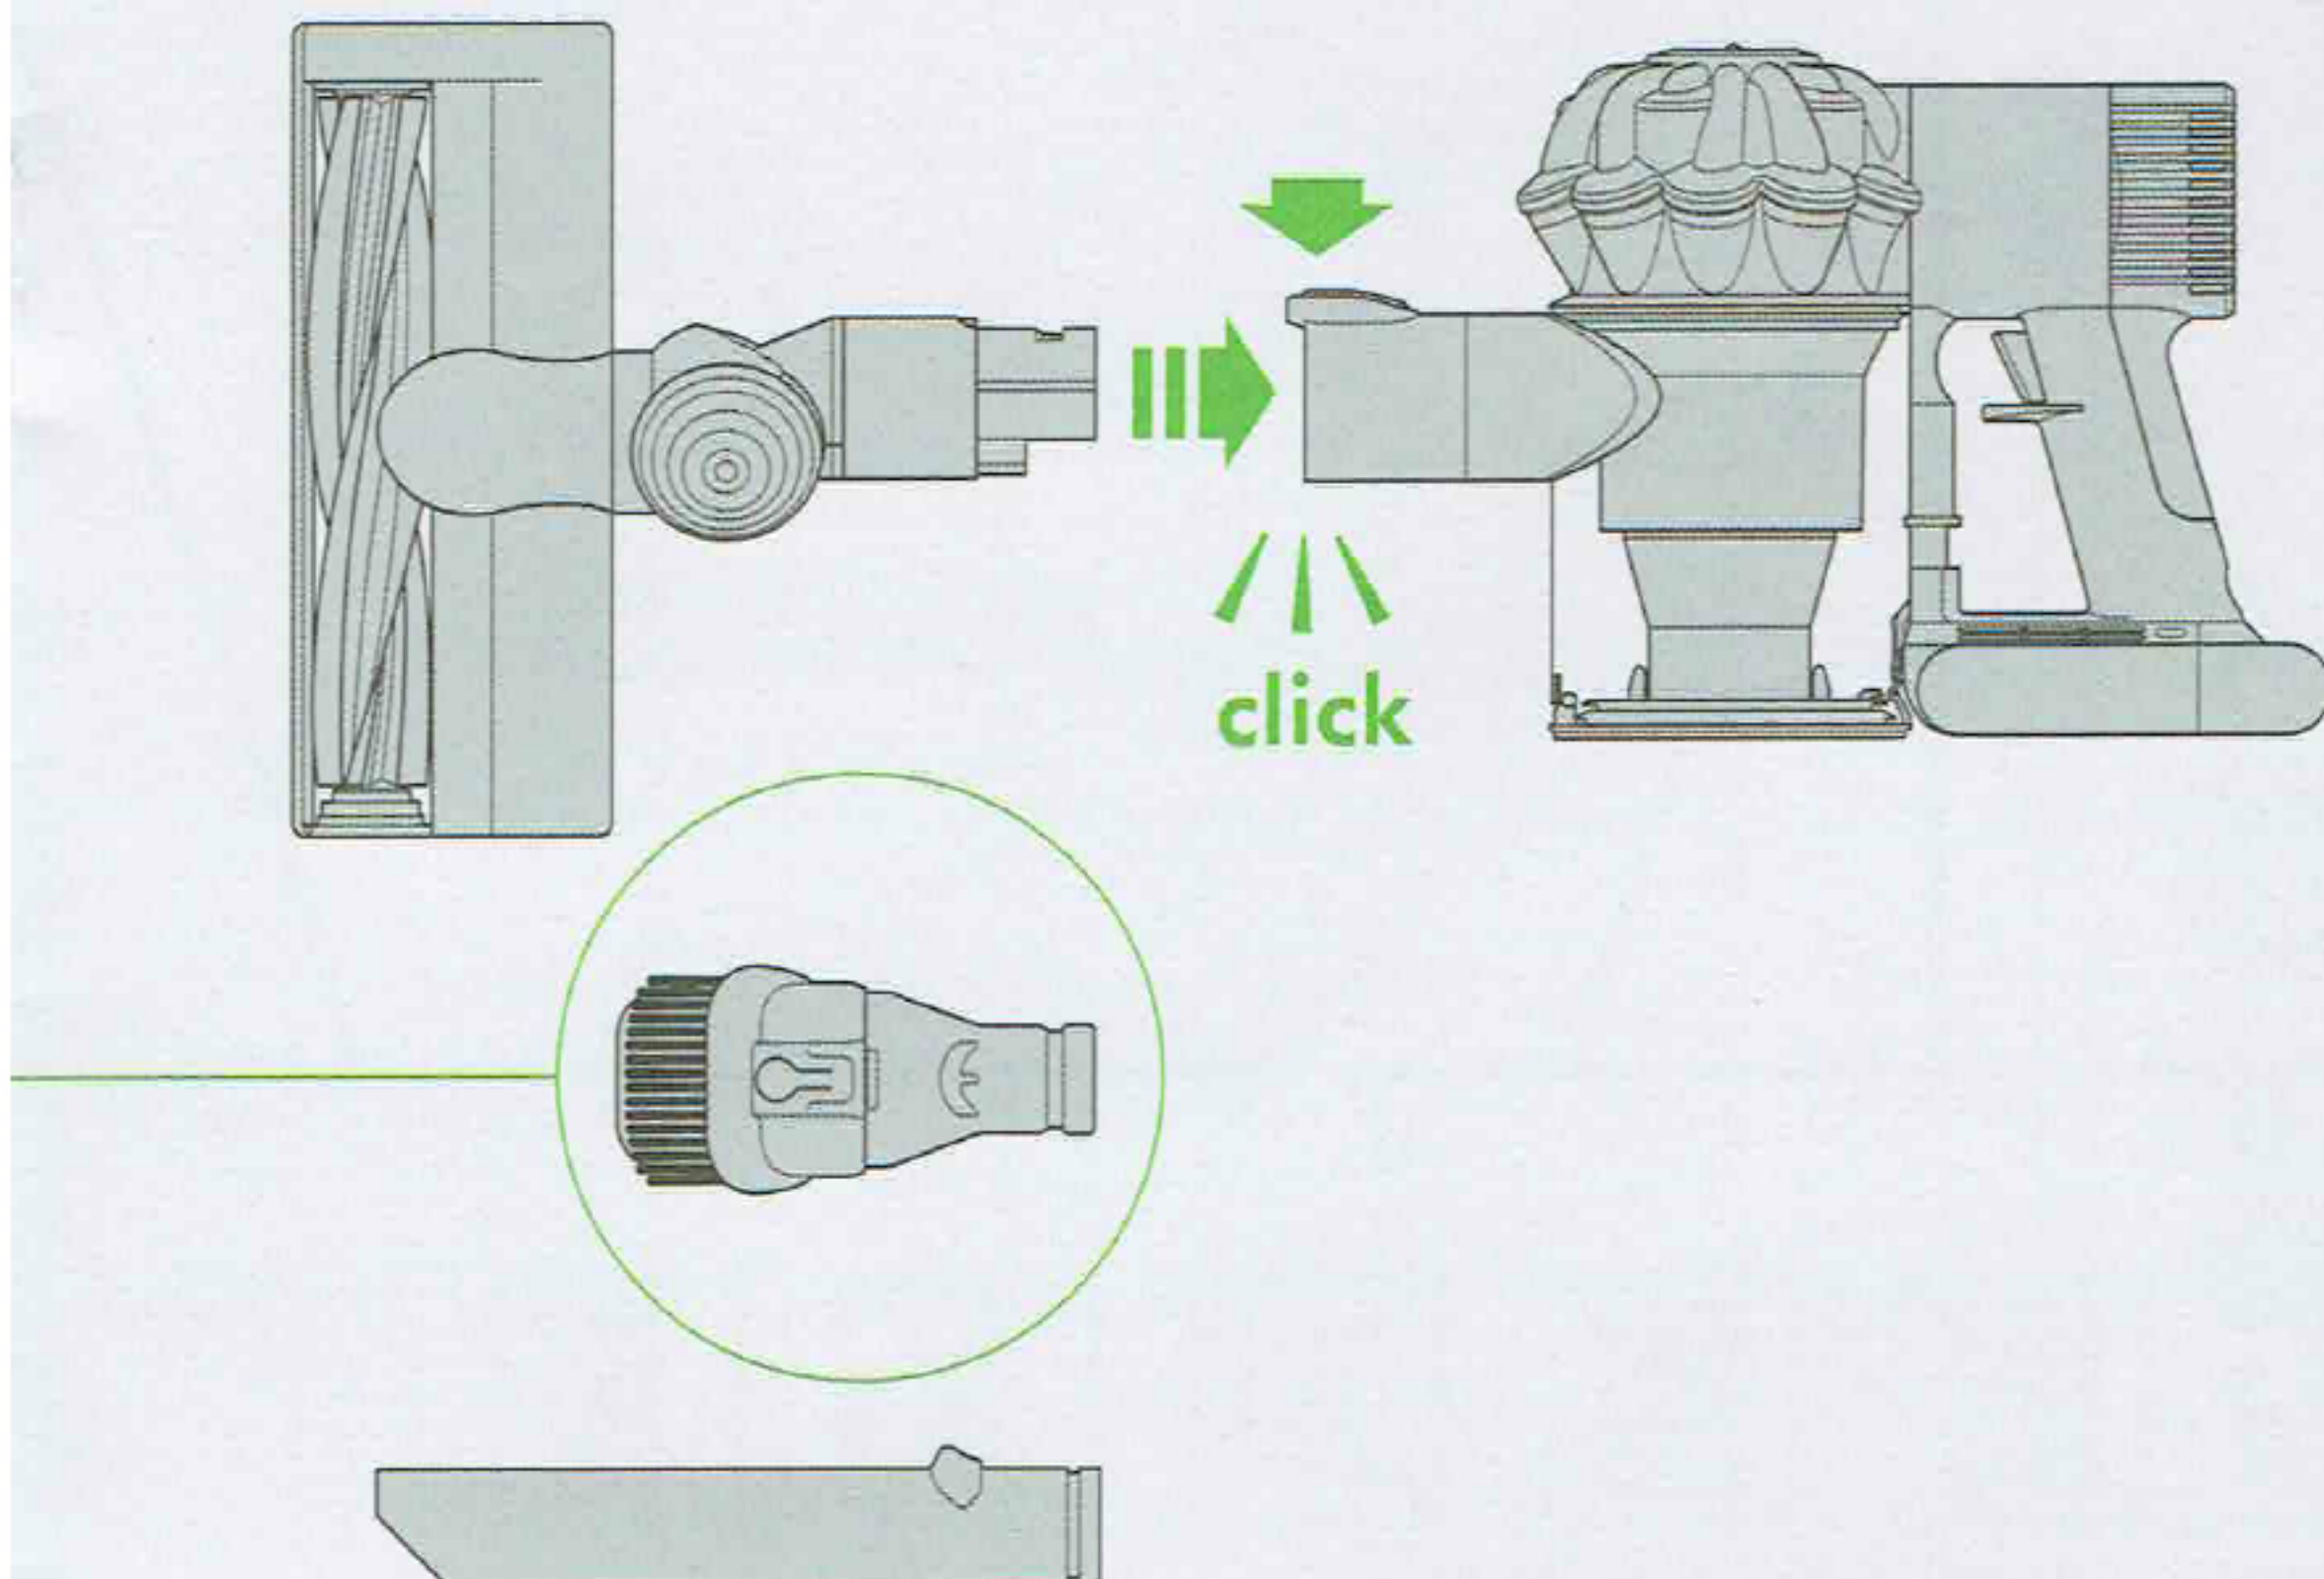 


Storage and charging in the docking station




Attaching to docking station.

 
Removing from docking station.

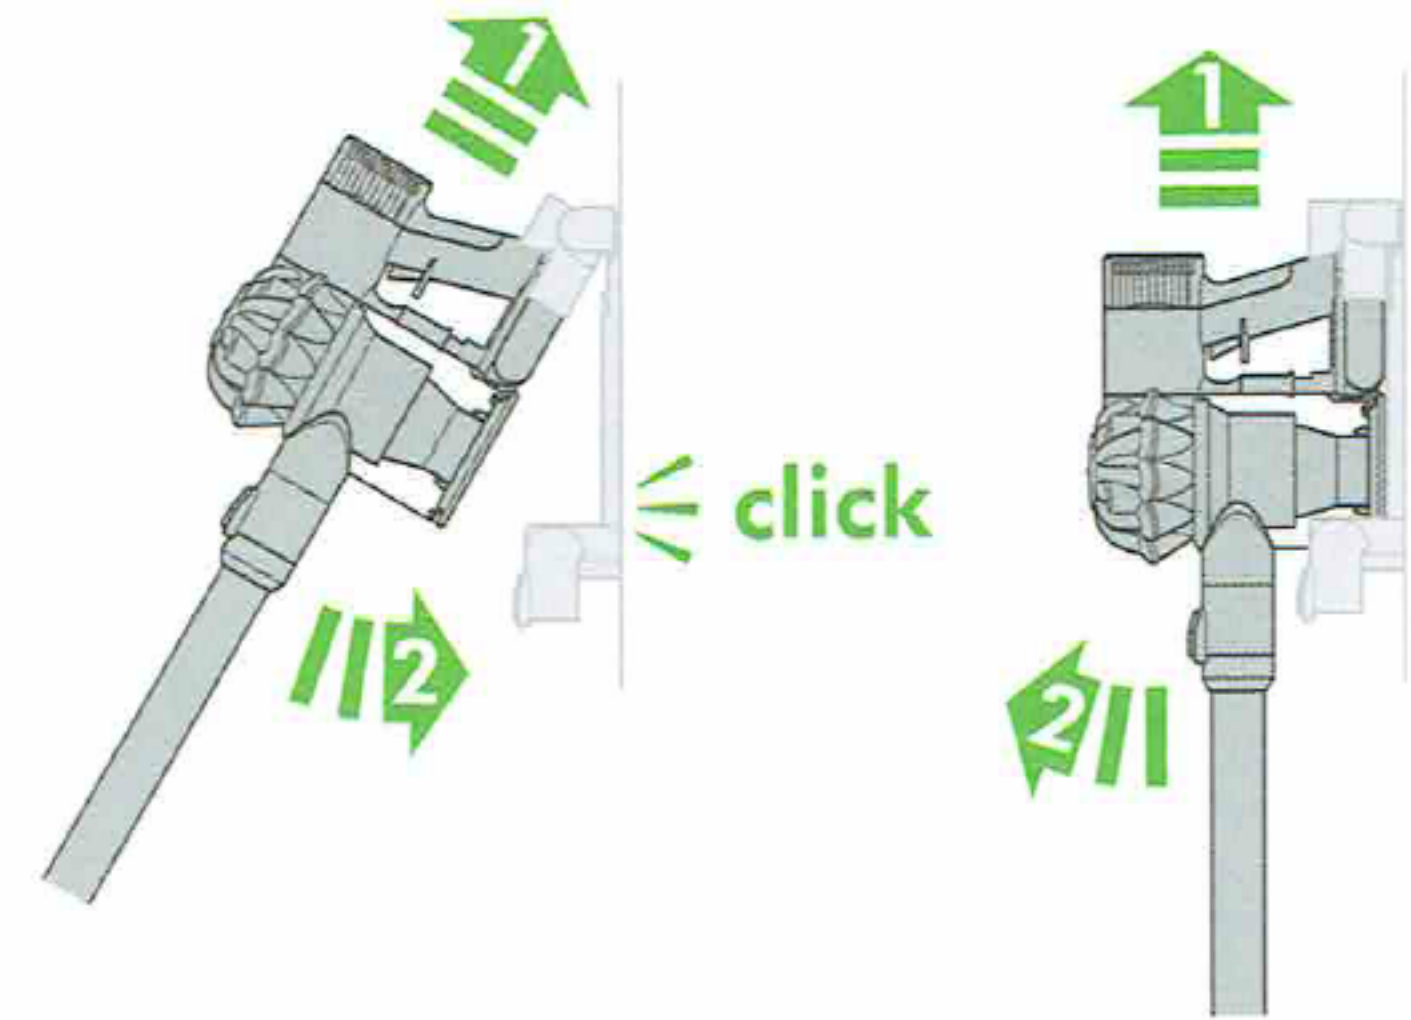




 
-  Charging.
-  Fully charged.
-  Not charging - too cold/too hot.
-  Not charging - contact Helpline.

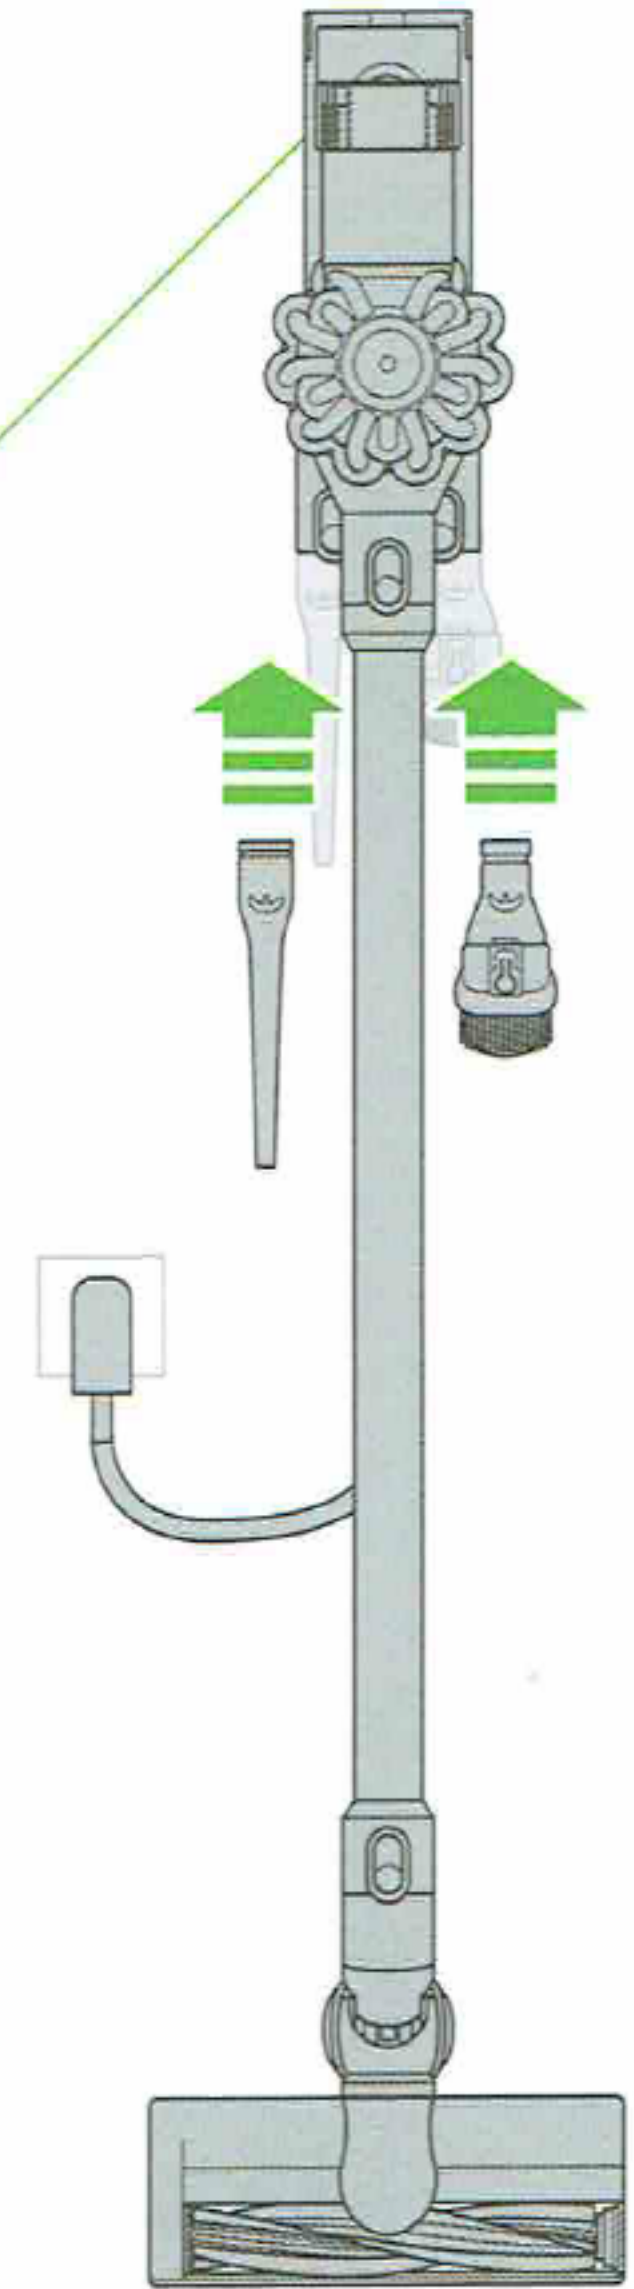

Emptying the clear bin

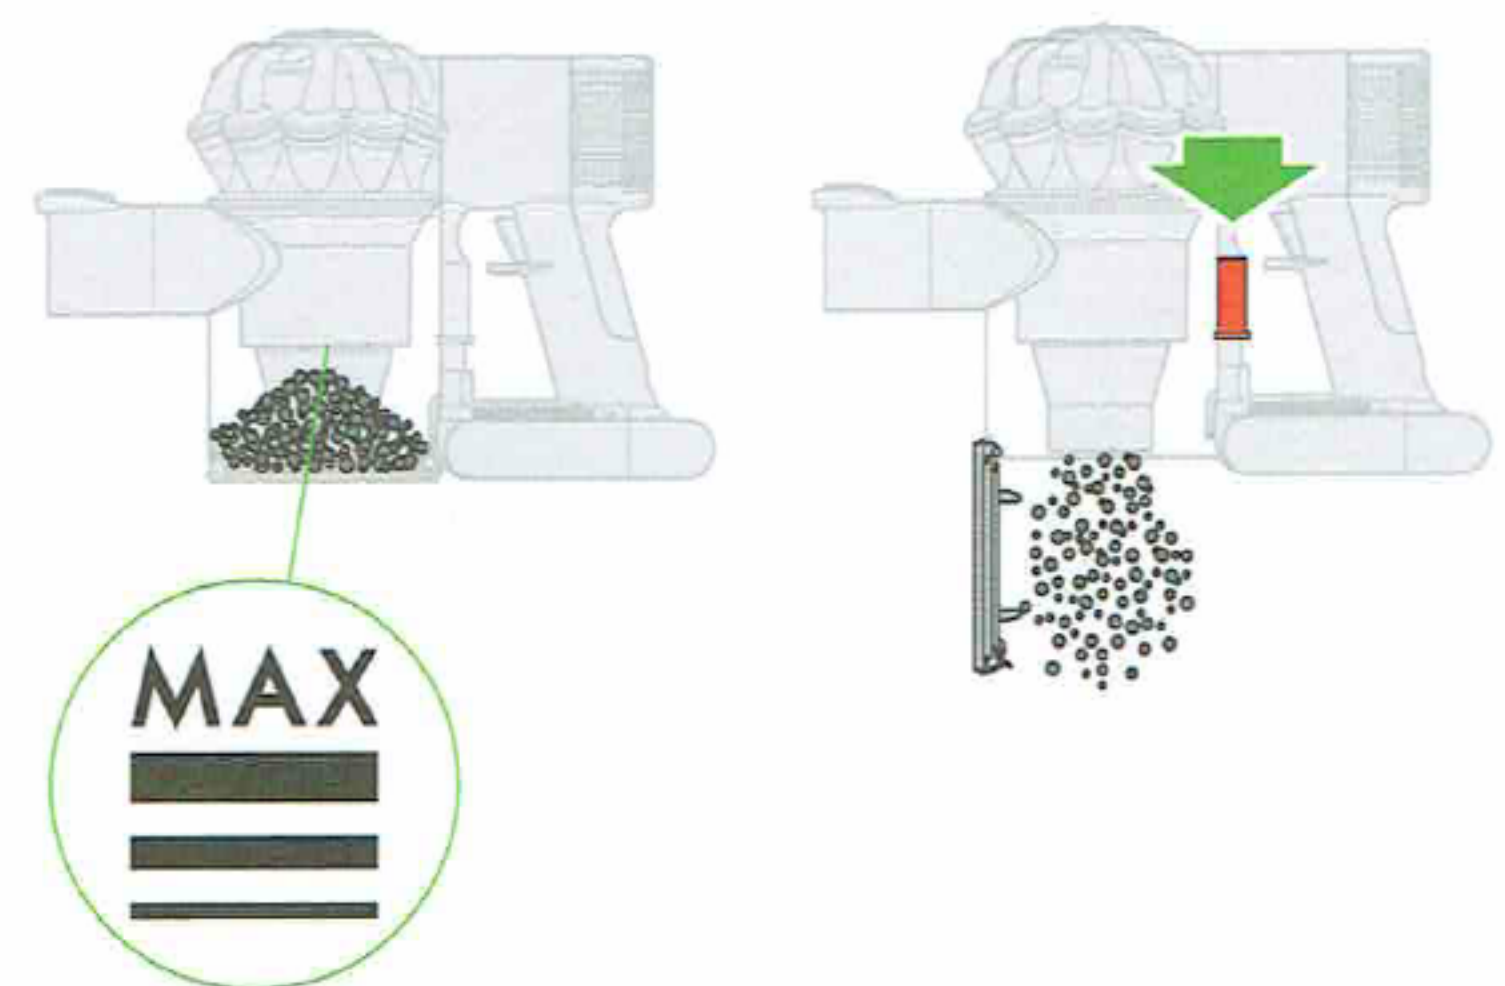 


Looking for blockages

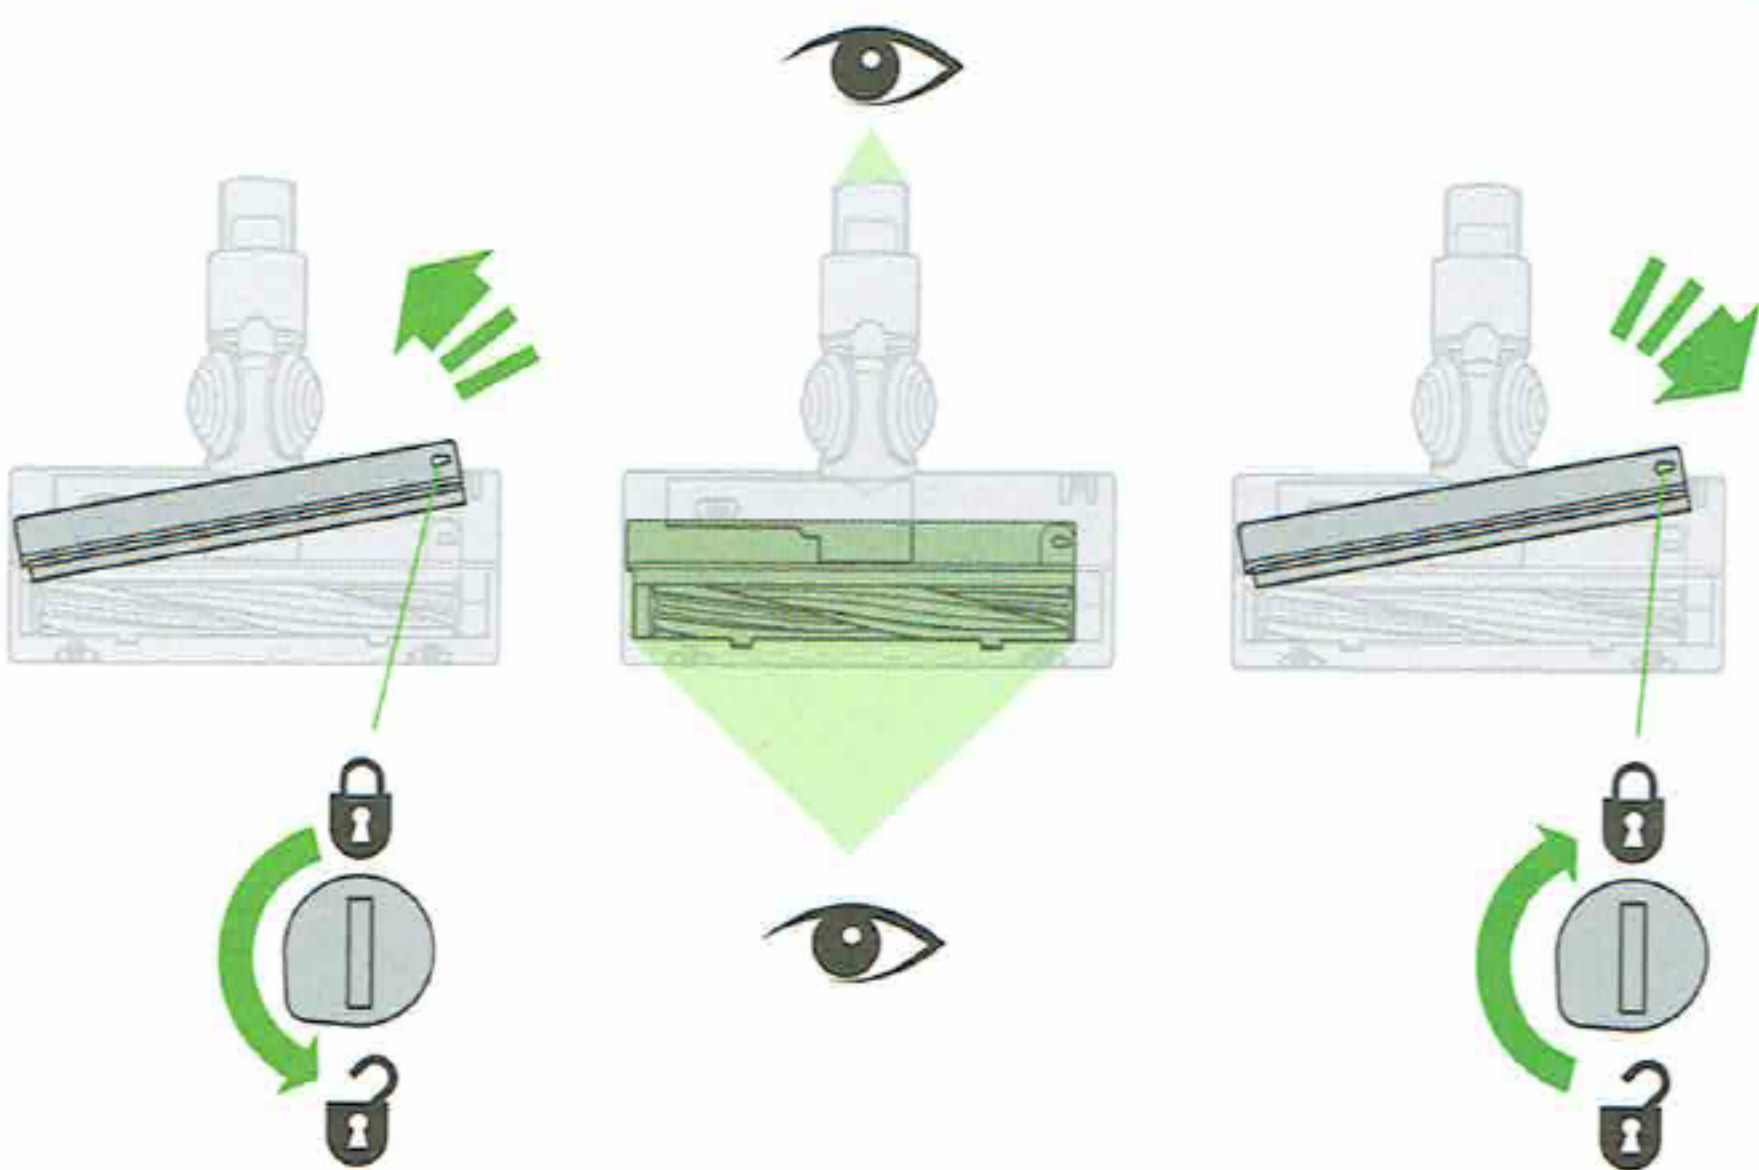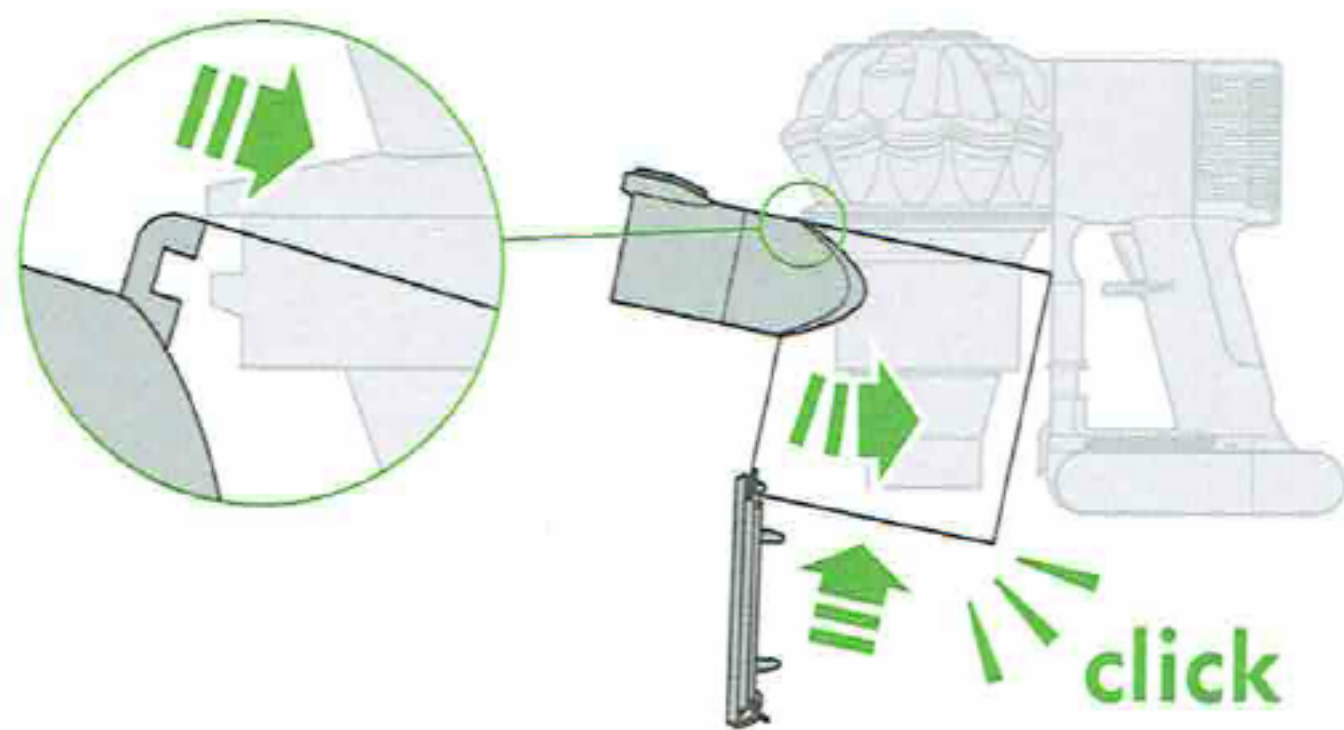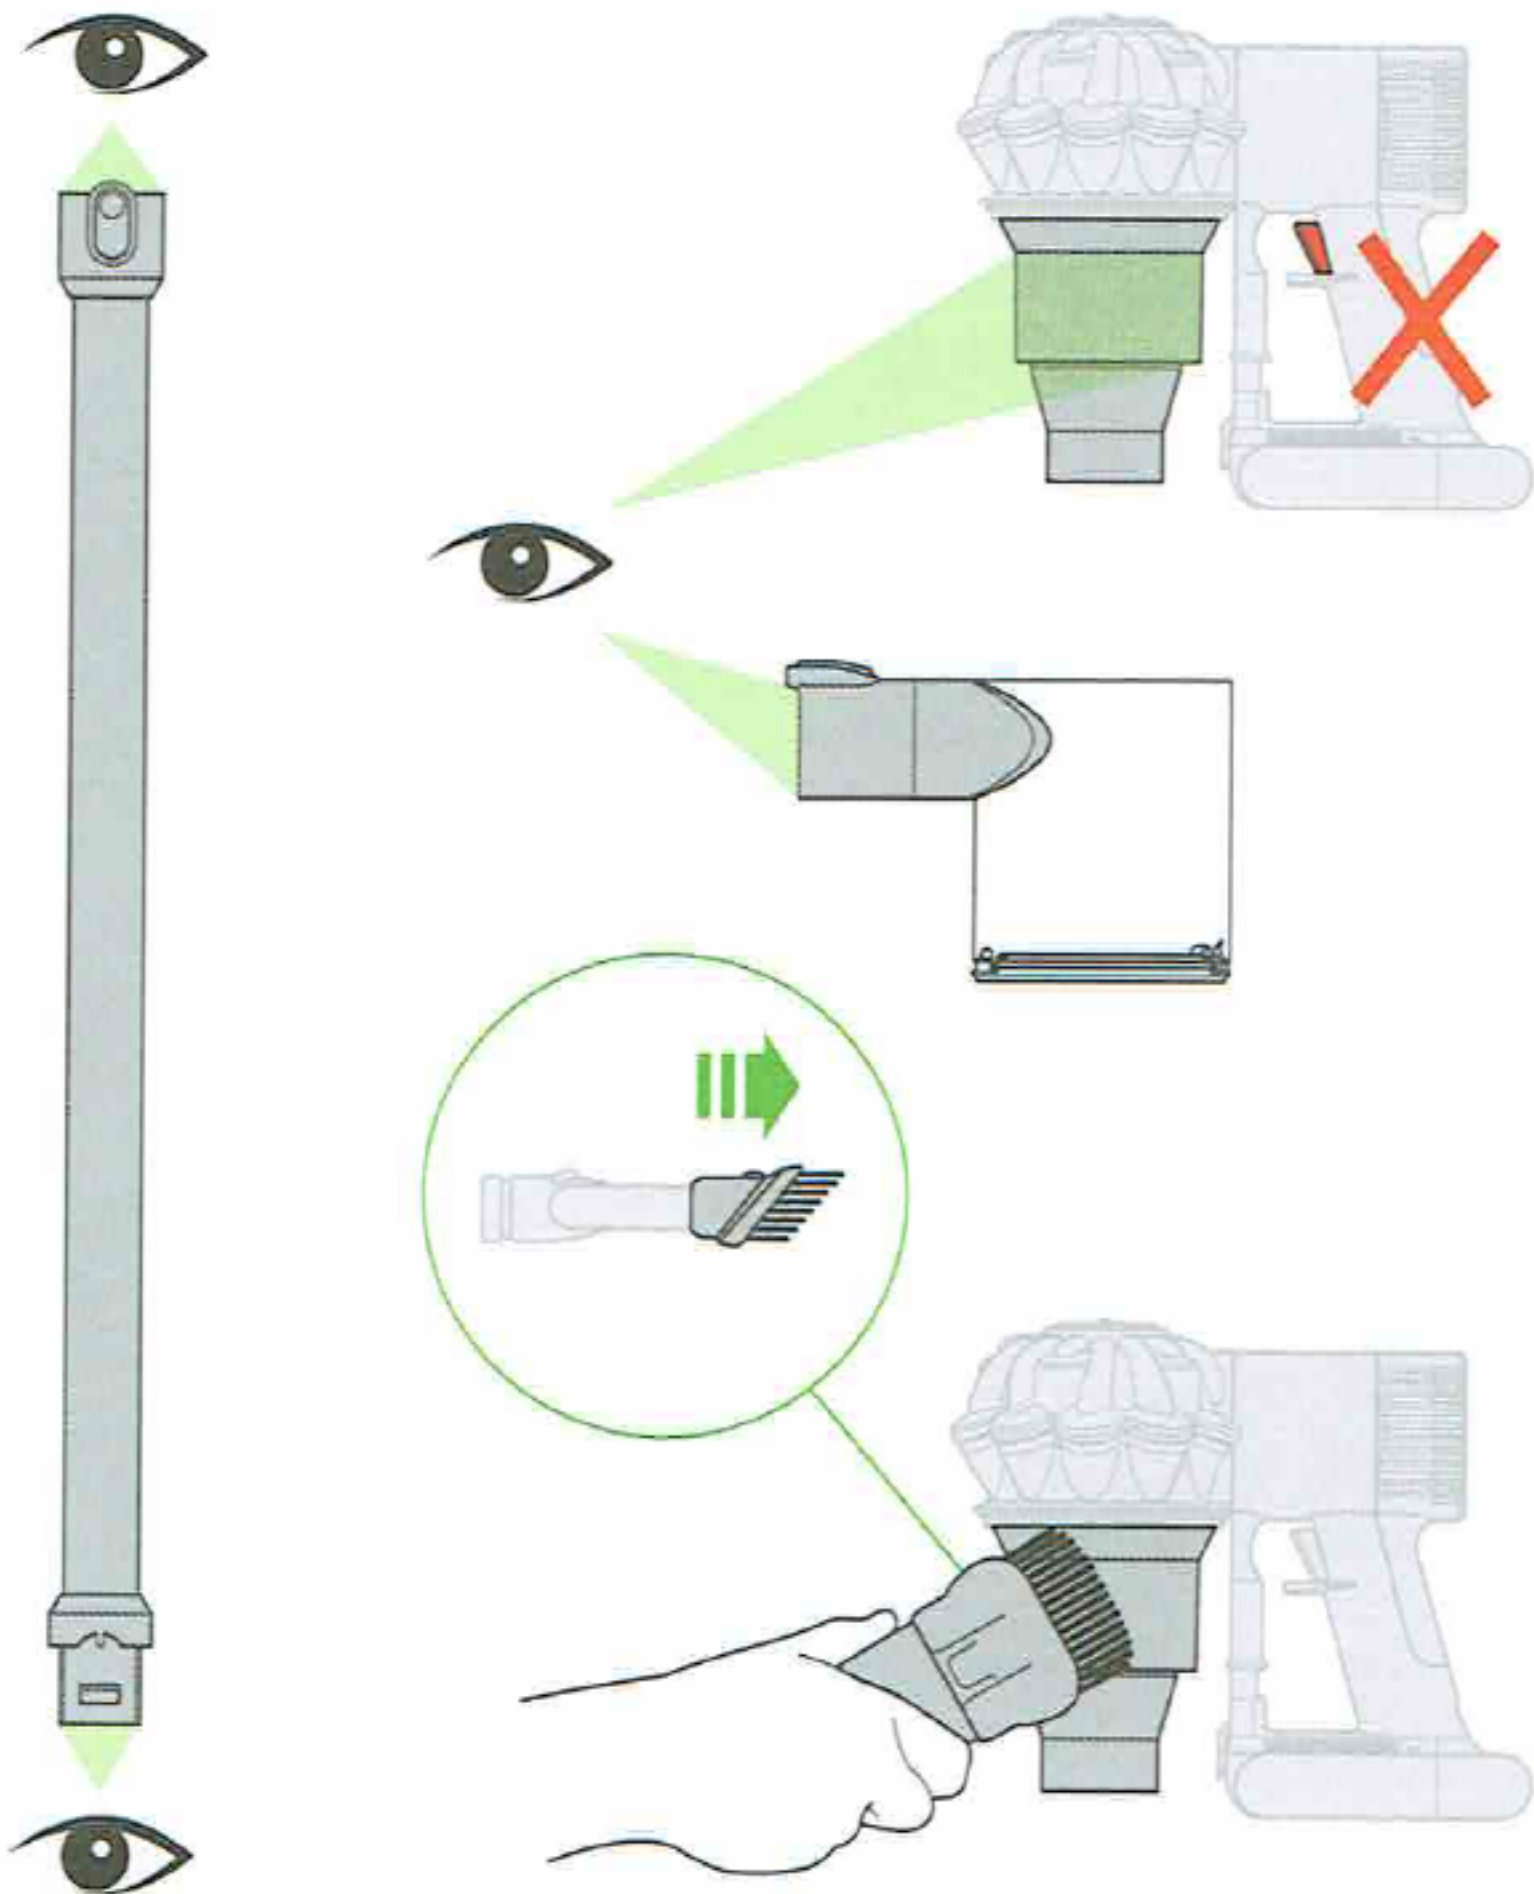   
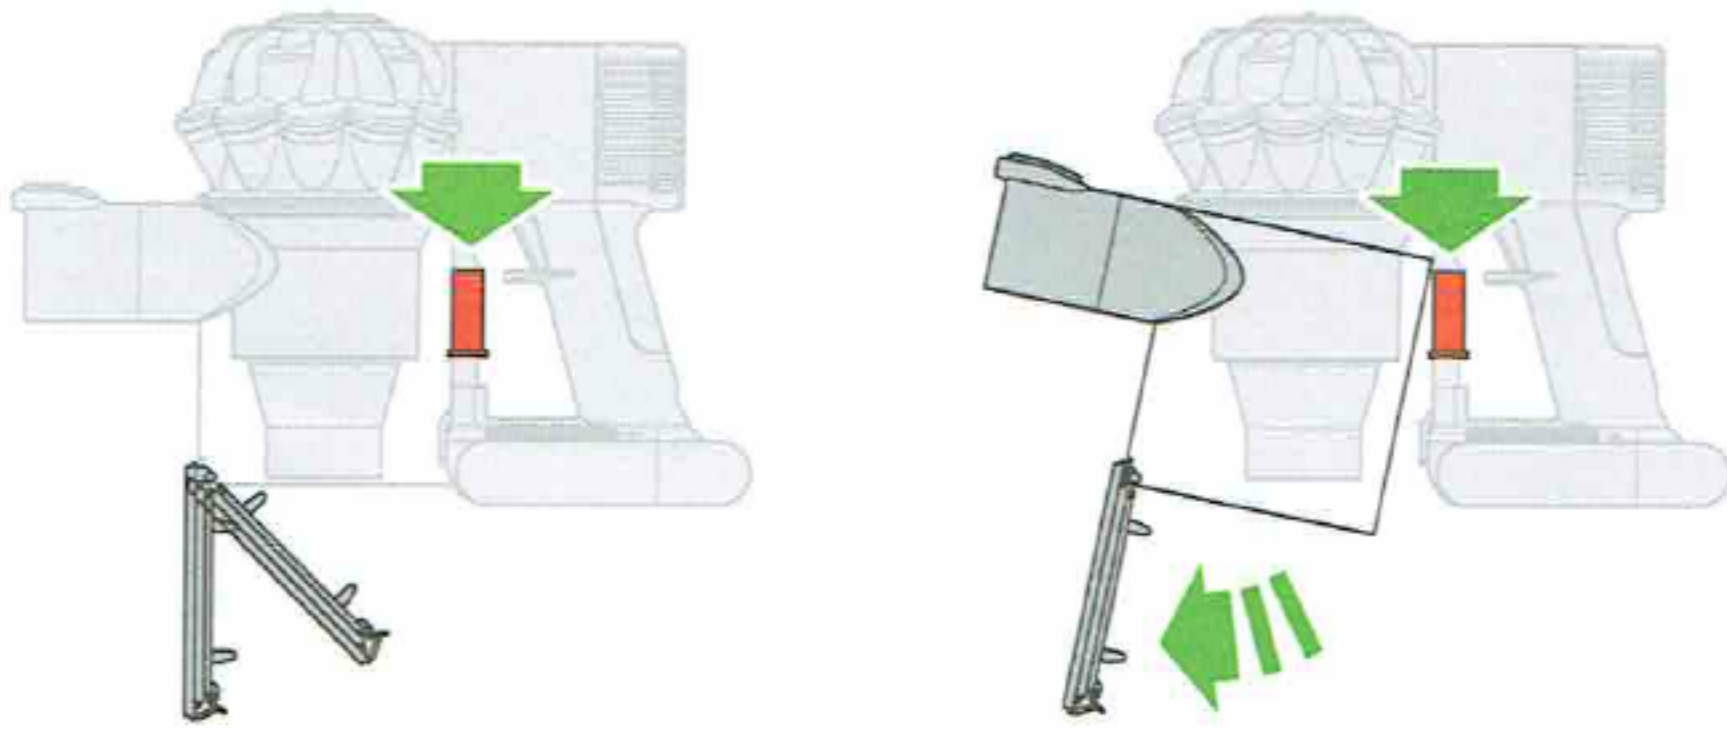 


IMPORTANT!

WASH FILTER






 
 
 
Wash filter with cold water regularly or as required.

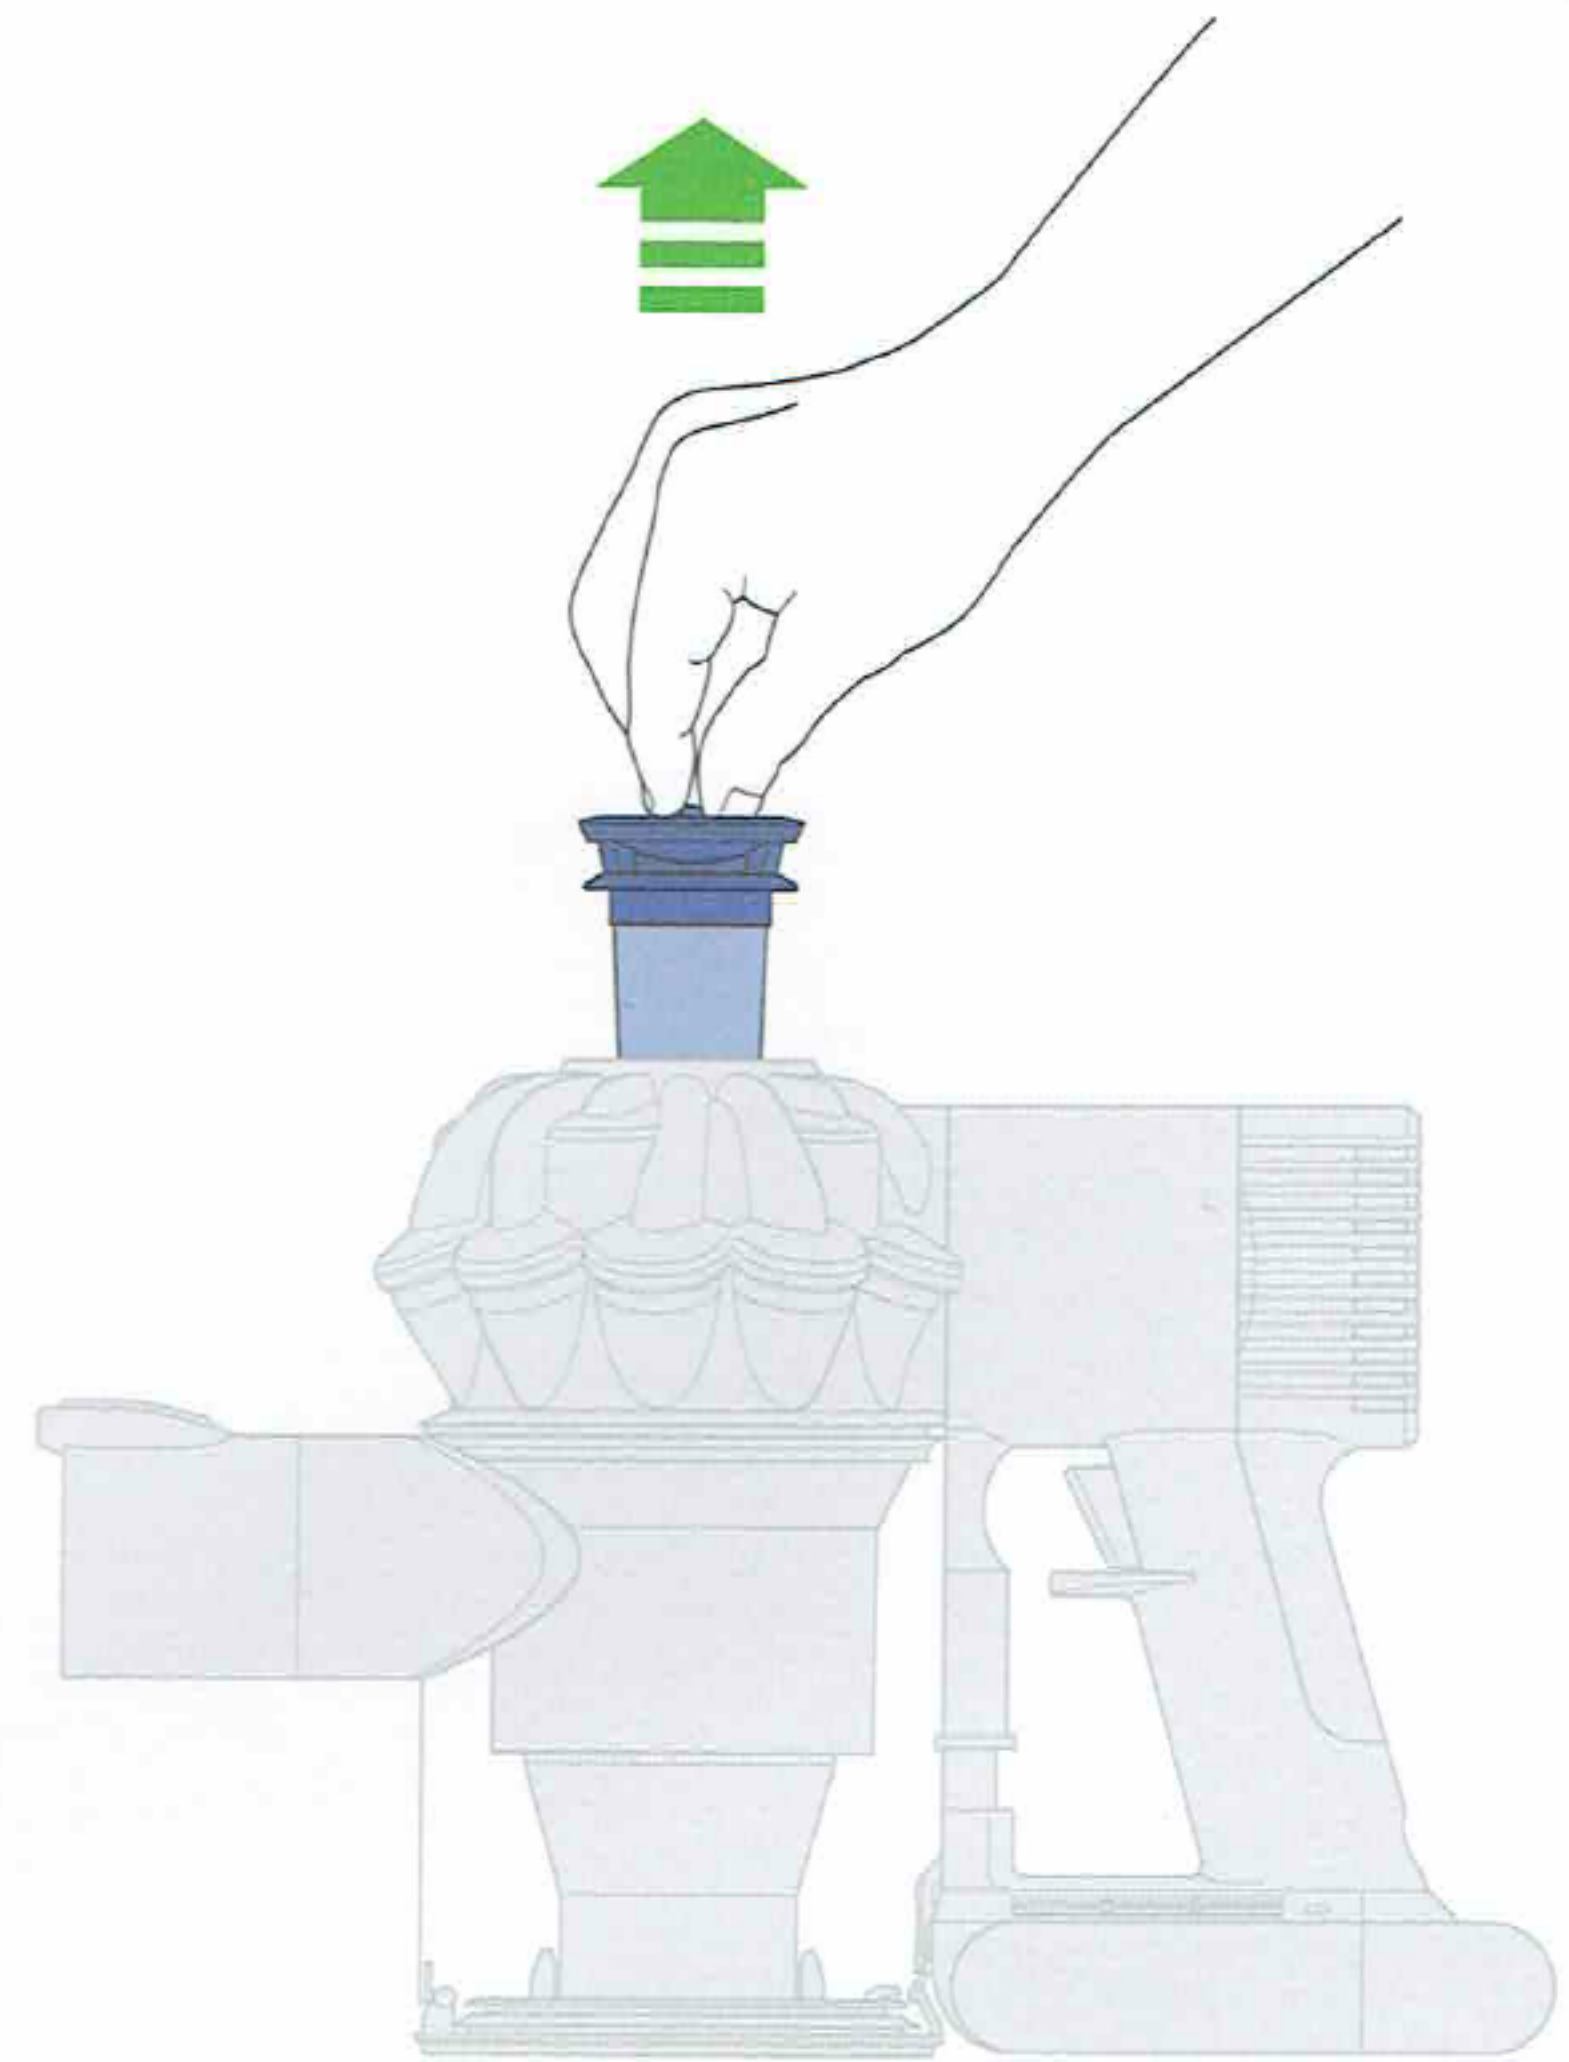

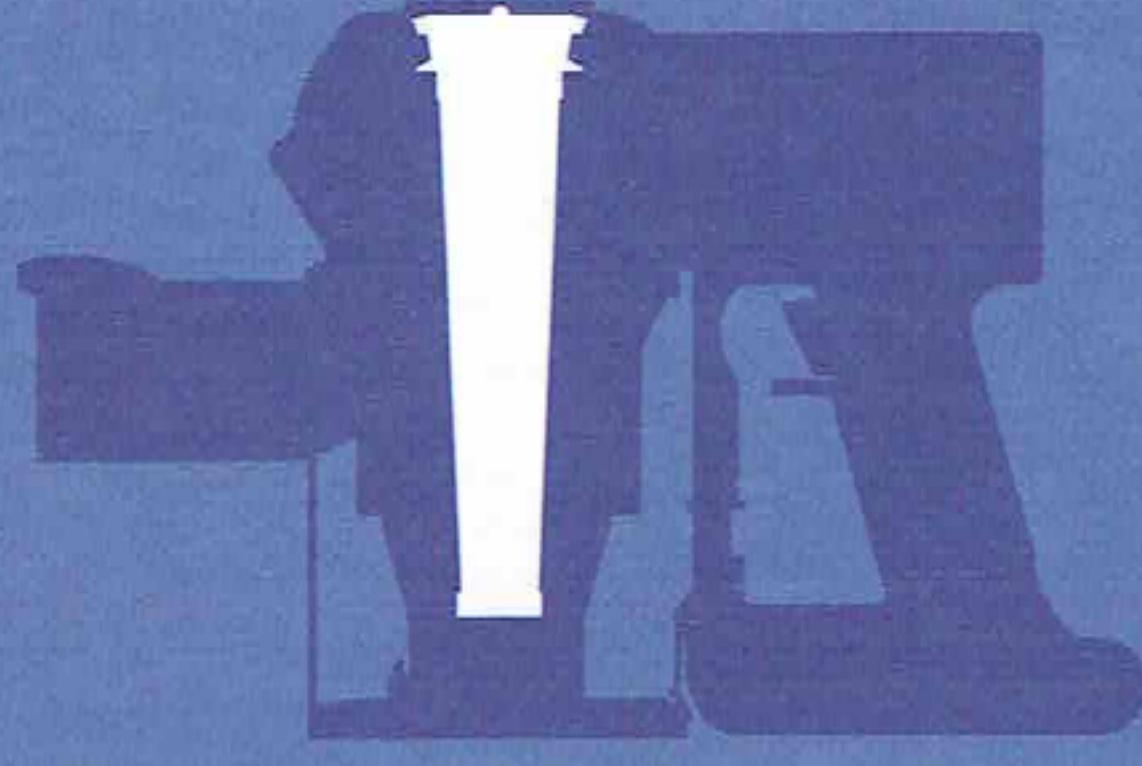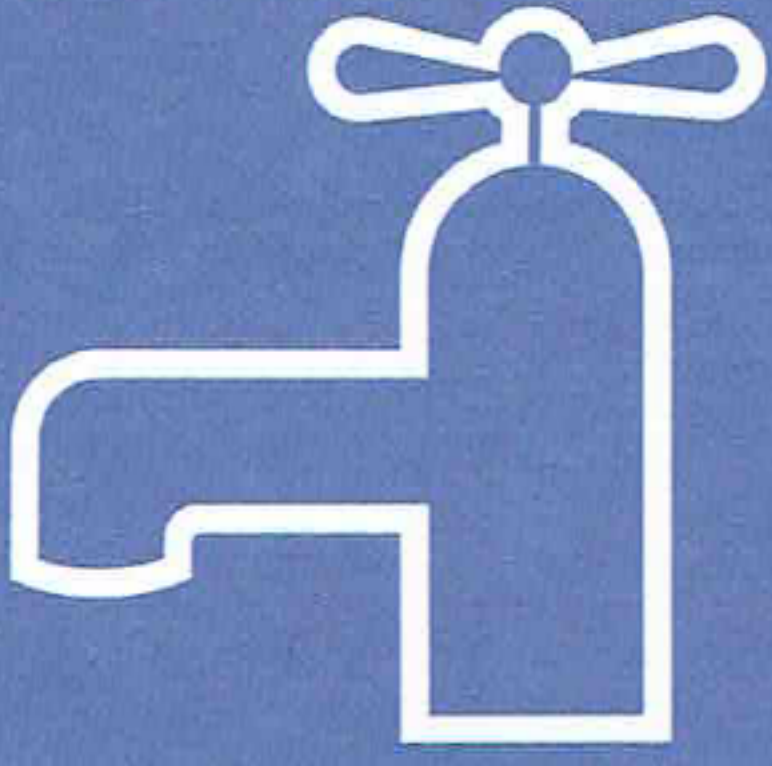

Register for a filter wash reminder by email (Australia only):

        aucustomer@dyson.com

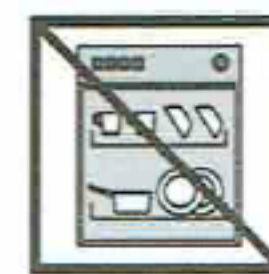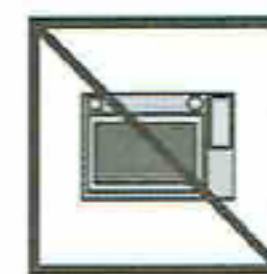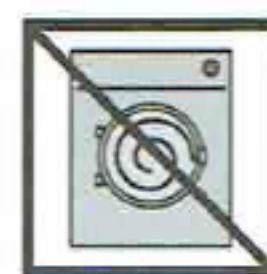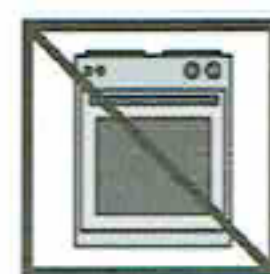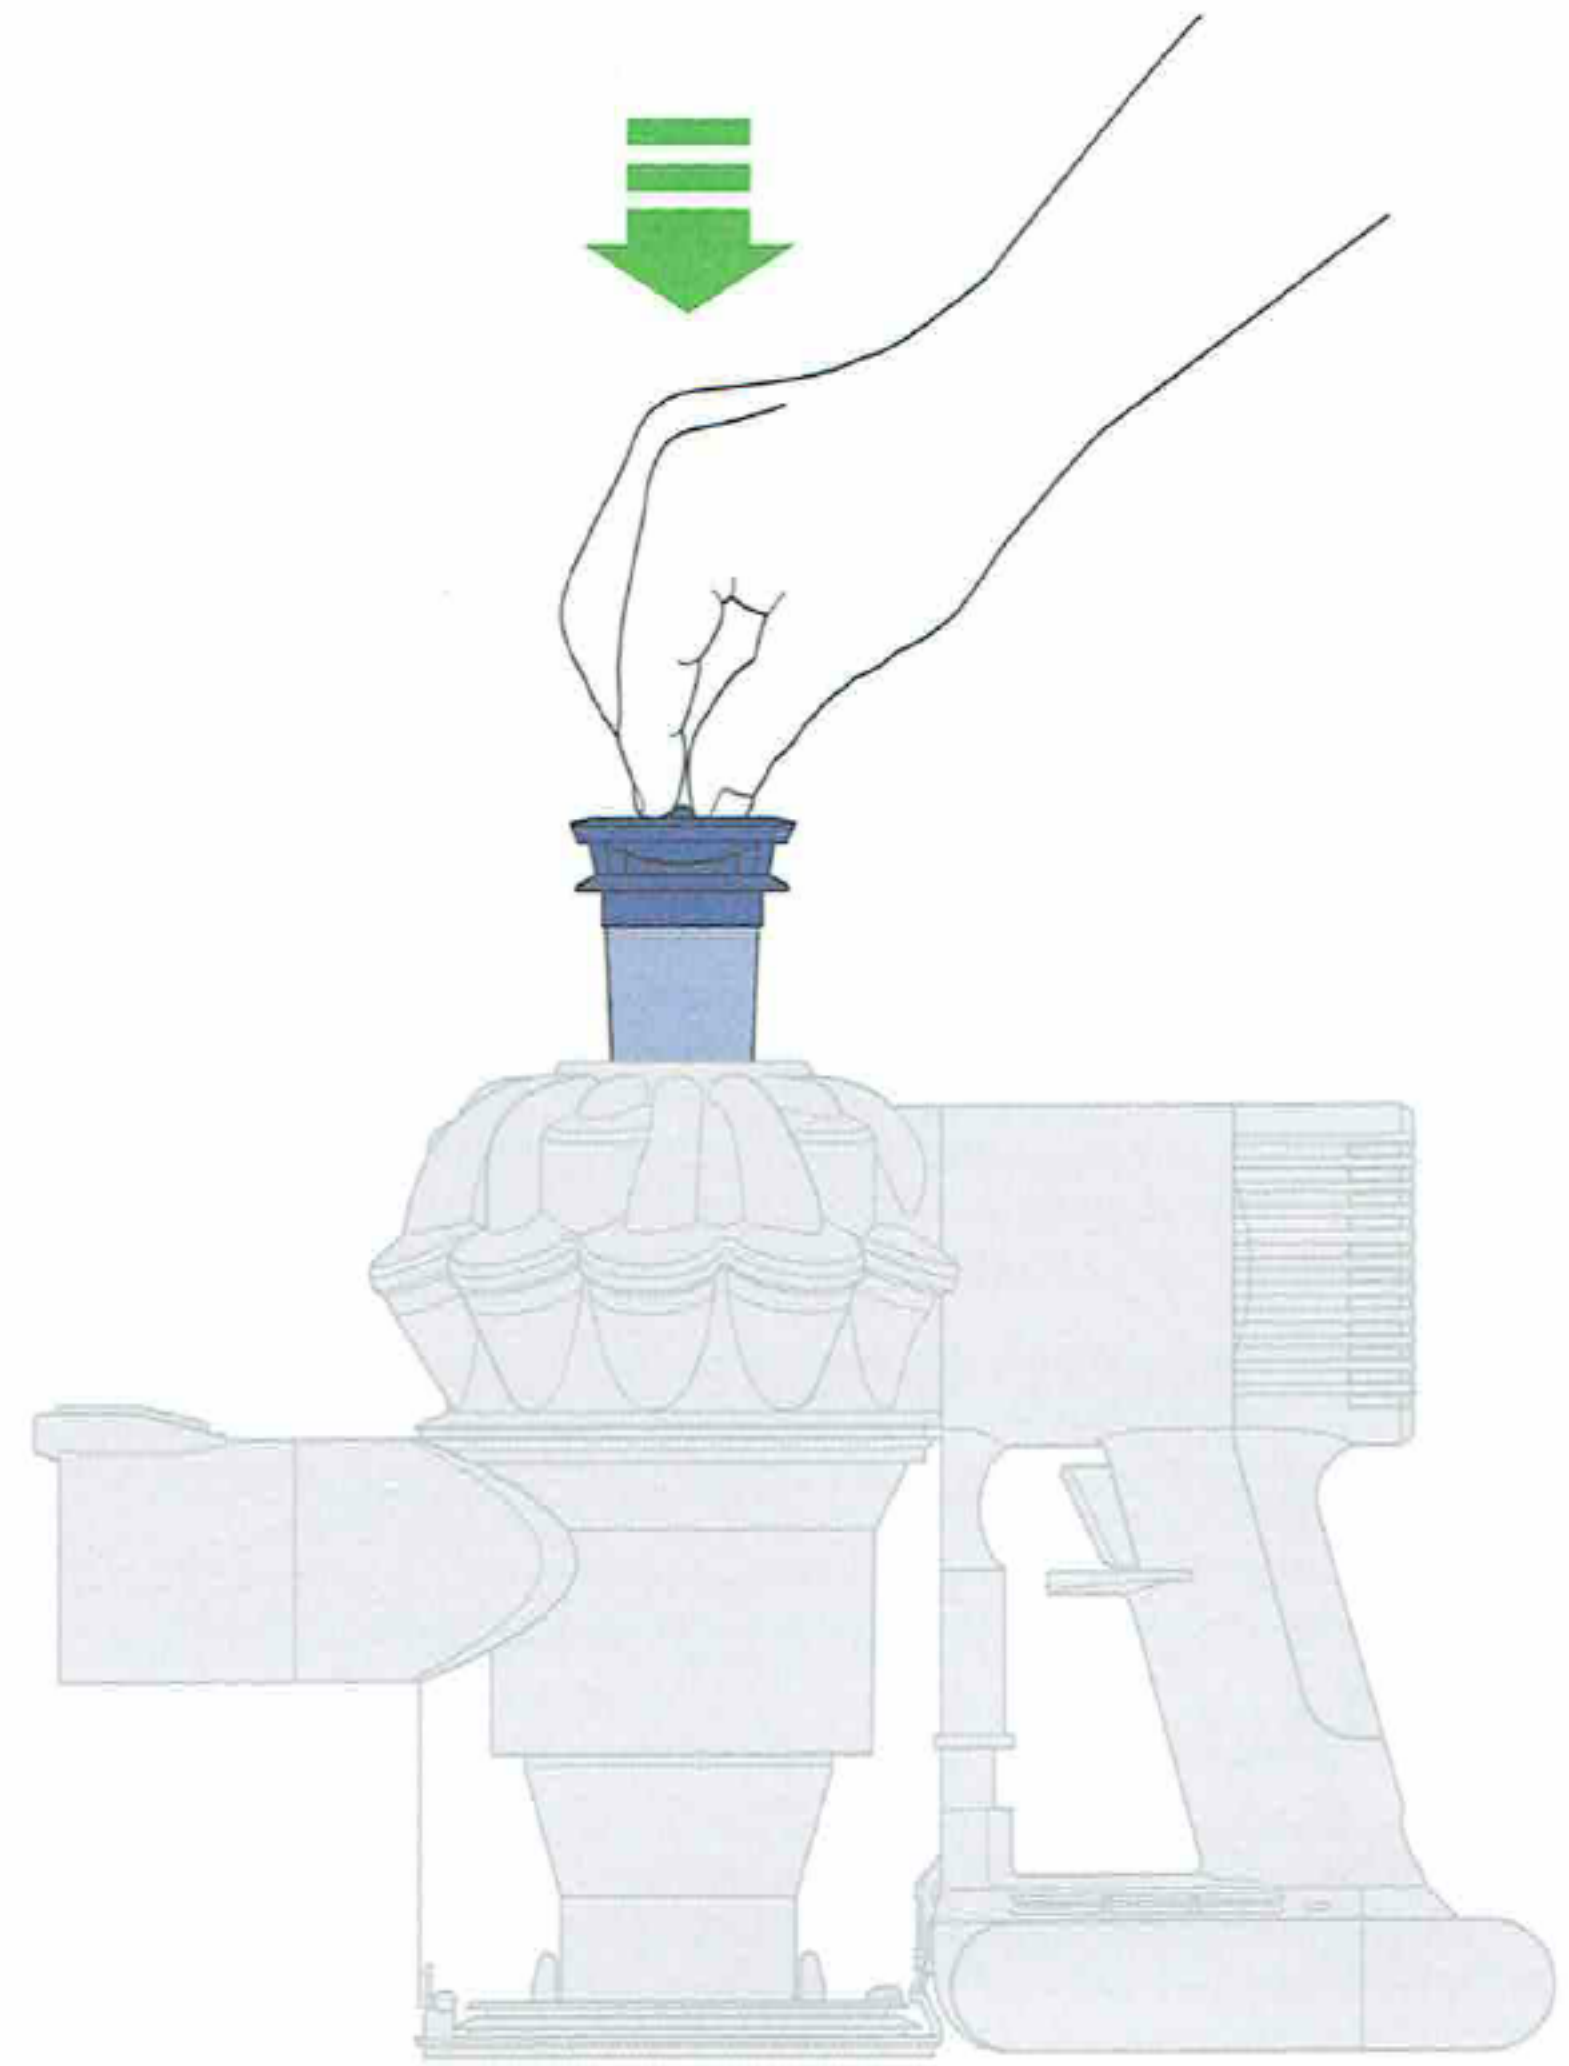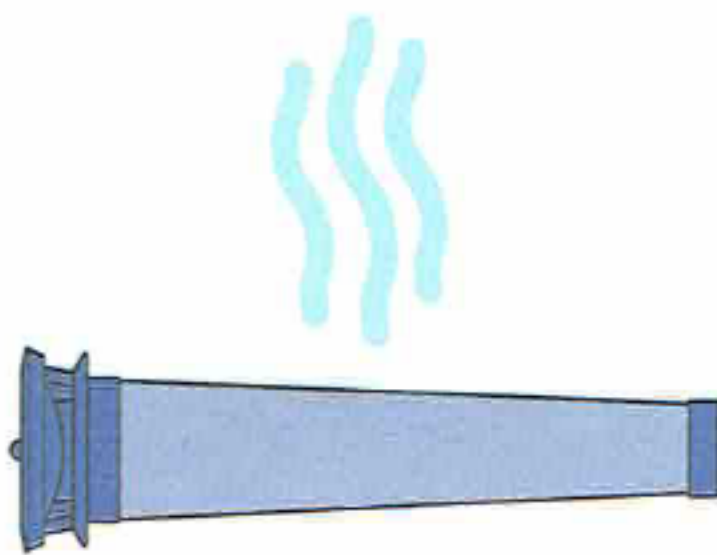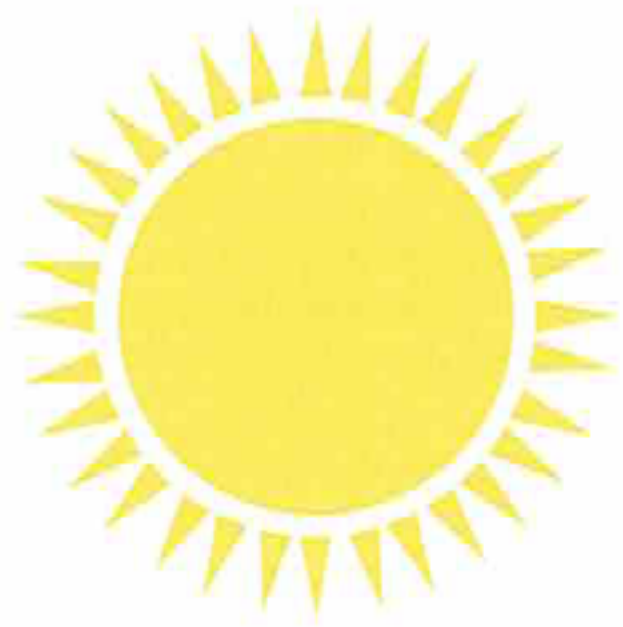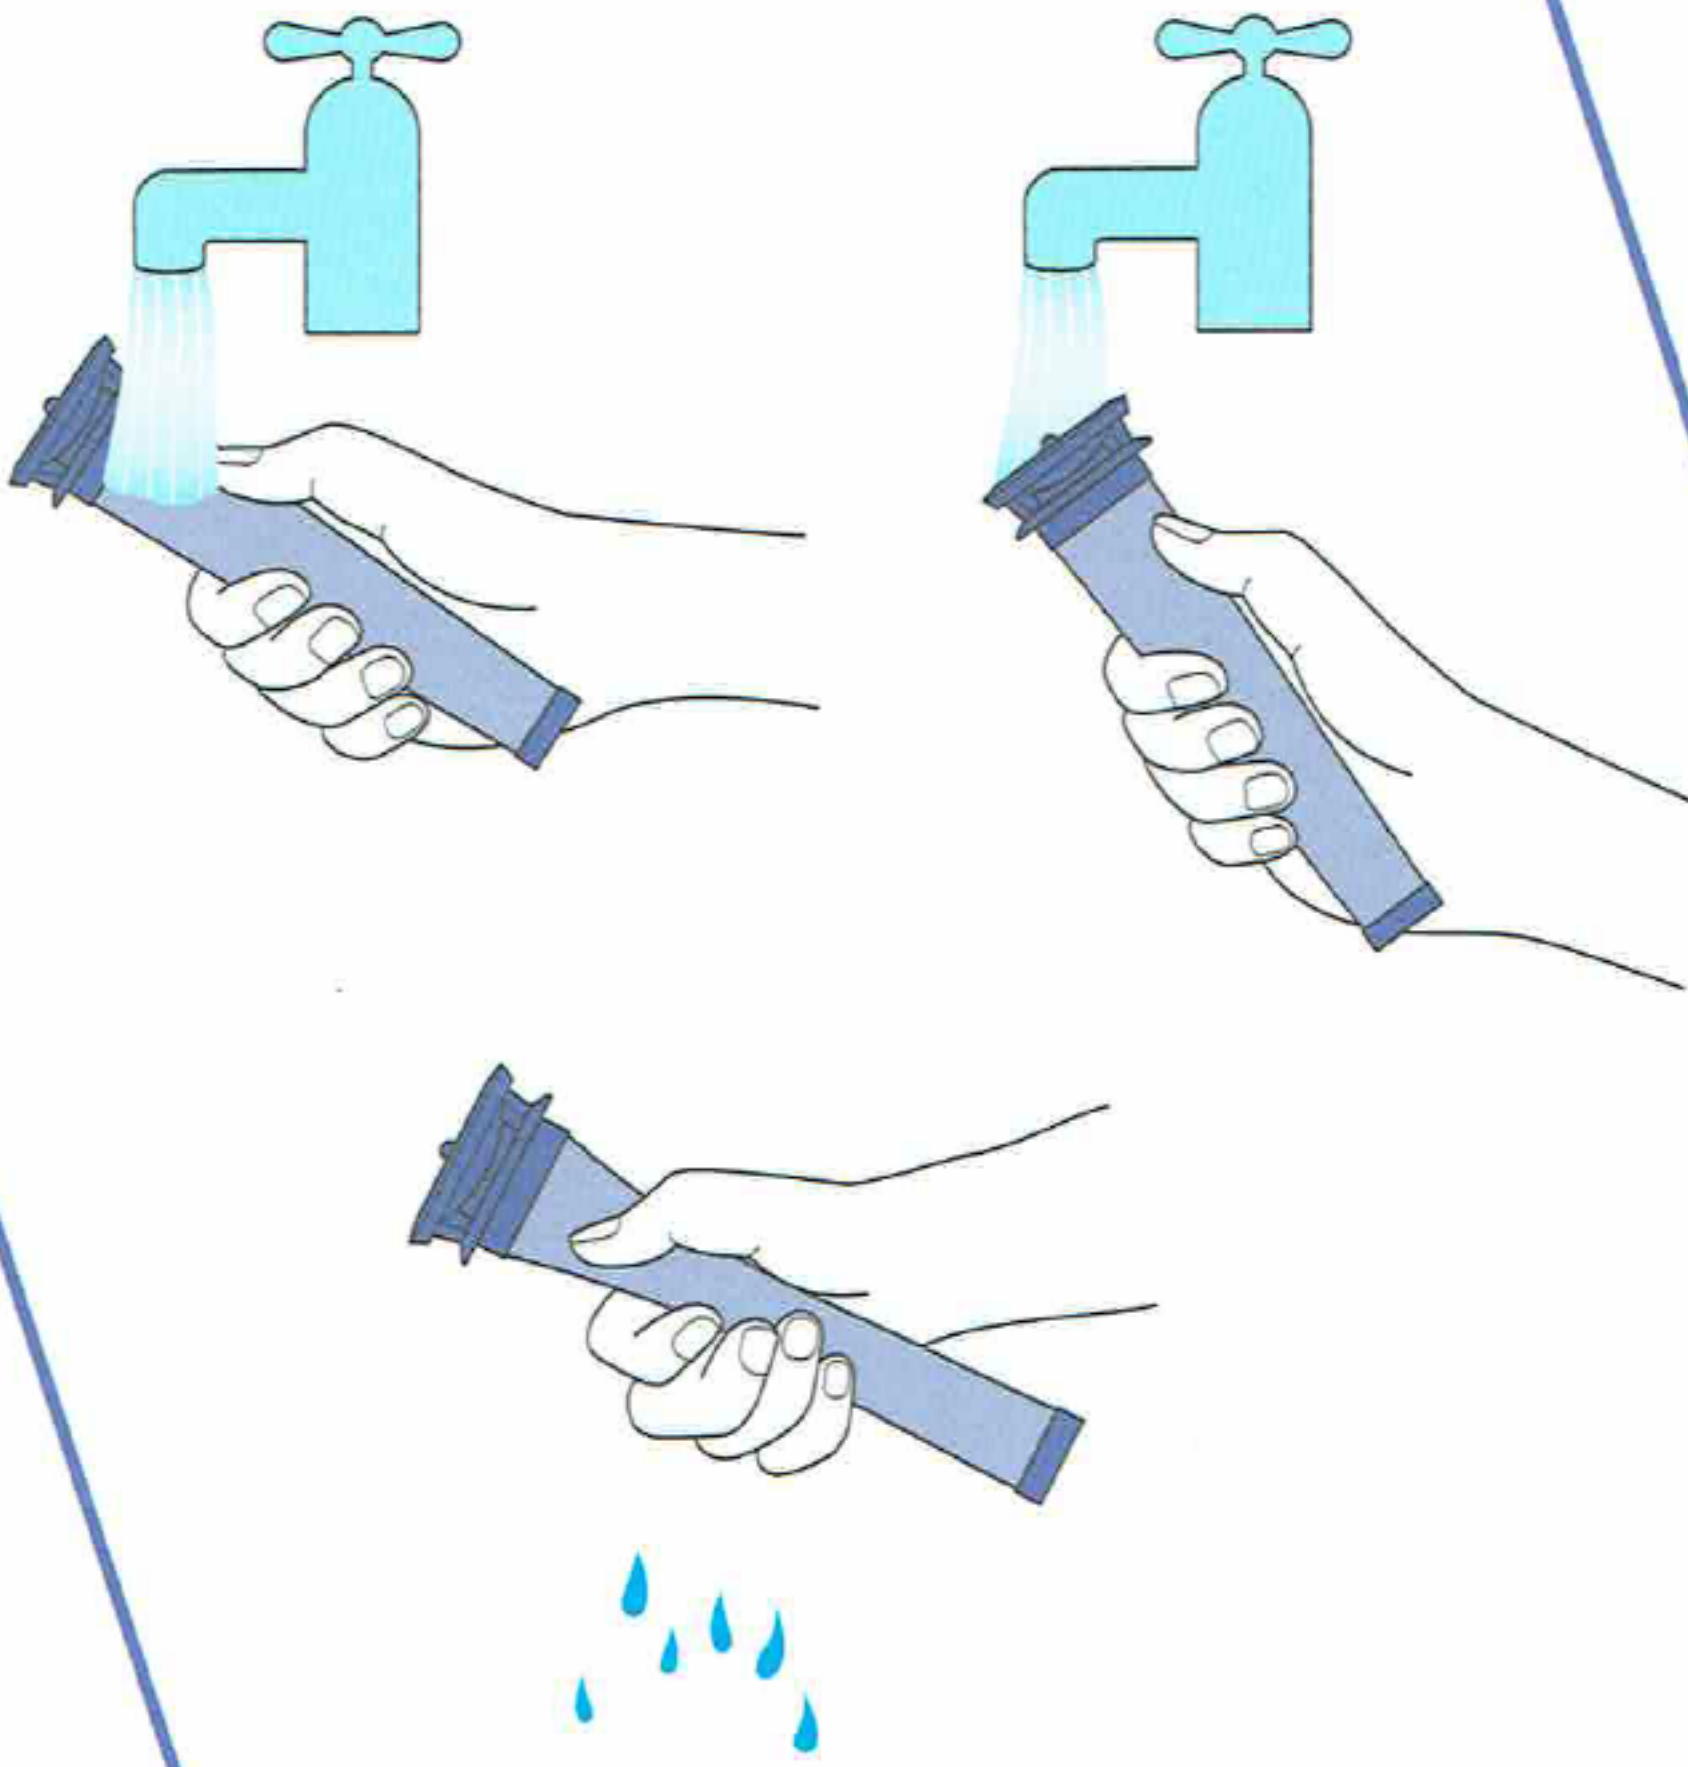

USING YOUR DYSON APPLIANCE

PLEASE READ THE 'IMPORTANT SAFETY INSTRUCTIONS' IN THIS DYSON OPERATING MANUAL BEFORE PROCEEDING.

OPERATION

- Do not use outdoors or on wet surfaces or to vacuum water or other liquids – electric shock could occur.
- Ensure the appliance remains upright in use and in storage. Dirt and debris may be released if it is turned upside down.
- Do not operate while checking for blockages.
- For domestic indoor and car use only. Do not use it whilst the car is in motion or while driving.
- To operate the MAX mode, hold the trigger down and press the MAX button. The MAX button will light up.
- To switch off MAX mode, hold the trigger down and press the MAX button again. Note: The appliance will retain the last used mode. So if you use it in MAX mode and do not disengage it, the appliance will operate in MAX mode when it is next used until you depress the MAX button to disengage it.
- This product has carbon fibre brushes. Take care if coming into contact with them, as they may cause minor skin irritation. Wash your hands after handling the brushes.
- To watch a short online video:
www.dyson.com.au/sv03gettingstarted

DOCKING STATION INSTALLATION

- Use appropriate mounting hardware for your wall type and ensure that the docking station is mounted securely. Ensure no pipe work (gas, water, air) or electrical cables, wires or ductwork are located directly behind the mounting area. The docking station must be mounted in accordance with regulations and applicable codes/standards (state and local laws may apply). Dyson recommends the use of protective clothing, eyewear and materials when installing the docking station.

CARPETS OR HARD FLOORS

- Before vacuuming your flooring, rugs and carpets, check the manufacturer's recommended cleaning instructions.
- The brush bar on the appliance can damage certain carpet types and floors. Some carpets will fuzz if a rotating brush bar is used when vacuuming. If this happens, we recommend vacuuming without the motorised floor tool and consulting with your flooring manufacturer.
- Before vacuuming highly polished floors, such as wood or lino, first check that the underside of the floor tool and its brushes are free from foreign objects that could cause marking.

LOOKING AFTER YOUR DYSON APPLIANCE





- Do not carry out any maintenance or repair work other than that shown in this Dyson Operating Manual, or advised by the Dyson Customer Care Helpline.
- Only use parts recommended by Dyson. If you do not this could invalidate your Dyson guarantee.
- Store the appliance indoors. Do not use or store it below 3°C (37.4°F). Ensure the appliance is at room temperature before operating.
- Clean the appliance only with a dry cloth. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the appliance.
- Check the brush bar regularly and clear away any debris (such as hair). Debris left on the brush bar may cause damage to flooring when vacuuming.

VACUUMING

- Do not use without the clear bin and filter in place.
- Fine dirt such as flour should only be vacuumed in very small amounts.
- Do not use the appliance to pick up sharp hard objects, small toys, pins, paper clips, etc. They may damage the appliance.
- When vacuuming, certain carpets may generate small static charges in the clear bin or wand. These are harmless and are not associated with the mains electricity supply. To minimise any effect from this, do not put your hand or insert any object into the clear bin unless you have first emptied it. Clean the clear bin with a damp cloth only. (See 'Cleaning the clear bin'.)
- Use extra care when cleaning on stairs.
- Do not rest the appliance on chairs, tables, etc.
- Do not press down on the nozzle with excessive force when using the appliance as this may cause damage.
- Do not leave the cleaner head in one place on delicate floors.
- On waxed floors the movement of the cleaner head may create an uneven lustre. If this happens, wipe with a damp cloth, polish the area with wax, and wait for it to dry.

DIAGNOSTICS - MAIN BODY

When in use, trigger pressed:

-  Solid blue: Max 'ON'.
-  Light off: powerful suction.
-  Flashing blue: Low battery warning.
-  Fast flashing blue: No power, temporary fault (e.g. check filter or for blockages).

EMPTYING THE CLEAR BIN

- Empty as soon as the dirt reaches the level of the MAX mark – do not overfill.
- Ensure the appliance is disconnected from the charger before emptying the clear bin. Be careful not to pull the 'ON' trigger.
- To make emptying the clear bin easier, it is advisable to remove the wand and floor tool.
- To release the dirt, push the red button by the clear bin: Press once to open the bin base. Press a second time to release the clear bin from the main body of the appliance.
- To minimise dust/allergen contact when emptying, encase the clear bin tightly in a plastic bag and empty.
- Remove the clear bin carefully from the bag.
- Seal the bag tightly, dispose as normal.
- Close the clear bin base so it clicks into place and is secure.

CLEANING THE CLEAR BIN

- Ensure the appliance is disconnected from the charger before removing the clear bin. Be careful not to pull the 'ON' trigger.
- Remove the wand and floor tool.
- Push the red button by the clear bin: Press once to open the bin base. Press a second time to release the clear bin from the main body of the appliance.
- Remove the clear bin carefully.
- Clean the clear bin with a damp cloth only.
- Do not use detergents, polishes or air fresheners to clean the clear bin.
- Do not put the clear bin in a dishwasher.
- Clean the cyclone shroud with the brush on the combination tool to remove lint and dust.
- Ensure the clear bin is completely dry before replacing.
- To replace the clear bin, push the clear bin up and in to the main body of the appliance. It will click into place.
- Close the clear bin base so it clicks into place and is secure.

WASHING YOUR FILTER

- Ensure the appliance is disconnected from the charger before removing the filter. Be careful not to pull the 'ON' trigger.
- Your appliance has one washable filter, located as shown.
- To remove the filter, lift it out of the top of the appliance.
- Check and wash the filter regularly according to instructions to maintain performance.
- The filter may require more frequent washing if vacuuming fine dust or if used mainly in 'Powerful suction' mode.
- Wash the filter with cold water only.
- Run water over the outside of the filter until the water runs clear.
- Squeeze and twist with both hands to make sure the excess water is removed.
- Lay the filter on its side to dry. Leave to dry completely for a minimum of 24 hours.
- Do not put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near a naked flame.
- To refit, place the dry filter back into the top of the appliance. Make sure it is fitted properly.
- To watch a short online video:
www.dyson.com.au/sv03filterwash

LOOKING FOR BLOCKAGES

- Ensure the appliance is disconnected from the charger before looking for blockages. Be careful not to pull the 'ON' trigger.
- Do not operate while checking for blockages. Failure to do so could result in personal injury.
- Beware of sharp objects when checking for blockages.
- To gain access to blockages in the floor tool, remove the base plate by using a coin to loosen the screw marked with a padlock.
- If you cannot clear an obstruction you may need to remove the brush bar. Use a coin to unlock the fastener marked with a padlock. Remove the obstruction. Replace the brush bar and secure it by tightening the fastener. Ensure it is fixed firmly before operating the appliance.
- This product has carbon fibre brushes. Take care if coming into contact with them, as they may cause minor skin irritation. Wash your hands after handling the brushes.
- Refit all parts securely before using.
- Clearing blockages is not covered by your Dyson guarantee.

BLOCKAGES – AUTOMATIC CUT-OUT






- This appliance is fitted with an automatic cut-out.
- If any part becomes blocked the appliance may automatically cut out.
- This will happen after the motor pulses a number of times (i.e. switches on and off in quick succession).
- Leave to cool down before looking for blockages.
- Ensure the appliance is disconnected from the charger before looking for blockages. Failure to do so could result in personal injury.
- Clear any blockage before restarting.
- Refit all parts securely before using.
- Clearing blockages is not covered by your Dyson guarantee.

CHARGING AND STORING






- This appliance will switch 'OFF' if the battery temperature is below 3°C (37.4°F). This is designed to protect the motor and battery. Do not charge the appliance and then move it to an area with a temperature below 3°C (37.4°F) for storage purposes.
- To help prolong battery life, avoid recharging immediately after a full discharge. Allow to cool for a few minutes.
- Avoid using the appliance with the battery flush to a surface. This will help it run cooler and prolong battery run time and life.

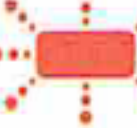DIAGNOSTICS – BATTERY

When in use, trigger pressed:

-  Solid blue: On.
-  Flashing blue: No power, charge battery.
-  Flashing amber: No power, temporary fault (e.g. too hot/cold).
-  Solid amber: Fault (contact Dyson helpline).
-  Flashing red: Fault (ring Dyson Customer Care Helpline).

When charging battery:

-  Solid blue: Charging.
-  Flashing blue - Not charging - Re-fit charger or try another socket. If persists, contact helpline.
-  Lights off: Charging complete.
-  Solid amber: Not charging, temporary fault (e.g. too hot/cold).
-  Flashing red: Fault (ring Dyson Customer Care Helpline).

BATTERY SAFETY INSTRUCTIONS

- If the battery needs replacing please contact the Dyson Customer Care Helpline.
- Use only Dyson chargers for charging this Dyson appliance.
- The battery is a sealed unit and under normal circumstances poses no safety concerns. In the unlikely event that liquid leaks from the battery do not touch the liquid and observe the following precautions:
 - Skin contact – can cause irritation. Wash with soap and water.
 - Inhalation – can cause respiratory irritation. Expose to fresh air and seek medical advice.
 - Eye contact – can cause irritation. Immediately flush eyes thoroughly with water for at least 15 minutes. Seek medical attention.
 - Disposal – wear gloves to handle the battery and dispose of immediately, following local ordinances or regulations.

CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contacts, heat above 60°C (140°F), or incinerate. Keep away from children. Do not disassemble and do not dispose of in fire.

AUSTRALIAN CONSUMER LAW

The details of the Dyson guarantee are set out below. In addition to your rights under the Dyson guarantee, we also provide the following statement as required by the Australian Consumer Law: In Australia, your Dyson appliance comes with statutory guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have your Dyson appliance repaired or replaced if it fails to be of acceptable quality and the failure does not amount to a major failure.

DYSON 2 YEAR GUARANTEE

TERMS AND CONDITIONS OF YOUR DYSON 2 YEAR GUARANTEE.

- The Dyson guarantee becomes effective from the date of purchase.
- All work will be carried out by Dyson Appliances (Aust) Pty Ltd., Avery Robinson Ltd. (NZ) or their authorised agents.
- Any parts replaced by Dyson or its service agents will become the property of Dyson Appliances (Aust) Pty Ltd. or Avery Robinson Ltd. (NZ).
- The repair or replacement of your Dyson appliance under the Dyson guarantee will not extend the period of the Dyson guarantee.
- The Dyson guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson appliance. Without this proof, any work carried out pursuant to the Dyson guarantee and any associated delivery charges (both to and from us) will be at your cost, subject to your statutory rights and remedies as a consumer. Please keep your receipt or delivery note.

WHAT IS COVERED

Your Dyson guarantee covers:

- The repair or replacement of your Dyson appliance if your Dyson appliance is found to be defective due to faulty materials, workmanship or function within 2 years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This Dyson guarantee will only be valid if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED

Under your Dyson guarantee, Dyson shall not be liable for costs of repair or replacement of a product incurred as a result of:

- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Dyson appliance which is not in accordance with this Dyson Operating Manual.
- Use of the Dyson appliance for anything other than normal domestic purposes in the country of purchase.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories other than those produced or recommended by Dyson.
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Damage from external sources such as transit, weather, electrical outages or power surges.
- Failures caused by circumstances outside Dyson's control.
- Blockages – please refer to the illustrations and the section 'Looking for Blockages' in this Dyson Operating Manual for details of how to look for and clear blockages.
- Normal wear and tear (e.g. fuse, brush bar etc.).
- Use of this appliance on rubble, ash, plaster.
- Reduction in battery discharge time due to battery age or use (cordless machines only).
- If your Dyson guarantee does not apply, you may have statutory rights and remedies available to you as a consumer.
- If your Dyson guarantee does not apply, you may have statutory rights and remedies available to you as a consumer. If you are in any doubt as to what is covered by your Dyson guarantee, please call the Dyson Customer Care Helpline.

REGISTERING YOUR DYSON GUARANTEE

To help us ensure you receive prompt and efficient service, please register as a Dyson appliance owner. There are three ways to do this:

- Online:
 - AU: www.dyson.com.au/register
 - NZ: www.dyson.co.nz/register
 - By calling the Dyson Customer Care Helpline.
 - By completing and returning the enclosed form to us by mail.
- This will confirm ownership of your Dyson appliance in the event of an insurance loss, and enable us to contact you if necessary.

DYSON CUSTOMER CARE

Your Dyson appliance will be covered for parts and labour for 2 years from the date of purchase, as detailed in the terms of the Dyson guarantee in this Dyson Operating Manual.

If you have a query about your Dyson appliance, call the Dyson Customer Care Helpline quoting your serial number and details of where and when you bought the appliance. Alternatively, contact us via the website.

- Most queries can be solved over the phone by one of our Dyson Customer Care Helpline staff.
- If your Dyson appliance needs a service, call the Dyson Customer Care Helpline so we can discuss the available options.
- Your serial number can be found on your rating plate. For information on your rating plate see the inside front cover.
- To enable us to carry out work on your appliance, please contact the Dyson Customer Care Helpline to obtain a reply paid delivery address in your state (available in Australia only).

If your Dyson appliance is under Dyson guarantee and the repair or replacement is covered, it will be repaired or replaced at no cost. If the repair or replacement is found not to be covered under the Dyson guarantee, the repair or replacement of the Dyson appliance and any associated delivery charges (both to and from us) will be at your cost, subject to your statutory rights and remedies as a consumer.

ABOUT YOUR PRIVACY

- Dyson may use this information for future marketing and research purposes (including sending commercial electronic messages) and may disclose it to third parties for the purposes of providing the services you have requested or to our business partners or professional advisers.
- If you wish to access your personal information or see our full privacy policy, please contact us at: aucustomer@dyson.com

DISPOSAL INFORMATION

Dyson products are made from high grade recyclable materials. Please dispose of this product responsibly and recycle where possible. The battery should be removed from the product before disposal. Dispose of or recycle the battery in accordance with local ordinances or regulations.

When your Dyson appliance reaches the end of its life, we are responsible for its safe disposal. You can send your old Dyson appliance back to us (at our cost) and we will organise for it to be recycled. Please note that not all parts are recyclable. Recycling of parts is subject to the capabilities of 3rd party suppliers. Available in Australia only.

Simply:

1. Box up your old Dyson appliance.
2. Take the package to your local post office and send to the address below:

Dyson We Recycle
Reply Paid 83215
Dyson Service Centre
8-10 Mangrove Lane
Taren Point, NSW 2229

 
 
PRODUCT INFORMATION

Please note: Small details may vary from those shown.

IMPORTANT!

WASH FILTER

Wash filter with cold water regularly or as required.

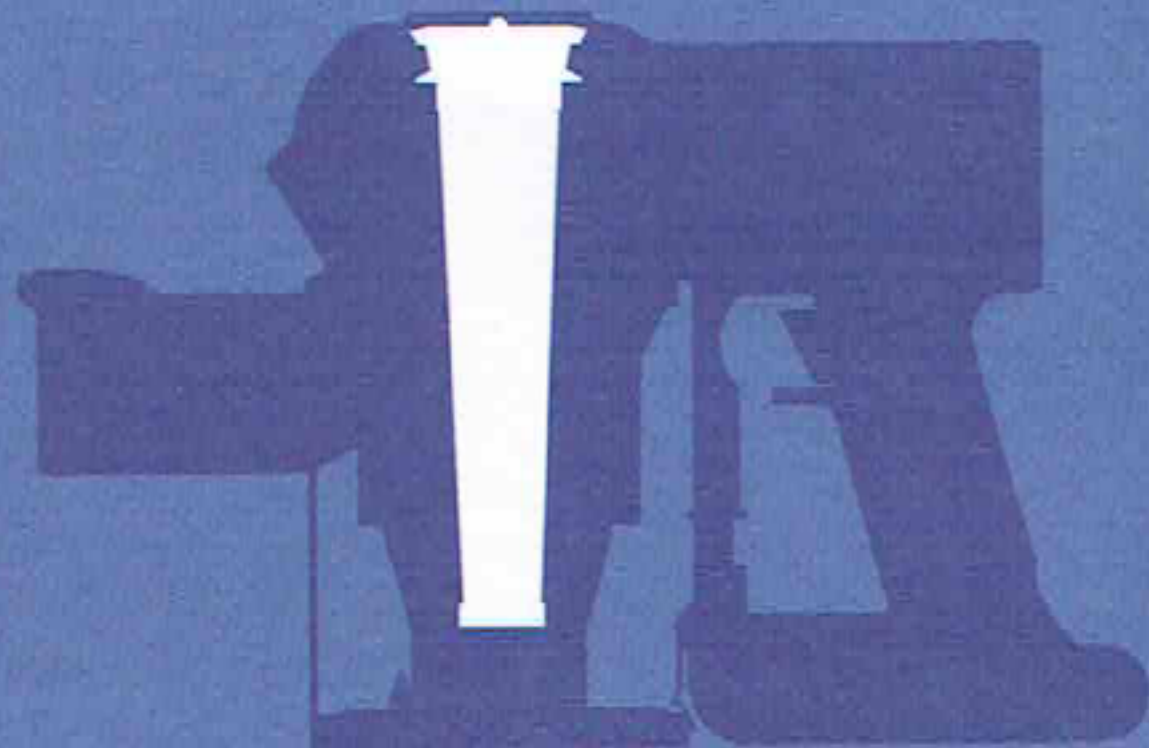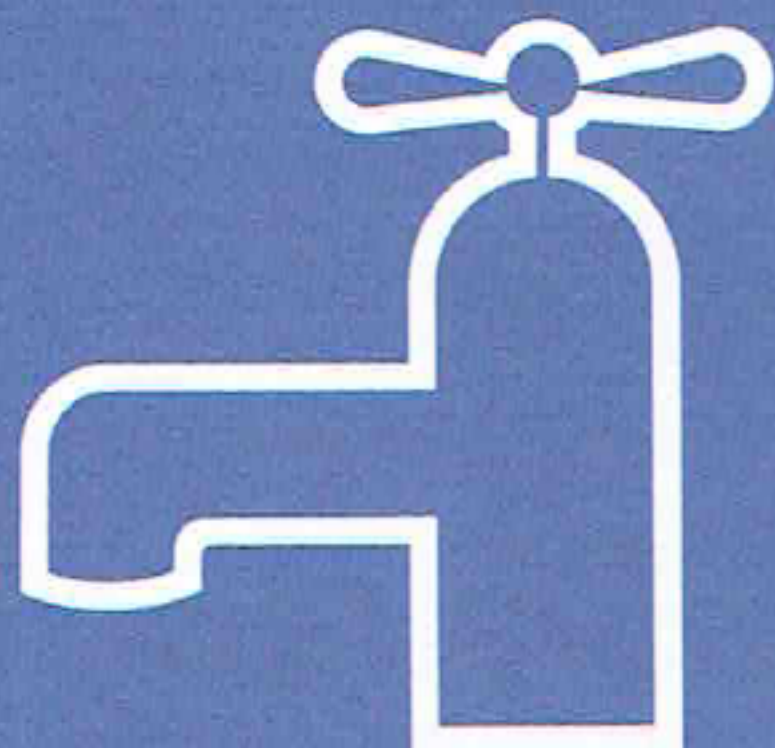

Register for a filter wash reminder by email (Australia only):
aucustomer@dyson.com



DYSON CUSTOMER CARE

Your Dyson appliance will be covered for parts and labour for 2 years from the date of purchase, as detailed in the terms of the Dyson guarantee in this Dyson Operating Manual.

If you have a query about your Dyson appliance, call the Dyson Customer Care Helpline quoting your serial number and details of where and when you bought the appliance. Alternatively, contact us via the website.

Most queries can be solved over the phone by one of our Dyson Customer Care Helpline staff.

DYSON CUSTOMER CARE

Australia

Website: www.dyson.com.au

Email: aucustomer@dyson.com

Dyson Customer Care: 1800 239 766

(Mon-Fri 8:00am to 6:00pm EST,

Sat-Sun 8:30am to 4:00pm EST).

Address: Dyson Appliances (Aust) Pty Ltd.,
PO Box 2835, Taren Point, NSW 2229 Australia.

New Zealand

Website: www.dyson.co.nz

 
Email: dyson@averyrobinson.co.nz

Dyson Customer Care: 0800 397 667




(Mon-Fri 8:30am to 5:00pm).



Address: Avery Robinson Ltd., Unit F, 151D Marua Road,
Ellerslie, Auckland, 1051 New Zealand.

1

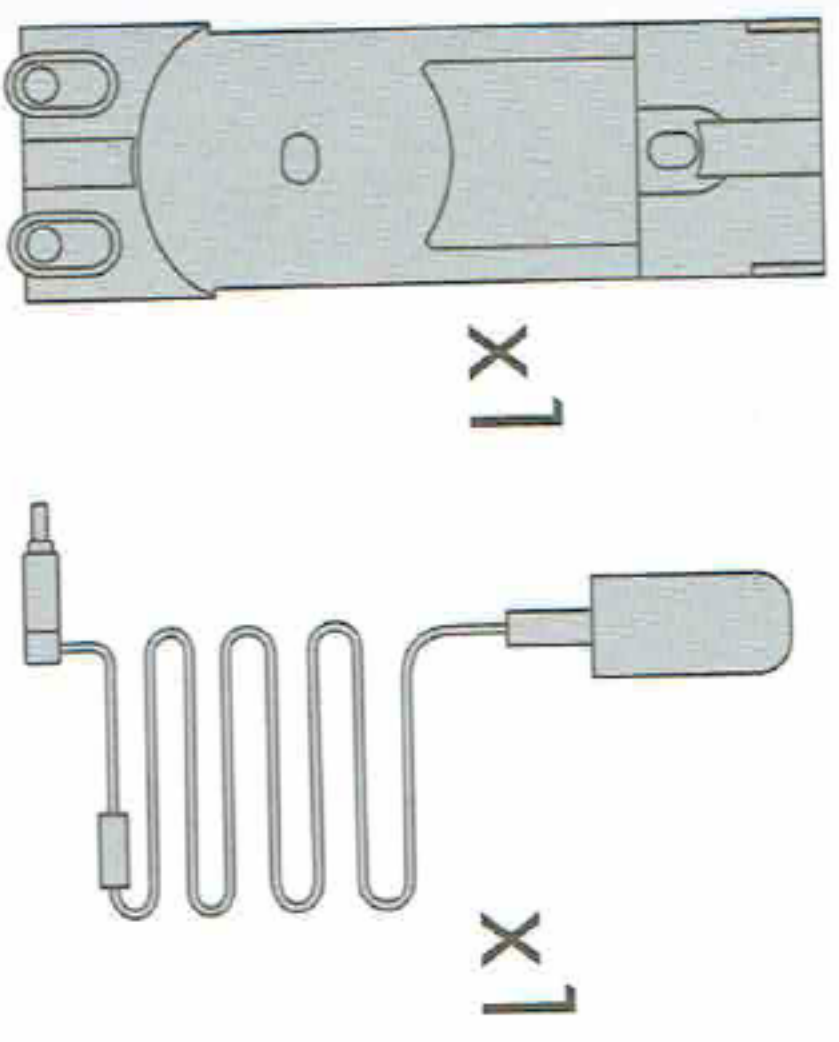

EN Wall fixings for docking station not included.
CA Les fixations murales pour la station d'accueil ne sont pas incluses.
CN 不包括牆充基座的牆上安裝配件。
CZ Materiál pro upevnění dokovací stanice na stěnu není součástí.
DE Wandbefestigung für die Dockingstation nicht mitgeliefert.
DK Vægbeslag til docking-station medfølger ikke.
ES Los elementos para la fijación de la base no están incluidos.
FI Seinäkiinnitys ei sisälly telokantaseman toimitukseen.
FR Fixations murales pour la station de rangement non incluses.
GR Τα ελαστικά στερέωσης για την εγκατάσταση βάζον δεν περιλαμβάνονται.
HU A csomag nem tartalmaz falra rögzítőelemeket a tartószeleghöz.
ID Penempatan di dinding untuk stasiun dok tidak termasuk. IL
IT Fissaggi a muro per stazione di riposo non inclusi.
JP 吸別用ブラケット用のネジ等は、同梱されておられません。
KR 도킹 스테이션 벽 고정 부품은 포함되어 있지 않습니다.

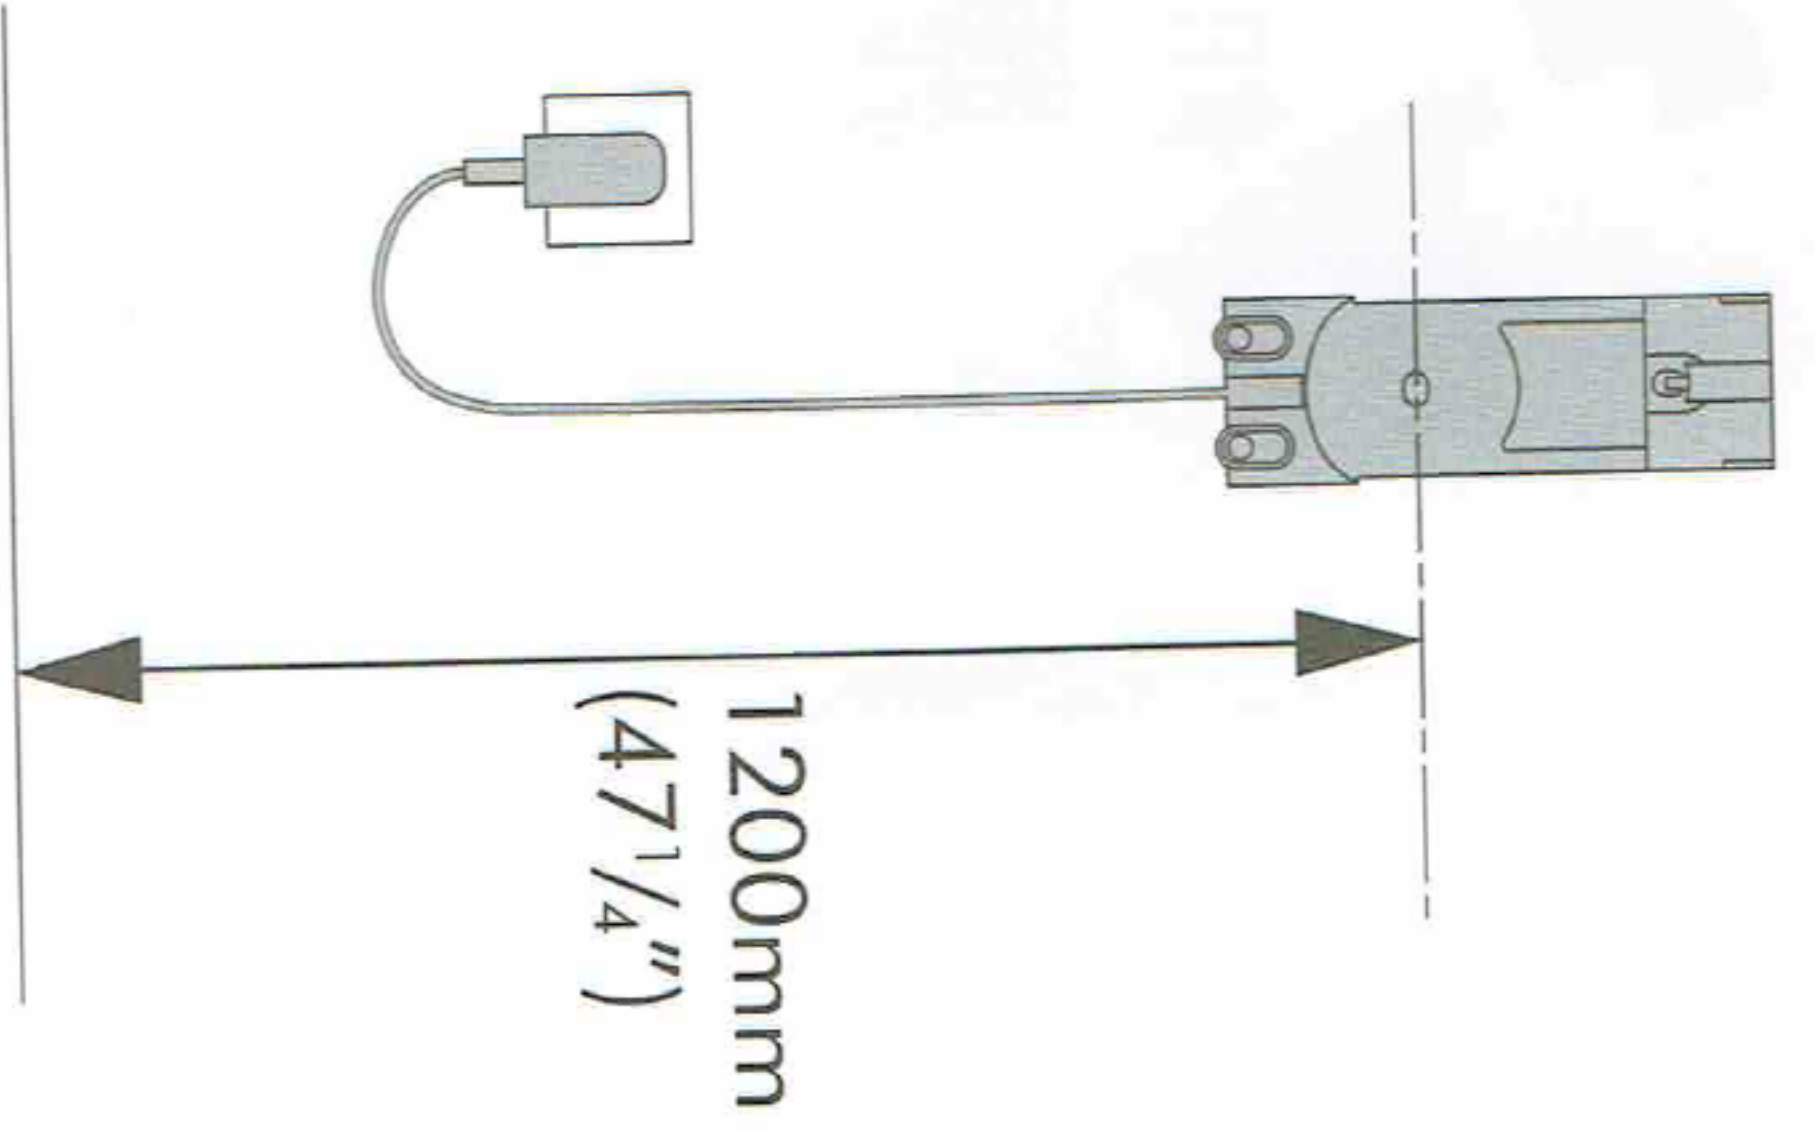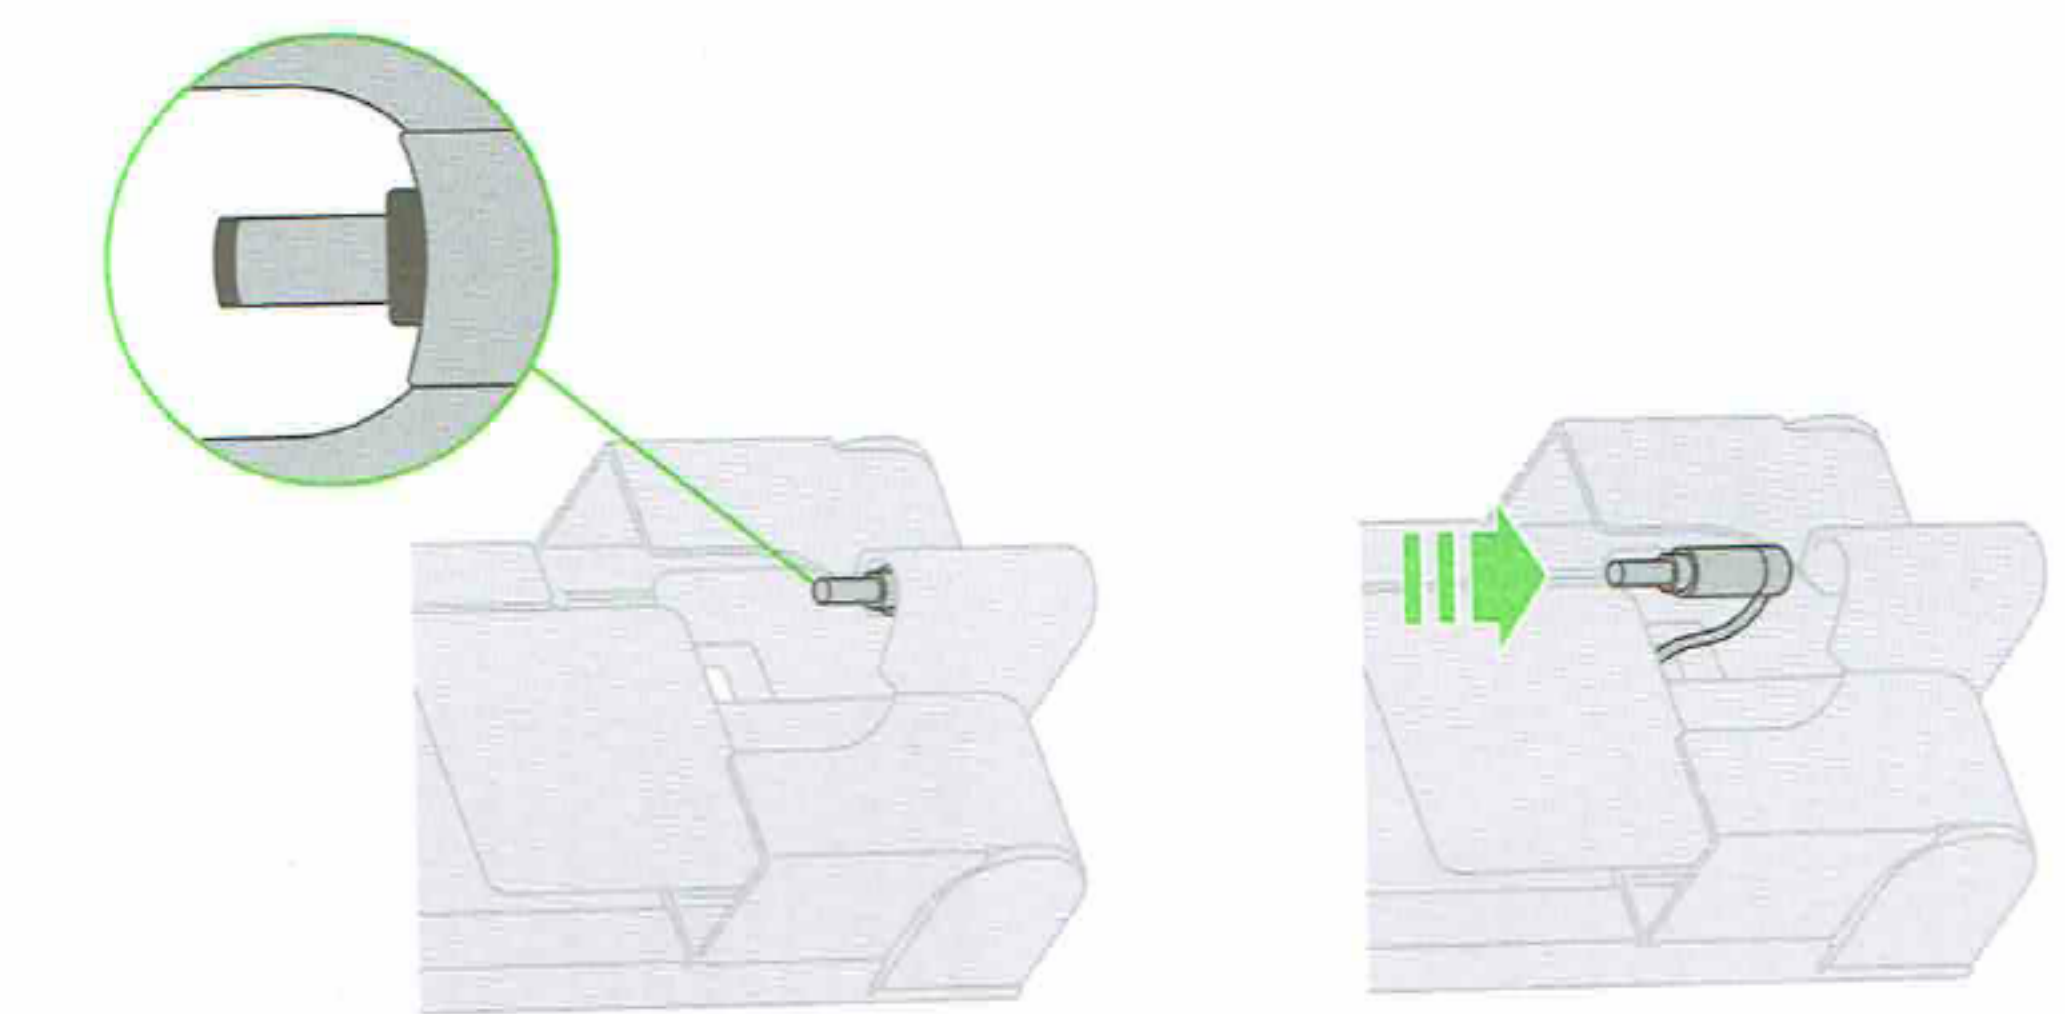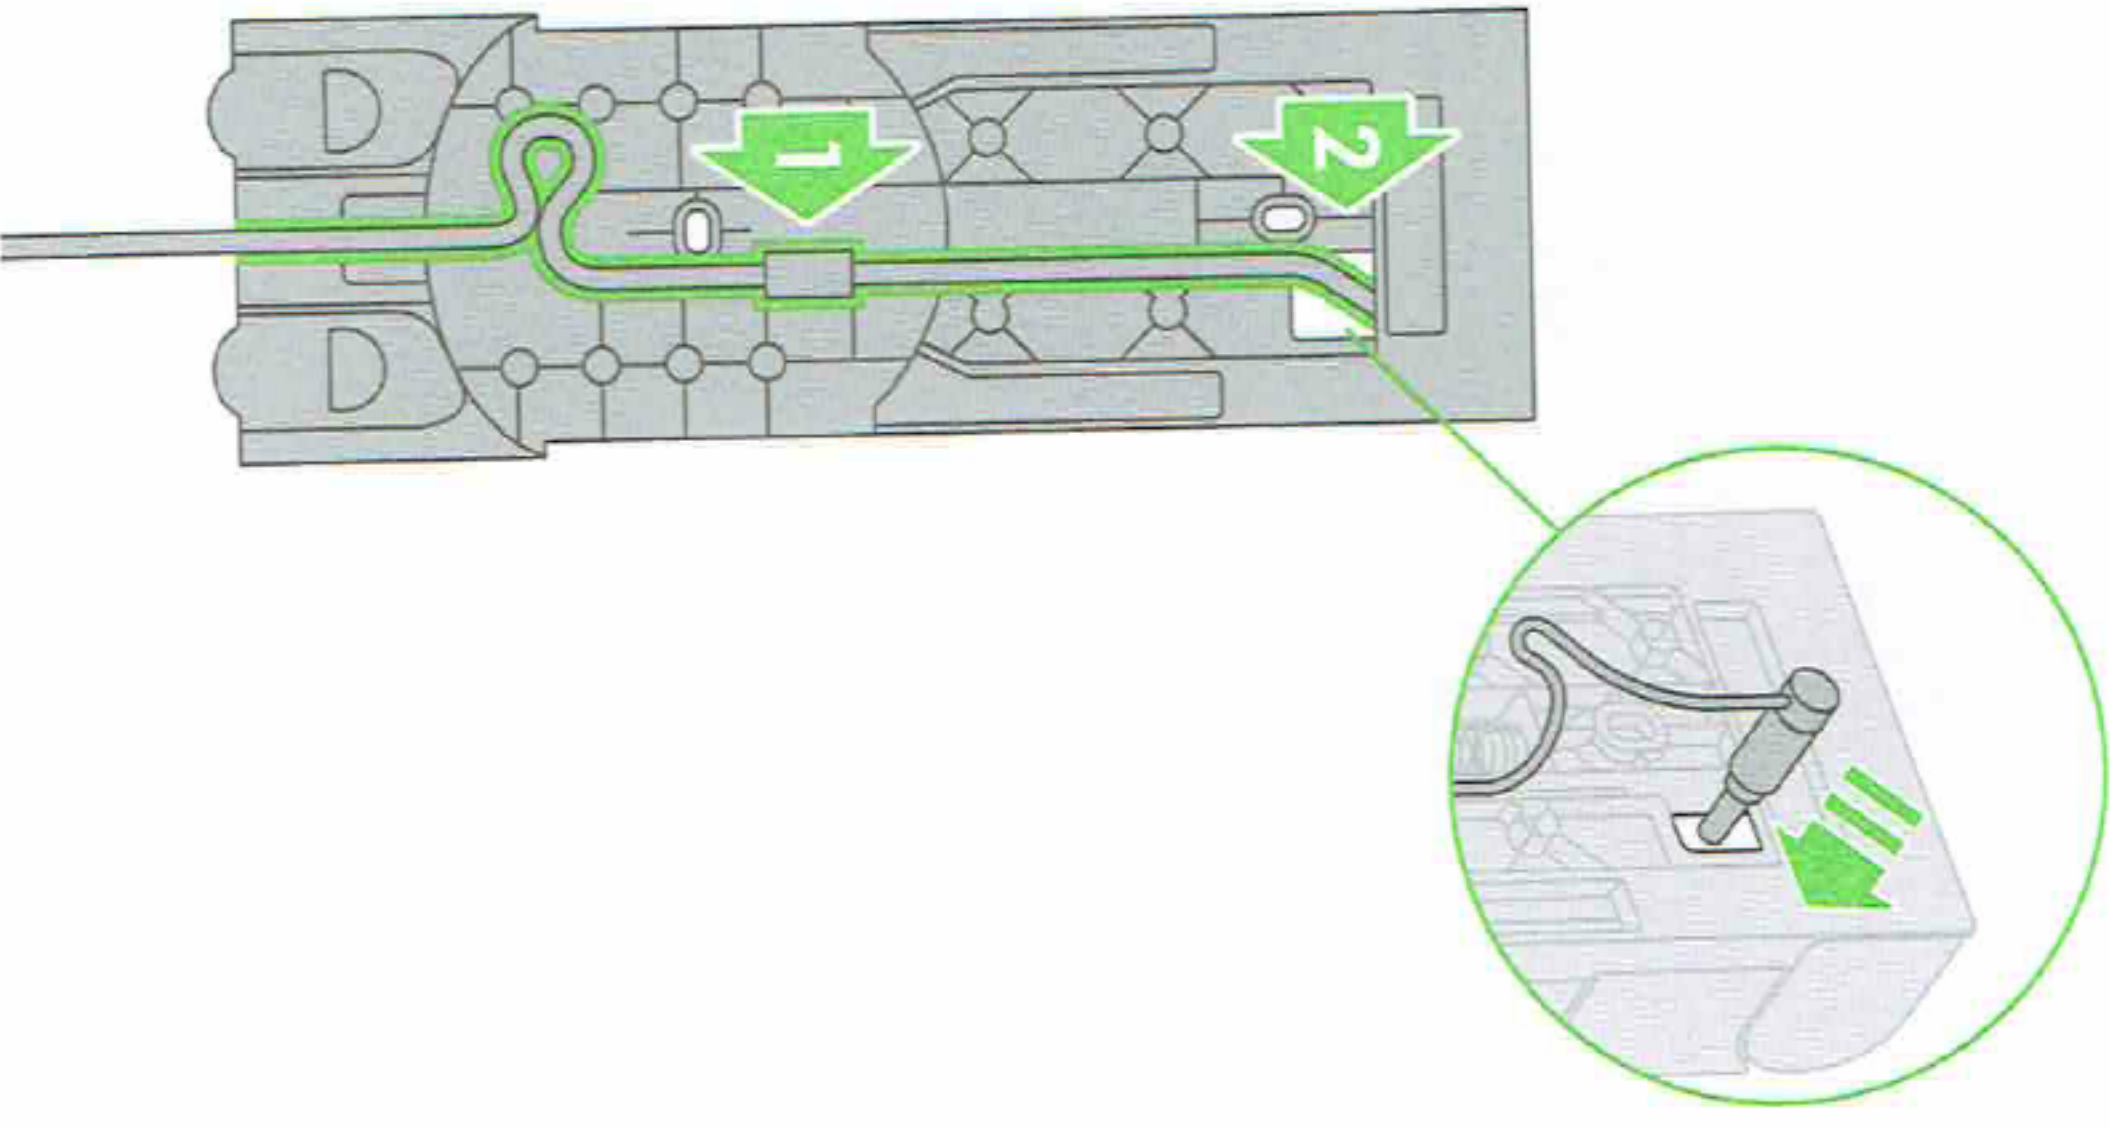   

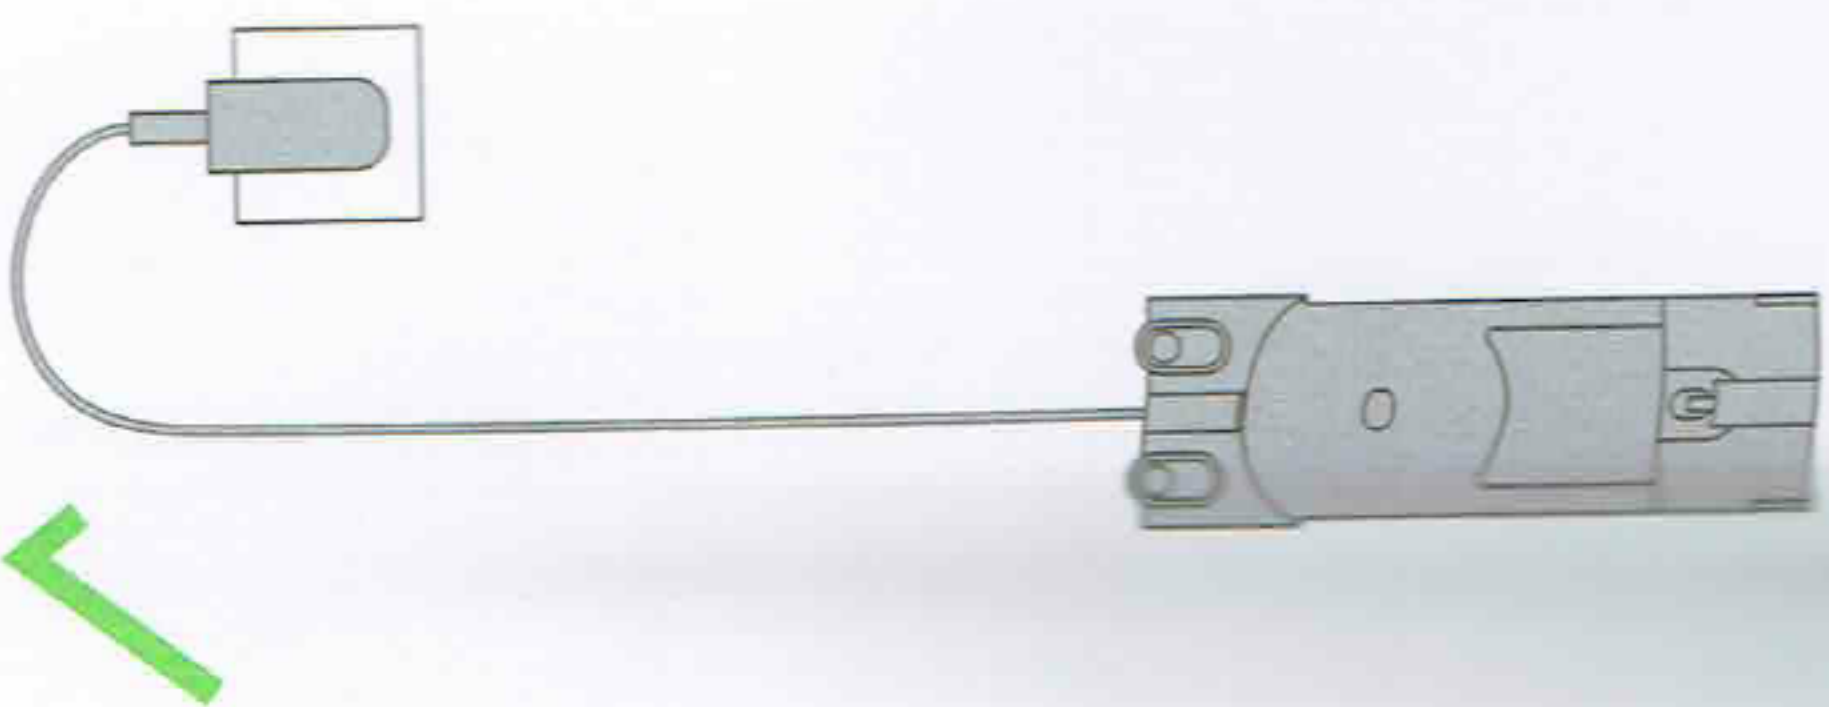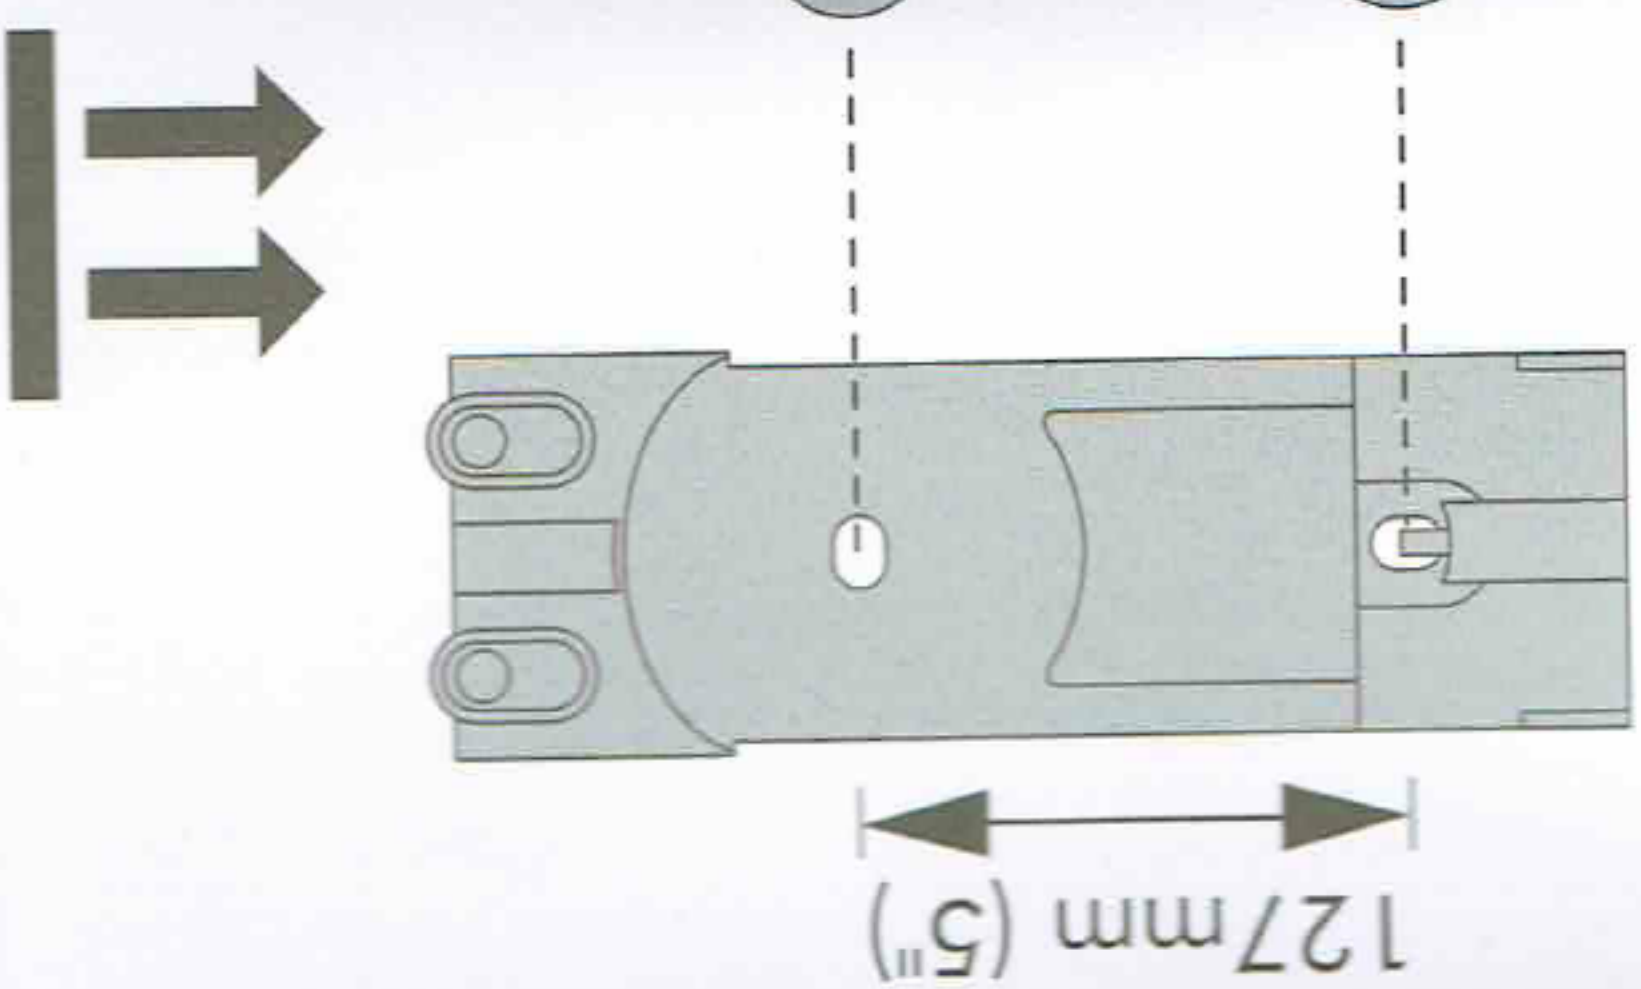  

EN IMPORTANT SAFETY INFORMATION. Use appropriate mounting hardware for your wall type and ensure that the dock is mounted securely.

Ensure no pipe work (gas, water, air) or electrical cables, wires or ductwork are located directly behind the mounting area. The dock must be mounted in accordance with regulations and applicable codes/standards (Federal, State, Provincial and local laws apply in the US and Canada). Dyson recommends the use of protective clothing, eyewear and materials as necessary.

CA INFORMATION IMPORTANTE SUR LA SÉCURITÉ Utilisez le matériel et les fixations convenant à votre type de mur et assurez-vous que la base est bien fixée. Vérifiez qu'aucune canalisation (gaz, eau, air) ni aucun câble électrique, fil ou conduit n'est situé directement derrière la zone de montage. La base doit être fixée conformément aux lois et règlements locaux ainsi qu'aux codes et normes applicables. (La législation locale, provinciale, fédérale et de l'État s'applique aux États-Unis et au Canada). Dyson recommande d'utiliser des vêtements, des lunettes et l'équipement de protection appropriés.

CN 重要安全資訊。 使用適合牆身種類的硬件/配件，並確保適當安裝安裝。確保牆充基礎安裝位置的牆內並無電管(煤氣、水管、氣管)或電線、電線或管道系統。必須根據規章及適用守則/標準來安裝牆充基礎。戴好建議需要穿著保護衣物、使用護眼用具及物料。

CZ DŮLEŽITÉ BEZPEČNOSTNÍ INFORMACE: Použijte příslušný materiál vhodný pro typ vaší zdi a ujistěte se, že je dok připevněn bezpečně. Ujistěte se, že přímo v místě vrčení nejsou žádné trubky (plynová, vodovodní, vzduchová) ani elektrické kabely, dráty nebo kanalizační. Dok je nutné připevnit v souladu se všemi místními zákony a předpisy a platnými normami a standardy. Společnost Dyson doporučuje podle potřeby používat ochranné oblečení, brýle a materiály.

DE WICHTIGE SICHERHEITSHINWEISE: Verwenden Sie für Ihren Wandtyp geeignete Montagehilfe und vergewissern Sie sich, dass die Dockingstation sicher befestigt ist. Vergewissern Sie sich, dass keine Rohrleitungen (Gas, Wasser, Druckluft), Stromkabel, Drähte oder Kanäle direkt hinter dem Bohrbereich verlaufen. Die Dockingstation muss in Einklang mit allen Bohrvorgaben und Vorschriften sowie anwendbaren Normen vor Ort gültigen Gesetzen werden. Dyson empfiehlt die bedarfsgerechte Verwendung von Schutzkleidung, Augenschutz und Schutzmittel.

DK VIKTIGE SIKKERHEDSOPLYSNINGER Brug passende værktøjer/forankringer til din væg og sørg for, at dock er fastmonteret. Kontroller, at der ikke er nogen rør (gas, vand, luft) eller el-kabler eller kanaler direkte bag ved boreområdet. Dock'en skal monteres i overensstemmelse med gældende love og bestemmelser samt relevante forskrifter og standarder. Dyson anbefaler, at der anvendes beskyttelsesøjel, øjensvern og materiel efter behov.

ES INFORMACIÓN IMPORTANTE DE SEGURIDAD. Utilice los tornillos/enclavamientos adecuados para su tipo de pared y asegúrese de que monta el soporte de forma segura. Compruebe que no hay ninguna tubería (gas, agua, aire) ni cables eléctricos, alambres o conductos directamente detrás de la zona de perforación. El soporte debe montarse de conformidad con

todos los leyes y reglamentos locales, así como con los códigos y normas aplicables. Dyson recomienda el uso de ropan, gatas y materiales protectores según sea necesario.

FI TÄRKEITÄ TURVALLISUUSTEITOJA. Käytä seinätyypille sopivia laitteita/kiinnikkeitä ja varmista, että laite on kiinnitetty kunnolla. Varmista, ettei putkistojen (kaasu-, vesi-, ilmo-) tai sähkökaapelien, johtojen tai johkokanavien oltu suorissa poroitavien alueen takana. Laite on kiinnitettävä paikallisten lakien ja sääntöjen sekä asianmukaisen sääntöjen ja standardien mukaisesti. Dyson suosittelee suojelevarusteiden, -käsien ja -materiaalien käyttöä tarpeen mukaan.

FR INFORMATION IMPORTANTE SUR LA SÉCURITÉ Utilisez le matériel / les fixations appropriées pour votre type de mur et assurez-vous que la base est bien montée. Vérifiez qu'aucune canalisation (gaz, eau, air) ni aucun câble électrique, fil ou conduit ne soit située directement derrière la zone de forage. La base doit être montée en conformité avec les lois et règlements locaux et les codes et normes applicables. Dyson recommande d'utiliser les vêtements, lunettes et matériels de protection appropriés.

GR Σημαντικές πληροφορίες για την ασφάλεια. Χρησιμοποιήστε εγκεκριμένο/έγκριτο/επιτρεπτό κατάλληλο για τον τύπο του τοίχου σας, και βεβαιωθείτε ότι η βάση είναι καλά τοποθετημένη. Βεβαιωθείτε ότι κανένα από τα κανάλια αγωγών, των σωδών στον τοίχο δεν υπάρχουν απευθείας πίσω από την περιοχή διάτρησης, των σωδών στον τοίχο. Η βάση πρέπει να τοποθετηθεί σύμφωνα με τους τοπικούς, τομικούς, νόμους και κανονισμούς, και τους κώδικες και τα πρότυπα που ισχύουν. Η Dyson συνιστά τη χρήση προστατευτικών γυαλιών, γυαλιών ασφαλείας και άλλων υλικών, εφόσον απαιτούνται.

HU FONTOS BIZTONSÁGI TUDNIVALÓK. Hasznádjön a fal tértípusának megfelelő szerelvényét és ügyeljen a tartóbiztonságos felszerelésre. Győződjön meg arról, hogy közvetlenül a falhátsó terület mögött nincs semmilyen (gáz-, víz-, levegő- vagy elektromos) vezeték, kábel vagy cső. A tartót a helyi törvények és jogszabályok, valamint a vonatkozó előírások és szabványok betartásával kell felszerelni. A Dyson szakség esetén védőruhát, védőszemüveget és egyéb védőfelszerelést használnál javasoljuk.

ID INFORMASI KESELAMATAN PENTING. Gunakan perangkat keras dinding yang sesuai untuk jenis dinding Anda dan pastikan dock dipasang dengan aman. Pastikan tidak ada saluran pipa (gas, air, udara) atau kabel listrik, kabel, atau saluran berhalat langsung di belakang area dinding. Dock harus didudukkan sesuai dengan peraturan dan kode/standar yang berlaku di AS (fukun Federal, Negara Bagian, Provinsi, dan setempat yang berlaku di AS dan Kanada). Dyson merekomendasikan penggunaan peralatan pelindung, pelindung mata, dan bahan yang diperlukan.

IL תרע חשוב בטוח וביטוח. השתמש בחומרים/אבידות המתאימים לתב קירך עץ/חומר העיגור העיקרית מתוקנת כראוי. ודא עשאוהו חזק בהתקנה אל בתאם צורתו גבו תיב אחרת. בבלי עשומל, בבליים או חבלים או חתמת העיגור. ער לתיקון בהתאם לתקנות ולקודים/סטנדרטים החלים המתאימים עבור דיוסון ממלצת להשתמש בביגור גבו, מקיפים חומרי הגנה ובציוד הגנה.

IT IMPORTANTI INFORMAZIONI Il dispositivo di aggancamento deve essere installato in conformità con le leggi e i regolamenti locali, così come con i codici e le norme applicabili. Dyson raccomanda l'uso di attrezzature di protezione e materiali di protezione in base al tipo di parete. Assicurarsi che non ci siano tubi (gas, acqua, aria) o cavi elettrici, fili o condotti direttamente dietro l'area di foratura. La base deve essere montata in conformità con le leggi e i regolamenti locali e i codici e le norme applicabili. Dyson raccomanda di utilizzare gli indumenti, le lenti e i materiali di protezione appropriati.

JP 安全上の注意 壁の種類に合った適切な取り付け具/部品を使用し、壁にしっかりと固定してください。ガス、水、空気、電気配線、ケーブル、配線管などが直接のドリル位置の背後にないことを確認してください。また、地域の法律、州、省、市、国の法律、および適用されるコード/規格に準拠して設置してください。必要に応じて、保護服、保護眼鏡、保護材料の使用を推奨します。

KR 주의 사항. 벽의 종류에 맞는 적절한 고정 장치/부품을 사용하여 벽에 단단히 부착하십시오. 가스, 물, 공기, 전기 배선, 케이블, 배선관 등이 직접 드릴 위치의 바로 뒤에 있는지 확인하십시오. 또한, 현지 법규, 지역, 주, 국가 법규, 그리고 적용 가능한 코드/규격에 따라 설치하십시오. 필요에 따라 적절한 보호복, 보호 안경, 보호 재료의 사용을 권장합니다.

NL BELANGRIJKE INFORMATIE Gebruik de juiste montagehulp/onderdelen voor uw muurtype en zorg ervoor dat de dock veilig is gemonteerd. Controleer of er geen leidingen (gas, water, lucht) of elektrische kabels, draden of kabelkanalen direct achter de boorzone lopen. De dock moet worden gemonteerd in overeenstemming met alle lokale, provinciale, federale en staatsregelingen en de daarop van toepassing zijnde wetten, voorschriften en normen. Dyson aanbeveelt het gebruik van beschermende kleding, beschermende bril en beschermende materialen indien nodig.

NO VIKTIG INFORMASJON Bruk passende verktøyer/forankringer til din vegg og sørg for at dock er fastmontert. Kontroller at det ikke er noen rør (gass, vann, luft) eller el-kabler eller kanaler direkte bak boreområdet. Dock'en skal monteres i samsvar med gjeldende lover og bestemmelser samt relevante forskrifter og standarder. Dyson anbefaler bruk av beskyttelsesutrustning, øyvern og materialer etter behov.

PL WAŻNE INFORMACJE Użyj odpowiednich narzędzi/mocowań do swojego rodzaju ściany i upewnij się, że dok jest bezpiecznie zamocowany. Sprawdź, czy nie ma żadnych przewodów (gaz, woda, powietrze), przewodów elektrycznych, kabli ani kanałów bezpośrednio za obszarem wiercenia. Dok należy zamontować zgodnie z przepisami i normami. Firma Dyson zaleca stosowanie odpowiedniego sprzętu ochronnego i materiałów ochronnych.



EN IMPORTANT SAFETY INFORMATION. Use appropriate mounting hardware for your wall type and ensure that the dock is mounted securely. Ensure no pipe work (gas, water, air) or electrical cables, wires or ductwork are located directly behind the mounting area. The dock must be mounted in accordance with regulations and applicable codes/standards (Federal, State, Provincial and local laws apply in the US and Canada). Dyson recommends the use of protective clothing, eyewear and materials as necessary.

CA - INFORMATION IMPORTANTE SUR LA SÉCURITÉ Utilisez le matériel et les fixations convenant à votre type de mur et assurez-vous que la base est bien fixée. Vérifiez qu'aucune canalisation (gaz, eau, air) ni aucun câble électrique, fil ou conduit n'est situé directement derrière la zone de perçage. La base doit être fixée conformément aux lois et règlements locaux ainsi qu'aux codes et normes applicables. (La législation locale, provinciale, fédérale et de l'Etat s'applique aux Etats-Unis et au Canada). Dyson recommande d'utiliser des vêtements, des lunettes et l'équipement de protection appropriés.

CN 重要安全資訊。 使用適合牆身種類的硬件/配件，並確保固定基礎安裝穩妥。確保牆充基礎安裝位置的牆內並無燃氣/煤氣、水管、電線/電纜、電線或管道系統。必須根據規章及適用守則/標準來安裝擴充基礎。戴森建議需要時穿著保護衣物，使用護眼用具及物料。

CZ DŮLEŽITÉ BEZPEČNOSTNÍ INFORMACE. Použítte příslušné materiály vhodný pro typ zdi a ujistěte se, že je dok připevněn bezpečně. Ujistěte se, že přímo v místě vrtání nejsou žádné trubky (plynové, vodovodní, vřelcovodní) ani elektrické kabely, dráty nebo kanalizační. Dok je nutné připevnit v souladu se všemi místními zákony a předpisy a platnými normami a standardy. Společnost Dyson doporučuje podle potřeby používat ochranné oblečení, brýle a materiály.

DE WICHTIGE SICHERHEITSHINWEISE. Verwenden Sie für Ihren Wandtyp geeignete Montageteile und vergewissern Sie sich, dass die Dockingstation sicher befestigt ist. Vergewissern Sie sich, dass keine Rohrlösungen (Gas, Wasser, Druckluft), Stromkabel, Dröhte oder Kanäle direkt hinter dem Bohrbereich verlaufen. Die Dockingstation muss in Einklang mit allen vor Ort gültigen Gesetzen und Vorschriften sowie anwendbaren Normen und Standards montiert werden. Dyson empfiehlt die bestmögliche Verwendung von Schutzkleidung, Augenschutz und Schutzmitteln.

DK VIGTIGE SIKKERHEDSOPLYSNINGER Brug passende vækter/forankringer til din væg og sørg for, at dock'en er fastmonteret. Kontrollér, at der ikke er nogen rør (gas, vand, luft) eller el-kabler eller kanaler direkte bag ved boreområdet. Dock'en skal monteres i overensstemmelse med gældende love og bestemmelser samt relevante forskrifter og standarder. Dyson anbefaler, at der anvendes beskyttelsesstøt, øjenvern og materialer efter behov.

ES INFORMACION IMPORTANTE DE SEGURIDAD. Utilice los tornillos/ensamblajes adecuados para su tipo de pared y asegúrese de que los montes el soporte de forma segura. Compruebe que no hay ninguna tubería (gas, agua, aire) ni cables eléctricos, alambres o conductos directamente detrás de la zona de perforación. El soporte debe montarse de conformidad con

todos las leyes y reglamentos locales, así como con los códigos y normas aplicables. Dyson recomienda el uso de ropa, gafas y materiales protectores según sea necesario.

FI TÄRKEITÄ TURVALLISUUSTIETOJA. Käytä seindyyppille sopivia laitteita/kimunkkeita ja varmista, että laine on kimmitetty kunnolla. Varmista, että putkistojat (kaasu-, vesi-, ilma-) tai sähkökaapeliat, johdot tai jalkakäynnön et ole suoraa porattavien alueen takana. Tälline on kimmitettävä paikallisien lakien ja säästöjen sekä osastunkosten sääntöjen ja standardien mukaisesti. Dyson suosittelee suojavälineiden, -lasien ja -materiaalien käyttöä tarpeen mukaan.

FR INFORMATION IMPORTANTE SUR LA SÉCURITÉ Utilisez le matériel / les fixations approprié(s) pour votre type de mur et assurez-vous que la base est bien montée. Vérifiez qu'aucune canalisation (gaz, eau, air) ni aucun câble électrique, fil ou conduit ne soit situé(e) directement derrière la zone de forage. La base doit être montée en conformité avec les lois et règlements locaux et les codes et normes applicables. Dyson recommande d'utiliser les vêtements, lunettes et matériels de protection appropriés.

GR Σημαντικές πληροφορίες για την ασφαλία. Χρησιμοποιήστε έγκυρια/έξοχητα κατάλληλα για τον τύπο του τοίχου σας και βεβαιωθείτε ότι η βάση είναι καλά τοποθετημένη. Βεβαιωθείτε ότι κανένα πλίο, νερό, αέρα, καλώδια, καλώδια ή άλλα αγωγία, Η βάση πρέπει να τοποθετηθεί σύμφωνα με τους τοπικούς νόμους και κανονισμούς και τους κώδικες και τα πρότυπα που ισχύουν. Η Dyson συνιστά τη χρήση προστατευτικών ρούχων, γυαλιών ασφαλείας και άλλων υλικών, εφόσον απαιτείται.

HU FONTOS BIZTONSÁGI TUDNIVALÓK. Használjon a fal leherbitésének megfelelő szerelvényi és rögzítési és ügyeljen a torlá biztonosságos szerelvésekre. Győződjön meg arról, hogy közvetlenül a felszerelés területén nincsen semmilyen (gáz-, víz-, levegő- vagy elektromos) vezeték, kábel vagy cső. A tartót a helyi törvények és jogszabályok, valamint a vonatkozó előírások és szabványok betartásával kell felszerelni. A Dyson szakszerű eseten védelemből, védőeszközök és egyéb védőfelszerelés használatát javasolja.

ID INFORMASI KESELAMATAN PENTING. Gunakan peranti/ka kerus didudukan yang sesuai untuk jenis dinding Anda dan pastikan dok dipasang dengan aman. Pastikan tidak ada saluran pipa (gas, air, udara) atau kabel listrik, kabel, atau saluran tenaga langsung di belakang area didudukan. Dok harus didudukan sesuai dengan peraturan dan kode/standar yang berlaku (hukum Federal, Negara Bagian, Provinsi, dan setempat yang berlaku di AS dan Kanada). Dyson merekomendasikan penggunaan pelindungan diri, alat pelindungan mata, dan bahan yang diperlukan.

IL תרבות חשובה בנושא ביטחון ושקטת החומר/האביזר. המותקנת עליה חייבת להיות יציבה ומוטקת במדויק. ודא שהתקנתה לא תפגע בשום ציוד אחר (גז, מים, אוויר) או קבלות חשמל, כבלים או תווית חשמל. יש להתקין את התומך בצורה בטוחה ומקצועית/מסודרת. המליצה המומחשת. חברת Dyson ממליצה להשתמש בכלי בטיחות, משקפיים והחומר הנדרש בהתאם לתנאי החדר.

IT IMPORTANTI INFORMAZIONI SULLA SICUREZZA. Utilizzate gli attrezzi/le viti più indicate per il vostro tipo di parete e assicuratevi che il dispositivo di aggancio sia montato in modo ben saldo. Assicuratevi che non ci siano tubature (gas, acqua, aria) o cavi elettrici, conduttori o canalizzazioni direttamente dietro all'area di montaggio. Il dispositivo di aggancio deve essere montato conformemente a tutte le leggi e disposizioni locali: ai codici e alle norme vigenti. Dyson raccomanda di utilizzare abbigliamento e occhiali di protezione, ove necessario.

JP 安全上のご注意 - 必ずお守りください。 取付け用フック用のネジ等は、固軸されたお壁に合ったネジ及び適切な工具をご使用の上、フックが壁にしっかりと正しく設置されたことをご確認ください。取付け用フックを設置する際は、あらかじめ設置する壁の断面にガス管、水道管等の配管が通っていないことを確認の上で、設置を行ってください。取付け用フックを設置する際は、あらかじめ配管等の法規、条例や住居確保等に準ってください。設置作業を行う際は、必要に応じて防塵用の衣服、ゴーグル等の使用をお勧めいたします。

 
KR 주의 사항. 벽의 종류에 맞는 고정부품을 사용하세요. 도킹 스테이션을 벽에 설치할 때에는 도킹 스테이션이 완전히 고정되었는지 확인하세요. 도킹 스테이션 설치 작업 전, 설치 할 부분의 벽속에 피이프(가스, 수도, 등) 또는 전기 케이블, 천선 또는 도관작업이 되어 있는지 확인하세요. 도킹 스테이션은 반드시 관련 규정 및 규격/규격에 맞게 설치되어야 합니다. 디어슨은 도킹 스테이션 설치 작업 시, 보호안경 및 필요한 보호장구의 사용을 권장합니다.

NL BELANGRIJKE VEILIGHEIDSinFORMATIE. Gebruik geschikt montage materiaal voor het betreffende type muur en zorg voor een stevige bevestiging van de dock. Wees er zeker van dat er achter de plek waar geboord gaat worden geen leidingen (gas, water, lucht) of elektrische kabels, snoeren of kanalen liggen. De dock moet worden gemonteerd in overeenstemming met alle ter plekke geldende wetgeving en bouwvoorschriften, en standaarden. Dyson raadt het gebruik aan van een veiligheidsbril, en beschermende kleding en materialen indien noodzakelijk.



NO VIKTIG INFORMASION OM SIKKERHET. Bruk skruer som passer til veggene, og pass på at dokken blir forsvarlig festa. Pass på at det ikke befinner seg rør (gass, vann, luft), elektriske ledninger, kabler eller ventilasjonssystemer bak området der det bores. Dokken må monteres i henhold til alle lokale lover og forskrifter og gjeldende skikker og standarder. Dyson anbefaler bruk av beskyttende klar, briller og materialer som nødvendige.

PL WAŻNE INFORMACJE DOTYCZĄCE BEZPIECZEŃSTWA. Używać śrub odpowiednich do typu ściany i upewnić się, że ściana dokująca jest bezpieczna zamocowania. Sprawdzić, czy instalacje rurowe (gaz, woda, powietrze), przewody instalacji elektrycznej lub kable nie znajdują się bezpośrednio za miejscem wiercenia. Ściskając dokującą należy zamocować zgodnie ze wszystkimi obowiązującymi w danym kraju przepisami, zasadami i normami. Firma Dyson zaleca użycie odpowiednich ubrań, okularów i materiałów ochronnych.

2

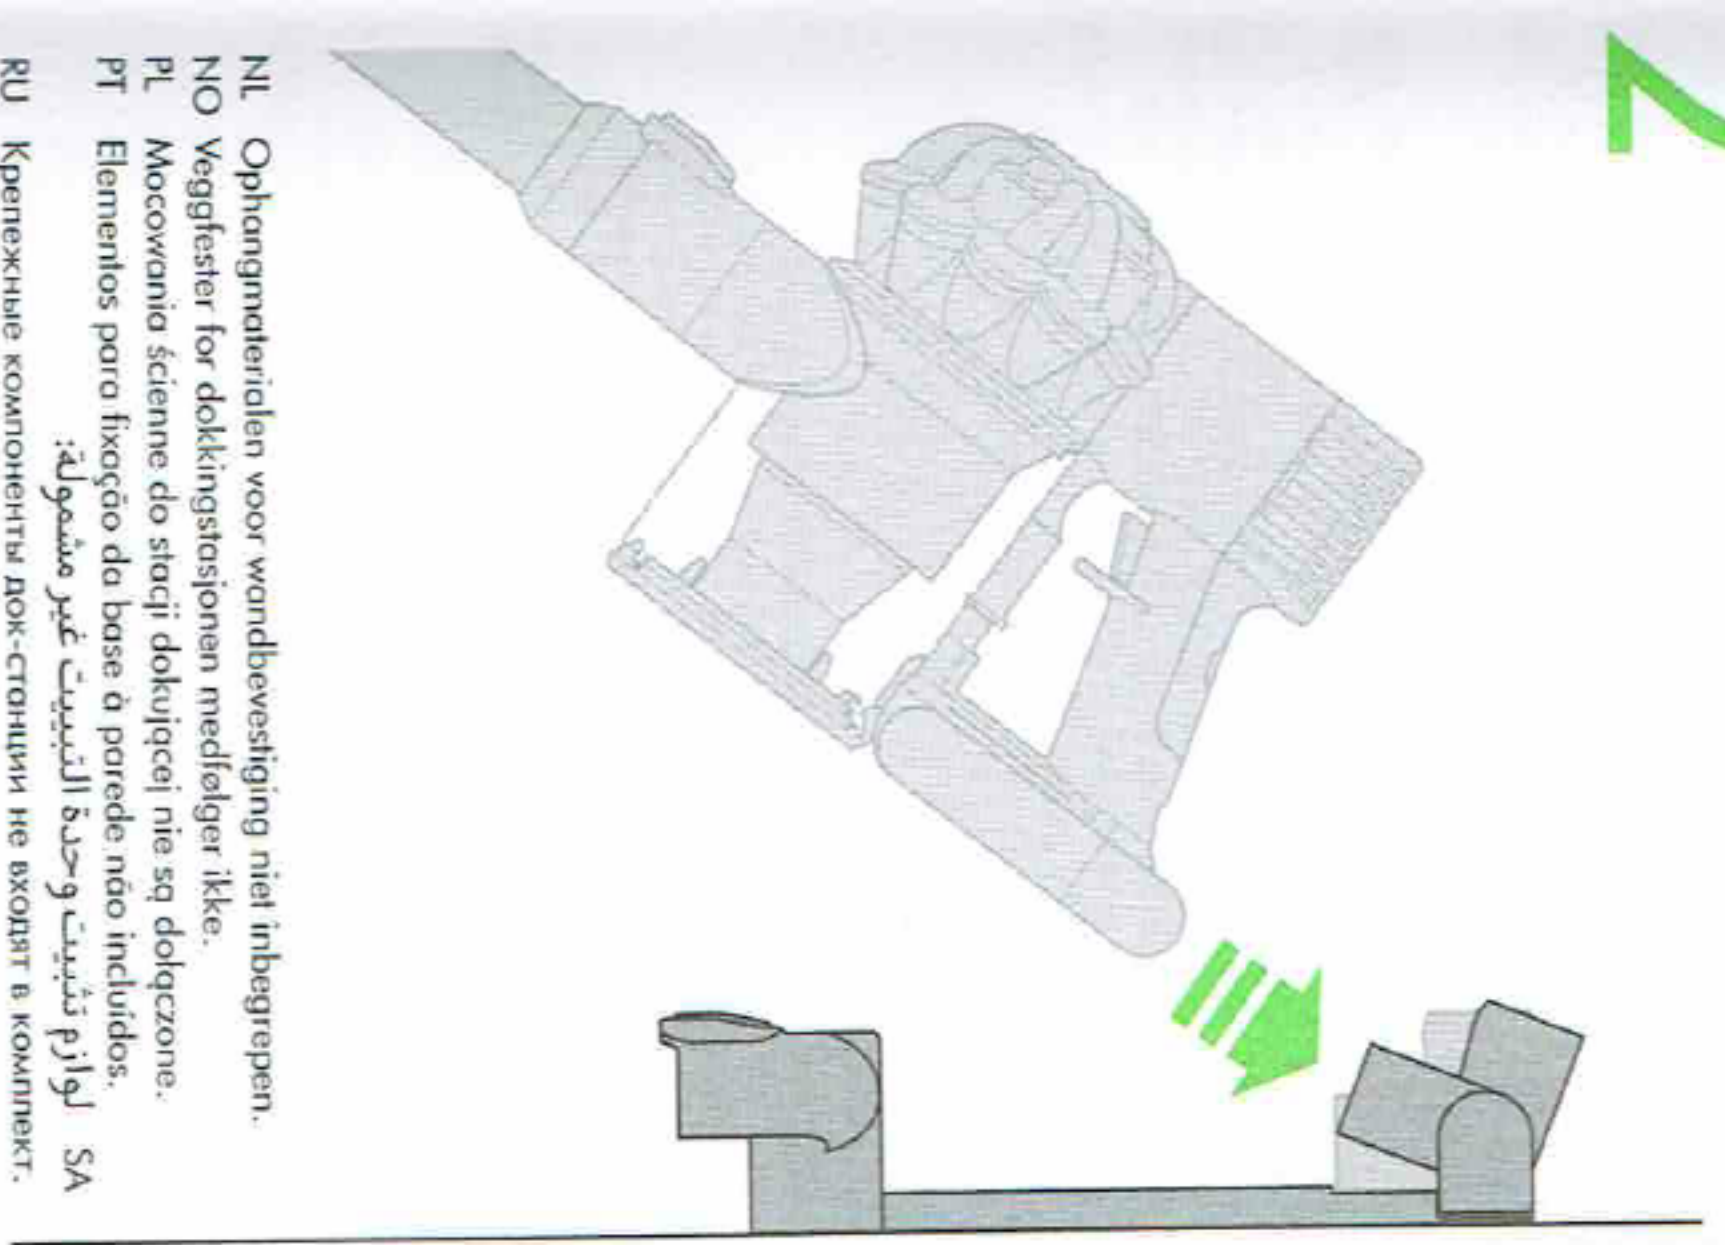




NL Ophangmateriaal voor wandbevestiging niet inbegrepen.
 NO Veggfester for dokkingstasjon medfølger ikke.
 PL Mocowania ściennie do stacji dokującej nie są dołączone.
 PT Elementos para fixação da base à parede não incluídos.
 SA لوارج تثبيت وحدة التثبيت غير مشمولة.
 RU Крепежные компоненты док-станции не входят в комплект.
 SE Väggfästan för dokkingstation ingår inte.
 SI Stenski nosilci za združitevno postajo niso priloženi.
 TH Takma biriminin duvar baglantı elemanları dahil değildir.
 TR No se incluyen los elementos de fijación para instalar la estación de acoplamiento en la pared.

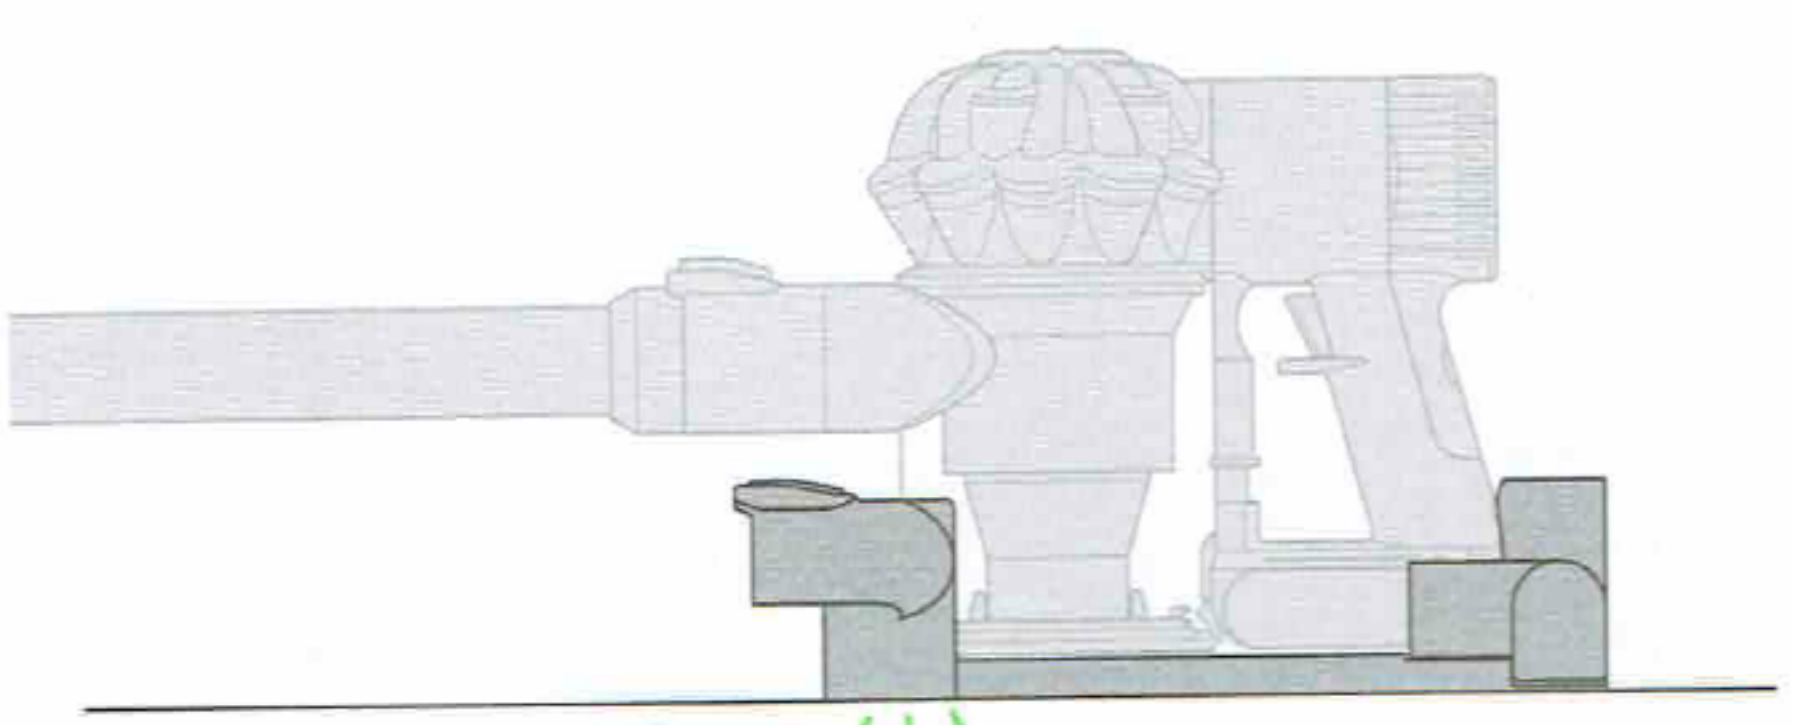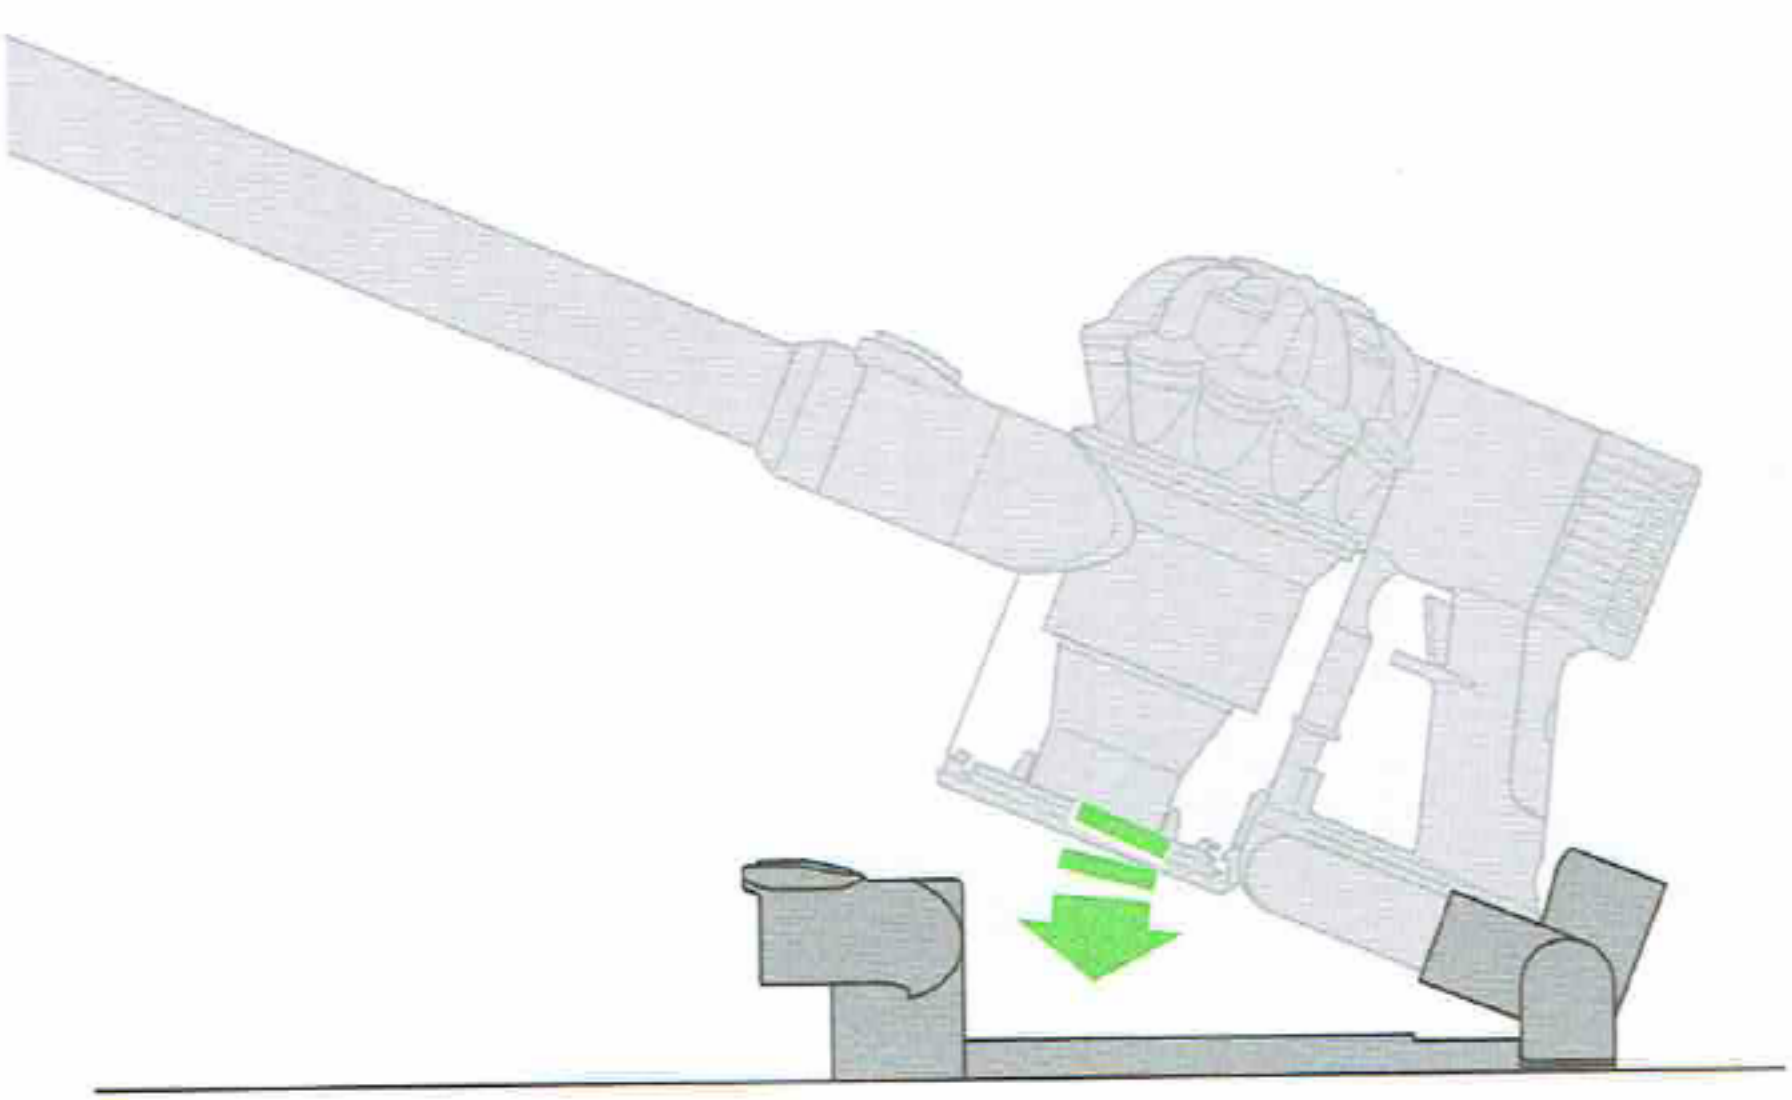  

click

   3

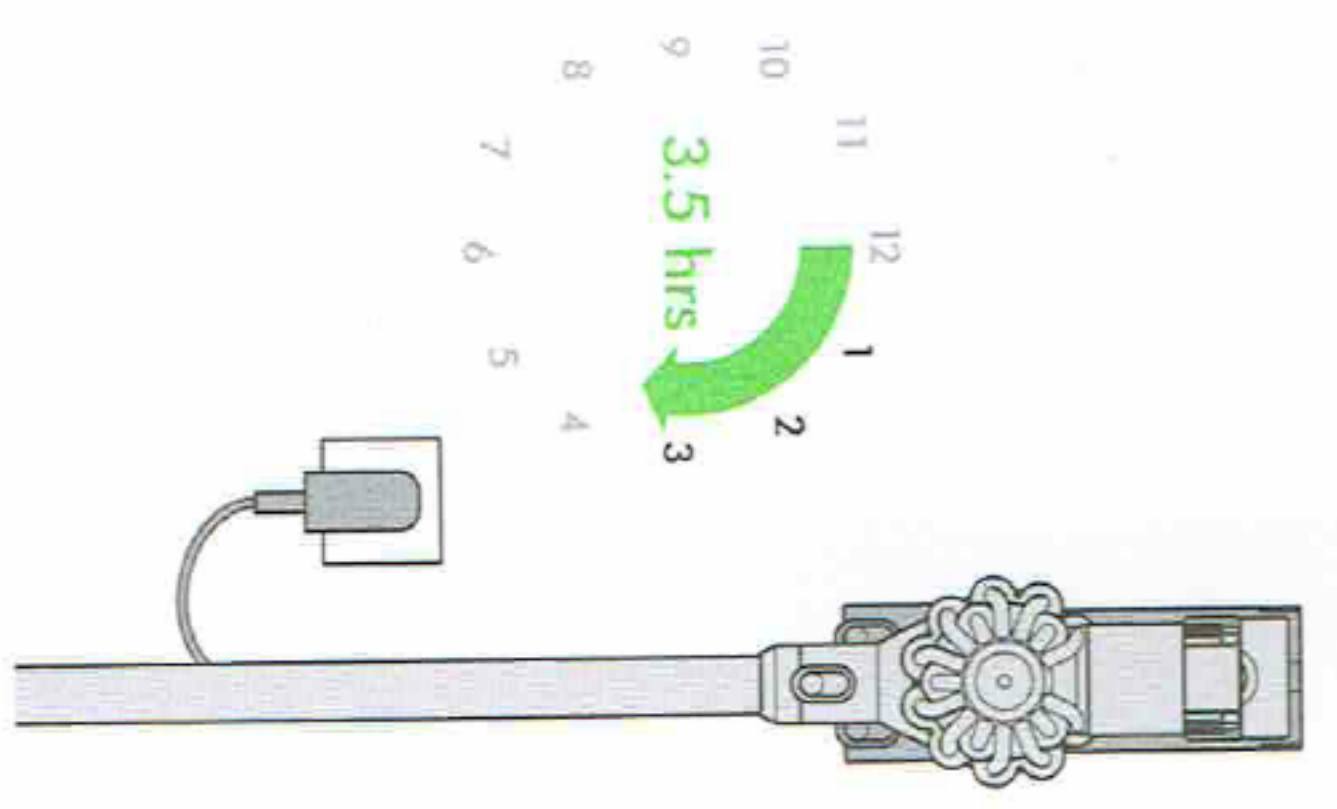

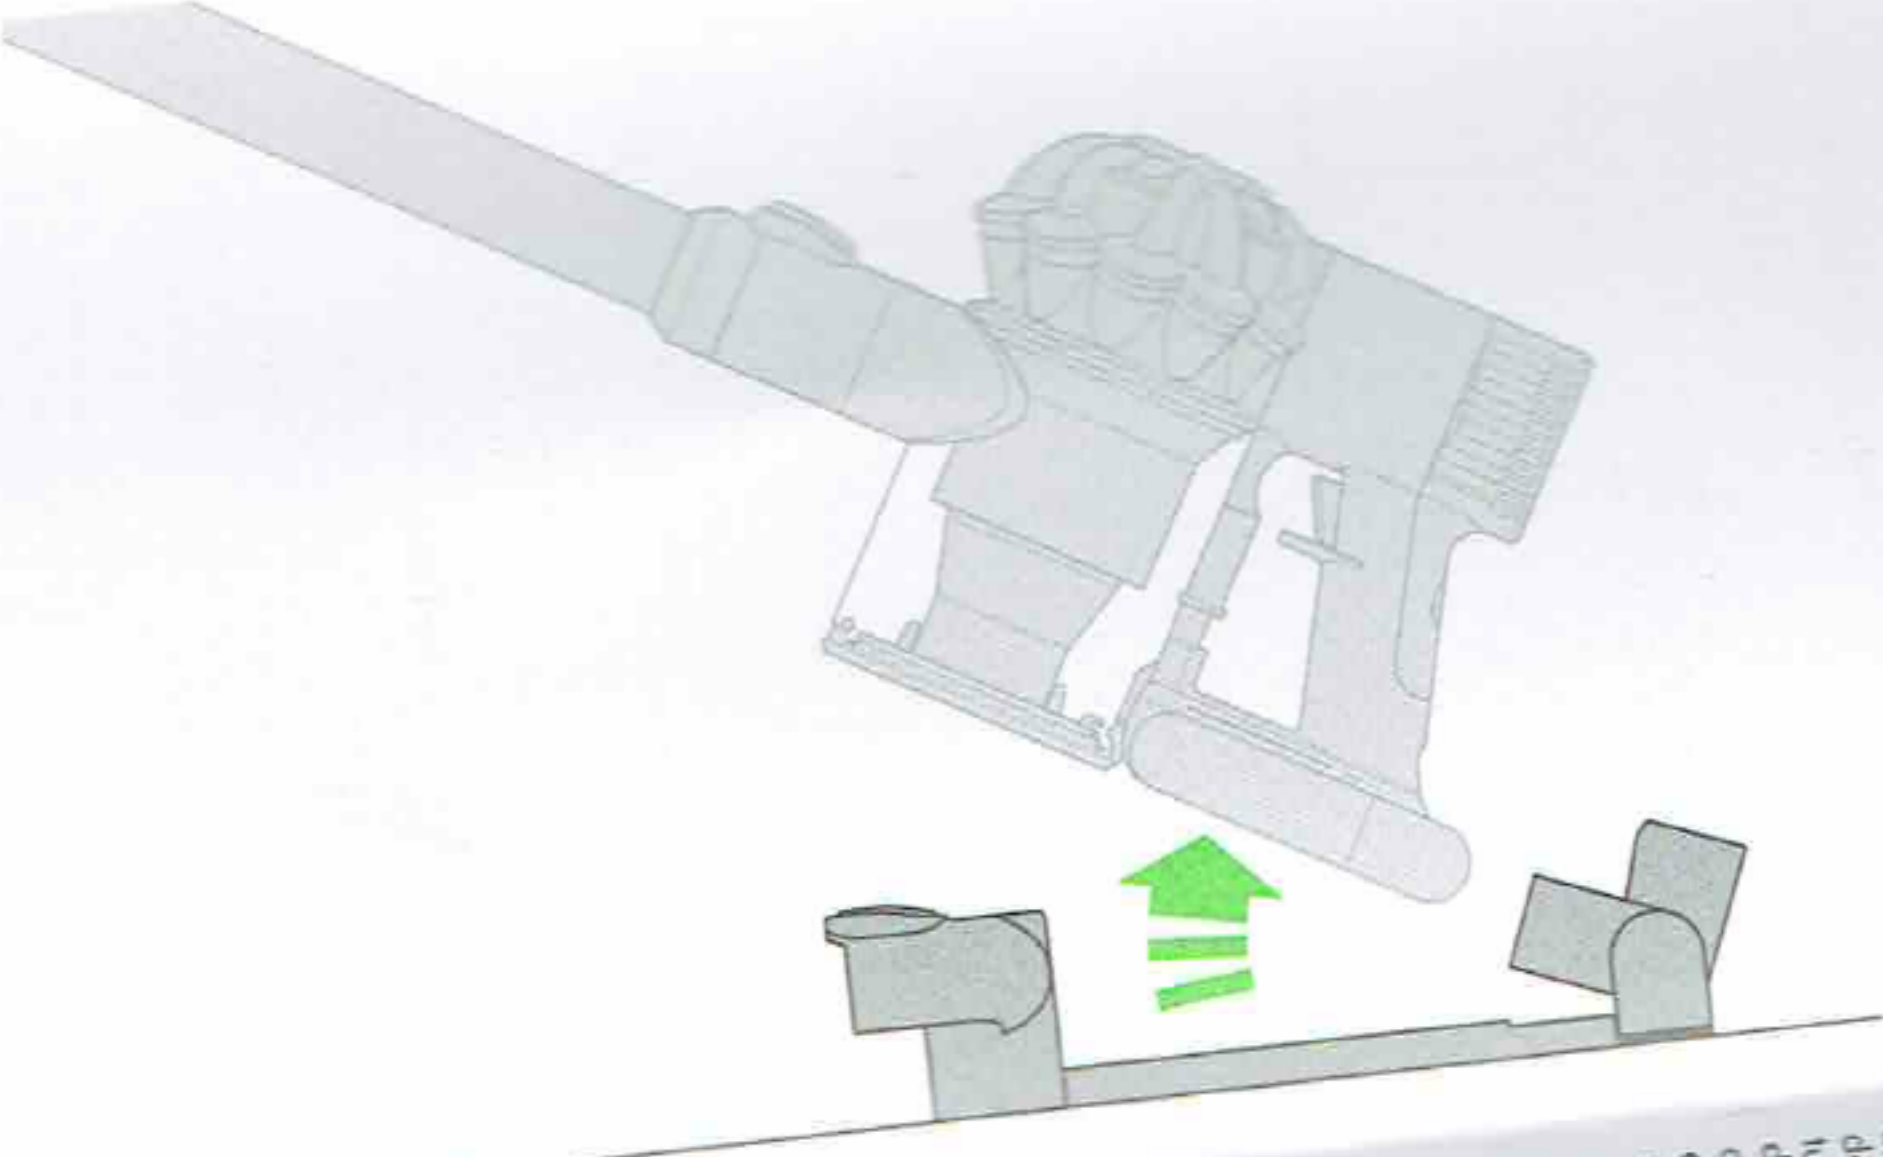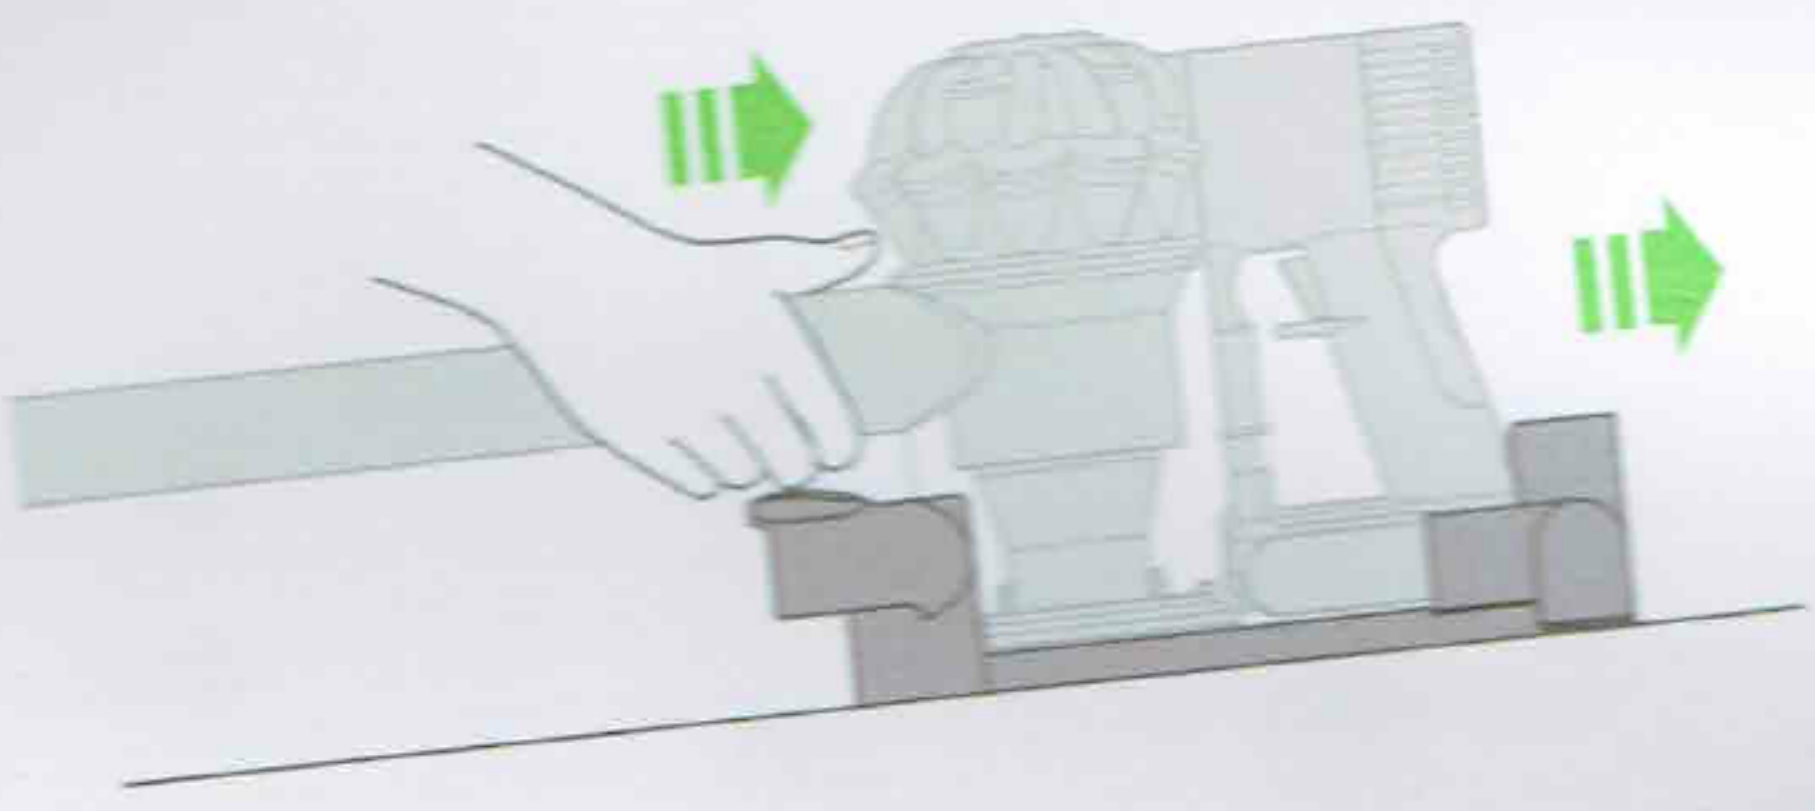

JN.69173 PN.202780-01-05 11.11.14 RCS PARIS 410 191 589

PT INFORMACÖES DE SEGURANCA IMPORTANTES Use parafusos/elementos de fixaço apropriados para o tipo de parede e certifique-se de que a base fica montada com firmeza. Certifique-se de que não há tubagens (gás, água, ar) ou cabos eléctricos, fios ou condutores localizados directamente por trás da área perfurada. A base deve ser montada em conformidade com todos os leis e normas locais e com os códigos e directivos aplicáveis. A Dyson recomenda o uso de vedilhito, óculos e dispositivos de protecção conforme o necessário.

RU ВАЖНАЯ ИНФОРМАЦИЯ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ. Используйте оборудование/крепления в соответствии с типом стены. После установки док-станции, проверьте надежность ее крепления к розетке, выключателю, электрическим проводам (трубопроводам, зонам сверления). Док-станция должна быть установлена в соответствии с местными законами и нормативами, действующими в данной зоне. Убедитесь, что все инженерные коммуникации (трубопроводы, зоны сверления, электрические провода) не расположены за стеной. Используйте защитную одежду и инструменты, а также защиту для глаз.

SA تعليمات هامة للسلامة: استخدم لوزم التركيب المناسبة لنوع جدارك (غاز أو مياه أو هواء) أو كوابل كهرباء أو أسلاك أو مواسير موجودة مباشرة خلف وحدة التركيب. يجب تركيب الوحدة وفق اللوائح والأنظمة والمواصفات المعمول به (هندسة وإنشائية المنطقة في الولايات المتحدة الأمريكية وكذلك نوصي باستخدام المستعمل الملابس الواقية ونظارات وقاية العين والمواد حسب يلزم.

 
SE VIKTIG SÄKERHETSINFORMATION. Använd lämpliga bultar/akrovor för väggen och se till att ledningsstationen är säkert monterad. Se till att inga rördragningar (gas, vatten, luft), elledningar eller kablar finns bakom direkt bakom borrhålet. Ledningsstationen skall monterad enligt med nationella lagar och bestämmelser samt tillämpliga regler och standarder. Dyson rekommenderar användning av skyddsglasögon, öronskydd och annan skyddsutrustning när så är tillämpligt.

SI POMEMBNE VARNOSTNE INFORMACIJE. Uporabite ustrezne vijetne/parafuze za vodo, vodo, zrak in se prepričajte, da je priključek opremljen/priključen. Prepričajte se, da se napovedni profil opredeljen vrtolno montiran. Prepričajte se, da ni električni vodi ter plin ali vodnjaki v neposredni sosednji sosednji v bližini vrtolne. Dyson priporoča uporabo priključek, očala in materialov.

TR ÖNEMLİ GÜVENLİK BİLGİLERİ. Duvar çukurluğuna uygun donanım/parafuzları kullanın ve çukuru yavaşça açarak bir şekilde monte ettiğinizden emin olun. Montajla delinerek yerin hemen arkasında herhangi bir boru, tesisat (gaz, su, hava) veya elektrik kabloları, telleri veya yalıtımları veya bakım/parafuzlardan emin olun. Çukuru yavaşça, tüm yerel kanun ve yönetmeliklere, yerel yönetmeliklere ve standartlara uygun olarak monte ettiğinizden emin olun. Dyson, gerektirdiğinde koruyucu gözlük, gazlık ve malzemelemleri kullanmanızı tavsiye eder.

US INFORMACIÓN DE SEGURIDAD IMPORTANTE. Utilice los elementos de tornillería/fijación adecuados para su tipo de pared y asegúrese de instalarlo firmemente en la manera segura. Compruebe que no hay ningún tubo (de gas, agua, aire) ni cables eléctricos, alambres o conductores directamente detrás de la zona de montaje. El acoplamiento debe montarse conforme a las normas y códigos/estándares vigentes. (Se aplican las leyes federales, estatales y provinciales de Estados Unidos y Canadá). Dyson recomienda que se utilicen gafas, gafas y materiales de protección según sea necesario.

Fits all Dyson cordless vacuums. S'adapte sur tous les aspirateurs sans fil Dyson. Passend für alle Dyson Akkusauger. Past op alle snoerloze Dyson modellen. Compatible con todos los modelos sin cable de Dyson. Per tutti gli aspirapolvere portatili Dyson.

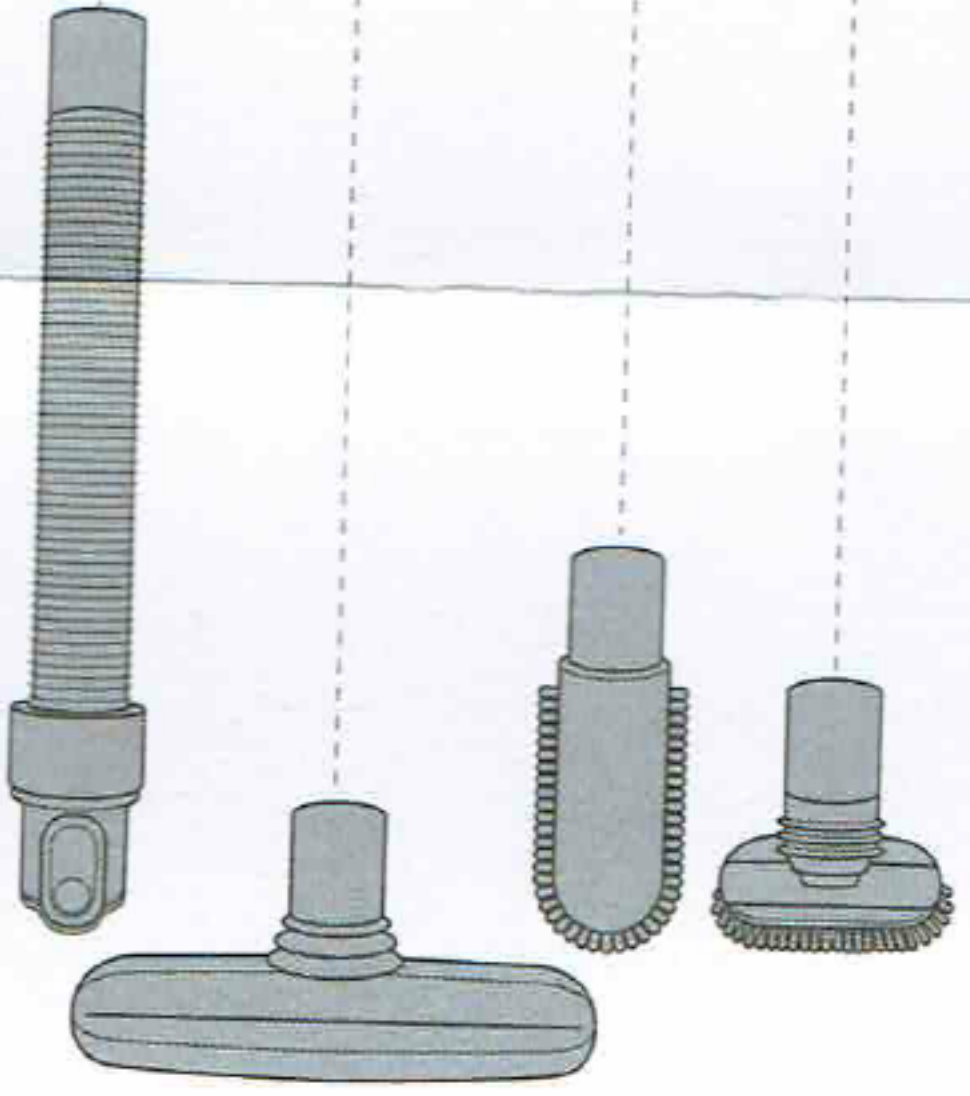

EN

Subborn dirt brush

With stiff bristles to remove dried-in and stubborn dirt.

Soft dusting brush

Soft bristles to gently dust around the home.

Wide nozzle tool

Removes dust and dirt from upholstery and the floor.

Extendable hose

Extends and flexes to reach awkward spaces.

FR

Brosse rigide

Dotée de poils rigides pour enlever les taches sèches et résistantes.

Brosse douce

Dotée de poils souples pour le nettoyage des surfaces et objets délicats partout dans la maison.

Suceur large

Pour enlever la saleté et la poussière sur les tissus d'ameublement et les sols.

Rallonge flexible

S'étire et s'articule pour atteindre les endroits difficiles d'accès.

DE

Extra-hart Bürste

Mit festen Borsten zur Entfernung von angetrocknetem und hartnäckigem Schmutz.

Extra-soft Bürste

Mit weichen Borsten zur schonenden Entfernung von Staub auf empfindlichen Oberflächen.

Extra-breite Polsterdüse

Entfernt Staub und Schmutz von Polstern und Böden.

Dehnbare Schlauch

Dehnbar und biegsam zur Reinigung von engen Zwischenräumen.

NL

Subborn dir

Een stijve borstel en ingedroogde

Soft dusting l

Zachte borstel ofstoffen van r

Brede zuigme

Verwijderd stof bekleeding en v

Slang

Voor heel schoo moeelijk bereikt

TR ÖNEMLİ GÜVENLİK BİLGİLERİ. Duvar çivisine uygun donanım/montaj malzemesini kullanın ve şarj yuvasının sağlama bir şekilde monte edildiğinden emin olun. Merkepçe delinecek yerin hemen arkasında herhangi bir boru tesisatı (gaz, su, hava) veya elektrik kabloları, telleri veya kanal sisteminin bulunmadığından emin olun. Şarj yuvası, tüm yerel kanun ve yasalara ve yerel yönetmeliklere ve standartlara uygun olarak monte edilmelidir. Dyson, gerektirildiğinde koruyucu giysi, gözlük ve malmazelerin kullanılmasını tavsiye eder.

US INFORMACIÓN DE SEGURIDAD IMPORTANTE. Utilice los elementos de tornillería/fijación adecuados para su tipo de pared y asegúrese de instalar el accoplamiento en de manera segura. Compruebe que no hay ninguno tubería (de gas, agua, aire) ni cables eléctricos, alambres o conductos directamente detrás de la zona de montaje. El acoplamiento debe montarse conforme a las normas y códigos/estándares vigentes. (Se aplican las leyes federales, estatales y provinciales de Estados Unidos y Canadá). Dyson recomienda que se utilicen ropa, gafas y materiales de protección según sea necesario.

DC 34 DC 35
01-03 29.03.11 RCS PARIS 410 191 589