

bēm[®]
WIRELESS

speaker mojo

USER GUIDE

Contents

English	Page 4
Canadian Français	Page 19
Español	Page 35

Product Overview

In order to make sure you get the best possible results from your new Speaker Mojo, please thoroughly read and carefully follow all instructions in this User's Manual or on the product. Keep this User's Manual in a convenient location for future reference.

Package contents:

- Speaker Mojo x 1
- Power cradle x 1
- Power adapter x 1
- Micro USB charging cable x 1
- Aux cable x 1
- User's Manual x 1

If any of these were missing or damaged, please visit bemwireless.com to obtain replacement.

Compatibility


All devices enabled with Bluetooth technology, including iPhones, iPads, iPods, smartphones, laptops, tablets and more.

Also compatible with any device that has a standard 3.5mm earphone jack such as MP3 players, PSP, mobile phones, etc.

Meet the Speaker Mojo

Before learning about your Speaker Mojo, take a moment to look it over and familiarize yourself with its features.

Product Interface

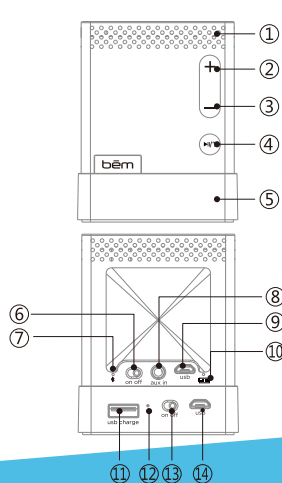

Speaker Mojo

1. Microphone
2. Volume +
3. Volume -
4. Play / Pause
5. Power Cradle
6. On/ Off switch
7. Bluetooth® indicator
8. Aux in
9. Micro USB power port
10. Power indicator

Power Cradle

11. USB port
12. Power Indicator
13. Charging switch
14. Micro USB power port

Getting Started

We know you are excited to experience your new Speaker Mojo. These two easy steps will get you up and running quickly.

Step 1: Charge It

Connect your Speaker Mojo to an outlet using the USB charging cable and power adapter. The red LED light will slowly flash during charging and turn green when it has reached a complete charge (Approx. 2 hours).

You can also put your speaker mojo onto the power cradle, and connect it to an outlet using the USB charging cable and power adapter to charge them both.

Step 2: Connect it

There are two options for connecting to your Speaker Mojo — wirelessly by Bluetooth® or wired using the included aux cable.

Connect Wirelessly

Once the Speaker Mojo has entered Bluetooth mode, the Bluetooth icon will light up and tone confirming that the unit is currently in Bluetooth pairing mode will sound. Go to the Bluetooth settings on your mobile phone, tablet or computer to find the device named “Speaker Mojo”. A tone will sound to confirm the device has paired successfully. Next time the Speaker Mojo and connected device will pair automatically.

Holding the Play/Pause button for 5 seconds will disconnect the connected device and enter pairing mode for pairing a new device.

Step 2: Connect it (continued)

Direct Connection

The Speaker Mojo can also be connected to any device that has a headphone jack or line out using the included aux cable.

Please note the play/pause button only operates when connected via Bluetooth.

Operation Details

Power on / Power off

Slide the power switch to “on” to turn on the Speaker Mojo. The Bluetooth indicator will light up to signify the unit is on and ready to be paired.

Slide the power switch to “off” to turn off the unit and the Bluetooth indicator light will go out.

Play modes

- Bluetooth mode: play an audio signal from the connected Bluetooth device.
- AUX mode: play an audio signal from the connected “wired” device.

Please note, if an Aux cable is connected to the speaker it will not play music from Bluetooth® connected devices.

Operation Details (cont.)

Play modes

Touch the “audio mode” on either side of the speaker or press “audio mode” button on the remote to shift among following play modes:

- Bluetooth mode: play an audio signal from the connected Bluetooth® device.
- AUX mode: play an audio signal from the connected “wired” device.

Please note, if an Aux cable is connected to the speaker it will not play music from Bluetooth® connected devices.

- FM mode: play FM radio.
- Nature Song Mode: play 6 built-in songs.
- Press “audio mode” switch to natural sound play mode;
- Use SKIP+/SKIP- to select the sound you want to play, and the selected icon will flash on the screen;
- The selected music will start playing immediately.

Bluetooth is the default play mode when the speaker is powered on for the first time. And the speaker can remember the last play mode and enter this mode automatically when it turns back on.

Speaker Phone

After pairing your mobile phone to Speaker Mojo with Bluetooth, the speaker phone function can be used.

- Making a call: Call will automatically transfer to the speakerphone. If not, tap play/pause button;
- Answering a call: Tap play/pause button to answer the incoming call;
- Ending a call : Tap play/pause button during the call to end the call;
- Rejecting a call : Hold play/pause button to reject the incoming call;
- Redial last number: Double tap play/pause button to redial the last number when it is not in a call.

Both play/pause button on speaker and remote work with this function.

Power Cradle

The Power cradle is a backup battery pack for Speaker Mojo and your Bluetooth device.

- The Speaker Mojo can be removed from the power cradle to be set anywhere you like. Put Speaker Mojo into the power cradle, it will triple the playing hours immediately. (*The playing hours could vary due to different working environments)

- The Power cradle features a standard USB charging port with 5V, 1A power output to charge your device like iPhones, iPods and smartphones*. Slide the on/off switch on the Power cradle to “on” to turn on the charging, to “off” to turn off the charging.

(*Please reference the instructions of device for details. The charging cable is not included.) Charging Your Device

Audio Use

Follow the above connection steps to pair a Bluetooth® device with the Speaker Mojo. At this point you can send any kind of audio signal to your speaker (music, video, gaming, etc.). Just use your device as normal and the audio will play through your Speaker Mojo.

Controls

Press the Play/Pause button to play or pause the music when using a music player through your Bluetooth® connected device. Pressing the + and - buttons will increase or decrease the volume on the Speaker Mojo. Please note that this will not affect the volume levels on the connected device.

Connection

Laptop / notebook / PC

As the Bluetooth® versions for these types of devices varies greatly, the connection methods will differ as well. If you can not connect with the Speaker Mojo using the previous

method instructed you may need to install a new version of the Bluetooth® driver.

Please reference the instructions of device for details.

Charging

Connect the standard USB end of the supplied USB cable to a USB power source (PC, USB power adapter...etc.)

Connect the Micro USB jack to the USB charging port on the unit or power cradle. The charging indicator will light up while charging. If you put Speaker Mojo into the power cradle, it will charge them both at the same time weather you connect the power to the Speaker Mojo or power cradle.

Please note, the Speaker Mojo LED charging indicator will not light up when the speaker is charging on the Power Cradle

It will take about 2 hours to fully charge the Speaker Mojo alone, 3 hours to fully charge the power cradle and 5 hours for charging them at the same time.

Charging Indicator Light Modes

Power indicator on Speaker Mojo

- Red LED / Flashing Fast: Battery is low, charge the unit soon;
- Red LED / Flashing Slow: Speaker Mojo is charging;
- Green LED: Battery is fully charged

Note: if the unit has not been used in the past 7 days please charge for 10 minutes before using the Speaker Mojo

Indicator on power cradle

- Red LED : Charging, it will goes off when it is fully charged;
- Blue LED : power output is on.

Troubleshooting

Issue: Pairing is unsuccessfully after multiple attempts

Solution:

- Check if the Bluetooth indicator light is on. If the indicator light is off, please press the power button to turn the unit on. If the Bluetooth indicator light still doesn't come on after pressing the power button, please charge the unit.
- Check for other Bluetooth devices around the surroundings that may interfere with searching and turn devices off.
- Power off and then power on the unit to restart the Bluetooth. Unplug any cables plugged into the AUX IN, restart all devices and then attempt pairing again.

Issue: Interference or static during playback

Solution:

- Avoid using the device between concrete or other building structures that may interfere with the signal.
- Please check if the battery level of the unit and the Bluetooth® device and charge if necessary.

For more troubleshooting help go to <http://bemwireless.com>

Maintenance

Please follow the instructions below for cleaning your Speaker Mojo

- Power off the unit and unplug the power adapter from wall outlet
- Use a soft, dry, lint-free cloth and wipe gently
- Do not use alcohol, benzene, thinners or other chemical detergents as these can cause the casing to be warped or discolored

For questions, comments or to purchase more bēm wireless products go to bemwireless.com

Storage

- Power off the Speaker Mojo If the unit will not be used for an extended period of time.
- Do not set the unit in a damp environment, high temperatures or in direct sunlight.

More Info

For questions, comments or to purchase more bēm wireless products go to: **bemwireless.com**

You can also follow us at:



facebook.com/bemwireless



twitter.com/bemwirelessco



youtube.com/bemwireless

For information on your product's warranty go to:
bemwireless.com/support

FCC Statement

CE2200

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for

14

FCC Statement (cont.)

a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

bēm wireless
<http://bemwireless.com/>
bēm wireless LLC.
1725 Kilkenny Ct.
Woodstock, IL, USA
Made in China

15

Technical Specifications

Note: All specifications are subject to change without notice

Product Name : Speaker Mojo

Model Number : HL2739

Power Supply: 5V,1A

Output Power: 1.5W X 2

USB charging output: 5V,1A x 1

Bluetooth V4.0+EDR , profile Supported: A2DP, AVRCP

Working Range: Approximately 25ft, 8m

Working atmosphere: 0°C-40°C / 20%-90%RH

Safety Instructions

This product is specially designed based on the full attention to safety; in order to make sure the accident-free operation, please abide the guidelines listed below:

- Always position the unit on a stable and level surface. Unstable surface can cause the unit to topple and fall, resulting in possible damage or injury
- Do not drop, unpack, open, beat, curve, prick and burn the unit
- Avoid using the unit nearby basins or sinks where it may come in contact with water

Safety Instructions (cont.)



- Do not place any ware with full water on the top of the unit, such as vase, glass, pot, and please avoid placing candle on the speaker surface as well
- Protect the using of the unit from any overheating devices (such as radiator, heating installation, cooking stove or other heating devices)
- Regardless of what reasons cause the unit damage, please ask for the maintenance personnel to repair
- If you want to do the cleaning, please turn off the unit and unplug the power cable from the outlet first
- Set the volume properly to prevent injury to the unit and your personal health

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING:

- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

IC ID STATEMENT

- English: "

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device."

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

- French:"

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.



Mojo Haut-parleur

MANUEL DE L' UTILISATEUR

bemwireless.com

bēm wireless | 1725 Kilkenny Court | Woodstock IL 60098

TEL: 855-839-8616

© 2014 bēm wireless