

USER MANUAL

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



Thanks for select our RF 2.4G PSII controller! For play more conviently and correctly, please read the manual carefully before playing.

Product brief Introduction

HP5139 wireless controller adopt 2.4GHz RF technology, with steady connection capacity, far distance, low function wastage; beautiful outlook, good handle , make you feel be personally on the scene!

Technology Specification

1. Compatible with PSX、PS1and PSII game console
2. Two selection model (ANALOG、DIGITAL)
3. Support TURBO function
4. Signal connect indicate
5. Auto/un-unto connection
6. Fixup ID code defending fault fuction
7. Power deplete low, low voltage indicate
8. Auto sleep saving electricity function
9. 12 buttons and 256 level simulate fuction
10. Grip with soft plastic to prevent slipping
11. Availability distance 10M
12. Work voltage : 6V 4 x 1.5V AAA battery
13. Work current : work current 6.5mA sleep status:15 μ A
14. Size : controller 155*110*75mm ; receiver 80 x 50 x 20mm
15. Weight : 156g

Product Introduction

1. Product function introduction as following picture:



Controller function sketch map



Receiver function sketch map

Use Introduction

- 1) . Open battery cover ,put in 4pcs 1.5V AAA battery as battery box polarity indication, then close it.
- 2) . Connect PSII console to TV, put in the game dish, insert receiver.
- 3) . Draw the switch in controller (HP5139) front to "ON" switch on , POWER LED bright , then switch on the game console,"CONNECT" in receiver bright ; If "CONNECT" trun from winking to lasting, connection for controller and receiver is ok, play is ok ; If "CONNECT" continue winking , show that connection of controller and receiver is off.
- 4) . Press"CONNECT" , winking speed fast, then press"CONNECT" in controller , until "CONNECT" in receiver continue bright, connction of controller and receiver is ok.
- 5) . When connection is ok, no work for 5 minutes , enter to auto sleep model. Press "CONNECT" in controller for 3 seconds awake , POWER LED is on , get right.
- 6) . When battery in low, POWER LED continue winking remind of changing battery.
- 7) . Press any function button, then press"TURBO" to set this button with TUTBO function ; Press this button by setting, then press"TURBO" to cancel TURBO function ;press"TURBO", then press"START" select the speed of TURBO, total 4 speed for selection, press once for changing one speed.
- 8) .When controller beyond the receive distance, the"CONNECT" in receiver continue winking, then controller in this status without function or fuction is abnormal
- 9) .When connection of controller and receiver finish, then play need notconnect by person, auto connect as

switching on.

Attention

- a) When put in battery, please set as battery box polarity indication, don't put in different class battery
- b) After play, switch to the power switch to "ON", avoiding waste power supply.
- c) When warn of low voltage, please change battery immediately.
- d) No work for long time, please take out battery , avoid leaking from battery to damage inner current.
- e) Don't dismantle this products.
- f) The final explantation right for this manual belong to ECORE TECHNOLOGY(CHINA) CO., LTD.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.