

USER MANUAL

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Controller Set-up:

1. Charge the battery by plugging the guitar into a controller port on your Playstation 2 system. A solid green light indicates that the battery is charging. When the green light goes off, the battery is fully charged.

CAUTION: The Shredmaster controller is fully functional when plugged in for charging.

2. Connect the included receiver to control port 1 of your PlayStation 2 console. Note: if using multiple Rock Guitars, connect each receiver to a different control port.
3. Power your PlayStation 2 system "ON". The wireless receiver should display a solid red light and a blinking green light.
4. power "ON" your wireless Rock Guitar controller by sliding the power switch to the "ON" position. once a connection is established, the green light should remain solid.
5. The Shredmaster controller features an auto-sync function that will automatically connect your controller to the receiver. If Shredmaster controller does not connect, press the "CONNECT" button on the included receiver. When the red light starts flashing, press the "CONNECT" button on your Shredmaster controller to complete the connection.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.