

USER MANUAL

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Controller Set-up:

1. Open the battery compartment and install 3 "AA" batteries. Replace battery led.
CAUTION: DO NOT use/min rechargeable batteries. Never mix old and new alkaline batteries.
2. Connect the included receiver to control port 1 of your PlayStation 2 console. Note: if using multiple Rock Guitars, connect each receiver to a different control port.
3. Power your PlayStation 2 system "ON". The wireless receiver should display a solid red light and a blinking green light.
4. power "ON" your wireless Rock Guitar controller by sliding the power switch to the "ON" position. once a connection is established, the green light should remain solid.
5. The Rock Guitar controller features an auto-sync function that will automatically connect your controller to the receiver. If Rock Guitar controller does not connect, restart your PlayStation2 Console.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.