


PS3 Lava Glow Wireless Controller

Contents:

- PS3 Lava Glow Wireless Controller
- PS3 Lava Glow Wireless Receiver

Operation:

1. Open the battery compartment located on the bottom of the PS3 Lava Glow Wireless controller. Insert 3 x "AAA" batteries
2. The PS3 Lava Glow Wireless controller features a 3 position power switch located on the bottom side of the controller
 - OFF=The controller is powered "OFF";
 - LED OFF(middle Setting)=This setting allows you to have full use of the controller without the internal LED's being "ON";
 - ON LED=The controller and LED's are powered "ON".
3. With your PlayStation 3 ® game console powered "ON", plug the PS3 Lava Glow Wireless Receiver into controller port #1 (or other, if using multiple controllers) of your game console. LED will begin to flash slowly. Press the "CONNECT" button on the receiver,(the LED will flash rapidly)
4. Press the "MENU" button on the PS3 Lava Glow Wireless Controller, the four (4) channel indicators flash rapidly; Press "MENU" button again to enter an operation channel, the corresponding channel indicator(s) will become solid, and the receivers LED as well. You are now ready to enjoy your new PS3 Lava Glow Wireless Controller.
5. Hold the "MENU" button for Three (3) seconds to enter main menu of PlayStation 3® game console.
6. When connecting multiple controllers, connect each controller separately. First connect player one's controller and then connect the remaining controllers. The channel indicator(s) displaying as below:

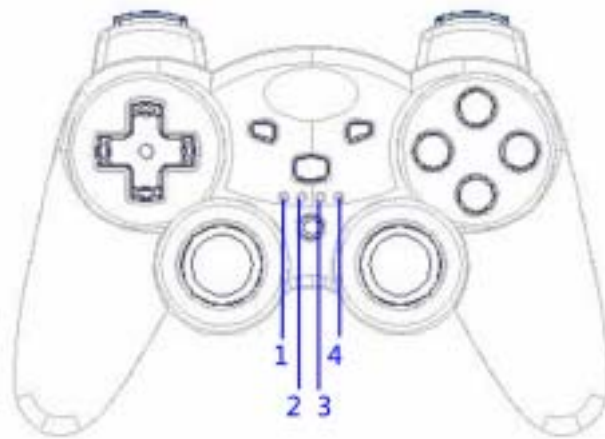

- Channel 1=Indicator one (1) lights up
- Channel 2=Indicator two (2) lights up
- Channel 3=Indicator three (3) lights up
- Channel 4=Indicator four (4) lights up
- Channel 5=Indicator one (1) + four (4) lights up
- Channel 6=Indicator two (2) + four (4) lights up
- Channel 7=Indicator three (3) + four (4) lights up

TURBO Programming:

Press any action button and "TURBO" button at same time to set the button with the TURBO function. Do it again to cancel TURBO function.

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.