Start up device

Slide the switch from 'OFF' to 'ON' position.

Device will light up RED to indicate device is ON.

Modes

Bluetooth /FM

Auxiliary / TF Card Reader

Bluetooth

Push 'MODE' button once.

Activate Bluetooth mode on Bluetooth-enabled mobile device.

Search for "CACW Speaker" on mobile

device's Bluetooth menu.

Pair the mobile device to CACW Bluetooth

Speaker. This is

typically done by pressing "CACW Speaker" on mobile device, but may vary across devices.

Press "Yes" or "Confirm" to connect

the mobile device.

Speaker will beep twice to indicate mobile device has connected successfully.

*NOTE: Only one mobile device may be connected to CACW Speaker at a time. To connect new device, ensure no other mobile device is connected and follow Bluetooth pairing steps.

FΜ

you need put the cable into mini usb port and the cable act as FM antenna, then you can enjoy your FM function.

Auxiliary

Push 'MODE' button twice.

>∥/(phone) Short-press to toggle between Auxiliary and TF Card Reader Mode.

Connect 3.5mm jack cableto mobile device (jack cable not included)

TF Card Reader

Push 'MODE' button three times.

 >||/(phone) Short-press to toggle between Auxiliary and TF Card Reader Mode.

Insert TF Card into TF Card Reader
Slot (TF card not included)

Music Play and Controls

Use your CACW Bluetooth Speaker to play your favorites songs.

- Use mobile device's music app to select songs, play, pause, stop, and adjust volume (Bluetooth or Auxiliary Modes only).
- Use CACW Speaker to control your music (Bluetooth and TF Card Modes only)
- +/>>| Short-press to play next song .

 Long-press to increase volume.
- --/>>| Short-press to play previous song. Long-press to decrease volume.
- >||/(phone) Short-press to play/pause song.

Hands-free Calling

Your CACW Mobile Speaker also comes equipped for hands-free calling (Bluetooth Mode only)

>||/(phone) Short-press once to answer incoming call. Short-press twice to call last number dialed. Long-press to reject incoming calls.

Speaker Charge

Speaker comes equipped with USB cable to charge the device. Device will begin to beep continuously when device has low charge.

- Connect charging cable to USB/AUX port on Speaker.
- Connect USB cable to a computer or to a wall jack adapter

(wall jack adapter not included).

**NOTE: some computers may not be capable of charging speakers. If unable to charge try a different computer or wall lack.

Note: The Standard USB port used for charging for other device.

User Manual

Bluetooth Speaker

Model:PRR#1639-WDMPA00047(75868)

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.