

DAEWOO



LCD TV User's Manual

Model No. : DLN-26D3, DLN-30D3

Please observe all safety precautions
when using this product.

Please read this manual carefully before
using this product.

Quick and Easy Installation

Versatility and Expandability

That doesn't make you feel fatigue on your Eyes.

Flat-Panel Digital Display easy on the Eyes.

Important Safety Instructions

Important Safety Information	4-6
------------------------------------	-----

User Guidance Information

What is LCD TV?	7
Name of each part	8
Controls and Functions.....	9
Mounting on a wall	10
Installation Precautions	10
Installing an Antenna	11
Remote controller.....	12
Precautions	13

Connection

VCR Connections.....	14
Cable TV Connections	15
Camcorder/ Game Console Connections	16
DVD Connections.....	17
HDTV Connections	18
PC Connections	19

Basic Use

Powering the LCD TV	20
Initial Settings.....	20
Watching TV	21
Memorizing the channels	22-23
Seleting Input Source	23
Changing Picture Settings.....	24

Basic Use

Changing Sound Settings	25
Selecting the Menu Language	26
Setting OSD Tone Menu Background	26
Setting Blue Background	27

Application

Changing Screen Size	28
Adjusting Unclear Screen	29
Using the V-Chip	30-33
Viewing the Closed Captions	34
Viewing Picture in Picture	35
Picture in Picture Display Mode	36
Auto Volume Level	36
Listening to Stereo Sound/ MTS (Multi Television Sound)	37
Resetting LCD TV Settings	37
Setting Time	38
Automatic Power On/ Off	39

Monitor

Using TV as a Monitor	40
Adjusting PC Screen	40
Adjusting Color Tone	41

Maintenance and Service

Trouble shooting Tips	42-43
Supported Display Modes	44

Important Safety Instructions

Important safeguards for you and your new product

Always be careful when using your LCD TV. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Important Safety Instructions

- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.

This symbol alerts you that important literature concerning operation and maintenance has been included with this product.



NOTE TO CABLE/TV INSTALLER :

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

Important Safety Instructions

WARNING

TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Caution :

- These servicing instructions are for use by qualified service personnel only.
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important :

One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws.

Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.

REGULATORY INFORMATION :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

What is LCD TV?

LCD (Liquid Crystal Display) is a next generation flat-panel display module. Liquid crystal material is contained between sheets of glass and electricity causes the liquid crystal material to reflect or block the light emitted from a light source inside the display chassis.

By incorporating this LCD display module, LCD TVs enable you to enjoy outstanding picture quality without the worries of space limitation and harmful radiation you may have experienced with conventional CRT TVs.



Features

- Picture-in-Picture : Enables you to simultaneously display two different image sources.
- PC Compatible Monitor : Enables you to connect PC (D-Sub, DVI) input for displaying high-resolution SXGA (1280x1024, 60Hz) PC images.
- HDTV-Ready Display : Enables you to view high-definition digital pictures using a DVD player or HDTV set-top receiver.
- Various Picture/ Sound Controls : Enables you to set the picture and sound settings for a number of different types of programs and viewing and listening conditions.
- Auto Power On/Off Timer : Enables you to set the TV to automatically turn ON or OFF at a preset time.
- Auto Channel Search : Enables you to set the TV to search for all available standard broadcast and cable TV channels and store them automatically.

 
Names of each part


Front View

DLN-26D3



DLN-30D3



VOLUME () Button : VOLUME -, + Button

PR Button : PROGRAM/ Channel -, + Button

MENU Button : OSD MENU Display Button



Source select Button : TV, AV, S-Video,
Component 1,
Component 2,
DVI, PC Select Button

Standby Button

Main Power Button : Please turn off the main power switch, if the LCD TV will not be used for a long period of time

Controls and Functions

Back View

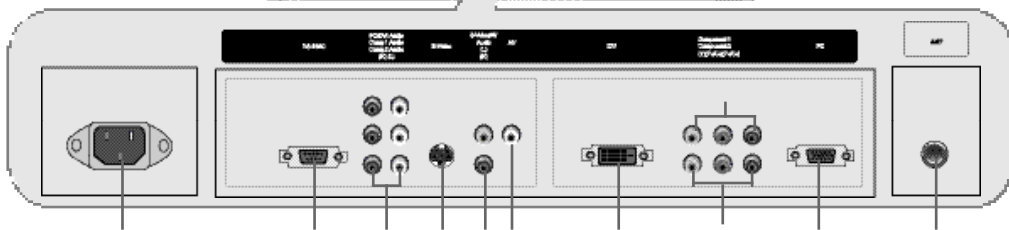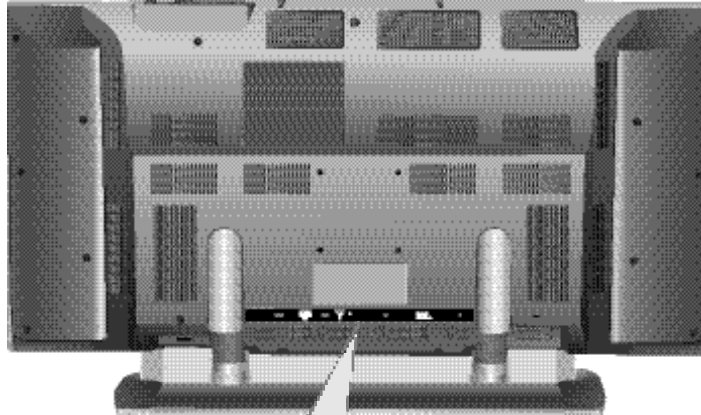

- | | |
|--|--------------------|
| AC Input | DVI-D Input |
| RS-232C | Component1 Input |
| Audio Input (PC/DVI, Component1, Component2) | Component2 Input |
| S-Video Input | PC (D-Sub) Input |
| S-Video/ AV Audio Input | Antenna (RF) Input |
| AV Input | |

Accessories

 
The configuration of the components may look different from the following illustration.



Antenna Cable



Power Cord



User's Guide



Remote Control



Battery (2) (AAA, 1.5V)

Mounting on a Wall



Your LCD TV can be mounted on a wall as shown in the figure above.



Installation Precautions

Wall Mounting

Please secure enough space for safe use. (Please refer to A and B.)

Installation of the LCD TV in an improperly ventilated location can cause a fire or damage to the LCD TV due to increased temperature.

A →
(Mounting on a wall)

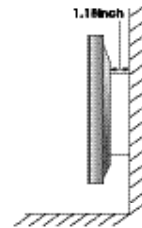
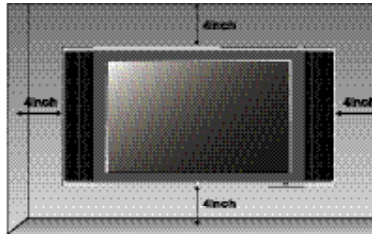


Contact your dealer to purchase the "Adjustable-angle wall mount" required for wall-mounted installation.


Using the Stand

Do not install on an unstable location with support area smaller than the LCD TV.

B →
(Using the Stand)

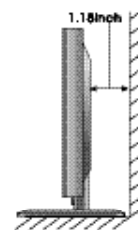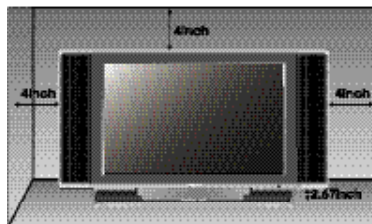

Installing an Antenna

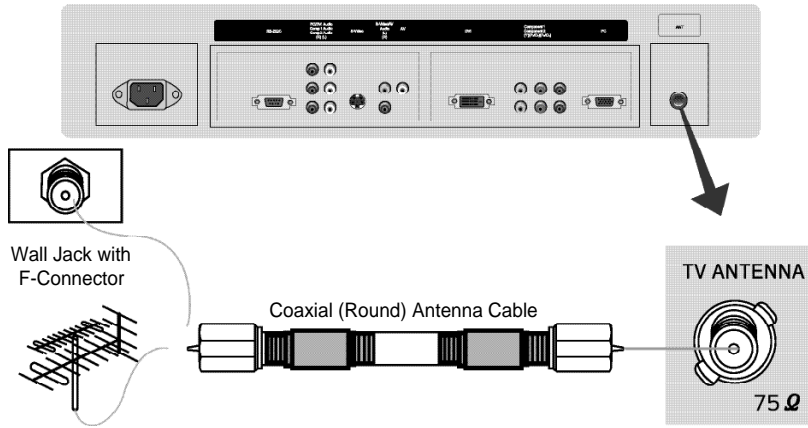

Connecting an Outdoor Antenna


For the best reception, we recommend you use an outdoor antenna.

Severely weathered antennas and antenna cables can reduce the signal quality.

Before making any onnections, inspect all antenna hardware. Any service center can explain the various outdoor antennas available to you.


300 Ohm Flat Wire

Connect the 300 ohm flat wire to the screws on the 300 ohm to 75 ohm adapter. Push the end of 300 ohm to 75 ohm adapter onto the 75 ohm antenna jack.

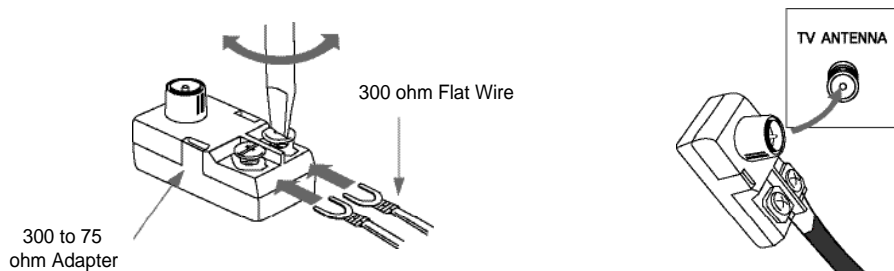

75 Ohm Coaxial Cable


Connect the 75 ohm coaxial cable directly to the 75 ohm antenna jack.

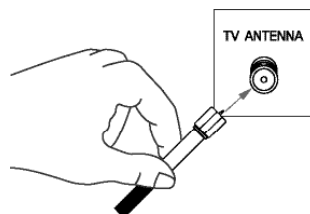

Remote Controller

Functions of remote control buttons

The remote control is using Infra-Red (IR). Point it towards the front of the LCD TV. The remote control may not work correctly if it is operated out of range or out of angle.

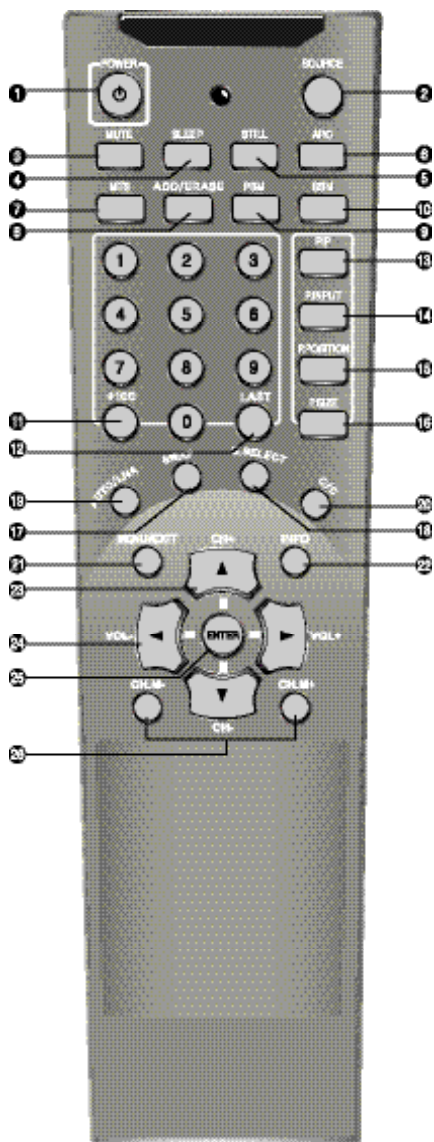

1. POWER : TURNS THE TV ON AND OFF (page.20)
2. SOURCE : USE TO SELECT AN INPUT SOURCE (page.23)
3. MUTE : PRESS TO TEMPORARILY CUT OFF THE SOUND (page.21)
4. SLEEP : PRESS TO SELECT A TIME FOR THE TV TO TURN OFF AUTOMATICALLY (page.39)
5. STILL : PRESS TO STOP THE ACTION DURING A PARTICULAR SCENE (page.21)
6. ARC (Aspect Ratio Control) : PRESS TO CHANGE THE SCREEN SIZE (page.28)
7. MTS (Multi-Television Sound) : PRESS TO SELECT MONO OR STEREO MODE (page.36)
8. ADD/ ERASE : PRESS TO ADD OR ERASE CHANNELS IN THE TV'S MEMORY (page.23)
9. PSM : PICTURE STATUS MEMORY KEY (page.24)
(CUSTOM, DYNAMIC, STANDARD, MOVIE, MILD)
10. SSM : SOUND STATUS MEMORY KEY (page.25)
(CUSTOM, STANDARD, MUSIC, MOVIE, SPEECH)
11. +100 : PRESS TO SELECT CHANNELS OVER 100.
FOR EXAMPLE, TO SELECT CHANNEL 107,
PRESS "+100" THEN PRESS "0" AND "7"
12. LAST : TUNES TO THE PREVIOUS CHANNEL (page.21)

PIP CONTROL KEY (page.35)

13. PIP : PIP ON/OFF
 14. P.INPUT : PIP INPUT SELECT KEY
 15. P.POSITION : PIP POSITION CONTROL KEY
 16. P.SIZE : PIP AND PBP MODE CHANGE
 17. SWAP : MAIN AND SUB SOURCE SWAP
 18. S.SELECT : MAIN OR SUB SOUND SELECT KEY
19. AUTO/ LNA : PC MODE : AUTO IN PROGRESS KEY (Press to Control the Monitor screen automatically)
TV MODE : LNA KEY (Low Noise Amplifier)
 20. C/C : CLOSED CAPTION (page.34)
 21. MENU/EXIT : PRESS TO MENU SCREEN SHOWS OR EXIT
 22. INFO : PRESS TO DISPLAY THE CURRENT CHANNEL AND AUDIO/ VIDEO SETTINGS (page.21)
 23. (CH+, CH-) : PRESS TO CHANGE THE MEMORY CHANNELS OR MENU CONTROL KEY
 24. (VOL-, VOL+) : PRESS TO INCREASE OR DECREASE THE VOLUME OR MENU CONTROL KEY
 25. ENTER : SAVE THE VALUE
 26. CH.M-, CH.M+ : PRESS TO CHANGE THE ONE BY ONE CHANNEL


Precautions

Avoiding Remote Control Problems


1. Check the polarity (+,-) of the batteries in the remote controller.
2. Check that the batteries have power.
3. Check that the LCD TV is powered and that it is properly plugged in.
4. Check if any three-wavelength lamp, special fluorescent or neon sign is turned on near the LCD TV.

Inserting Batteries in the Remote Controller


1. Open the cover out completely.

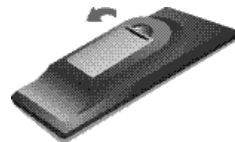

2. Insert the two supplied batteries (AAA, 1.5V). Ensure that the polarities (+ and -) of the batteries are aligned correctly.

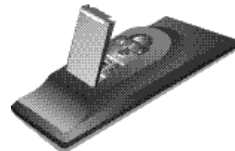

3. Replace the cover.

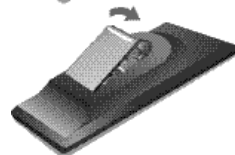

CAUTION :

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the national code (Recycling program).


How to use remote controller

- The remote control should be operated within 23feet(7m) and 30° to the left and the right of the IR receiver on the front of the LCD TV.
- Used batteries should be disposed properly.

VCR Connections


Connecting to the AV terminal

Connection terminals of other appliances differ by manufacturer and model.

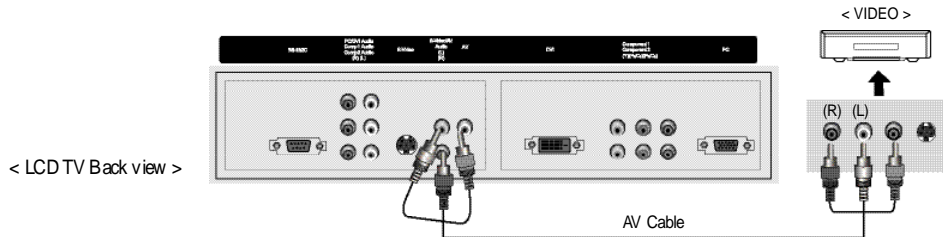



- Connect the LCD TV's AV In terminal to the VCR's AV Out terminal using the AV cable. (Make sure the color of the terminals and the color of cable are the same)

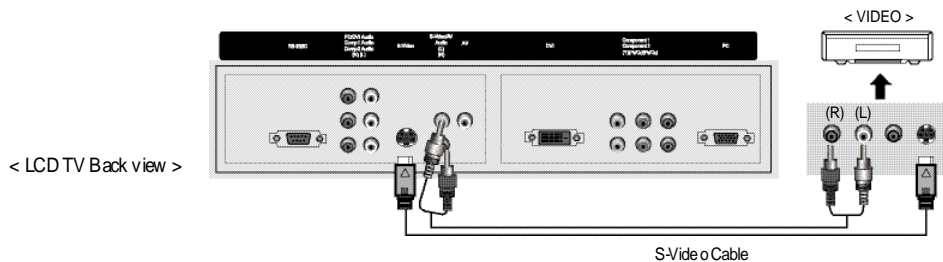Connecting to the S-Video terminal



Use the S-Video cable for higher picture quality.


Playing the VCR

1. Turn on the LCD TV and press  on the remote controller.
2. Use  to move to "AV".
 - If S-Video has been connected, select "S-Video".
3. Turn on the VCR, insert the tape and press play button.

Cable TV Connections


Connecting to the AV terminal

In order to watch Cable TV, Subscribe to your local Cable TV company and install a separate converter (Set-Top-Box)
Connection terminals of other appliances differ by manufacturer and model.

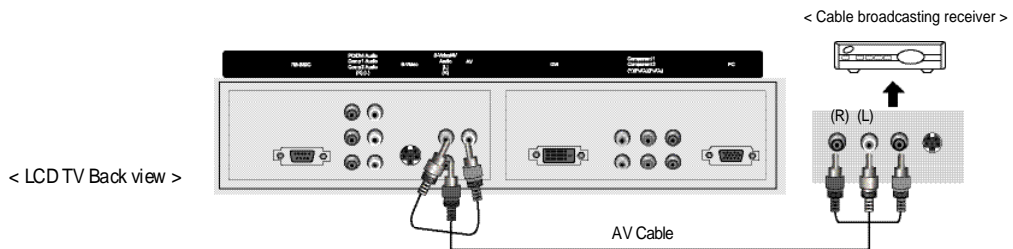

- Connect the LCD TV's AV In terminal to the cable broadcasting receiver AV Out terminal using the AV cable. (Make sure the color of the terminals and the color of cable are the same)

Connecting to S-Video terminal

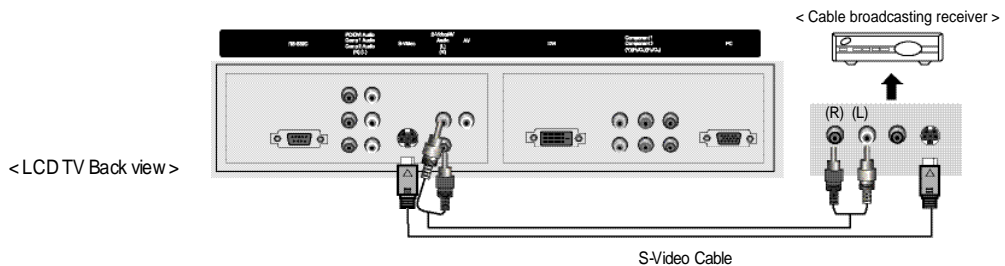

Use the S-Video cable for higher picture quality.

Viewing Cable TV

1. Turn on the LCD TV and press  on the remote controller.

2. Use  to move to "AV".


- If S-Video has been connected, select "S-Video".

3. Turn on the cable broadcasting receiver and select the channel you wish to view.

Camcorder/Game Console Connections


Connecting to the AV terminal

Connection terminals of other appliances differ by manufacturer and model.

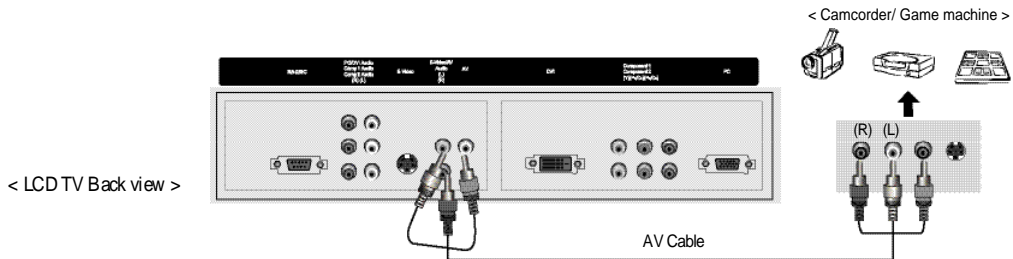



- Connect the LCD TV's AV In terminal to the camcorder/game console's AV Out terminal with the AV cable. (Make sure the color of the terminals and the color of cable are the same)

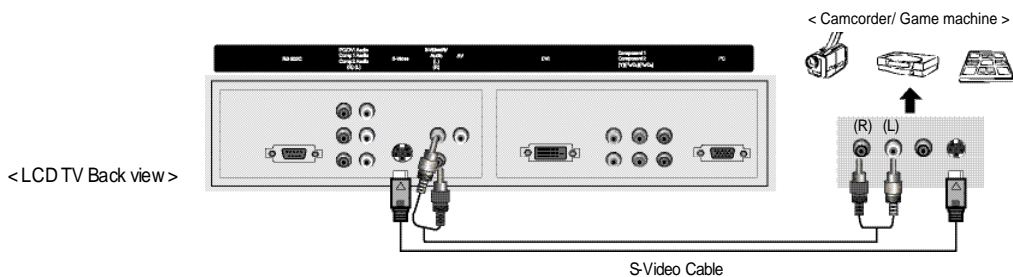Connecting to S-Video terminal



S-Video cable can be used if there is an S-Video terminal.


Using Camcorder/Game Console

1. Turn on the LCD TV and press  on the remote controller.
2. Use  to move to "AV".
 - If S-Video has been connected, select "S-Video".
3. Turn on the Camcorder or video game and Set to Video mode.
(Please refer to the User's manual of Camcorder/ Video game for more information)
4. Insert tape into Camcorder and press play button or insert disc into the Video game console.

DVD Connections


Connecting to the component terminal

Connection terminals of other appliances differ by manufacturer and model.

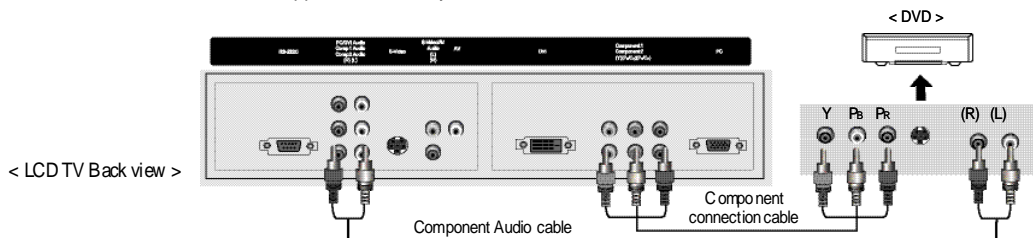


1. Connect LCD TV's Y, Pb, Pr terminal in Component 1 or 2 to DVD's Video Out terminal using the external cable.
2. Connect LCD TV's Audio terminals (left & right) in Component 1 or 2 to DVD's Audio Out terminal using the Audio cable.

Connecting to the S-Video terminal

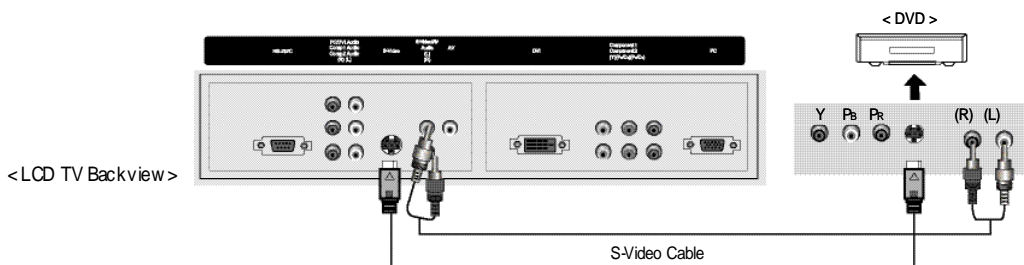



S-Video cable can be used if there is an S-Video terminal.

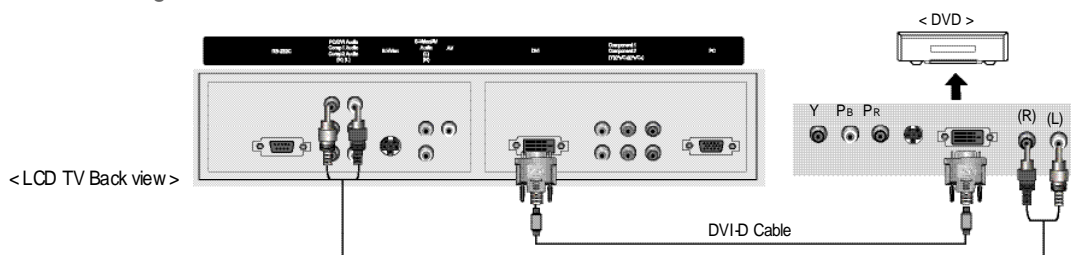Connecting to the DVI-D terminal




Playing the DVD

1. Turn on the LCD TV and press  on the remote controller.
2. Use  to move to "Component1" or "Component2".
 - If S-Video has been connected, select "S-Video".
3. Turn on the DVD, insert the DVD and press Play button.

HDTV Connections

Connecting to the component terminal


Connection terminals of other appliances differ by manufacturer and model.

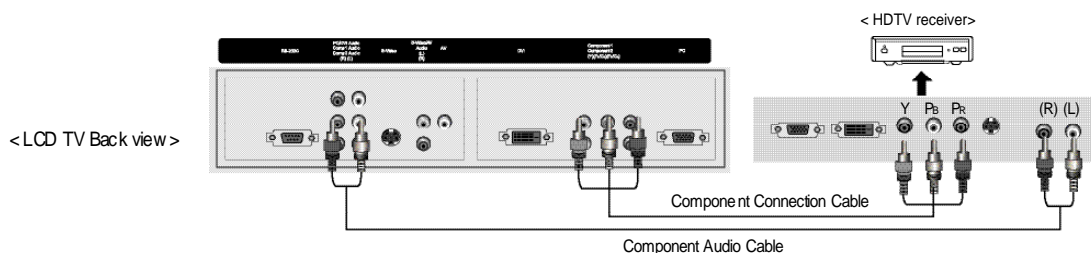

1. Connect LCD TV's Y, Pb, Pr terminal in Component 1 or 2 to HDTV receiver's Video Out terminal using the external cable.
2. Connect LCD TV's Audio terminals (left & right) in Component 1 or 2 to HDTV receiver's Audio Out terminal using the Audio cable.
3. It must agree Component's number of Y, Pb, Pr terminal and Audio terminal.



HDTV receiver's output terminal can be marked Y, Pb, Pr or Y, Cb, Cr according to products.

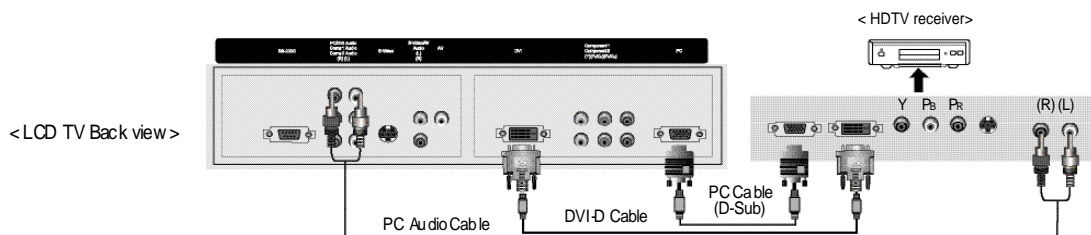Connecting to the PC/ DVI terminal



- Some of HDTV receiver(Set-Top-Box) have an PC Connector (D-Sub 15pin) DVI connector instead of Component output .
- Connect Audio Cable from the Audio output terminal of receiver to the PC Audio input terminal of the LCD TV.


Viewing HDTV

1. Turn on the LCD TV and press  on the remote controller.
2. Use  to move to "Component1" or "Component2".
 - If D-Sub 15 Pin terminal has been connected, select "PC".
 - If DVI-D has been connected, select "DVI".
3. Turn on the HDTV receiver and select the channel that you want.

PC Connections

Connecting to the PC /DVI terminal

Connection terminals of other appliances differ by manufacturer and model.

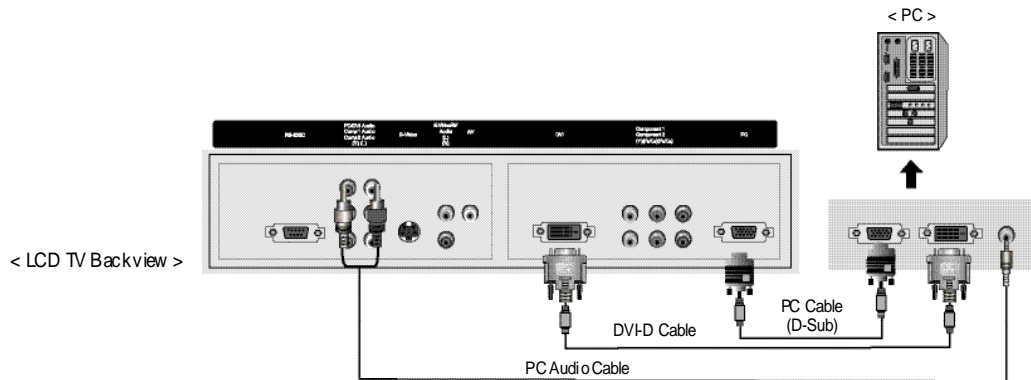

- Connect LCD TV's PC Input terminal to PC's D-Sub terminal using the D-Sub cable.
- Connect LCD TV's PC Audio terminal to PC's Audio terminal using the Audio cable.
(Only possible for PC's with Audio terminal)
- If there is a DVI-D terminal in your PC, use the DVI-D cable connection.

How to Use as PC

1. Turn on the LCD TV and press  on the remote controller.

2. Use  to move to "PC".

If DVI-D has been connected, select "DVI"

3. Set the PC video output mode to VGA (640 × 480)/ SVGA (800 × 600)/ XGA (1024 × 768), SXGA (1280 × 1024, 60Hz). In the mode higher than SXGA (1280 × 1024, 60Hz) "Out of Range" message appears. Be sure to change your PC video format to less than SXGA mode.

Powering the LCD TV

Power on/ off

- To turn the LCD TV on :
Press the "Main Power" button of LCD TV and then press the "Standby" button.
- To turn the LCD TV off :
Press "Standby" button on the LCD TV and then press the "Main Power" button.
Turning the main power switch off will save energy. It is the same as unplugging the power cord.
If ON Time setting is set, the main power should be ON.
- To turn on/off by remote controller :
Press the Power button of remote controller (If the LCD TV is not turned on, check that the "Main Power" button on the LCD TV main body is turned on. The main power indicator will light up red if turned on).

⚠ CAUTION :


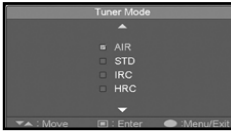





After turning off the main Power, please wait at least more than 3 seconds to turn the main power back on.

Initial Settings

- When the brand new television set it turned on for the first time, following settings can be set using the plug and play function of the TV.

Using the menu

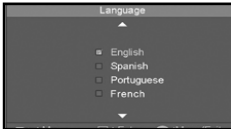Press the "Main Power" button of LCD TV and then press the "Standby" button.
You will see the Tuner Mode selection menu.

Use		to move to the desired "Tuner Mode". (See page. 22)	
Press		to select. Automatically "Auto Search" beginning. After "Auto Search" ends, select the desired Language.	
Use		to move to the desired "Language".	
Press		to select.	
Press		to go back to the previous menu.	

Channel Selection



increases the memory channel.
decreases the memory channel.


You will see all the channels that the TV has memorized.



increases by one channel.
decreases by one channel.

You will see channels that were either erased or not memorized.

To go back to the previous channel

Press  to go back to the channel you were previously viewing.

To View the still picture

Press  .

Picture will freeze, but sound will continue to be heard.

Press  again to cancel.

Volume Control




increases the volume.
decreases the volume.




To turn off only sound

Use the mute function to turn off the LCD TV sound for a while, when a phone or a bell rings.


Press  button again to hear the sound again.




To check the current state

Press  button on the remote control.

Display shows user's setting and selections.

Press  button or wait 10 seconds for the display to disappear.

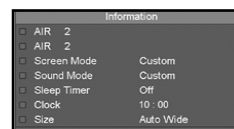

Memorizing the Channels

Selecting the Video signal-source.

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV.

Press



Use




to move to



Press



to select "Tuner Mode".

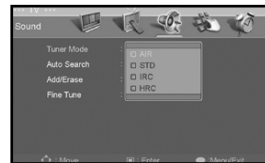

Use




to move to the desired signal source.

Press



to go back to the previous menu.

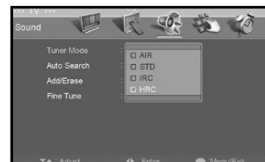

STD, IRC and HRC identify Various types of Cable TV systems.

Contact your local company to identify the type of cable system that exists in your particular area.

- AIR : Airwaves broadcasting
- STD : Standard CATV frequency
- IRC : Incrementally Related Carrier
- HRC : Harmonically Related Carrier

Storing Channels in Memory (Automatic Method)

First, Select the correct signal source (AIR, STD, IRC, HRC)

Press



Use



to move to



Press



to move to "Auto Search".

Press



to select.



Use



to move to "Start".

Press



 
to select.

Searching all the channels on each tuner modes (AIR, STD, IRC, HRC) using Auto search.

Press



to go back to the previous menu.



Memorizing the Channels

Adding and Erasing Channel (Manual Method)


Press



.

Use



to move to .

Press




to move to "Add/ Erase"

Press



to select.

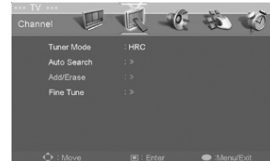

Use

 


to move to "Add" or "Erase".

Press



to select.



Press



to go back to the previous menu.

Or press



button on the remote control.

Selecting Input Source

You can select between the TV signal and the input signal of other appliances connected to the TV. Use this function to switch to the input source you wish to view.

Press



button on the remote control.

Use




to move to the desired input source.

Press



to select.

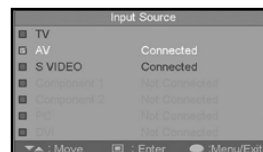


Aside from the watching TV, you can connect AV, S-Video, Component1, Component 2, PC and DVI to the TV set and enjoy these functions.

All input sources will be automatically detected and displayed on screen, but you may select an activated source when the input cable is connected only.

Changing Picture Settings

Press  button on the remote control.

 Press the mode buttons on the shown on the screen repeatedly to adjust the settings.



- Custom : Select to set user's preferences.
- Dynamic : Select when using the LCD TV in a brightly lit environment.
- Standard : It is the best screen setting (factory setting).
- Movie : Select when watching a movie.
- Mild : Select when using the LCD TV in a dimly lit environment.

Custom Picture Adjustment

Press



Use



to move to



Press



to select "Custom Adjust".



Use



to move to the desired category.

Use



 
to adjust the setting.



Use



select between Brightness/ Contrast/ Color/Tint/ Sharpness.



Press



to go back to the previous menu.

Custom Mode

- Brightness : It adjusts the brightness of the image.
- Contrast : It adjusts the contrast of image.
- Hue : It adjusts the intensity of the color.
- Saturation : It adjusts the natural tint of the image.
- Sharpness : It adjusts the clarity of the image.

Changing Sound Settings

Press  button on the remote control.

Press the mode buttons on the shown on the screen repeatedly to adjust the settings.




- Custom : Select when listening to the sound to user's preference.
- Standard : It is the flat sound setting with no equalizer effect at all.
- Music : It is preset for music listening.
- Movie : It is preset sound for watching a movie.
- Speech : It is preset for hearing vocal audio clearly.

Custom Sound Adjustment


Press 

Use  to move to .




Press  to select "Custom Adjust".




Use  to move to the desired category.



Use  to adjust the setting.

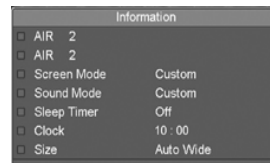









Press  to go back to the previous menu.

Custom Mode





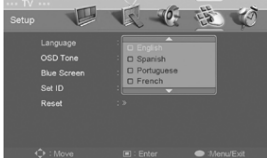


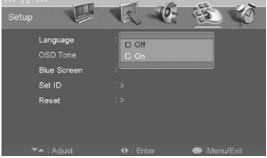

- 10KHz, 3KHz, 1KHz,300Hz, 100Hz, : It adjusts the volume by frequency bands and the user can select the desired sound quality.
- Balance : It adjusts the volume of speakers on the left and the right.

Selecting the Menu Language

Menu screen can be viewed in the language preferred by the user.






Press		.		
Use		to move to		
Press		to select "Language".		
Use		to select the desired language.		
Press		to go back to the previous menu.		


Setting OSD Tone Menu Background

Press		.		
Use		to move to		
Press		to move to "OSD Tone".		
Press		to select.		
Use		to select the "On".		
Press		to go back to the previous menu.		


Setting Blue Background

The LCD TV can be set to display blue screen when no TV signal or signal from other connected appliances are being received. If there is an incoming signal, the blue screen will be replaced by the normal picture screen.

- Press  .
-
- Use  to move to  .
- Press  to move to "Blue Screen".
- Press  to select.
-
- Use  to select the "On".
- Press  to go back to the previous menu.

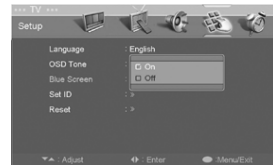


Changing Screen Size

Press  button on the remote control (aspect ratio controller).



In PC/DVI input mode, you can only select either the Wide or the 4 : 3 (normal) mode.

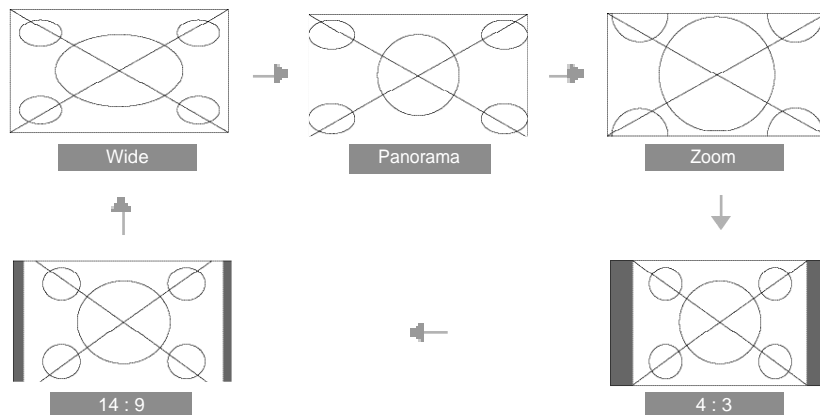

Screen Size

- Wide - It makes 16 : 9 format for input signal.
- Panorama - It makes 4 : 3 format fit into 16 : 9 format with minimal loss in content.
- Zoom - It enlarges the natural screen factor by approx.
- 4 : 3 - It is the standard format of broadcasting.
- 14 : 9 - It makes 14 : 9 format for input signal.

Adjusting Unclear Screen

Use screen fine-tune controls to adjust the screen when picture quality is unclear or lines appear.

Press



.

Use



to move to



.

Press



to move to "Fine Tune".

Press



to select.



Use



to tune.



Press



to go back to the previous menu.

To return to initial setting, use









to select "Reset" and press



Using the V-Chip

The V-Chip feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a password before any of the V-Chip restrictions can be set up or changed.





Press		.	
Use		to move to	
Press		to move to "V-Chip".	
Press		to select.	



The "ENTER Password" screen will appear. Enter your 4-digit number. The default password for a new TV set is . After entering a valid password, The "V-Chip" Screen will appear.






How to Enable/ Disable the V-Chip


- Use  to move to "Status"
- Press  to select.
- Use  to select the "On" or "Off".
- Press  to go back to the previous menu.



Setting up your V-CHIP password



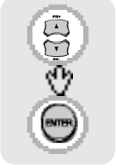



First, Set up a personal identification number(password) and enable the V-Chip.

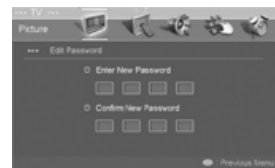- Use  to move to "Change password"
- Press  to select.
The "Edit password" screen will appear. Press number button to select the "Enter New Password" and "Confirm New Password" (4-digit).
- Press  to go back to the previous menu.



How to set up Restrictions using the "TV guidelines"

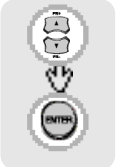First, Set up a personal identification number (password) and enable the V-Chip.
 Parental restrictions can be set up using either of two methods ;
 The TV guidelines or the MPAA rating.

- Use  to move to "TV Parental Guide".
- Press  to select.
- Use  or  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.



The V-Chip will automatically block certain categories that are "More restrictive".
 For example, if you check "L" Sub-rating in TV-PG, then the "L" Sub-rating in TV-14 and TV-MA will automatically be checked.

- TV-Y : Young Children
 - TV-Y7 : Child 7 and over
 - TV-G : General audience
 - TV-PG : Parental guidance suggested
 - TV-14 : Parents strongly cautioned
 - TV-MA : Mature audience
- } (young Children through age 7)
- } (everybody else)

The restrictions for these two groups work independently.

- FV : Fantasy Violence
- V : Violence
- S : Sexual situation
- L : Adult Language
- D : Sexual Suggestive Dialog






Using the V-Chip

How to Set up Restrictions using the MPAA Ratings






The MPAA rating system uses the Motion Picture Association of America(MPAA) system, and its main application is for movies.

When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable rating (either MPAA or TV-Rating).

First, Set up a personal identification number(password) and enable the V-Chip.

- Use  to move to "MPAA"
- Press  to select.
- Use  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.






- Use  to move to "Canadian English".
- Press  to select.
- Use  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.



- E : Exempt
- C : Children
- C8+ : Children eight years and older
- G : General programming. Suitable for all audiences
- PG : Parental Guidance
- 14+ : Viewers 14 years and older
- 18+ : Adult Programming

Using the V-Chip


- Use  to move to "Canadian French".
- Press  to select.
- Use  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.




- E : Exemptées
- G : General
- 8 ans+ : General-Deconseille aux jeunes enfants
- 13 ans+ : Cette emission peut ne pas convenir aux enfants de moins de 13 ans
- 16 ans+ : Cette emission ne convient pas aux moins de 16 ans
- 18 ans+ : Cette emission est reservee aux adultes

How to Reset the TV after the V-Chip Blocks a Channel.


If the TV is turned to restricted channel, the V-Chip will block it. The screen will go blank and the following message will appear:

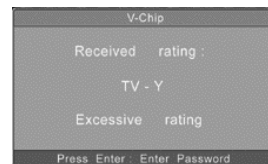







To resume normal viewing, press the  key and press your personal identification number (Password).

- G : All Children and General audience.
- PG : Parental guidance suggested
- PG13 : Parental guidance for children under 13
- R : Restricted viewing, parental guidance is suggested for children under 17.
- NC17 : No children under age 17
- X : Adults only
- NR : Not rated

Viewing the Closed Captions


- Press  .

- Use  to move to  .
- Press  to move to "Caption".
- Press  to select.


- Use  to set the closed captions.
- Press  to go back to the previous menu.



You can select these options in the following order.

You can get the same result by pressing the  button on the remote control.

Viewing Picture in Picture

Or press  button on the remote control.



Sound from only one of the screens may be heard.


TV/External Input

Or press  button on the remote control.



The sub-screen can be changed to display picture from the desired input source.

Changing the Screen Size

Or press  button on the remote control.



Selecting Position

Or press  button on the remote control.

Sub-screen position can be selected only from the  .




Main Screen/Sub Screen Swap

Or press  button on the remote control.

The main screen and the sub screen will swap.



Selecting Sub Screen Sound

Or press  button on the remote control.

You can select sound of "Main" screen or "sub" screen.

Picture in Picture Display Mode

According to the below table, you can select Picture in Picture supporting modes.

Sub main	TV	AV	S-video	Component 1	Component 2	PC	DVI
TV	NO	YES	YES	YES	YES	YES	YES
AV	YES	NO	YES	YES	YES	YES	YES
S-video	YES	YES	NO	YES	YES	YES	YES
Component 1	YES	YES	YES	NO	NO	NO	YES
Component 2	YES	YES	YES	NO	NO	NO	YES
PC	YES	YES	YES	NO	NO	NO	YES
DVI	YES	YES	YES	YES	YES	YES	NO

Auto Volume Level


This feature maintains an equal Volume level, even if you change channels.

Press



Use



to move to 

Press



to move to "AVL".

Press



to select.

Use




to select the "On".

Press




to go back to the previous menu.

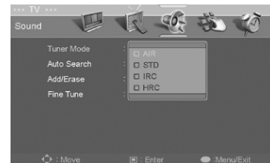

Listening to Stereo Sound


Depending on the particular program being broadcast, you can listen to stereo, mono or a secondary Audio Program.


Press 


Use  to move to 

Press  to move to "MTS".

Press  to select.

Use  to select the desired category.

Press  to go back to the previous menu.

Or press  Button on the remote control. (Multi Television Sound)



Resetting LCD TV Settings

It resets all of the parameters to the factory default.

Press 



Use  to move to 

Press  to move to "Reset".

Press  to select.

Use  to select the "YES".

Press  to select

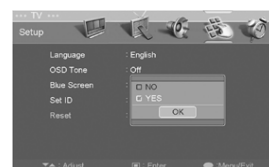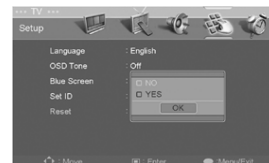

The LCD TV will turn off. The parameters will be set to factory default.

Setting Time

Press



Use



to move to



Press



to select "Clock".



Use



to adjust the desired hour.



Press



to move one step.

Use



to adjust the desired minute.



Press



to go back to the previous menu.

Automatic Power On/Off

Clock time must be set

Press



Use



to move to



Press



to move to desired category.

Press



to select.



	Setting Time for Power On	Setting Time for Power Off
<p>Setting Hour</p> <p>Use to set</p>		
<p>Setting Minute</p> <p>Use to select, to set</p>		
<p>Set/Cancel</p> <p>Use to select, to select the "On" or "Off"</p>		
<p>Channel Select</p> <p>Use to set Channel</p>		
<p>Volume Control</p> <p>Use to set volume</p>		

To have the TV turn off after you fall a sleep

press




button on the remote control.

It automatically turns off the TV after a designated period of time

Depending on the number of times the "SLEEP" button is pressed, the TV will be turned off after 30, 60, 90, 120, 150 or 180 minutes.

Using TV as a Monitor

Press  button on the remote control.

Use  to move to "PC".


Press  to select.




PC Mode must be on in order for you to use the TV as a monitor.

Adjusting PC Screen


Press  .


Use  to move to  .


Press  to move to "PC/HDTV".

Press  to select.



Use  to move to desired category.

Use  to adjust the setting.

Press  to go back to the previous menu.



- Auto in progress
- Phase : It adjusts the phase shift of the image. Use when image appears blurry or out of focus.
- H-Position : It moves the image on the screen horizontally.
- V-Position : It moves the image on the screen vertically.

Adjusting Color Tone


Press



.

Use



to move to  .

Press



to move to "PC/HDTV".

Press



to select.



Use




to move to "Color Tone"

Press



to select.

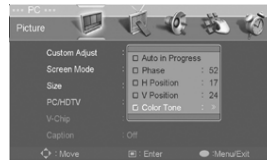

Use



to select the desired category.

Press



to go back to the previous menu.



- Cool 1: This results in a blueish tone.
- Cool 2: This results in a more blueish tone.
- Normal : This is standard color setting.
- Warm 1 : This results in a reddish tone.
- Warm2 : This results in a more reddish tone.

Trouble shooting Tips

Do not use other functions that are mentioned on this user's manual. It will be main reason of a faulty and motion error.

In case a problem occurs with your LCD TV, please take the following steps first.

If you still have the problem, turn the power off and contact your dealer or an authorized service center.


Screen related Matters

Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Turn the main power button on and press the power button of the remote controller.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute has passed, contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or contrast adjustment. (Please refer to page 24)
Screen is too large or too small.	Adjust the screen size. (Please refer to page 28)
Stripes appear on the screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
Simultaneous Screen does not appear.	Check that LCD TV and external equipment are connected. Check the inputs of simultaneous screen by pressing sub-screen selection.
The screen does not move.	Press the "STILL" button. (Please refer to page 21) Check if the Pause button is pressed on external equipment
Computer Input Screen is abnormal.	Perform manual fine adjustment (Please refer to page 40).
Automatic Turn On does not work	Automatic Turn on function works only when turning the LCD TV off with the remote controller or standby button.
The screen does not appear on AV source.	Check that S-Video source is connected. If AV and S-Video are simultaneously connected, you can't select AV source.

Sound related Matters

Problem	Action
Screen appears, Voice is not heard	<ol style="list-style-type: none"> 1. Press the "MUTE" button. (page 21) 2. Increase the sound by pressing volume adjustment button. 3. Check if voice terminal of external input is connected properly. 4. Check if audio cables are connected properly. 5. If it is on PIP mode, convert audio of main screen and sub-screen by pressing "S.SELECT". 6. Select and check the other input. <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.</p>
Lots of noise (static) occurs.	When connecting a Set-Top-Box, check that it is on stereo broadcasting. If it is, the TV program may not be available or the reception may be bad. Check the audio source with another player. If that source is good, contact your dealer or an Authorized service center.

Others

Problem	Action
Remote controller does not work.	<ol style="list-style-type: none"> 1. Check if main power is on. 2. Check that the batteries of the remote controller were loaded properly. 3. Check to see if any obstacle exists between the LCD TV and the remote controller and remove it, if any. 4. If the batteries have no power, replace them with two new batteries.
LCD TV makes strange noise.	It is the noise when the mechanism expands or contracts from to changes to the environment due to factors such as humidity, temperature, etc. It is not a failure.
LCD TV indication lamp is on.	The red means the Stand-by power is on. It will take a few seconds to turn off as the main power is off.
Had forgotten Password of V-Chip	Press  buttons on the Remotecontrol in V-Chip function.
Can not select PC mode when D-sub cable is connected to the RGB output of Set-top-box.	D-sub cable must not meet VESA standard. (D-sub No. 10 pin must be grounded) Component cable can be used if there is an Component terminal.(See Page 18)

This LCD TV is for household use and registered as suitable on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

Supporting display mode

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
640 x 480	31.47	60
	37.86	72
	37.50	75
720 x 400	31.47	70
800 x 600	35.15	56
	48.88	72
	46.88	75
1024 x 768	48.36	60
	56.48	70
	60.02	75
1280 x 1024	64.0	60

Considerations in Installation

If any signal of unsupported resolution is input, the "Out of Range" message appears.

Supported Display Modes

Component Mode [Y, C_B(P_B), C_R(P_R)]

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	
720 × 480	15.73	60.00	SDTV, DVD 480i
720 × 480	31.47	59.94	SDTV, 480p
1280 × 720	45.00	60.00	HDTV, 720p
1280 × 720	44.96	59.94	HDTV, 720p
1920 × 1080	33.75	60.00	HDTV, 1080i
1920 × 1080	33.72	59.94	HDTV, 1080i

Specifications

MODEL	DLN-26D3	DLN-30D3
Aspect Ratio	15 : 9	15 : 9
Screen Size (H × V)	566.4mm × 339.84mm	643.2mm × 385.92mm
Resolution	1280 × 768(Wide XGA)	1280 × 768(Wide XGA)
Pixel pitch	0.4425mm × 0.4425mm	0.1675mm × RGB × 0.5025mm
Displayable Colors	16.7M	16.7M
Brightness	450cd/m ² (Typical)	550cd/m ² (Typical)
Contrast	500:1	600:1
Color Temperature	9500 °K	9500 °K
Viewing Angle	85° / 85° / 85° / 85°	85° / 85° / 85° / 85°
Input signal	NTSC, SD-HD, VGA-SXGA	
Tuner	NTSC	
RGB Input	D-Sub, DVID	
AC Input	AC100-240V~, 50/60Hz, 2A	AC100-240V~, 50/60Hz, 2A
Power Consumption	140W	150W
Dimensions/ Weight (H × V × W) (Kg)	TV Only - 818.5 × 434 × 116.5/ 15.2Kg with stand - 818.5 × 488.4 × 215/ 18.3Kg	TV Only - 933 × 479 × 104/ 15.3Kg with stand - 933 × 526 × 215/ 18.4Kg

The outside design and specification can be modified without any previous notice for improving the performance.

D I G I T A L A R T