

# Sample Test product



## 42" PDP TV User's Guide

Please observe all safety precautions when using this product.

Please read this manual carefully before using this product.

**Supports HDCP**

- | Quick and Easy Installation
- | Versatility and Expendability
- | That doesn't make you feel fatigue on your Eyes.
- | Flat-Panel Digital Display easy on the Eyes.

## Important Safety Instructions

Important safeguards for you and your new product .....	4
Note to Cable/TV Installer .....	6
Warning .....	6
Regulatory Information .....	6
Considerations For Usage .....	7

## User Guidance Information

Name of each part .....	8
Controls and Functions.....	9
Mounting on a Desktop .....	10
Installation Precautions .....	10
Installing an Antenna .....	11
Remote controller.....	12
Precautions .....	13

## Connection

VCR Connections.....	14
Cable TV Connections .....	15
Camcorder/ Game Console Connections .....	16
DVD Connections.....	17
DTV Connections .....	18
PC Connections .....	19

## Basic Use

Powering the PDP TV.....	20
Initial Settings.....	20
Watching TV .....	21
Memorizing the channels .....	22~23
Selecting input source .....	23
Changing Picture Settings.....	24
Changing Sound Settings .....	25
Selecting the Menu Language.....	26
Setting OSD Tone Menu Background .....	26
Setting Blue Background .....	27

## Application

Changing Screen Size .....	28
Adjusting Unclear Screen .....	29
LNA (Low Noise Amplifier) .....	29
Using the V-Chip .....	30~32
Viewing the Closed Captions .....	33
Viewing Picture in Picture .....	34~35
Auto Volume Level .....	36
Listening to Stereo Sound / MTS(Multi Television Sound) .....	36
Resetting PDP TV Settings / Panel Protection .....	37
Setting Time .....	38
Automatic Power On/ Off .....	39

## Monitor

Using TV as a Monitor .....	40
Adjusting PC Screen .....	40
Adjusting Color Tone .....	41

## External adjustment

External adjustment .....	42
Set ID .....	43
Special features .....	44
RS232C Communication Protocol .....	45~49

## Maintenance and Service

Trouble shooting .....	50
Trouble shooting Tip .....	51
Supported Display Modes .....	52

## Important Safety Instructions

Important safeguards for you and your new product

Always be careful when using your LCD TV. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use the attachments/accessories specified by the manufacturer.
- 12) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

## Important Safety Instructions

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus



### CAUTION

**RISK OF ELECTRIC SHOCK DO NOT OPEN**

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

This symbol indicates high voltage is present inside. It is dangerous to make any kind of contact with any inside part of this product.

This symbol alerts you that important literature concerning operation and maintenance has been included with this product.



### NOTE TO CABLE/TV INSTALLER :

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

### WARNING

**TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

## Important Safety Instructions

### **Caution :**

- These servicing instructions are for use by qualified service personnel only.  
To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Important :**

One Federal Court has held that unauthorized recording of copyrighted TV programs is an infringement of U.S. copyright laws.

Certain Canadian programs may also be copyrighted and any unauthorized recording in whole or in part may be in violation of these rights.

### **REGULATORY INFORMATION :**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Considerations For Usage

### Still image (immovable) screen may cause permanent damage to PDP TV.

1. Lengthy display of still images from video games, banners, graphics and others may fatally damage the screen.
2. When using Picture-In-Picture, permanent damage may occur if the sub-image screen stays on the corner of screen for a long time.
3. When using the PDP TV in 4 : 3 formats with sidebars for a long period of time, it may cause damage to the plasma panel. It is recommended that you use Wide(16:9) or Panorama format. (Image bum-in can be avoided by using "Panel Protection" function or a screen-saver. However, once image burn-in occurs, it may not disappear completely. An image will be dimmed as the image is displayed long time or repeatedly.)

 
Any damage to the PDP TV caused by improper usage (such as image burn-in) shall not be covered by the warranty.

### Defective pixels that can be seen on PDP TV screen. (illuminated spots, bright spots, scotoma , blind spot, blinking)

Generally, PDP TV consists of about 1.22 million pixels and having defective pixels is possible. A PDP TV with a number of defective pixels below a certain number is not considered defective. The limited number of defective pixels does not affect the performance or reliability of the PDP TV. The standard of inspection regarding defective pixels is the same or better as the competitor's offering on similar PDP TV. It is not subject to replacement or a refund. We will do our best to minimize the defective pixel as best as we can.

## Names of each part

### Front View

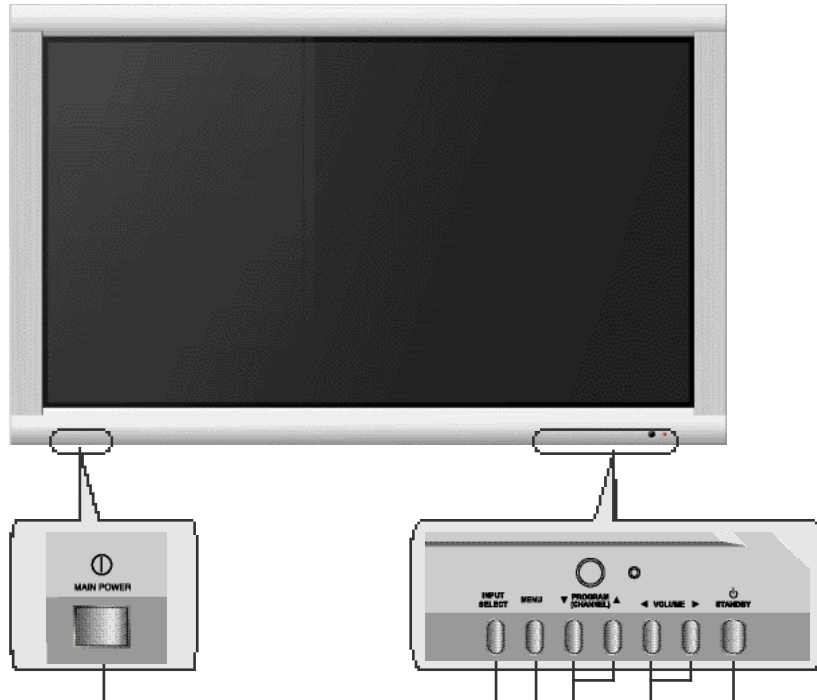

#### Main Power Button

- Please turn off the main power switch, if the PDP TV will not be used for a long period of time.

#### Input Selection Button

#### Menu Button

 
#### Program(CHANNEL) Button

#### Volume Button


#### Standby Button

## Options


To improve the quality of the PDP TV, specification is subject to change without notice. Please contact your dealer for current options available.




Speaker

 

Stand

 

Ceiling - Mount Bracket


 


Adjustable - Angle  
Wall mount



Controls and Functions

  Back View

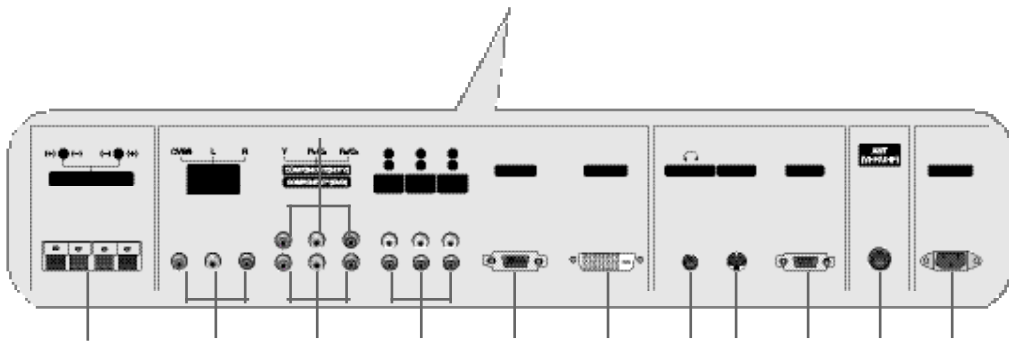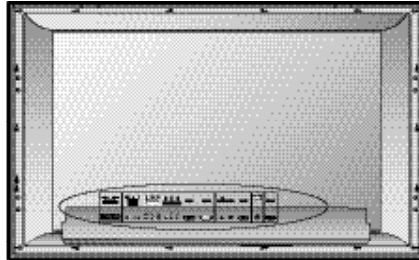

External Speaker Connection Terminal (8 )

AV (Video/Audio) Input

Component 1 (DVD) Input Terminal (480i~1080i)

Component 2 (DTV) Input Terminal (480i~1080i)

Audio Input Terminal (DVD, DTV, PC)

RGB PC Input Terminal (VGA~XGA)

DVI-D Input Terminal

EAR PHONE Input Terminal

S-Video Input Terminal

RS-232C Terminal

Antenna (RF) Input Terminal

AC Input Terminal

Accessories

 
The configuration of the components may look different from the following illustration.



Antenna Cable



Power Cord



User's Guide



Remote Control



Battery 1.5V (AAA x 2)

## Mounting on a Desktop



Your PDP TV can be mounted on a Desktop as shown in the figure above. This is not floor-standing unit.

 
 
## Installation Precautions

### Wall Mounting

Please secure enough space for safe use. (Please refer to A and B.)

Installation of the PDP TV in an improperly ventilated location can cause a fire or damage to the PDP TV due to increased temperature.

A →  
(Mounting on a wall)

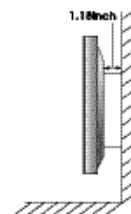
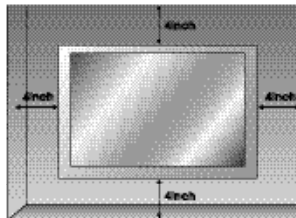


Contact your dealer to purchase the "Adjustable-angle wall mount" required for wall-mounted installation.

### Using the Stand

  
Do not install on an unstable location with support area smaller than the PDP TV. Please refer to the desktop stand user's manual for details of installation.

B →  
(Using the Stand)

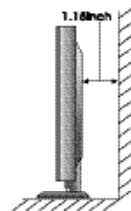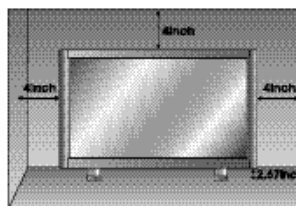

Please contact your dealer to purchase the "speakers".

## Installing an Antenna

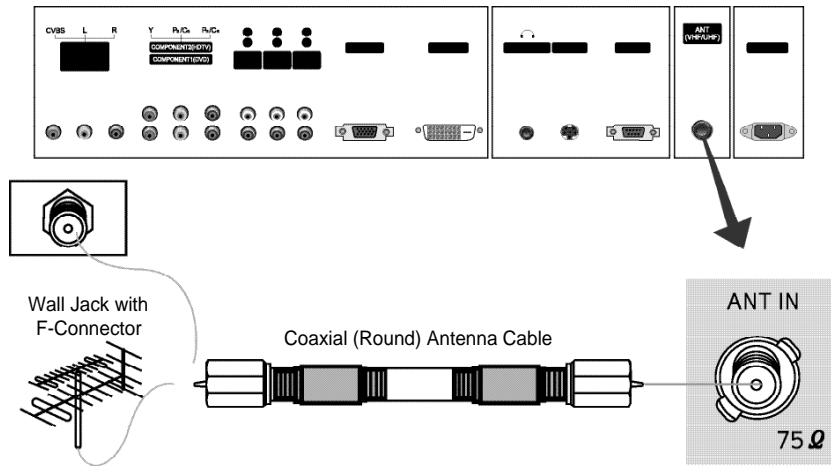 

### Connecting an Outdoor Antenna

 
For the best reception, we recommend you use an outdoor antenna.

Severely weathered antennas and antenna cables can reduce the signal quality.

Before making any connections, inspect all antenna hardware. Any service center can explain the various outdoor antennas available to you.


#### 300 Ohm Flat Wire

Connect the 300 ohm flat wire to the screws on the 300 ohm to 75 ohm adapter. Push the end of 300 ohm to 75 ohm adapter onto the 75 ohm antenna jack.

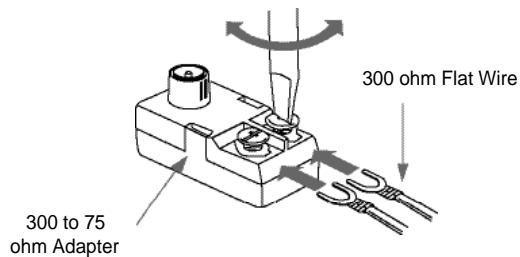

#### 75 Ohm Coaxial Cable

 
Connect the 75 ohm coaxial cable directly to the 75 ohm antenna jack.

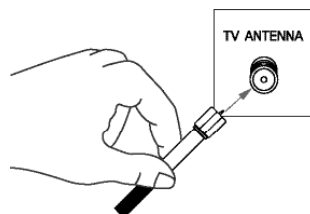

## Remote Controller

### Functions of remote control buttons

 The remote control is using Infra-Red (IR). Point it towards the front of the PDP TV. The remote control may not work correctly if it is operated out of range or out of angle.

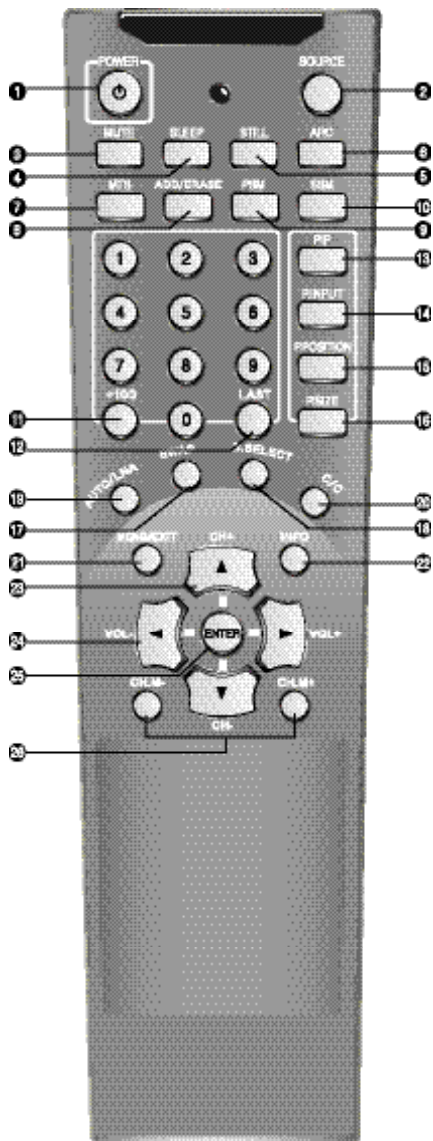

1. POWER : TURNS THE TV ON AND OFF (page.20)
  2. SOURCE : USE TO SELECT AN INPUT SOURCE (page.23)
  3. MUTE : PRESS TO TEMPORARILY TURN OFF THE SOUND (page.21)
  4. SLEEP : PRESS TO SELECT A TIME FOR THE TV TO TURN OFF AUTOMATICALLY (page.39)
  5. STILL : PRESS TO STOP THE ACTION DURING A PARTICULAR SCENE (page.21)
  6. ARC (Aspect Ratio Control) : PRESS TO CHANGE THE SCREEN SIZE (page.28)
  7. MTS (Multi-Television Sound) : PRESS TO SELECT MONO OR STEREO MODE (page.36)
  8. ADD/ ERASE : PRESS TO ADD OR ERASE CHANNELS IN THE TV'S MEMORY (page.23)
  9. PSM : PICTURE STATUS MEMORY KEY (page.24)  
(CUSTOM, DYNAMIC, STANDARD, MOVIE, MILD)
  10. SSM : SOUND STATUS MEMORY KEY (page.25)  
(CUSTOM, STANDARD, MUSIC, MOVIE, SPEECH)
  11. +100 : PRESS TO SELECT CHANNELS OVER 100. FOR EXAMPLE, TO SELECT CHANNEL 107, PRESS "+100" THEN PRESS "0" AND "7"
  12. LAST : TUNES TO THE PREVIOUS CHANNEL (page.21)
- PIP CONTROL KEY (page.34-35)

  13. PIP : PIP ON/OFF
  14. P.INPUT : PIP INPUT SELECT KEY
  15. P.POSITION : PIP POSITION CONTROL KEY
  16. P.SIZE : PIP AND PBP MODE CHANGE
  17. SWAP : PIP SOURCE SWAP
  18. S.SELECT : MAIN OR SUB SOUND SELECT KEY
19. AUTO/ LNA : PC MODE : AUTO IN PROGRESS KEY (Press to Control the Monitor screen automatically)  
TV MODE : LNA KEY (Low Noise Amplifier) (page.29)
  20. C/C : CLOSED CAPTION (page.33)
  21. MENU/EXIT : ON-SCREEN MENU ON/OFF KEY
  22. INFO : PRESS TO DISPLAY THE CURRENT CHANNEL AND AUDIO/ VIDEO SETTINGS (page.21)
  23. , (CH+, CH-) : PRESS TO CHANGE THE MEMORIZED CHANNELS OR MENU CONTROL KEY
  24. , (VOL+, VOL-) : PRESS TO INCREASE OR DECREASE THE VOLUME OR MENU CONTROL KEY
  25. ENTER : SAVE THE VALUE
  26. CH.M-, CH.M+ : PRESS TO CHANGE THE ONE BY ONE CHANNEL


## Precautions
 
### Avoiding Remote Control Problems


1. Check the polarity (+,-) of the batteries in the remote controller.
2. Check that the batteries have power.
3. Check that the PDP TV is powered and that it is properly plugged in.
4. Check if any three-wavelength lamp, special fluorescent or neon sign is turned on near the PDP TV.

### Inserting Batteries in the Remote Controller


1. Open the cover out Completely.

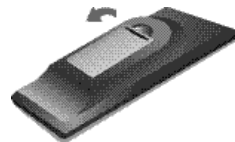

 2. Insert the two supplied batteries (AAA, 1.5V). Ensure that the polarities (+ and -) of the batteries are aligned correctly.

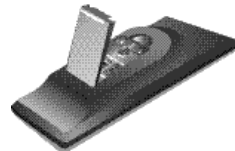

 3. Replace the cover.

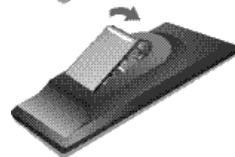

**⚠ CAUTION :** Risk of explosion if battery is replaced by an incorrect type.  
Dispose of used batteries according to the national code (Recycling program).


## How to use remote controller

 - The remote control should be operated within 30 feet(7m) and 30° to the left and the right of the IR receiver on the front of the PDP TV.
- Used batteries should be disposed properly.

## VCR Connections


### Connecting to the AV terminal

Connection terminals of other appliances differ by manufacturer and model.

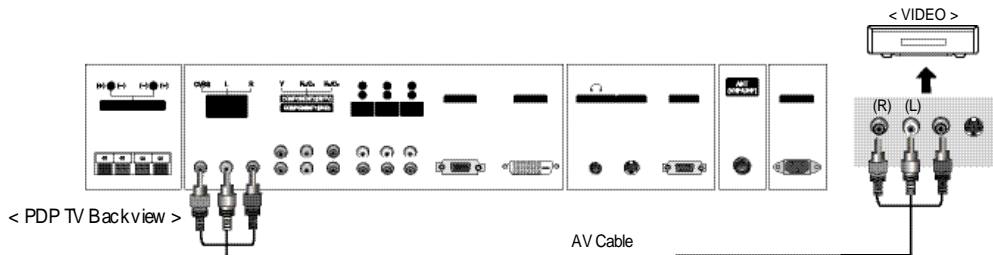

- Connect the PDP TV's AV In terminal to the VCR's AV Out terminal using the AV cable. (Make sure the color of the terminals and the color of the cable are the same)

### Connecting to the S-Video terminal

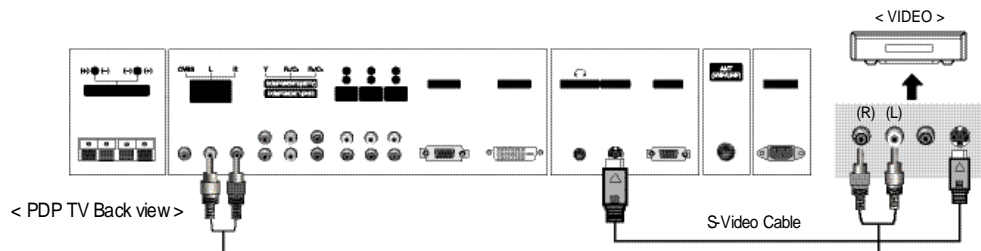 

Use the S-Video cable for higher picture quality.


## Playing the VCR

 1. Turn on the PDP TV and press  on the remote controller.
2. Use  to move to "AV".
  - If S-Video has been connected, select S-Video.
3. Turn on the VCR, insert the tape and press play button.

## Cable TV Connections


### Connecting to the AV terminal

In order to watch Cable TV, Subscribe to your local Cable TV company and install a separate converter (Set-Top-Box)  
Connection terminals of other appliances differ by manufacturer and model.

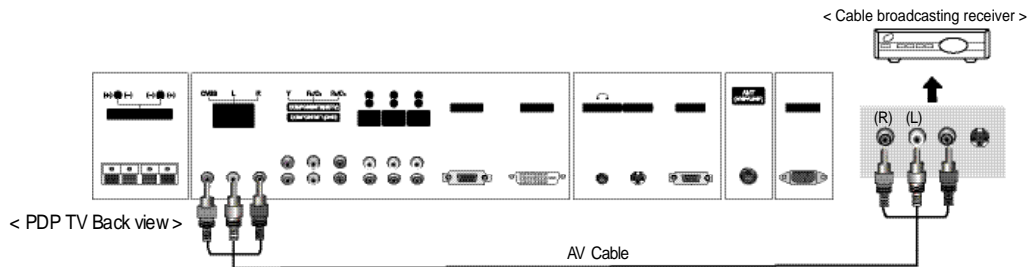



 - Connect the PDP TV's AV In terminal to the cable broadcasting receiver AV Out terminal using the AV cable. (Make sure the color of the terminals and the color of cable are the same)
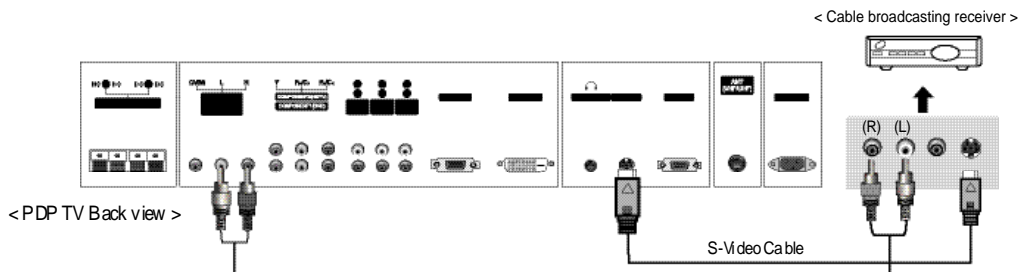
### Connecting to S-Video terminal



Use the S-Video cable for higher picture quality.


## Viewing Cable TV

 1. Turn on the PDP TV and press  on the remote controller.
2. Use  to move to "AV".
  - If S-Video has been connected, select S-Video.
3. Turn on the cable broadcasting receiver and select the channel you wish to view.

## Camcorder/Game Console Connections


### Connecting to the AV terminal

Connection terminals of other appliances differ by manufacturer and model.

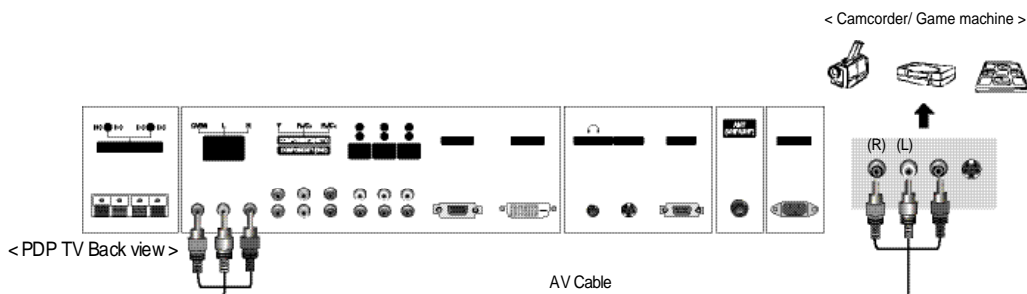



 - Connect the PDP TV's AV In terminal to the camcorder/game console's AV Out terminal with the AV cable. (Make sure the color of the terminals and the color of cable are the same)
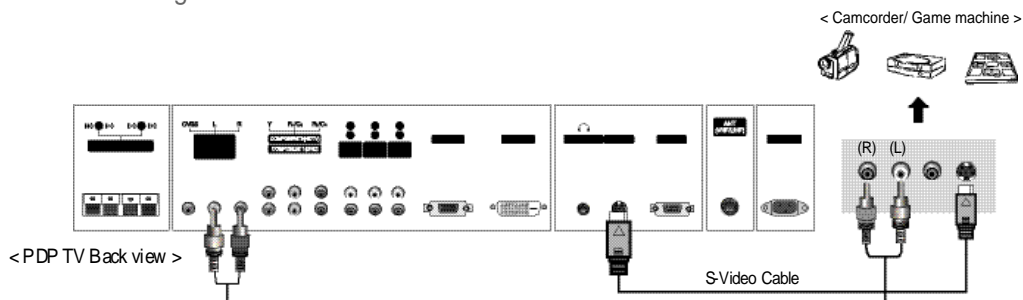
### Connecting to S-Video terminal



S-Video cable can be used if there is an S-Video terminal.

## Using Camcorder/Game Console

 
1. Turn on the PDP TV and press  on the remote controller.
2. Use  to move to "AV".
  - If S-Video has been connected, select S-Video.
3. Turn on the Camcorder or video game and set to Video mode.  
(Please refer to the User's manual of Camcorder/ Video game for more information)
4. Insert tape into Camcorder and press play button or insert disc into the Video game console.



## DVD Connections


### Connecting to the component terminal

Connection terminals of other appliances differ by manufacturer and model.

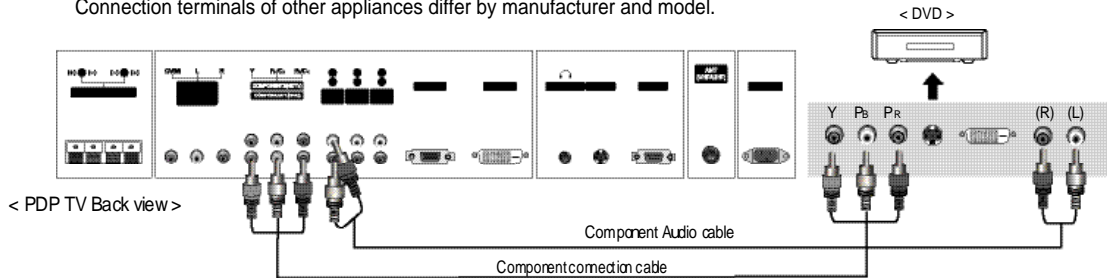


1. Connect PDP TV's Y, P<sub>B</sub>, P<sub>R</sub> terminal in Component 1 to DVD's Video Out terminal using the external cable.
2. Connect PDP TV's Audio terminals (left & right) in Component 1 to DVD's Audio Out terminal using the Audio cable.

### Connecting to the S-Video terminal

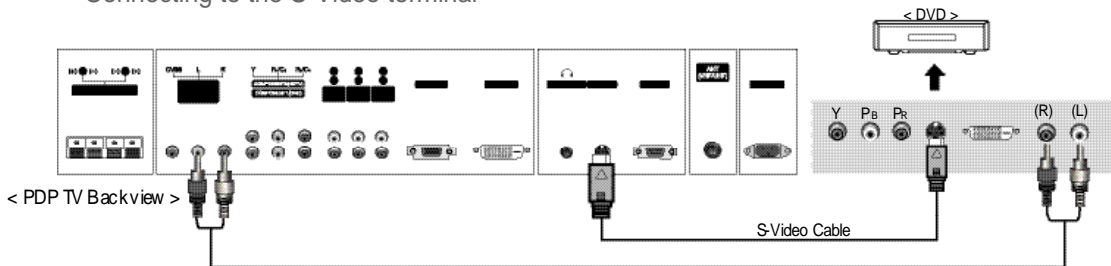 



 S-Video cable can be used if there is an S-Video terminal.
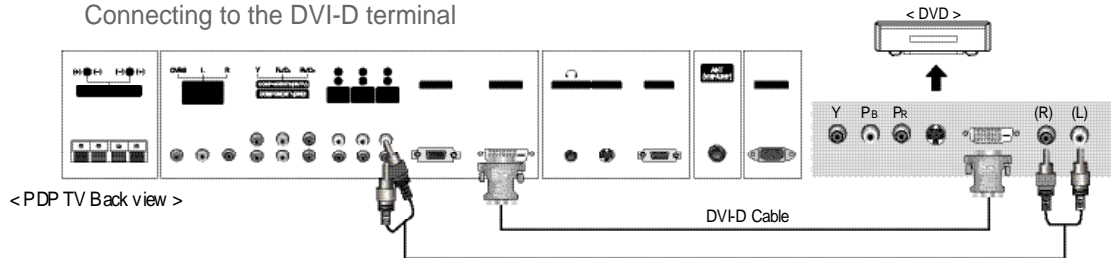
### Connecting to the DVI-D terminal



Use the DVI-D with HDCP connection if there is a DVI-D terminal in your DVD.


## Playing the DVD

 1. Turn on the PDP TV and press  on the remote controller.
2. Use  to move to "Component1".
  - If S-Video has been connected, select S-Video.
  - If DVI-D has been connected, select "DVI"
3. Turn on the DVD, insert the DVD and press Play button.

## DTV Connections

### Connecting to the component terminal


Connection terminals of other appliances differ by manufacturer and model.

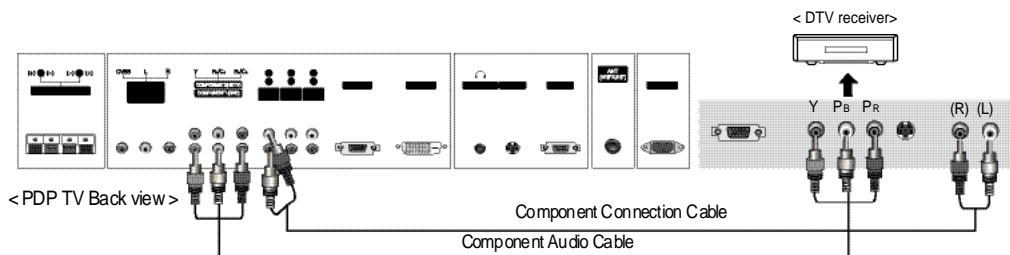

1. Connect PDP TV's Y, Pb, Pr terminal in Component 2 to DTV receiver's Video Out terminal using the external cable.
2. Connect PDP TV's Audio terminals (left & right) in Component 2 to DTV receiver's Audio Out terminal using the Audio cable.

DTV receiver's output terminal can be marked Y, Pb, Pr or Y, Cb, Cr according to products.

### Connecting to the PC/DVI terminal

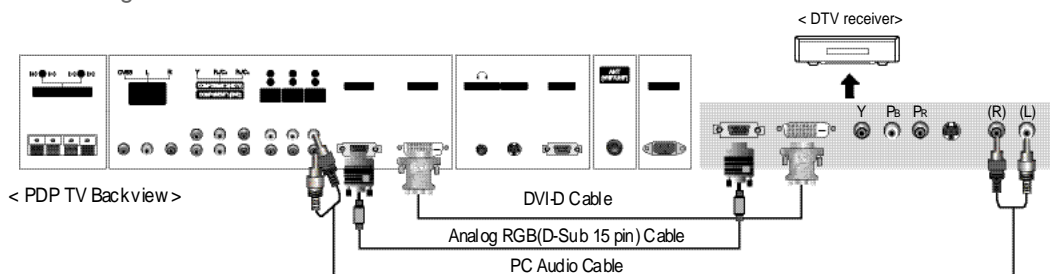 


- Some of DTV receiver (Set-Top-Box) have a PC Connector (D-Sub 15 pin), DVI connector instead of Component output.
- Connect Audio Cable from the Audio output terminal of receiver to the PC Audio input terminal of the PDP TV.

Use the DVI-D with HDCP connection for higher picture quality if there is a DVI-D terminal.

## Viewing DTV

1. Turn on the PDP TV and press  on the remote controller.

 
2. Use  to move to "Component2".

- If D-Sub 15 Pin has been connected, select PC.
- If DVI-D has been connected, select DVI.

3. Turn on the DTV receiver and select the channel that you want.

## PC Connections

Connection terminals of other appliances differ by manufacturer and model.

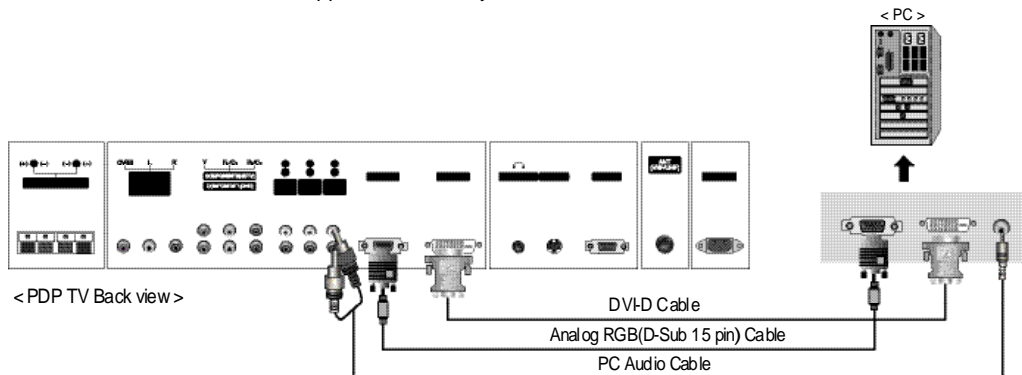

- Connect PDP TV's PC INPUT terminal to PC's RGB terminal using the D-Sub cable.
- If there is a DVI-D terminal in your PC, use the DVI-D cable connection.
- Connect PDP TV's PC Audio terminal to PC's Audio terminal using the Audio cable.  
(Only possible for PC's with Audio terminal)

## How to Use as PC

1. Turn on the PDP TV and press  on the remote controller.

2. Use  to move to "PC".

If DVI-D has been connected, select "DVI"

3. Set the PC video output mode to VGA (640 × 480)/ SVGA (800 × 600)/ XGA (1024 × 768).

In the mode higher than XGA (1024 × 768) "Out of Range" message appears.

Be sure to change your PC video format to less than SXGA mode.


### What are some important advantages of the DVI Interface with HDCP over existing analog interfaces such as composite, s-video, or component video interface?

1. DVI with HDCP content protection provides a protected interface which may improve the availability of high value content such as premium high-definition video.
2. DVI supports up to 24-bit digital RGB data for each pixel for the highest image quality
3. For digital display technologies such as LCD, plasma and DLP based displays, DVI enables an all-digital rendering of video without the losses associated with an analog interface.
4. DVI adds the quality and functionality of a digital interface while maintaining the simplicity of supporting uncompressed video formats.

## Powering the PDP TV

### Power on/ off

- To turn the PDP TV on :  
Press the "Main Power" button of PDP TV and then press the "Standby" button.
- To turn the PDP TV off :  
Press "Standby" button on the PDP TV and then press the "Main Power" button.  
Turning the main power switch off will save energy. It is the same as unplugging the power cord.  
If ON Time setting is set, the main power should be ON.
- To turn on/off by remote controller :  
Press the "POWER" button of remote controller (If the PDP TV is not turned on, check that the "Main Power" button on the PDP TV main body is turned on. The main power indicator will light up red if turned on).

 CAUTION - After turning off the main Power, please wait at least more than 3 seconds to turn the main power back on.

## Initial Settings

- When the brand new television set it turned on for the first time, following settings can be set using the plug and play function of the TV.

### Using the menu

Press the "Main Power" button of PDP TV and then press the "Standby" button.  
You will see the Tuner Mode selection menu.

Use



to move to the desired "Tuner Mode". (See page. 22)

Press



to select.

Automatically "Auto Search" beginning.  
After "Auto Search" ends, select the desired Language.



Use

 


to move to the desired "Language".

Press



to select.

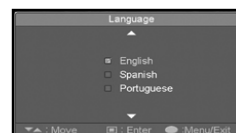

Press




to go back to the previous menu.

### Channel Selection



 increases the memory channel.  
decreases the memory channel.


You will see all the channels that the TV has memorized.



increases by one channel.  
decreases by one channel.

You will see channels that were either erased or not memorized.

### To go back to the previous channel

Press  to go back to the channel you were previously viewing.

### To View the still picture

Press  .

Picture will freeze, but sound will continue to be heard.

Press  again to cancel.

### Volume Control



increases the volume.  
decreases the volume.




### To turn off only sound

Use the mute function to turn off the PDP TV sound for a while, when a phone or a bell rings.


Press  button again to hear the sound again.

 


### To check the current state

Press  button on the remote control.

Display shows user's setting and selections.

Press  button or wait 10 seconds for the display to disappear.

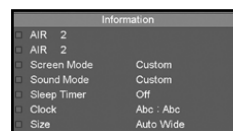

## Memorizing the Channels

Selecting the Video signal-source.

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV.

Press



Use



 
to move to



Press



to select "Tuner Mode".

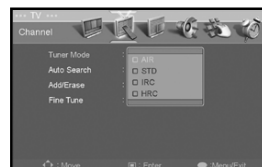

Use



to move to the desired signal source.

Press



to go back to the previous menu.



STD, IRC and HRC identify Various types of Cable TV systems.

Contact your local company to identify the type of cable system that exists in your particular area.

- AIR : Airwaves broadcasting
- STD : Standard CATV frequency
- IRC : Incrementally Related Carrier
- HRC : Harmonically Related Carrier

### Storing Channels in Memory (Automatic Method)

First, Select the correct signal source (AIR, STD, IRC, HRC)

Press



Use



to move to



Press

 


to move to "Auto Search".

Press



to select.

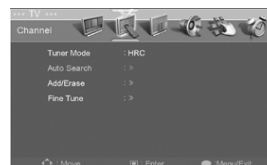

Use



to move to "Start".

Press



 
to select.

Searching all the channels on each tuner modes (Air, STD, IRC, HRC) using Auto search.

Press




to go back to the previous menu.






## Memorizing the Channels


### Adding and Erasing Channel (Manual Method)

Press  .


---


Use  to move to  .


Press  to move to "Add/ Erase"


Press  to select.

---

Use  to move to "Add" or "Erase".


Press  to select.

Press  to go back to the previous menu.


Or press  button on the remote control.


## Selecting Input Source

You can select between the TV signal and the input signal of other appliances connected to the TV. Use this function to switch to the input source you wish to view.

Press  button on the remote control.

---

Use  to move to the desired input source.

Press  to select.

 
Aside from the watching TV, you can connect AV, S-Video1, S-Video2, Component1 Component 2, and PC to the TV set and enjoy these functions.

All input sources will be automatically detected and displayed on screen, but you may select an activated source when the input cable is connected only.

## Changing Picture Settings

Press  button on the remote control.



Press the mode buttons on the shown on the screen repeatedly to adjust the settings.




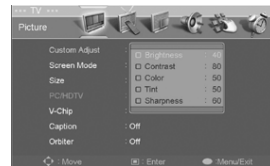 
- Custom : Select to set user's preferences.
- Dynamic : Select when using the PDP TV in a brightly lit environment.
- Standard : It is the best screen setting (factory setting).
- Movie : Select when watching a movie.
- Mild : Select when using the PDP TV in a dimly lit environment.


### Custom Picture Adjustment

Press  .

 
Use  to move to  .


Press  to select "Custom Adjust".





Use  to move to the desired category.

Use  to adjust the setting.

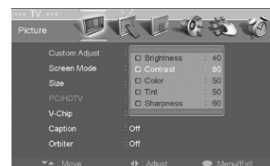

 Use  to select between Brightness/ Contrast/ Color/Tint/ Sharpness.



Press  to go back to the previous menu.

### Custom Mode

- Brightness : It adjusts the brightness of the image.
- Contrast : It adjusts the contrast of image.
- Color : It adjusts the intensity of the color.
- Tint : It adjusts the natural tint of the image.
- Sharpness : It adjusts the clarity of the image.



## Changing Sound Settings

Press  button on the remote control.

Press the mode buttons on the shown on the screen repeatedly to adjust the settings.



- Custom : Select when listening to the sound to user's preference.
- Standard : It is the flat sound setting with no equalizer effect at all.
- Music : It is preset for music listening.
- Movie : It is preset sound for watching a movie.
- Speech : It is preset for hearing vocal audio clearly.


### Custom Sound Adjustment

Press



Use



to move to .

Press



to select "Custom Adjust".



Use



to move to the desired category.

Use



to adjust the setting.



Press



to go back to the previous menu.

### Custom Mode

- 10KHz, 3KHz, 1KHz,300Hz, 100Hz, : It adjusts the volume by frequency bands and the user can select the desired sound quality.
- Balance : It adjusts the volume of speakers on the left and the right.

## Selecting the Menu Language


Menu screen can be viewed in the language preferred by the user.

Press



Use

 


to move to 

Press



to select "Language".

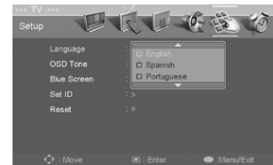

Use



to select the desired language.



Press



to go back to the previous menu.


## Setting OSD Tone Menu Background

Press



Use



to move to 

Press

 


to move to "OSD Tone".

Press



to select.

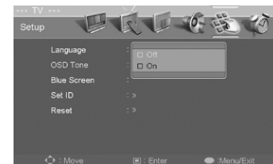

Use

 


to select the "On".

Press



to go back to the previous menu.

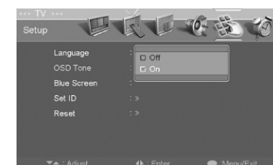

## Setting Blue Background

The PDP TV can be set to display blue screen when no TV signal or signal from other connected appliances are being received. If there is an incoming signal, the blue screen will be replaced by the normal picture screen.

Press



Use



to move to



Press

 


to move to "Blue Screen".

Press



to select.

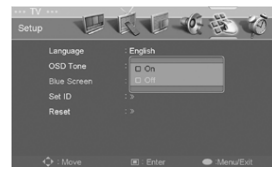

Use

 


to select the "On".

Press



to go back to the previous menu.

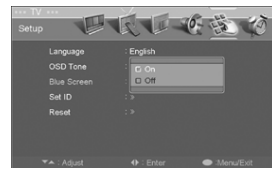


## Changing Screen Size

Press




 button on the remote control (aspect ratio controller).



In PC/DVI input mode, you can only select either the Wide or the 4 : 3 (normal) mode.

 In Component 2 input mode, you can't Select 14 : 9.

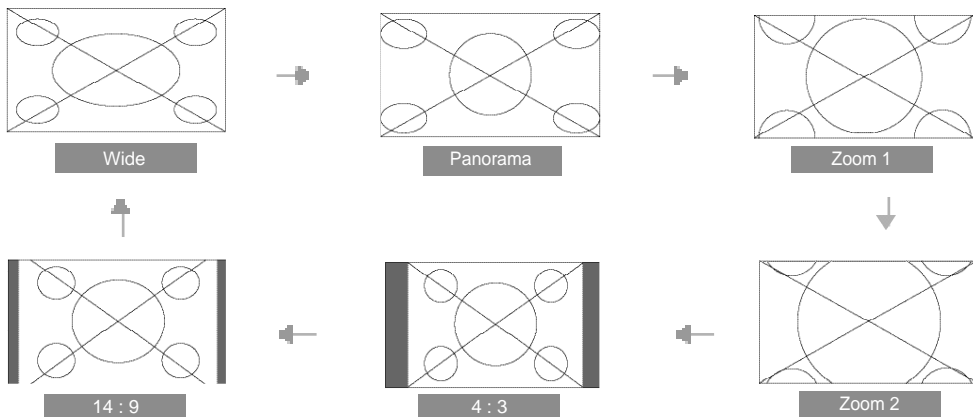

## Screen Size

- Wide - It makes 16 : 9 format for input signal.
- Panorama - It makes 4 : 3 format fit into 16 : 9 format with minimal loss in content.
- Zoom 1 - It enlarges the natural screen factor by approx. 5 %
- Zoom 2 - It enlarges the natural screen factor by approx. 10 %
- 4 : 3 - It is the standard format of broadcasting.
- 14 : 9 - It makes 14 : 9 format for input signal.

## Adjusting Unclear Screen

Use screen fine-tune controls to adjust the screen when picture quality is unclear or lines appear.

Press



.

Use



to move to



.

Press



to move to "Fine Tune".

Press



to select.



Use



to tune.



Press



to go back to the previous menu.

To return to initial setting, use



to select "Reset" and press



.

## LNA (Low Noise Amplifier)

If the TV is operating in a weak-signal area. Sometime the LNA function can improve the reception (a low-noise preamplifier boosts the incoming signal).

Press








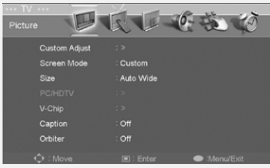 
button on the remote control.



## Using the V-Chip

The V-Chip feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a password before any of the V-Chip restrictions can be set up or changed.





Press		.	
Use		to move to	
Press		to move to "V-Chip".	
Press		to select.	



The "ENTER Password" screen will appear. Enter your 4-digit number. The default password for a new TV set is . After entering a valid password, The "V-Chip" Screen will appear.






### How to Enable/ Disable the V-Chip

 
- Use  to move to "Status"
- Press  to select.
- Use  to select the "On" or "Off".
- Press  to go back to the previous menu.



### Setting up your V-CHIP password





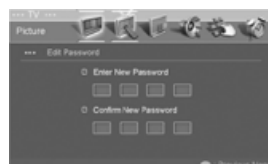

First, Set up a personal identification number(password) and enable the V-Chip.

- Use  to move to "Change password"
- Press  to select.  
The "Edit password" screen will appear. Press number button to select the "Enter New Password" and "Confirm New Password" (4-digit).
- Press  to go back to the previous menu.



### How to set up Restrictions using the "TV guidelines"

First, Set up a personal identification number (password) and enable the V-Chip.  
 Parental restrictions can be set up using either of two methods ;  
 The TV guidelines or the MPAA rating.

- Use  to move to "TV Parent Guide".
- Press  to select.
- Use  or  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.



The V-Chip will automatically block certain categories that are "More restrictive".  
 For example, if you check "L" Sub-rating in TV-PG, then the "L" Sub-rating in TV-14 and TV-MA will automatically be checked.

- TV-Y : Young Children
  - TV-Y7 : Child 7 and over
  - TV-G : General audience
  - TV-PG : Parental guidance suggested
  - TV-14 : Parents strongly cautioned
  - TV-MA : Mature audience
- } (young Children through age 7)
- } (everybody else)

The restrictions for these two groups work independently.

- FV : Fantasy Violence
- V : Violence
- S : Sexual situation
- L : Adult Language
- D : Sexual Suggestive Dialog






## Using the V-Chip

### How to Set up Restrictions using the MPAA Ratings

The MPAA rating system uses the Motion Picture Association of America(MPAA) system, and its main application is for movies.

When the V-Chip lock is on, the TV will automatically block any programs that are coded with objectionable rating (either MPAA or TV-Rating).

 
First, Set up a personal identification number(password) and enable the V-Chip.


- Use  to move to "MPAA"
- Press  to select.
- Use  to move to desired categories.
- Press  to set the restriction ratings.
- Press  to go back to the previous menu.



### How to Reset the TV after the V-Chip Blocks a Channel.

If the TV is turned to restricted channel, the V-Chip will block it. The Screen will go blank and the following message will appear:

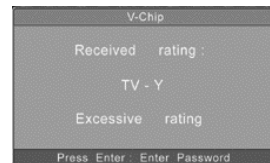

To resume normal viewing, press the  key and press your personal identification number (Password).

- G : All Children and General audience.
- PG : Parental guidance suggested
- PG13 : Parental guidance for children under 13
- R : Restricted viewing, parental guidance is suggested for children under17.
- NC17 : No children under age 17
- X : Adults only
- NR : Not rated



## Viewing the Closed Captions


Press



.

Use



to move to  .

Press

 


to move to "Caption".

Press



to select.

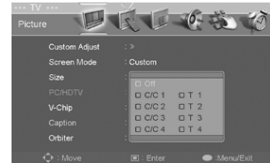

Use

 


to set the closed captions.

Press



to go back to the previous menu.

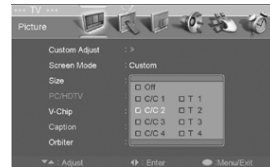

You can select these options in the following order.

You can get the same result by pressing the








button on the remote control.

## Viewing Picture in Picture

 Press  .



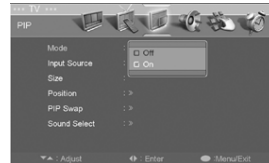


Use  to move to  .

- Press  to select "Mode".
- Use  to select the "On".
- Press  to go back to the previous menu.
- Or press  button on the remote control.



Sound from only one of the screens may be heard.






### TV/External Input

 
- Press  to move to "Input Source".
- Press  to select.
- Use  to select the desired input source.
- Press  to go back to the previous menu.
- Or press  button on the remote control.



The sub-screen can be changed to display picture from the desired input source.





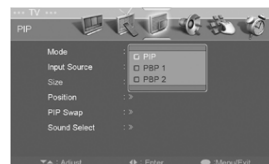

### Changing the Screen Size

 
- Press  to move to "Size".
- Press  to select.
- Use  to select the desired size.
- Press  to go back to the previous menu.
- Or press  button on the remote control. .








## Viewing Picture in Picture

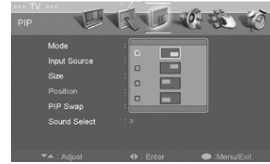
### Selecting Position

 - Press  to move to "Position".
  - Press  to select.
  - Use  to select the desired position.
  - Press  to go back to the previous menu.
  - Or press  button on the remote control.
- Sub-screen position can be selected only from the .





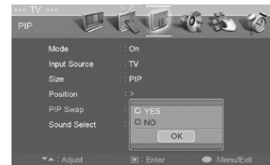


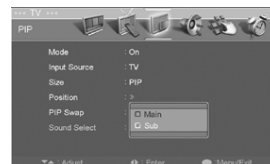 
### Main Screen/Sub Screen Swap

- Press  to move to "PIP Swap".
  - Press  to select.
  - Use  to select the "YES".
  - Press  to go back to the previous menu.
  - Or press  button on the remote control.
- The main screen and the sub screen will swap.










### Selecting Sub Screen Sound

 
 
- Press  to move to "Sound Select".
- Press  to select.
- Use  to select the "Main" or "Sub".
- Press  to go back to the previous menu.
- Or press  button on the remote control.



## Auto Volume Level





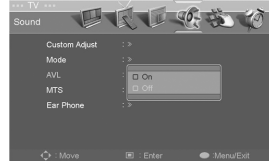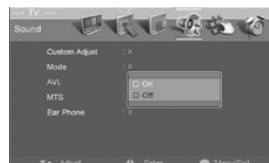



This feature maintains an equal Volume level ; even if you change channels.



Press		.	
Use		to move to	
Press		to move to "AVL".	
Press		to select.	
Use		to select the "On".	
Press		to go back to the previous menu.	

## Listening to Stereo Sound/ MTS(Multi Television Sound)

Depending on the particular program being broadcast, you can listen to stereo, mono or a secondary Audio Program.

Press		.	
Use		to move to	
Press		to move to "MTS".	
Press		to select.	
Use		to select the desired category.	
Press		to go back to the previous menu.	
Or press		Button on the remote control. (Multi Television Sound)	

## Resetting PDP TV Settings


It resets all of the parameters to the factory default.

Press



Use



to move to 

Press



to move to "Reset".

Press



to select.



Use

 


to select the "YES".

Press



to select

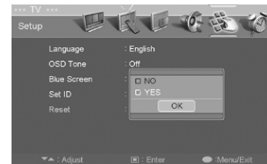

The PDP TV will turn off. The parameters will be set to factory default.


## Panel Protection

Press



Use



to move to 

Press



to move to "Orbiter".

Press



to select.



Use

 


to select the "On".

Press



to select.

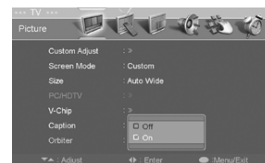

ON : The screen will move every 30 seconds.

Right Right Up Up Left Left Down Down

OFF : The screen will be in place the opposite way of orbiter On.

## Setting Time

Press



.

Use



to move to



.

Press



 
to select "Clock".



Use



to adjust the desired hour.

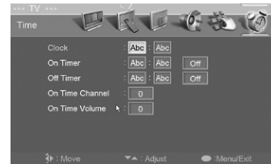

Press



to move one step.

Use



to adjust the desired minute.



Press



to go back to the previous menu.

## Automatic Power On/Off

Clock time must be set

Press



Use



to move to



Press

 










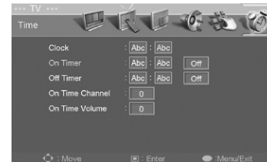






to move to desired category.

Press



to select.



	Setting Time for Power On	Setting Time for Power Off
<p>Setting Hour</p> <p>Use  to set</p>		
<p>Setting Minute</p> <p>Use  to select,  to set</p>		
<p>Set/Cancel</p> <p>Use  to select,  to select the "On" or "Off"</p>		
<p>Channel Select</p> <p>Use  to set Channel</p>		
<p>Volume Control</p> <p>Use  to set volume</p>		

To have the TV turn off after you fall a sleep

press



button on the remote control.

It automatically turns off the TV after a designated period of time

Depending on the number of times the "Sleep" button is pressed, the TV will be turned off after 30, 60, 90, 120, 150 or 180 minutes.

## Using TV as a Monitor

Press  button on the remote control.

Use  to move to "PC".

Press  to select.




PC Mode must be on in order for you to use the TV as a monitor.

 
## Adjusting PC Screen


Press  .

Use  to move to  .


Press  to move to "PC/DTV".


Press  to select.

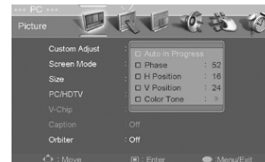

Use  to move to desired category.

 Use  to adjust the setting.



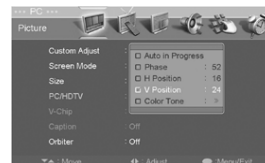


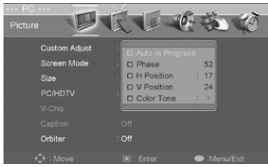 






Press  to go back to the previous menu.



- Auto in progress
- Phase : It adjusts the phase shift of the image. Use when image appears blurry or out of focus.
- H-Position : It moves the image on the screen horizontally.
- V-Position : It moves the image on the screen vertically.



## Adjusting Color Tone

 
Press		.	
Use		to move to	
Press		to move to "PC/HDTV".	
Press		to select.	
Use		to move to "Color Tone"	
Press		to select.	
Use		to select the desired category.	
Press		to go back to the previous menu.	

- Cool 1: This results in a blueish tone.
- Cool 2: This results in a more blueish tone.
- Normal : This is standard color setting.
- Warm1 : This results in a reddish tone.
- Warm2 : This results in a more reddish tone.

## External adjustment

- Use the RS-232C jack to control monitor's functions externally by external equipment.


How connect a external equipment

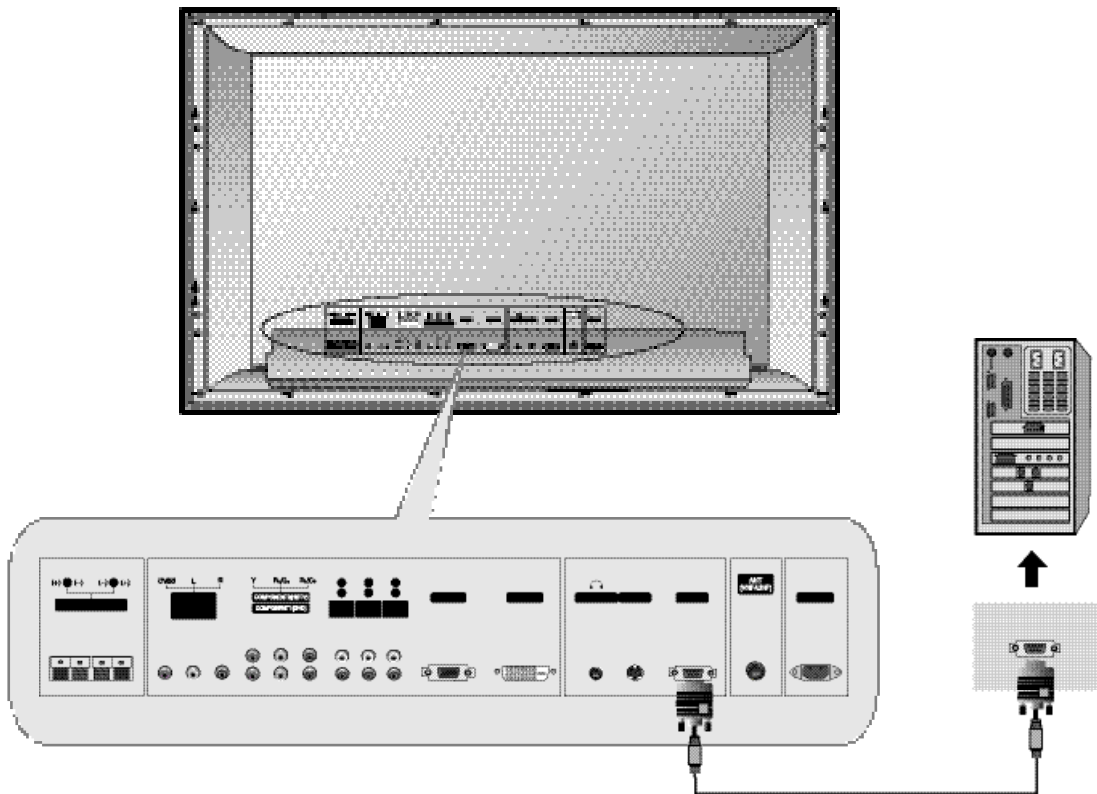



<Back view of the PDP TV>


\* Regular customer does not allow using the external adjustment that is used for service purpose only.


Use this function to choose monitor ID number.

Press  .


---


Use  to move to  .

Press  to move to "Set ID".

Press  to select.

---

Use  to select the desired ID number.


Press  to go back to the previous menu.

The adjustment range of Set ID is 0~ 100.

## Special features

 Type of connector : D-Sub 9-pin male

No.	Pin name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (Dce side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

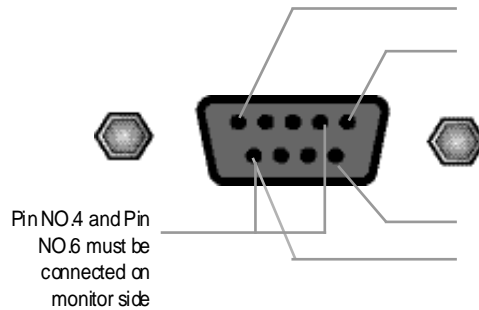


- Use a crossed (reverse) cable.


Wire the cable so that each pair of data lines cross between the two devices. These data line pairs are RXD (Receive to send) and TXD (Transmit data), DTR (DTE side ready) and DSR (DCE side ready), and RTS (Ready to send) and CTS (Clear to send).

## RS-232C configurations

 · 7-wire configuration  
(Standard RS-232C cable)

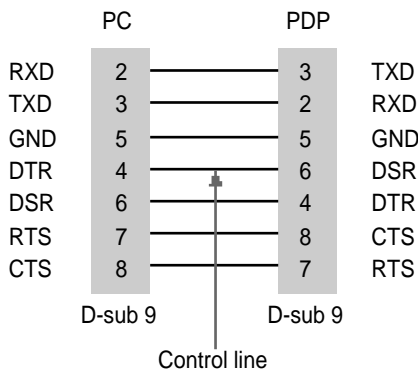

· 3-wire configuration  
(Not standard)

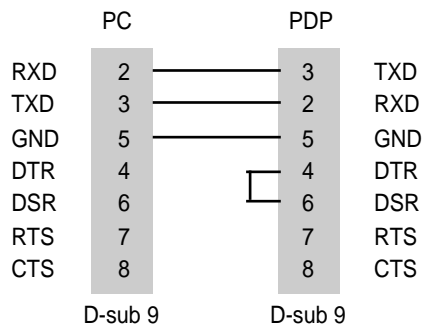 

## RS232C Communication Protocol

### COMMUNICATION PARAMETERS

BAUD RATE : 9600 bps

Data Length : 8bits

Parity : None

Stop bit : 1bit

The Remote Control and PDP TV Key Control(Except Main Power) Don't Operate When Controlling PDP TV Set by PC.

### Command List

Item	ASCII Code	Data(hex)
1. Power	p	00h~01h
2. Input Source	i	00h~07h
3. Aspect Ratio	r	00h~08h
4. Volume Mute	w	00h~01h
5. Volume Control	v	00h~64h
6. Screen Mode	s	00h~04h
7. Brightness	b	00h~64h
8. Contrast	k	00h~64h
9. Color	c	00h~64h
10. Tint	t	00h~64h

Item	ASCII Code	Data(hex)
12. Sharpness	h	00h~64h
13. Information	f	00h~01h
14. Pip On	o	00h~01h
15. Pip Source	u	00h~07h
16. Pip Location	n	00h~03h
17. Pip Sound set	e	00h~01h
18. Pip Mode	d	00h~02h
19. Remote Control On	j	00h~01h
20. Ch -,+	a	00h~01h
21. Abnormal State	q	00h~01h
22. Sound Mode	y	00h~04h

### Transmission / Receiving Protocol List

#### \* Transmission

```
{Command}{SET ID}{Data}{Cr}
```

{Commad} To Control Code PDP TV  
 {} "Space , ASCII Code = 0x20"  
 {SET ID} You Can Adjust SET ID Setup  
 Menu of PDP TV  
 {Data} Data Command  
 Transmit 'FF' data to data  
 read mode  
 {Cr} Carriage Return  
 ASCII Code 0x0d

#### \* Ok Acknowledge

```
{SET ID}{:}{OK}{x}{Data}{x}
```

The PDP TV set transmits ASCII based on this format When receiving normal data. At this time, If the data is data read mode, it indicates present status data if the data is data write mode, it returns the data of PC.

\* In case set ID is 0, Ack data doesn't feed back, and you can adjust all PDP set.

## RS232C Communication Protocol

### Commands

#### 1. Power : p

To Control Power On/Off of the PDP TV

\* Transmission

```
{p}{SET ID}{Data}{Cr}
```

Data 0 : Off

Data 1 : On

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : Off

Data 1 : On

Read Power On Source Status

\* Transmission

```
{p}{SET ID}{:}{FF}{Cr}
```

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : Power Off

Data 1 : Power On TV

Data 2 : Power On AV

Data 3 : Power On S-VIDEO

Data 4 : Power On Component1

Data 5 : Power On Component2

Data 6 : Power On PC

Data 7 : Power On DVI

If Other Functions Transmit 0xFF data based on this format, Ack data feeds back present status about each function.

#### 2. Input Source : i

To Input Source Select

\* Transmission

```
{i}{SET ID}{Data}{Cr}
```

Data 0 : TV

Data 1 : AV

Data 2 : S-VIDEO

Data 3 : Component1

Data 4 : Component2

Data 5 : PC

Data 6 : DVI

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : TV

Data 1 : AV

Data 2 : S-VIDEO

Data 3 : Component1

Data 4 : Component2

Data 5 : PC

Data 6 : DVI

#### 3. Aspect Ratio : r

To adjust screen format

\* Transmission

```
{r}{SET ID}{Data}{Cr}
```

Data 0 : Auto Wide

Data 1 : Wide

Data 2 : Panorama

Data 3 : Zoom1

Data 4 : zoom2

Data 5 : 4:3

Data 6 : 14:9

Data 7:4:3(In PC Mode)

Data 8:Wide(In PC Mode)

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : Auto Wide

Data 1 : Wide

Data 2 : Panorama

Data 3 : Zoom1

Data 4 : zoom2

Data 5 : 4:3

Data 6 : 14:9

## RS232C Communication Protocol

**4. Volume Mute : w**

To Select volume mute on/off

\* Transmission

```
{w}{ }{SET ID}{ }{Data}{Cr}
```

Data 0 : On

Data 1 : Off

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : On

Data 1 : Off

**5. Volume Control : v**

To adjust volume

\* Transmission

```
{v}{ }{SET ID}{ }{Data}{Cr}
```

Data : Min : 00h~Max : 64h

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data : Min : 00h~Max : 64h

**6. Screen Mode : s**

To Select Screen Mode

\* Transmission

```
{s}{ }{SET ID}{ }{Data}{Cr}
```

Data 0 : Custom

Data 1 : Dynamic (In PC Mode : High)

Data 2 : Standard (In PC Mode : Middle)

Data 3 : Movie (In PC Mode : Low)

Data 4 : Mild

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data 0 : Custom

Data 1 : Dynamic

Data 2 : Standard

Data 3 : Movie

Data 4 : Mild

**7. Brightness : b**

To adjust Brightness

\* Transmission

```
{b}{ }{SET ID}{ }{Data}{Cr}
```

Data : Min : 00h~Max : 64h

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data : Min : 00h~Max : 64h

**8. Contrast : k**

To adjust Contrast

\* Transmission

```
{k}{ }{SET ID}{ }{Data}{Cr}
```

Data : Min : 00h~Max : 64h

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data : Min : 00h~Max : 64h

**9. Color : c**

To adjust Colour (Not available in PC Mode)

\* Transmission

```
{c}{ }{SET ID}{ }{Data}{Cr}
```

Data : Min : 00h~Max : 64h

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data : Min : 00h~Max : 64h

**10. Tint : t**

To adjust Tint (Not available in PC Mode)

\* Transmission

```
{t}{ }{SET ID}{ }{Data}{Cr}
```

Data : Min : 00h~Max : 64h

\* Ack

```
{SET ID}{:}{OK}{x}{Data}{x}
```

Data : Min : 00h~Max : 64h

## RS232C Communication Protocol

## Commands

**11. Sharpness : h**

To adjust Sharpness

\* Transmission

`{h}{SET ID}{Data}{Cr}`

Data : Min : 00h~Max : 64h

\* Ack

`{SET ID}{:}{OK}{x}{Data}{x}`

Data : Min : 00h~Max : 64h

**12. Information : f**

Information on/off

\* Transmission

`{f}{SET ID}{Data}{Cr}`

Data 0 : On

Data 1 : Off

\* Ack

`{SET ID}{:}{OK}{x}{Data}{x}`

Data 0 : On

Data 1 : Off

**13. Pip On : o**

Pip on/off

\* Transmission

`{o}{SET ID}{Data}{Cr}`

Data 0 : On

Data 1 : Off

\* Ack

`{SET ID}{:}{OK}{x}{Data}{x}`

Data 0 : On

Data 1 : Off

**14. Pip Source: u**

To Select Pip Source

\* Transmission

`{u}{SET ID}{Data}{Cr}`

Data 0 : TV

Data 1 : AV

Data 2 : S-VIDEO

Data 3 : Component1

Data 4 : Component2

Data 5 : PC

Data 6 : DVI

\* Ack

`{SET ID}{:}{OK}{x}{Data}{x}`

Data 0 : TV

Data 1 : AV

Data 2 : S-VIDEO

Data 3 : Component1

Data 4 : Component2

Data 5 : PC

Data 6 : DVI

**15. Pip Location : n**

To Select Pip Position

\* Transmission

`{n}{SET ID}{Data}{Cr}`

Data 0 : Right Bottom

Data 1 : Right Top

Data 2 : Left Top

Data 3 : Left Bottom

\* Ack

`{SET ID}{:}{OK}{x}{Data}{x}`

Data 0 : Right Bottom

Data 1 : Right Top

Data 2 : Left Top

Data 3 : Left Bottom



## RS232C Communication Protocol

## 16. Pip Sound Set : e

To Select Pip Sound  
 \* Transmission  
 {e}{SET ID}{Data}{Cr}  
 Data 0 : Main  
 Data 1 : Sub  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : Main  
 Data 1 : Sub

## 17. Pip Mode : d

To Select Pip Mode  
 \* Transmission  
 {d}{SET ID}{Data}{Cr}  
 Data 0 : PIP  
 Data 1 : PBP1  
 Data 2 : PBP2  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : PIP  
 Data 1 : PBP1  
 Data 2 : PBP2

## 18. Remote Control On : j

To Select Remote Control on/off  
 \* Transmission  
 {j}{SET ID}{Data}{Cr}  
 Data 0 : Pc Control  
 Data 1 : Remote Controller On  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : Pc Control  
 Data 1 : Remote Controller On

## 19. CH -, + : a

To Adjust Program Number  
 \* Transmission  
 {a}{SET ID}{Data}{Cr}  
 Data 0 : Decrement Program Number  
 Data 1 : Increment Program Number  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : Decrement Program Number  
 Data 1 : Increment Program Number

## 20. Abnormal Status : q

You Can Read PDP TV Status  
 \* Read Only Mode  
 \* Transmission  
 {q}{SET ID}{FF}{Cr}  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : OK  
 Data 1 : Standby  
 Data 2 : AC Down

## 21. Sound Mode : y

To Select Sound Mode  
 \* Transmission  
 {s}{SET ID}{Data}{Cr}  
 Data 0 : Custom  
 Data 1 : Standard  
 Data 2 : Music  
 Data 3 : Movie  
 Data 4 : Speech  
 \* Ack  
 {SET ID}{:}{OK}{x}{Data}{x}  
 Data 0 : Custom  
 Data 1 : Standard  
 Data 2 : Music  
 Data 3 : Movie  
 Data 4 : Speech

## Trouble shooting

Do not use other functions that are mentioned on this user's manual.

It will be main reason of a faculty and motion error.

In case a problem occurs with your PDP TV, please take the following steps first.

If you still have the problem, turn the power off and contact your dealer or an authorized service center.

### Screen related Matters


Problem	Action
The screen does not appear.	Is the power plug pulled out? Insert the power plug. Turn the main power button on and press the power button of the remote controller.
The screen appears too slowly after the power is turned on.	This problem occurs for a brief time in the process of image elimination processing in order to hide temporary screen noise that occurs when the power is turned on. But if the screen does not come after 1 minute has passed, contact your dealer or an authorized service center.
Screen is too bright or too dark.	Perform brightness adjustment or Contrast adjustment. (Please refer to page 24)
Screen is too large or too small.	Adjust the screen size. (Please refer to page 28)
Stripes appear on the screen and it shakes.	Stop using wireless telephones, hair driers and electric drills.
Simultaneous Screen does not appear.	Check that PDP TV and external equipment are connected. Check the inputs of simultaneous screen by pressing sub-screen selection.
The screen does not move.	Press the STILL button. (Please refer to page 21) Check if the Pause button is pressed on external equipment.
Computer Input Screen is abnormal.	Perform manual fine adjustment (Please refer to page 40).
Automatic Turn On does not work.	Automatic Turn On function works only when turning the PDP TV off with the remote controller or Standby button.
The screen does not appear on AV source.	Check that S-VIDEO source is connected. If AV and S-VIDEO are simultaneously connected, you can't select AV source.

### Sound related Matters

Problem	Action
Screen appears, Voice is not heard	<ol style="list-style-type: none"> <li>1. Press the "Mute" button. (page 21)</li> <li>2. Increase the sound by pressing volume adjustment button.</li> <li>3. Check if voice terminal of external input is connected properly.</li> <li>4. Check if audio cables are connected properly.</li> <li>5. If it is on PIP mode, convert audio of main screen and sub-screen by pressing S/Select.</li> <li>6. Select and check the other input.</li> </ol> <p>If the sound still does not work and the other channels are the same after you have done as the above, contact your dealer or an authorized service center.</p>
Lots of noise (static) occurs.	When connecting a Set-Top-Box, check that it is on stereo broadcasting. If it is, the TV program may not be available or the reception may be bad. Check the audio source with another player. If that source is good, contact your dealer or an Authorized service center.

## Trouble shooting Tips

### Others

Problem	Action
Remote controller does not work.	<ol style="list-style-type: none"> <li>1. Check if main power is On.</li> <li>2. Check that the batteries of the remote controller were loaded properly.</li> <li>3. Check to see if any obstacle exists between the PDP TV and the remote controller and remove it, if any.</li> <li>4. If the batteries have no power, replace them with two new batteries.</li> </ol>
PDP TV makes strange noise.	It is the noise when the mechanism expands or contracts from to changes to the environment due to factors such as humidity, temperature, etc. It is not a failure.
PDP TV indication lamp is On.	The red means the Stand-by power is ON. It will take a few seconds to turn off as the main power is off.
Had forgotten Password of V-Chip	Press  buttons on the Remote control in V-Chip function.
Can not select PC mode when D-sub cable is connected to the RGB output of Set-top-box.	D-sub cable must not meet VESA standard. (D-sub No. 10 pin must be grounded) Component Cable can be used if there is an Component Terminal.(See Page 18)

This PDP TV is for household use and registered as suitable on electromagnetic waves. Therefore, you can use it in every location as well as residential areas.

### Supporting display mode

It is optimal screen when the resolution is 640 x 480.

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
640x 480	31.47	60
	37.86	72
	37.50	75
720x 400	31.47	70
800x 600	35.15	56
	37.88	60
	48.88	72
	46.88	75
1024 x 768	48.36	60
	56.48	70
	60.02	75

### Considerations in Installation

If any signal of unsupported resolution is input, the "Out of Range" message appears.

## Supported Display Modes

### Component Mode [Y, C<sub>B</sub>(P<sub>B</sub>), C<sub>R</sub>(P<sub>R</sub>)]

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	
720 × 480	15.73	60.00	SDTV, DVD 480i
720 × 480	31.47	59.94	SDTV, 480p
1280 × 720	45.00	60.00	HDTV, 720p
1280 × 720	44.96	59.94	HDTV, 720p
1920 × 1080	33.75	60.00	HDTV, 1080i
1920 × 1080	33.72	59.94	HDTV, 1080i

### Specifications

Aspect Ratio	16 : 9
Screen Size (H × V)	920.1 × 518.4mm
Resolution	852 × 480(Wide VGA)
Cell pitch (H × V)	0.36(H) × 1.08(V)mm
Displayable Colors	16.77M(256 × 256 × 256)
Brightness	1000cd/m <sup>2</sup> (w/o filter)
Contrast	1200:1
Viewing Angle	160°
Input signal	NTSC, SD, HD, VGA, SVGA
Tuner	NTSC-M
RGB Input	D-Sub(15pin), DVI-D with HDCP
AC Input	AC100-240V~, 50/60Hz, 4A
Power Consumption	320W

If any signal of unsupported resolution is input, the "Out of Range" message appears. The outside design and specification can be modified without any previous notice for improving the performance.

Memo



A series of horizontal lines for writing, forming a memo template. The lines are evenly spaced and extend across most of the page width.

## 42" PDP TV User's Guide