

7" Tablet User Manual

Table of Contents

• Safety Information	pg.2
• Features	pg.3
• The Tablet	pg.4
• Setting Up: Quick Start	pg.5
• Starting Up: Boot UP & Shut Down	pg.6
• Basic Operation:	pg.7
• Connect with PC	pg.8
• Interface Introduction.....	pg.9
• Home Screen Menu.....	pg.10
• Desktop	pg.11
• Display Settings	pg.12
• Wireless Connection	pg.13
• Applications Install / Uninstall	pg.14
• Applications	pg.15
• Apps: Browser / Video Player	pg.16
• Apps: Gallery / Music Player	pg.17
• Apps: Camera	pg.18
• Apps: Voice Search / Play Store	pg.19
• Maintenance.....	pg.20
• Frequently Asked Questions.....	pg.20-21
• Legal Notices	pg.22

Safety Information

Always follow these basic safety precautions when using your tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords to ensure that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Ensure that the power supply to the socket into which the tablet is plugged in is in accordance with the rating plate that is found on the transformer.
- Do not operate in damp or humid conditions e.g. laundry room, shower / bathroom or near to swimming pools.



Features / Product Content

Features

 
- Dual Core
- Capacitive Multi-Touch Screen
- Allwinner A23
- GPU : Mali-400,2D/3D graphics processor
- Resolution 800x480 pixels
- 8GB Storage
- 512MB RAM
- Wi-Fi Ethernet
- Micro USB 2.0 Port
- Micro SD Card Reader
- 0.3MP Front & 2.0MP Rear Camera
- Lithium Battery: 3.7V, 2800mAH
- AdobeFlash Player 11.1 Support

Product Content

- 7" Android 4.4.2 Tablet
- Transformer
- Instruction Manual
- USB - Micro USB lead wire
- OTG - Cable

The Tablet

Front

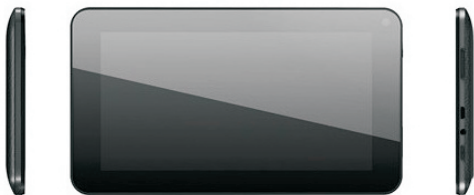

Back

Battery Use

- Battery management and charging.
- Before using this device, please charge it fully. Put the charger adapter into the DC jack, the device will start to charge.

IMPORTANT:

- This device has a built-in polymer battery. Only the specified charger should be used.
- When it is charging, the battery icon will be rolling.
- When the charging is finished, the battery icon will turn green and stop rolling.
- If you do not use this device for a long time, please charge/release it once a month to avoid deep discharge.
- When the Tablet powers off due to low battery, connect to the charger, the device will indicate "low power" or "charging", please wait for a second for the machine to turn the main interface back on, once there is enough power.
- The built-in polymer battery should be charged regularly. The damage caused by battery over-consuming is not included in the warranty.

Boot and Shutdown

To turn on the Tablet press and hold the power button, the system will enter the default home interface.

 


To shutdown press and hold the power button, select Power off and tap OK on the touch screen.

How to use

Basic Operation

Select the “Settings” icon in the main applications area. This opens the system settings interface.

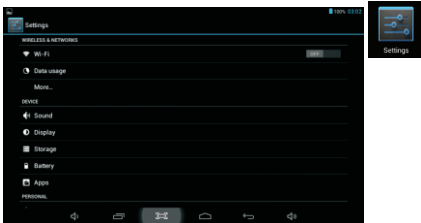

Select the appropriate operation, such as: wireless and network, display, date and time settings, about device, etc.

Date and time settings:

Select “Date & Time” to enter the date and time settings interface: Touch to set the date, select the time zone, set the time, time format, date format and other information. For example, choose to set the date, as follows: Scroll up or down to select your month, date and year.



Connect to PC

Connect with PC by using the Micro USB cable supplied with the device. USB Data transferring is available. You can access your files through your PC. When your device is connected successfully, pull up the notification area of the status bar and you can see the following icon.



Your tablet default setting will be media transfer protocol (MTP).

Note: The device also supports the FAT32 format for external devices, for example U disk, Micro SD card to transfer data.

Interface Introduction

Interface Bar



- 1 Volume –
- 2 Recent Apps Icon: Show recently opened applications.
- 3 Screen shot capture button.
- 4 Home Icon: Returns to home screen.
- 5 Back Icon: Returns to previous screen.
- 6 Volume +

 
Entering Settings Menu

There are two ways to access the Settings Menu:

Press the right hand side on the interface bar and the menu box will appear. Press the settings icon and this will take you to the settings menu.



The second option is to press the apps window icon and select settings icon.

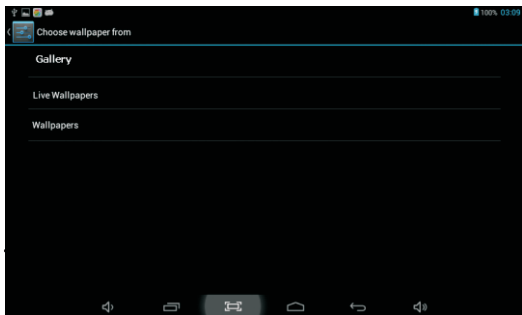

To change your wallpaper in the settings menu select display then wallpaper and you will now be able to select from the Gallery, Live Wallpapers or Wallpapers.

1. Gallery
2. Live Wallpapers
3. Wallpapers

Desktop

To switch between screens slide your finger left or right depending on which screen you require, the desktop is fixed on the centre screen and will not move.

To add apps to your desktop press and hold down the app which you wish to appear on your desktop then drag from main menu.

 
To remove app from desktop press and hold down, then drag the app to the center top of the screen to the remove sign.



Display settings

Press the right hand side of the menu bar on the device and the menu box will appear. Press the **system settings** icon to enter.


In the system settings menu you can access the following.

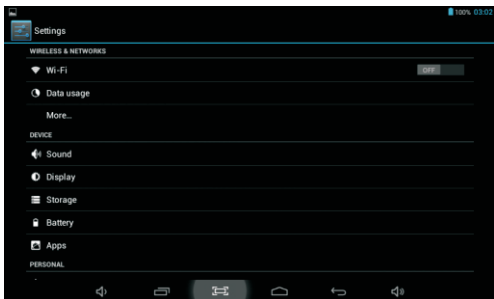

- Wi-Fi (Connection to the internet)
- Data Usage
- Sound (Volume adjustment)
- Display
- Storage
- Screenshots
- Battery
- Apps
- Location Access
- Security
- Language and Input
- Backup & Reset
- Date & Time
- Accessibility
- Developer Options
- About Device

Wireless Connection

 Touch the main menu “Settings” icon and select “Wireless and Networks”. Turn to ON - the Wi-Fi module will automatically search and display all available networks. Select Network and enter Password to connect.

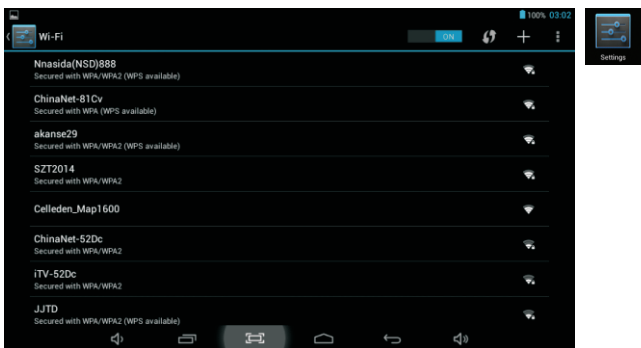


Applications Install/Uninstall

Applications Install

To install applications

 - Enter the Settings menu and select Security.
- Select 'Unknown Sources' heading to allow installation of apps.
- Enter 'Play Store' download and install desired apps.

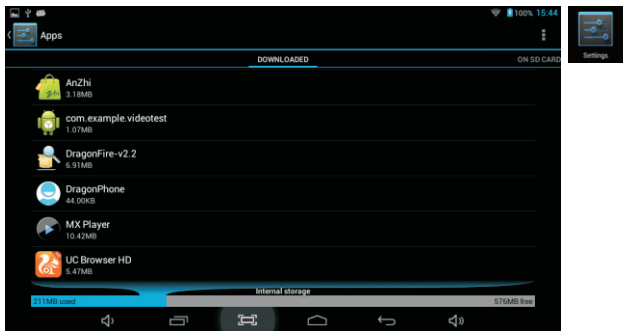


Applications Uninstall

To uninstall applications

- Enter the Apps menu and scroll left/right to 'downloaded' apps. Select the appropriate application you wish to remove and press uninstall.

 Applications

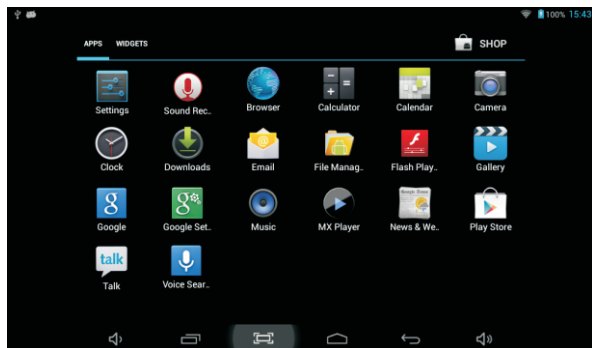


Applications




Browser:

 When your tablet is connected to the WIFI, open the Web browser and enter a URL, you can quickly browse the Web; or through the main desktop search bar enter the URL,

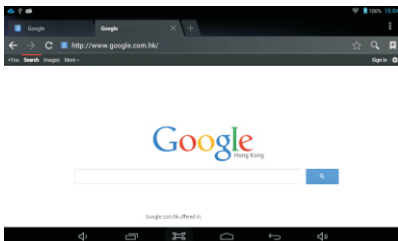

Video Player:

 Online video: The product supports HTML5 online video playback.
Local video: Select the MX Player icon. The Player can load new albums and photos automatically when stored on the tablet or micro SD card, then select the videos to playback.

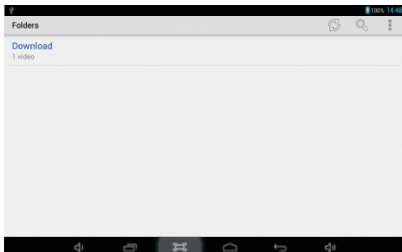


Applications




Gallery:

 View your installed photos in the Gallery. There will be a list of all the images, photos, videos and screenshots - enter one and select to view.

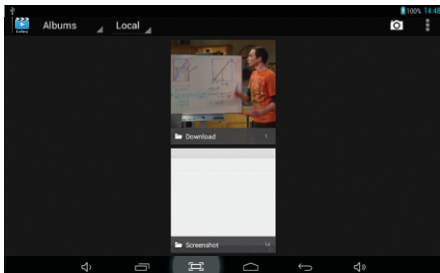

Music:

 Touch the music icon to enter the music player interface and select the music files you wish to play.

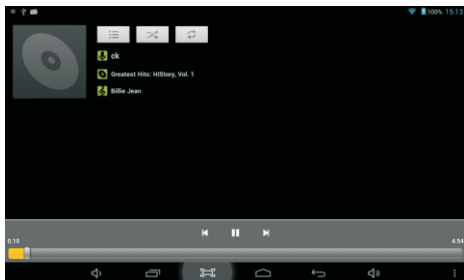

Applications

 


Camera:

Tablet includes both a front (0.3mp) and rear camera (2mp).

To switch between front/rear camera select the camera icon at the top of the slide bar in the Camera app (fig).

1. Select camera icon for photos.
2. To film and make videos select Movie Recorder icon.

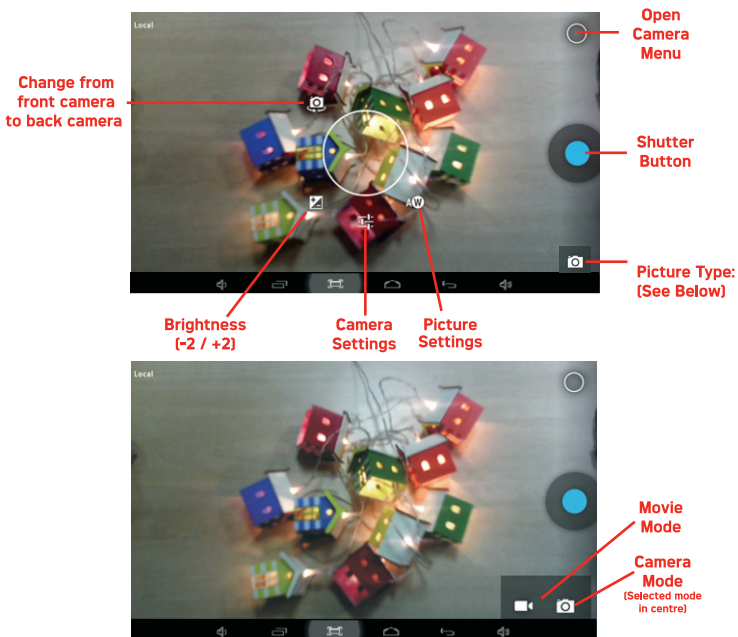


Applications




Voice Search:

 Select Voice Search icon and speak clearly into tablet when prompted. The voice recognition will take you straight onto the web (when connected) and list the results of the requested spoken words.

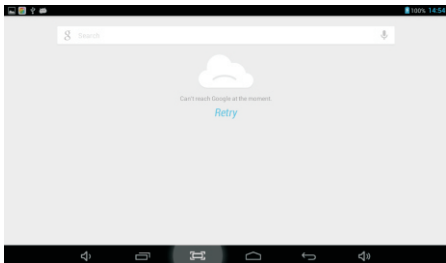

Play Store:

 Select to enter the "Play Store" interface. Create a Gmail account if you have not got one already. Select "Accept" to enter market as shown below.

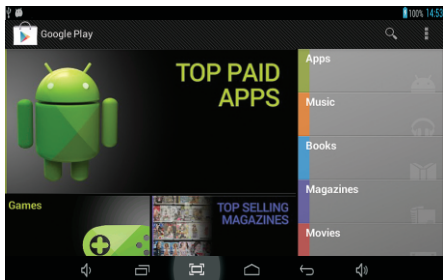

Troubleshooting

Android:

Q: What Android OS version is on my Device?

A: 4.4.2

Email:

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Q: Which media cards are compatible with my Device?

A: Micro SD cards up to 32GB.

Music:

Q: What type of music files can I play on my device?

A: MP3, WMA, MP2, OGG, AAC, M4A, FLAC, APE, WAV

Photos:

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP, GIF and PNG.

Troubleshooting

Video:

Q: What type of video files can I play on my device?

A: AVI, 3GP, MP4, MPG, RM, RMVB, MOV, FLV, WMV, MKV (max 2160p full HD video)

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quickly access videos.

Wi-Fi:

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

My Tablet will not start:

Q: When I turn my tablet on it stays on the Android picture on the screen.

A: You will need to re-boot your tablet. You can do this by

- 1) Plug your adaptor in and connect to the tablet.
- 2) Press both the on/off switch and the volume buttons together and hold for approx. 15 seconds.
- 3) When a different picture appears of the Android with a door open on its stomach press the on/off button - your tablet will automatically re-boot.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

