

 
# FunTab pro

## Parents' Guide



<b>Section 1: Tablet Overview</b>	
Tablet Overview	2
Kid Mode Overview	3
Parent Mode Overview	3
Touch Screen Basics	4
Lock Screen	5
Icon Glossary	5
<b>Section 2: Initial Setup</b>	
Charging	6
Connecting to Wi-Fi	6
User Setup	7
Editing Available Apps	7
Turning on Child Lock	8
Parent Dashboard	9
<b>Section 3: Common Functions</b>	
Downloading and Installing Apps	10
Uninstalling Apps	11
Removing Apps from Home Screen	11
Connecting to a Computer	12
Adding Music and Movies	14
Connecting to your TV	14
Kid Safe Browser Overview	15
Adding Safe Sites	16
Deleting Sites	16
Recording a Storybook	17
Camera	18
Widgets	19
Settings	20
Included Apps	21
Removing the Faceplate	25
Tips and Tricks/FAQs	25
Ematic Software Update	27
Care	28
Specifications	28
Customer Support	29
Limitations of Liability	30

# 1. Tablet Overview

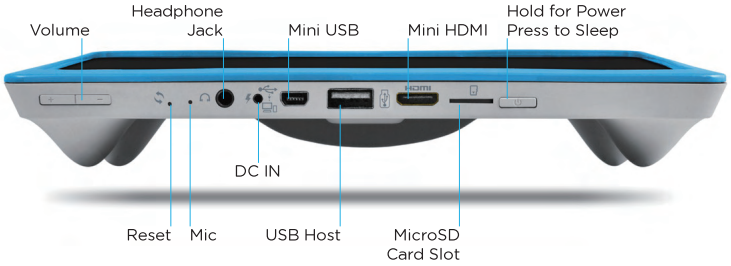


# Kid Mode Overview

Change User  
Exit Kid Mode

Tap to Switch Tab

 Tap the blue arrow  
for more games

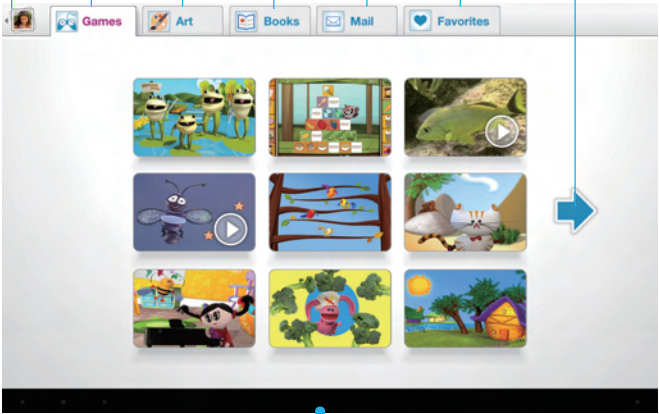

Tap to reveal the navigation bar.




Back Home Multitasking  
(Does not function  
in Kid Mode)

Wi-Fi® Signal  
Battery

# Parent Mode Overview

 Search

All Apps and Widgets

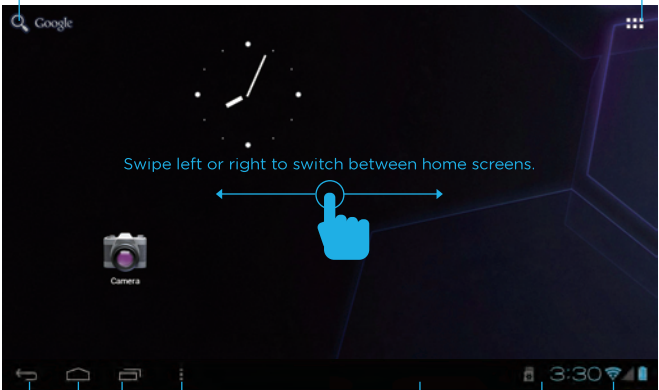

Swipe left or right to switch between home screens.

Back Home Multitasking Menu

Notifications Wi-Fi Signal

# Touch Screen Basics

Tap the screen once to activate or open something.



Touch and hold to move an item by dragging.

\*In many apps touch and hold can offer more options.



**Zooming:** Double tap quickly to zoom into a web page, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.

 


**TIP:** You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.


Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up, allowing you to type out your desired text.



Hide Keyboard

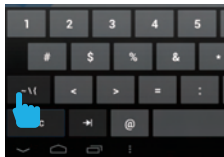

Tap **?123** for numbers and more punctuation. Then tap **-\|** for more symbols.

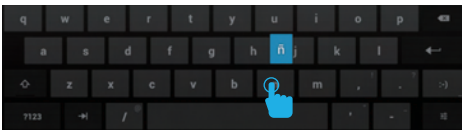 


Touch and hold a letter for special characters.

The G-Sensor allows the tablet to detect screen rotation. You can view the home screen in either a landscape or portrait format as you use the apps. **Kid mode only functions in landscape format.**



## Lock Screen

 Slide the padlock icon circle to the unlocked padlock to unlock the screen.

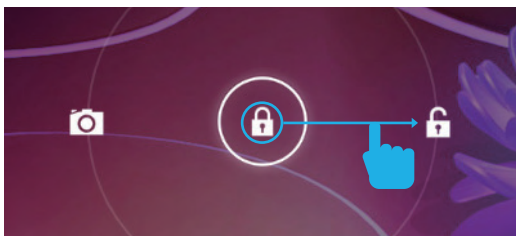

## Icon Glossary



**Battery Level:** The blue battery level indicator will decrease and change to red as the battery is drained.



**Wi-Fi Signal:** As the Wi-Fi signal strength decreases, the blue bands will change to grey.



**Settings:** Adjust your settings for Wi-Fi, screen brightness, security settings, language options, and more.



**Menu:** Tap to reveal settings and options.

## 2. Initial Setup

### Charging

Fully charge your FunTab Pro for 6 hours before the first use.



 
Use the included 5V wall charger.

The battery indicator will show that your device is charging.




**Note:** Charging by the USB port on your computer will be slow. We recommend using the included wall charger.


## Connecting to Wi-Fi®

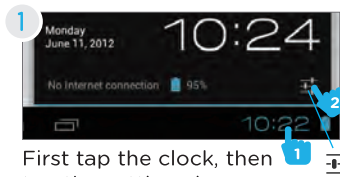

 
First tap the clock, then tap the settings icon.

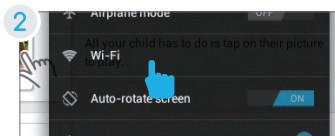


Tap Wi-Fi.

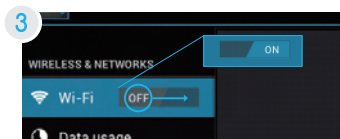 

 
Slide OFF to the right to turn on Wi-Fi.

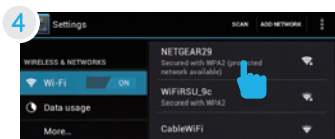

Tap to select your network.

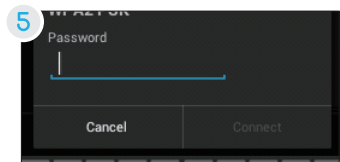 

Enter your password.

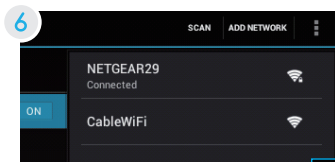 


When connected tap back. (Located in the lower left corner)

If you accidentally exit Kid Mode during setup, tap the Kid Mode icon on the desktop to resume initial setup.




# User Setup

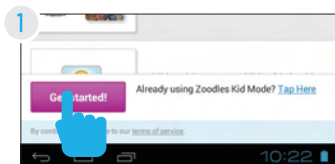 

Tap "Get Started!"



 Enter the e-mail and password you would like to use and tap save.

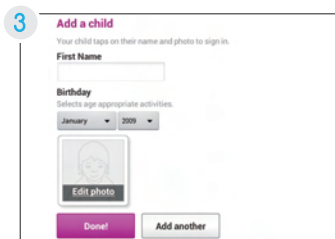

Add your child. You can add another child now, or later at any time by using the parent dashboard app.




# Editing Available Apps

 
All apps will be available the first time you turn on the tablet.




To modify apps, tap Edit, or you can tap Save to skip and move on to the next step.

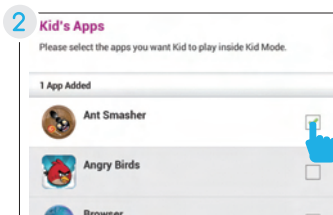

 Uncheck the apps you want to remove by tapping in the check box, then tap save.




 You can edit the available apps later by using the Parent Dashboard app and selecting Apps.

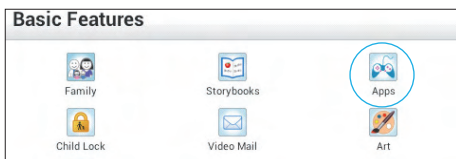





# Turning on Child Lock

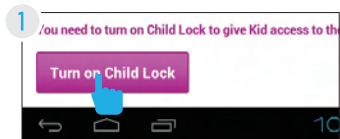 


Tap "Turn on Child Lock."

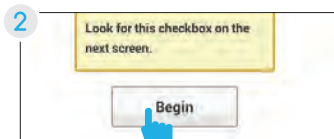 

Tap "Begin."

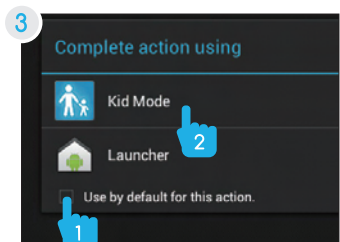 


 **First**, tap the check box. Then, tap "kid mode."

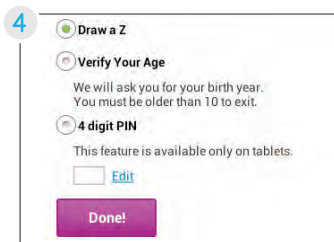

Choose which action is required to exit Kid Mode. Entering a 4 digit pin is the most secure option.

 Use the Parent Dashboard to control the child lock features and to change the required action for exiting out of Kid Mode.

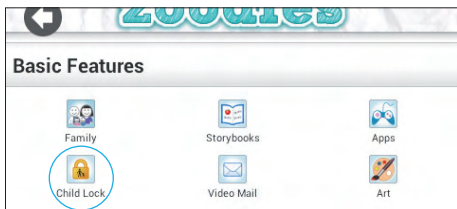

You can choose 3 levels of security:

Least Secure

Most Secure

Draw a Z

Enter Birthdate

Enter PIN

# Parent Dashboard



**Family:** Add additional children.



**Storybooks:** Record yourself reading a story, or buy more books.



**Apps:** Select the Android Apps available to use from inside Kid Mode.



**Child Lock:** Turn Child Lock on/off or choose which action is required to exit Kid Mode.



**Video Mail:** Turn Video Mail on/off. Go to [www.zoodles.com/parent](http://www.zoodles.com/parent) to send your child a video message, add family members to your account, and review all the message your child has sent and received.



 
**Art:** Save your favorite drawings by giving them a gold star.



**Settings:** Sign out, refresh content, or set maximum volume.

Visit [www.zoodles.com/parent](http://www.zoodles.com/parent) to promote subjects, record video mail, invite family members, and more.

**Upgrade to premium to promote subjects, adjust violence filter, block characters, block sites, and more.**

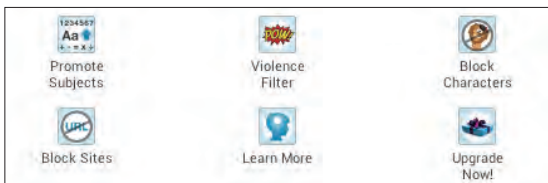


# 3. Common Functions

## Downloading and Installing Apps

Apps can be downloaded in Kid Mode, but you must exit Kid Mode to install the app.



 Tap the App Mall icon.

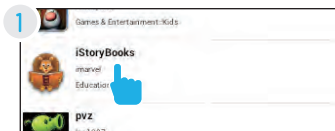


Tap the app you want to download.



Tap Accept Permissions.

3 Exit Kid Mode.

 
4 Tap the App Mall icon

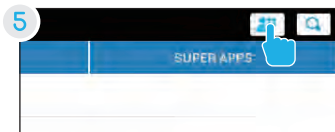

Tap the My Account icon in the top right corner.



 
Tap downloads to see the apps that have been downloaded but not installed.

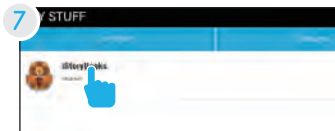

Tap an app.



 Tap Install.

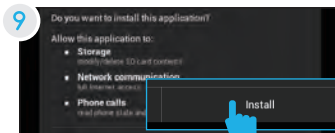

Tap Install.

10 Use the Parent Dashboard app to make the app available in Kid Mode. See the [Editing Available Apps](#) Section.




**Tip:** If you install too many apps, you may run out of memory. You can uninstall an app and download it again later.

# Uninstalling Apps

 
In parent mode, touch and hold an app in the app menu and drag to the trash can Uninstall icon.

You can also uninstall apps by tapping apps in the settings app.

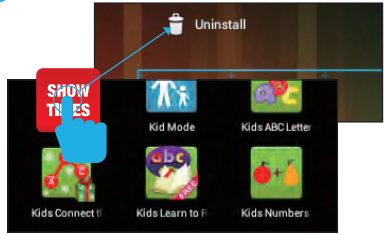

# Removing Apps from Home Screen

 In parent mode, touch and hold an app on the home screen and drag to the X Remove icon.

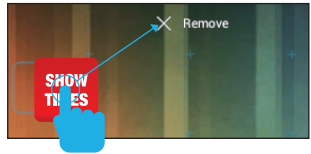


# Connecting to a Computer


You must be in parent mode to connect to a computer.



 Connect to your computer by USB.

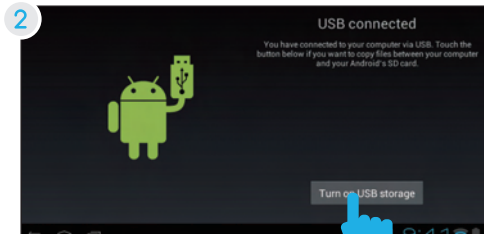

Tap turn on USB storage.

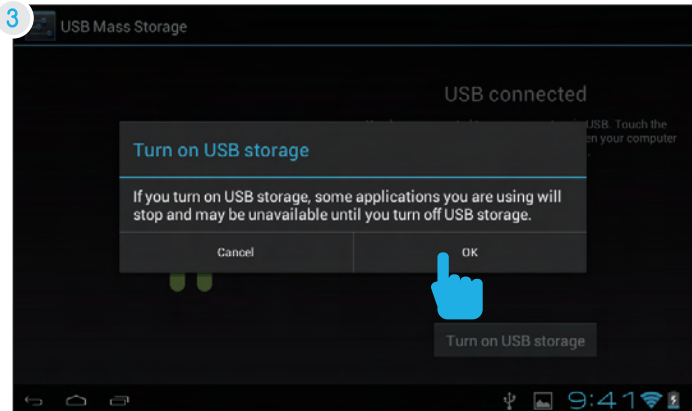 


Tap OK to allow USB Storage.

## PC

 Skip to the next page if you have a Mac®.




Choose open folder to view files or select the removable disk.

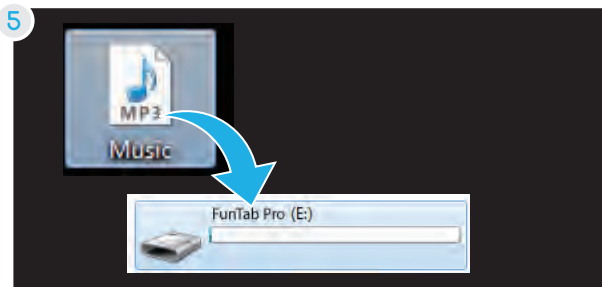

You will now be able to drag and drop files from your computer to your tablet just as you would with a USB flash drive.

 6

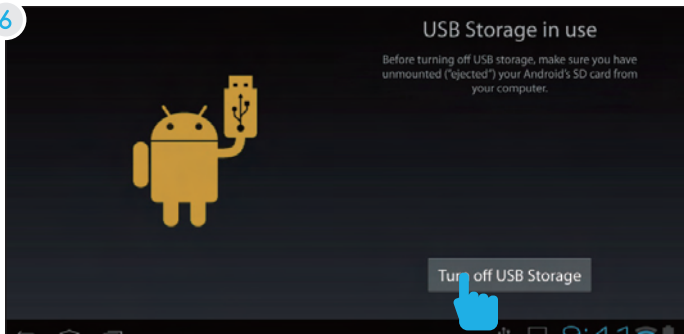


Before turning off USB storage, make sure you have unmounted (“ejected”) the FunTab pro and SD card from your computer. Tap Turn of USB Storage.

## Mac®

 Go to the previous page if you have a PC.

- 4 Use *Finder*® to go to *Devices* and choose FunTab Pro
- 5 You will now be able to drag and drop files from your computer on to your tablet just as you would with a USB flash drive.

6

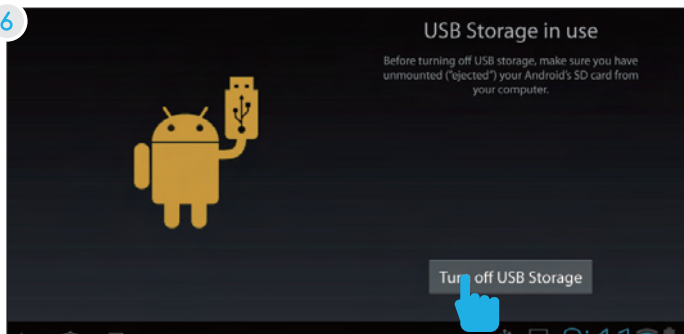

Before turning off USB storage, make sure you have unmounted (“ejected”) the FunTab pro and SD card from your computer. Tap Turn of USB Storage.

## Adding Music and Movies

To view videos and listen to music that have already been loaded, the Music app and Super - HD Player app must be made available in Kid Mode. Use the Parent Dashboard to add them if they aren't already. See the [Editing Available Apps](#) Section.



## Connecting to Your TV

The FunTab Pro can display the same image on your TV as what is being shown on the tablet's display. Use the included HDMI cable to connect the FunTab Pro to your HDTV and it will automatically transmit the signal.

