

# User Manual

for Android Lollipop



## Table of Contents

Before operating this product, please read & follow instructions.

<b>MAIN FEATURES .....</b>	<b>5</b>
<b>How to Use Your Tablet .....</b>	<b>5</b>
<b>JACK .....</b>	<b>5</b>
<b>PHYSICAL BUTTONS .....</b>	<b>5</b>
<b>TOUCH BUTTONS .....</b>	<b>6</b>
<b>SHORTCUTS .....</b>	<b>6</b>
<b>WIDGETS .....</b>	<b>9</b>
<b>NOTE .....</b>	<b>11</b>
<b>POWER ON/OFF/ STANDBY .....</b>	<b>11</b>
<b>RESET.....</b>	<b>12</b>
<b>MICRO SD .....</b>	<b>13</b>
<b>DESKTOP AND MAIN MENU .....</b>	<b>14</b>
<b>OPEN OR SWITCH APPLICATION.....</b>	<b>16</b>
<b>GENERAL FUNCTION .....</b>	<b>18</b>
<b>SOME COMMON FEATURES SUCH AS BRIGHTNESS, WALLPAPER, SLEEP TIME CAN BE CHANGE IN SETTINGS - DETAILS AS FOLLOWS: .....</b>	<b>18</b>
<b>WI-FI .....</b>	<b>18</b>
<b>BLUETOOTH.....</b>	<b>19</b>
<b>STORAGE .....</b>	<b>20</b>
<b>APPS.....</b>	<b>21</b>

**ENTER THE "APPS", YOU CAN VIEW THE STATUS OF EACH APP,  
FOR EXAMPLE: THE RUNNING, INSTALLED, AND SO ON. DETAILS  
AS BELOW: ..... 21**

**SECURITY ..... 22**

**LANGUAGE & INPUT ..... 22**

**BACKUP & RESET ..... 23**

**CAMERA ..... 24**

**GALLERY ..... 25**

**MUSIC ..... 26**

**BROWSER ..... 26**

**MESSAGING ..... 27**

**Trouble Shooting ..... 28**

## Cautions

For better use, please carefully read the "User's Guide", and follow the prompts.

Avoid products placed above 40 °C or below -5 °C environment.

Please forbid the product from fire, moisture environment, and direct sunlight.

Please do not attempt to personally disassemble, repair, modify the product, if demand please contact sales staff.

Please operate according to the "User's Guide".

Please avoid crashing the product.

Please do not use the product near strong magnetic fields, power plants, etc.

Do not use the product when riding bicycle, car and motor cycle to avoid dangerous.

Do not use high volume to avoid damage to your hearing.

Properly dispose of electronic waste, such as batteries.

## Main Features

### Accessories

Below items are included in your MID package

1. MID x 1
2. USB cable x 1
3. Adapter x1
4. Manual x1

## How to Use Your Tablet

### Jack

**Earphone Jack:** Insert earphone to this jack for phone calls or listening music.

**Micro USB Jack:** Charging your tablet, or connecting your tablet with PC to copy/delete files, or connecting your USB accessories by the USB OTG cable, such as USB mouse, USB keyboard. (Can only use one equipment at the same time)

**TF Card Slot:** Insert TF card, can support up to 32GB.

**Mic:** Built-in microphone for phone calls.

 
## Physical Buttons

Items	Name	Functions
1	Power ON/OFF	Short press: Display sleep Long press: (1) Power on/off (2) Restart (3) Airplane mode (4) Ring/Vibrate/Silent
2	Vol +/-	Short press, vol +/-
3	Press Power and vol - button at the same time, can take screen shot.	

## Touch Buttons


Items	Name	Functions
1	Short press	Press on screen within 1.2s, it mainly used on menu choice and confirm.
2	Long press	Press and hold on screen for more than 1.2s.
3	Drag	It belongs to identify the touch tracking direction. Mainly for pictures, flip, drag and so on.
4	Virtual key	It belongs to the virtual keyboard.

Virtual keyboard as below:

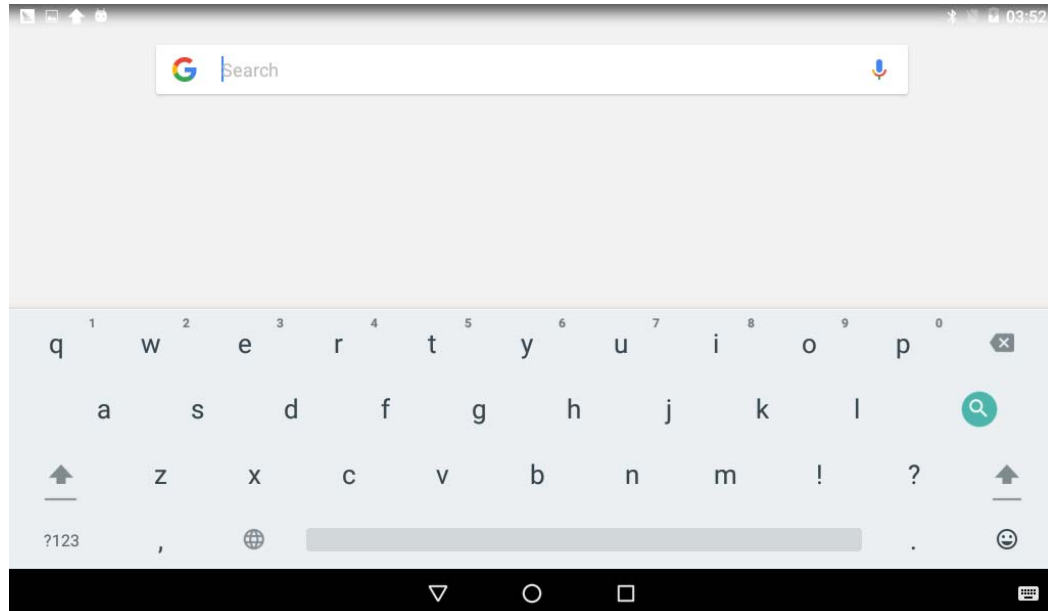

## Shortcuts

 Please refer to the figure below:

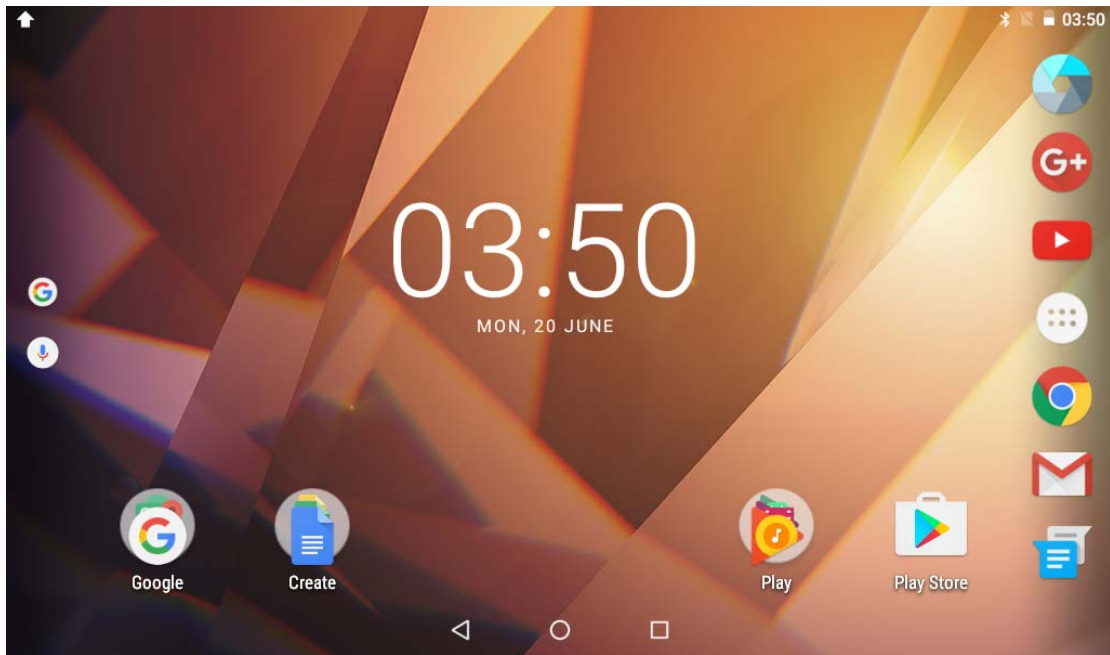


There are 6 shortcuts at the bottom of the screen:

Item	Functions
Return key	Return to the last screen
Desktop menu	Return to the Desktop

Recent program key	List the recent program



 Quick settings is shown as below:

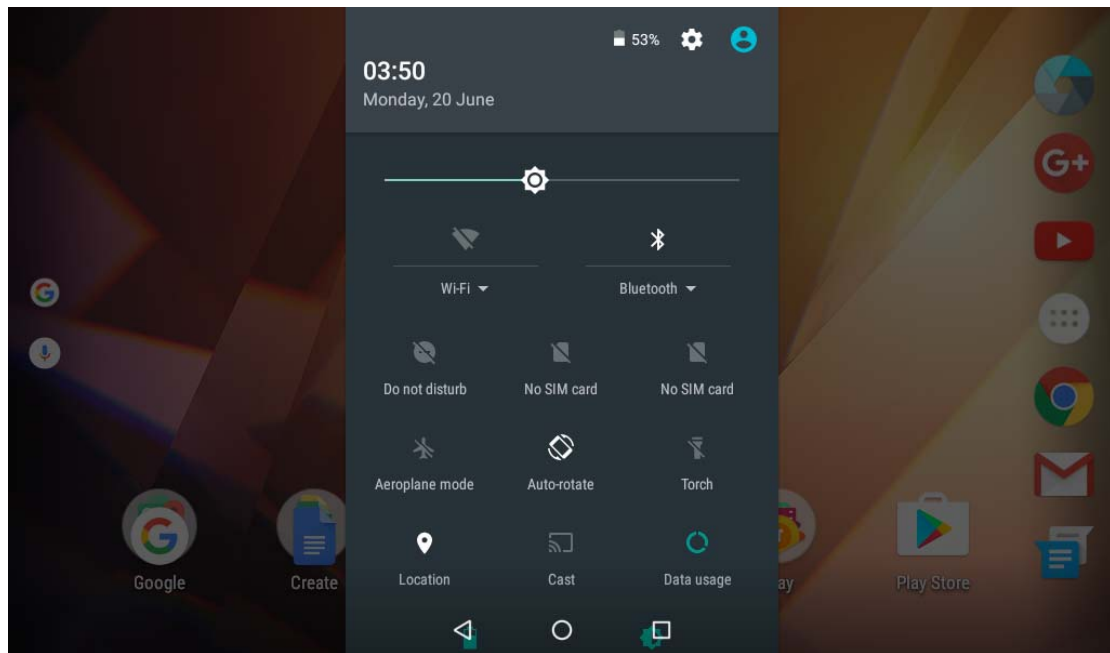


Touch and drag the window twice from the center of screen to open the shortcut and frequent use setting option. Quick setting window is open just touch the correct setting which you need to change.

## **Widgets**

 As shown below, it also belongs to a system of shortcuts. Some widgets are built-in and other you can download from play store or third-party APK & install widgets.

Widgets can be dragged to any desktop interface in five HOME screen.

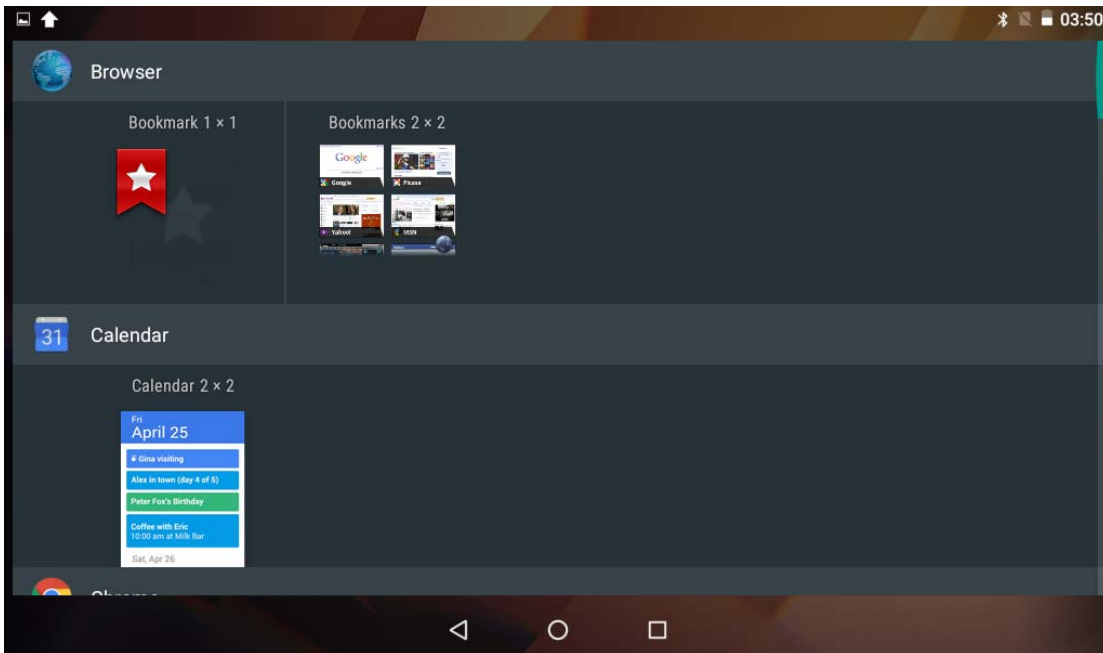

## Product Use

### Battery Charging

Your tablet has a built-in rechargeable lithium battery. Before using the product for the first time, the battery should be charged fully to ensure proper working of the product.

The battery inside the device can not be replaced. If you have questions or need to replace the battery, please contact our equipment service center.

Do not connect the tablet to a power source other than that which is indicated here or on the rating label as this may result in the risk of fire or electric shock and failure of the product.

When the battery power is low, the device will display a low battery message, if power is low, the device will automatically shut down. Please recharge the tablet to continue using it.

If misused battery used in this device may cause a fire or chemical burns.

The battery used in this device may result in fire or chemical burn if it is misused. Do not disassemble,

 
incinerate, or heat the battery. Do not leave the battery in a place subject to direct sunlight .

## Note


Please use the adapter for charging which is provided with the tablet his adapter is designed to charge the tablet faster at 2A input.

## Power On/Off/ Standby

Power on: Long press Power ON/OFF button, after the “ANDROID” logo loading for several seconds, the desktop appears as below:

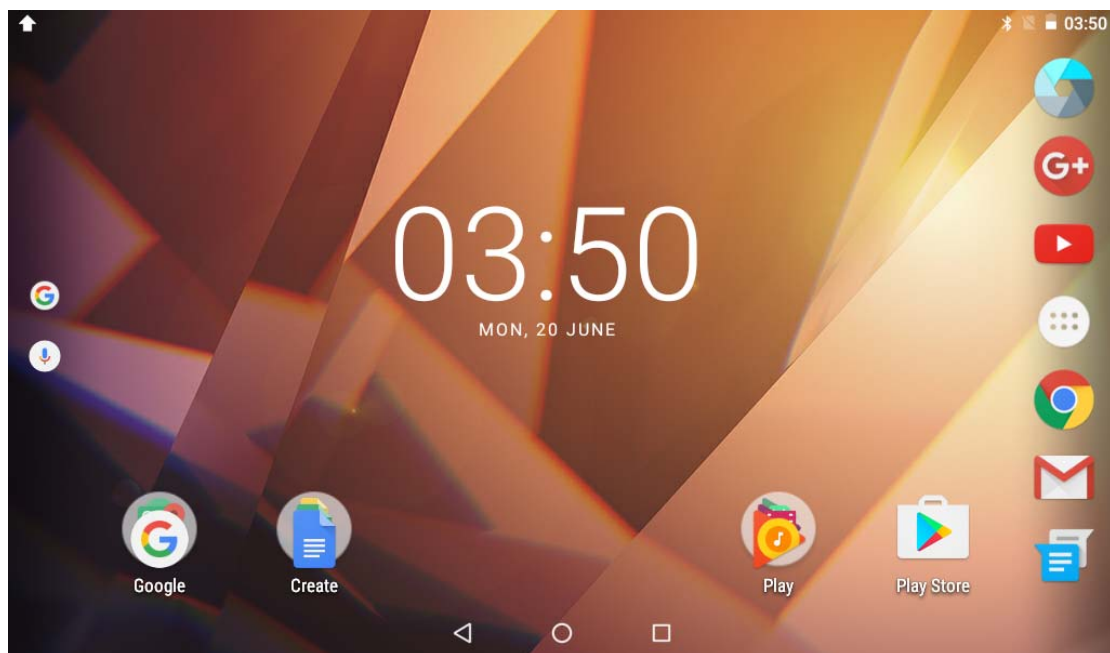

 **Power Off:** Long press the Power ON/OFF button for 5 seconds, you can power off the tablet according the dialog pop on the screen. Refer the figure below:

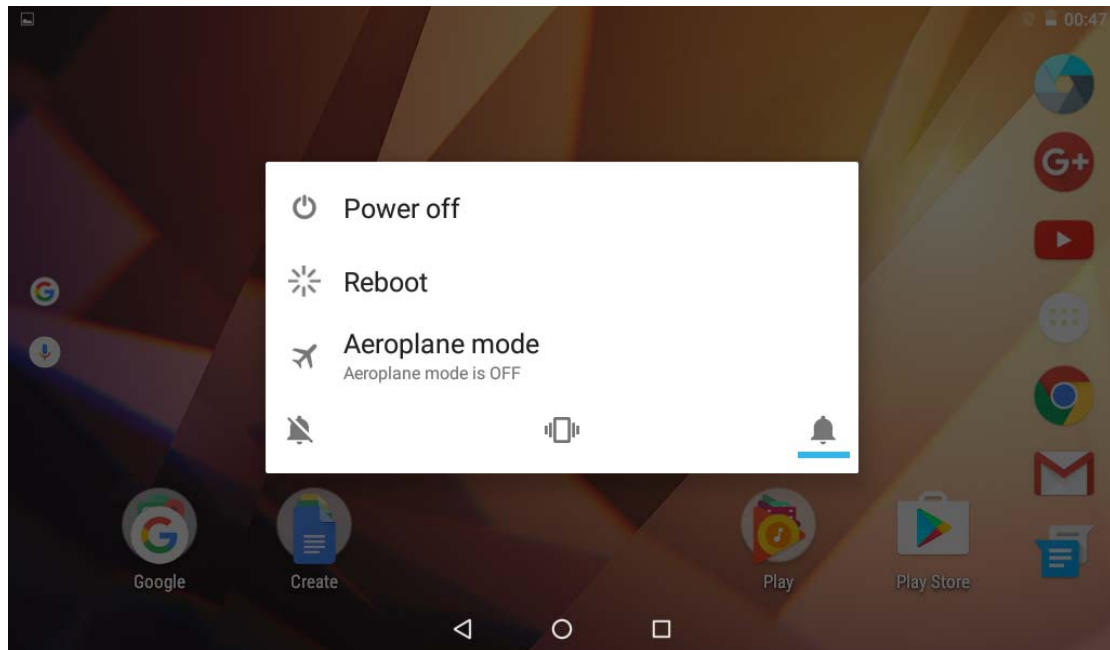

**Standby:** During the power on mode, press the power button once to enter the power-saving standby mode, then press the power button again, the screen prompts to enter the unlock mode.


## Reset

 Stab the reset hole with a sharp hard object, you can reset the machine. After the reset, the machine will power off.

## Connecting to the PC

### USB Connect

Connection to a computer: You can connect your Tablet to the computer to copy the data from the tablet to computer or vice versa. For this you need to use the USB cable provided. Connect the small side of the cable to the tablet micro USB jack and another end to the computer, after this connection you need to go to “My Computer” window and find along\_8321 icon. Double click on

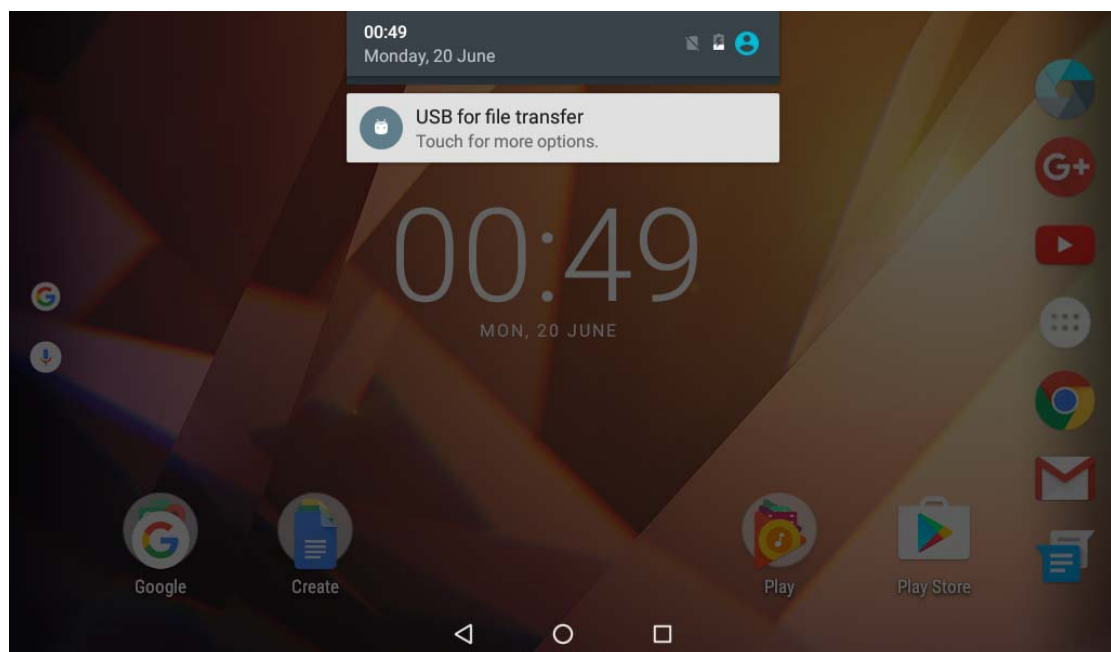

this you will see tablet storage. Here you can copy the data or delete.



### Micro SD

Micro SD card maximum capacity of this product supports up to 32G.

## Desktop and Main Menu

 
Desktop screen as below:




The shortcuts in the desktop can be freely drag and deleted.

Desktop can be sliding around, long press the icon to drag the icons. Drag the icon to the top of the screen, the top of the screen there will be a "× Remove", drag the icon there, the corresponding shortcut is deleted.

Click  icon to enter the Main menu

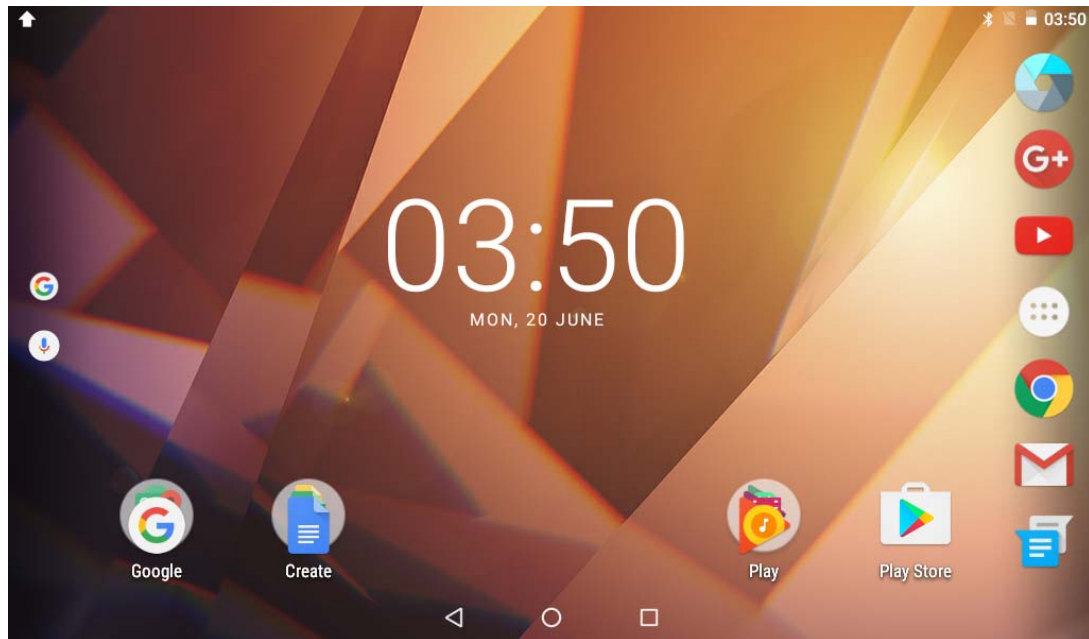


All the APK appear on the Main menu.

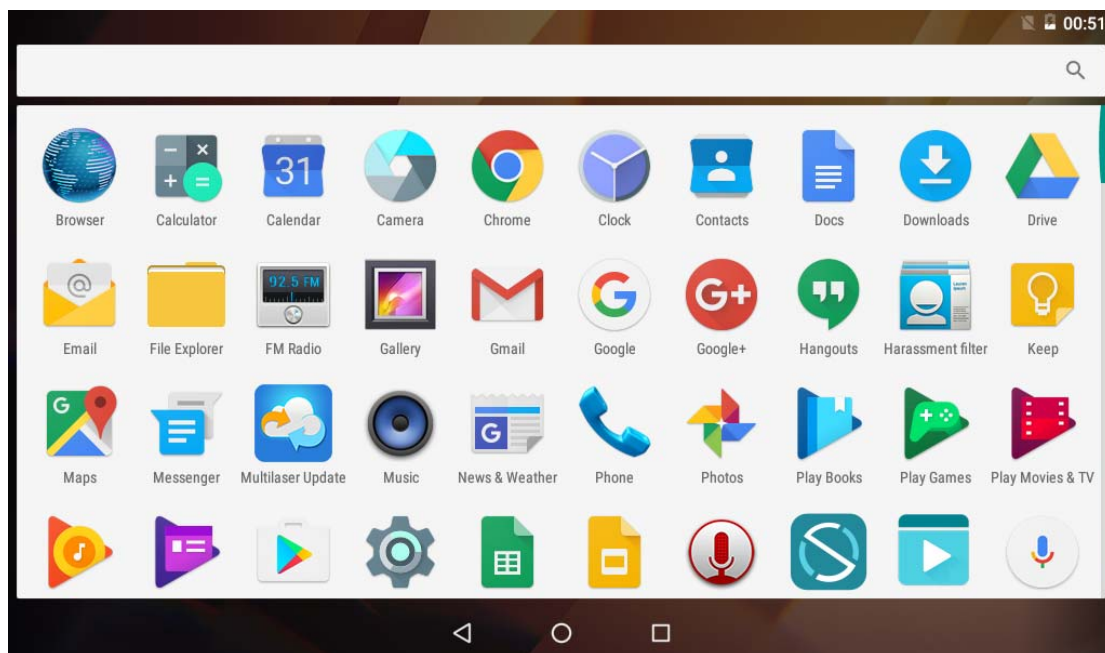 



 
All the Install APK will be visible in main menu, just click the APK and start using. You can delete the APK by Long Press the APK and Bring the icon to desktop and Drag the APK to uninstall icon and the application will be deleted. Or simply go to the setting in Apps

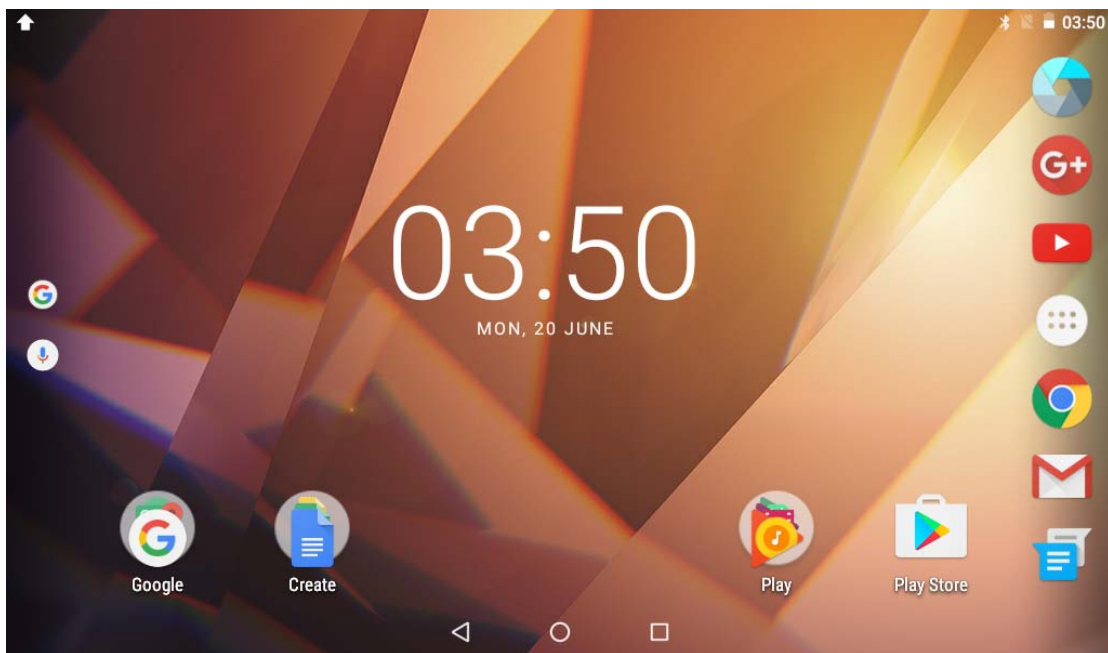option and delete the Apps.




## Open or Switch Application

 
On the desktop or the main menu, select an application, click - to enter, you can Use the application. To exit, press the  or  to the main interface. After the return, you can click into other applications.

Click  to switch between the running applications, refer to the figure below:




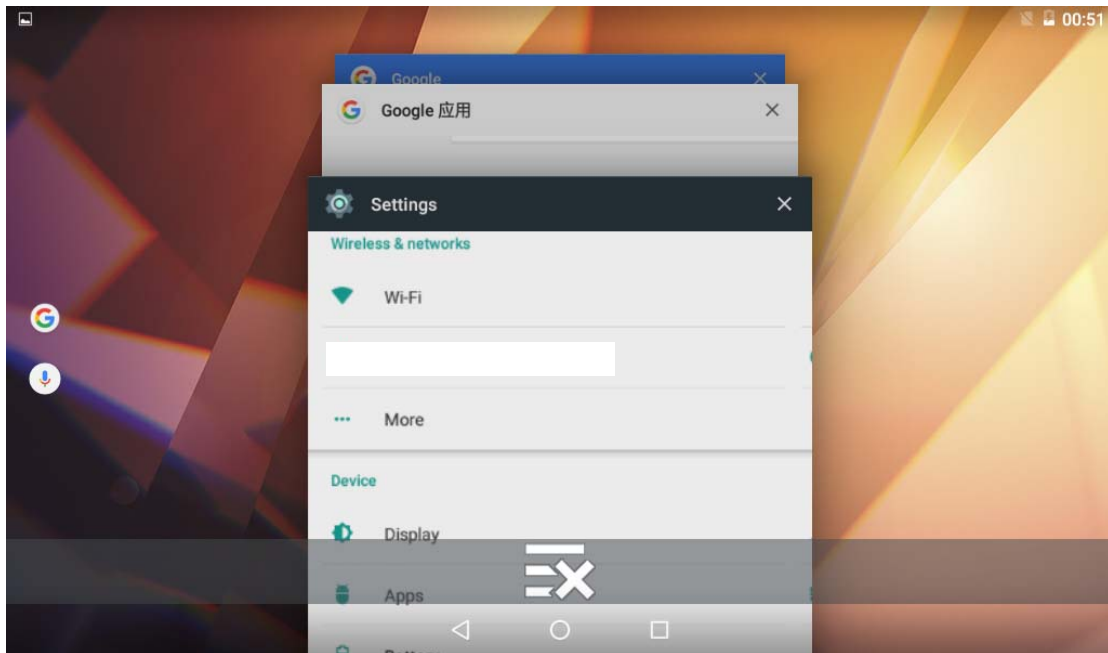

## Settings

 
Click  icon in the main applications to open the system settings interface, as shown below:

 Select the appropriate operation of the relevant items, such as: wireless and network, display, date and time settings, about device, etc.

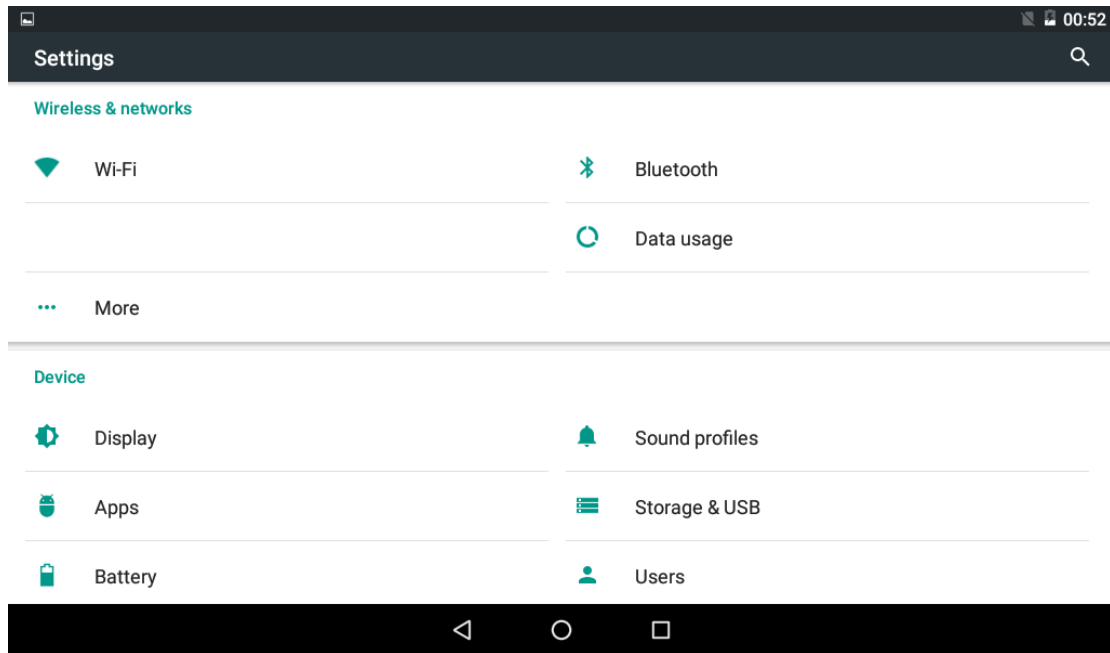


## General Function

 Some common features such as brightness, wallpaper, sleep time can be change In Settings - Details as follows:

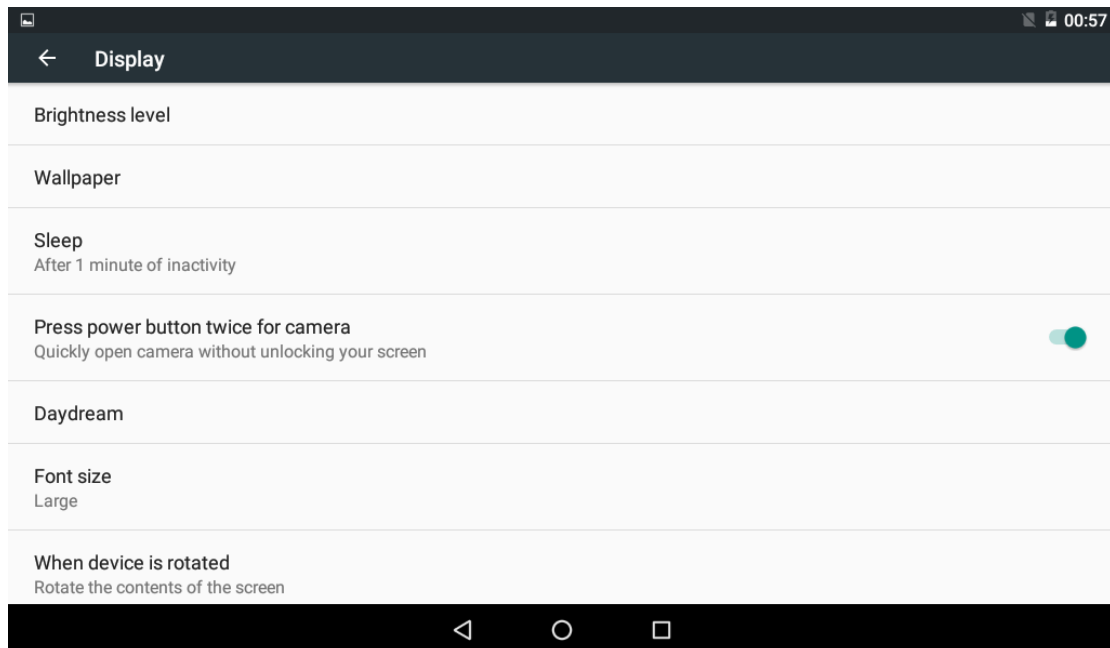


## WI-FI

 To Connect WI-FI simply click WI-FI icon in settings . First, open WI-FI,then tap WI-FI network you want to connect and then enter the password to login. Details as follows:

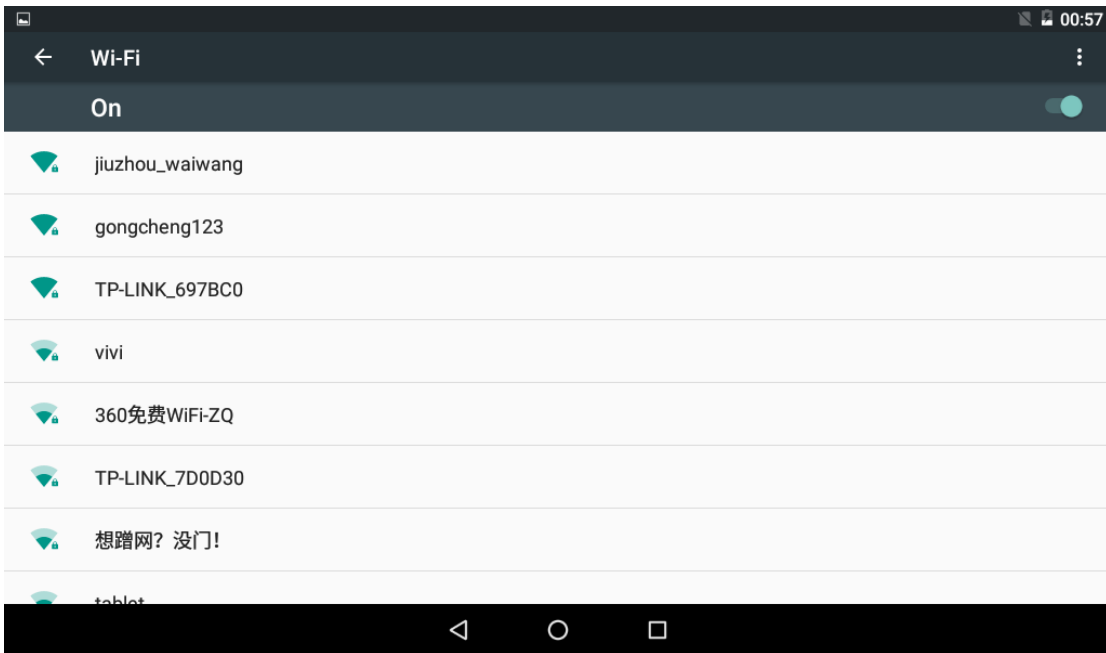

After the WI-FI network is connected, you can click the network & check the specific details of the network connection. Details as follows:

 
Of course, you can also open WI-FI network through the "Quick setting shortcut" described earlier.

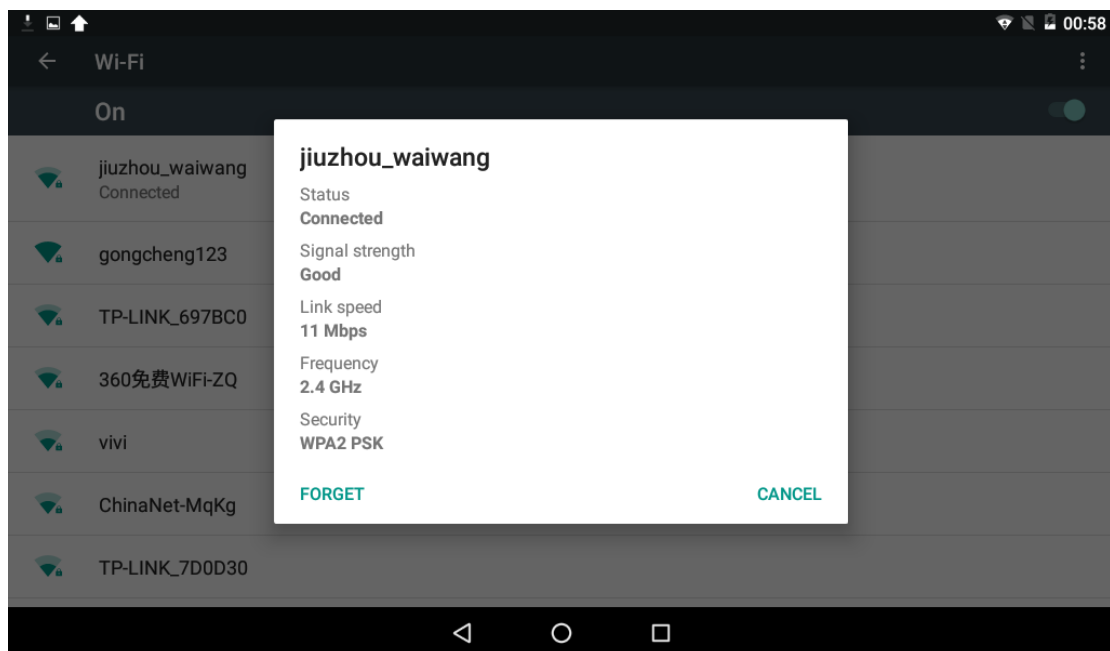

## Bluetooth


Click the Bluetooth in setting & ON The Bluetooth, you can see the list of Bluetooth device available for

 ready to pair. You can allow other Bluetooth device to connect your tablet by clicking on the "TM-MID793" . Switch between "Not visible to other Bluetooth devices" and "Visible to all nearby Bluetooth devices" . Details as shown:

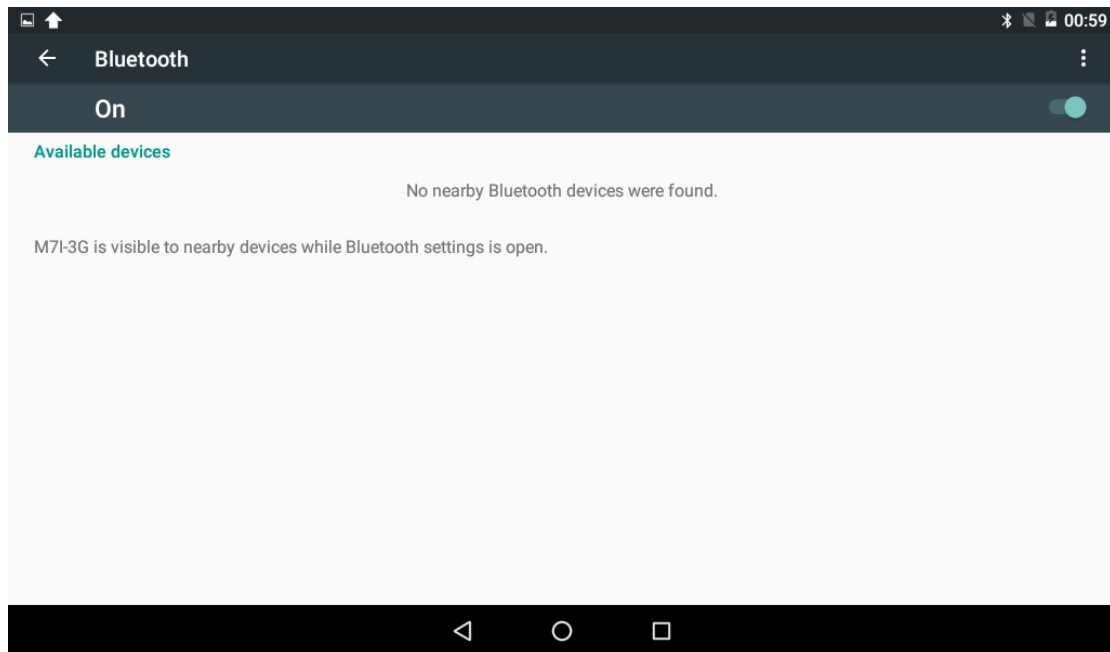


## Storage

 Enter "Storage", you can see the storage device information, including the tablet capacity, external Micro-SD card capacity and usage. Details as follows:

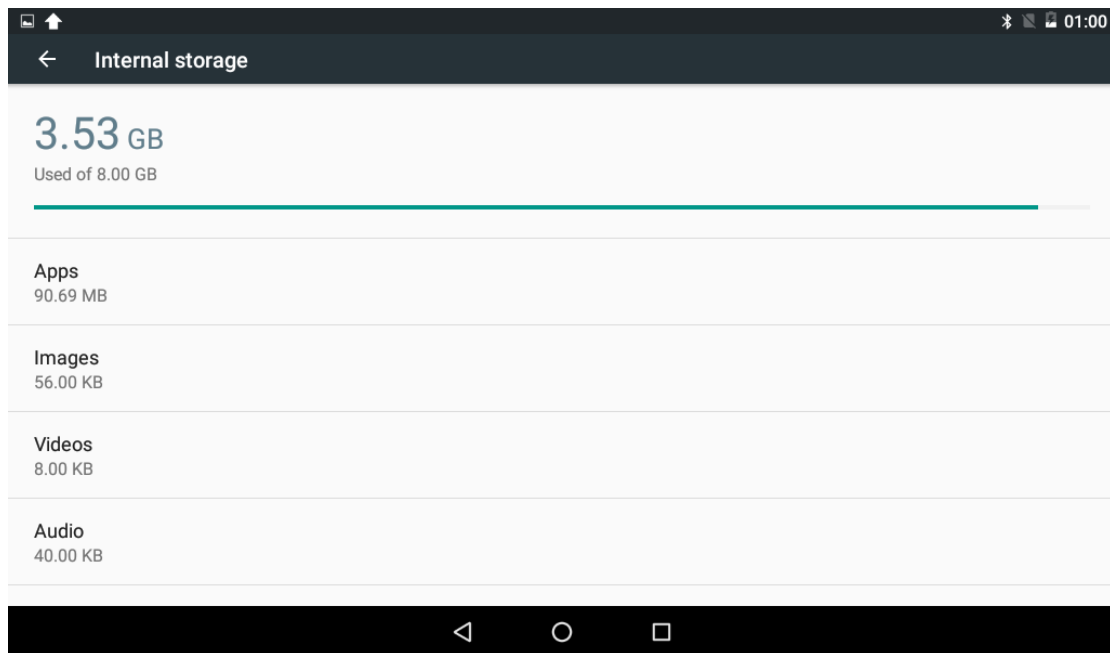


## Apps

 Enter the “Apps”, you can view the status of each APP, for example: the running, installed, and so on. Details as below:

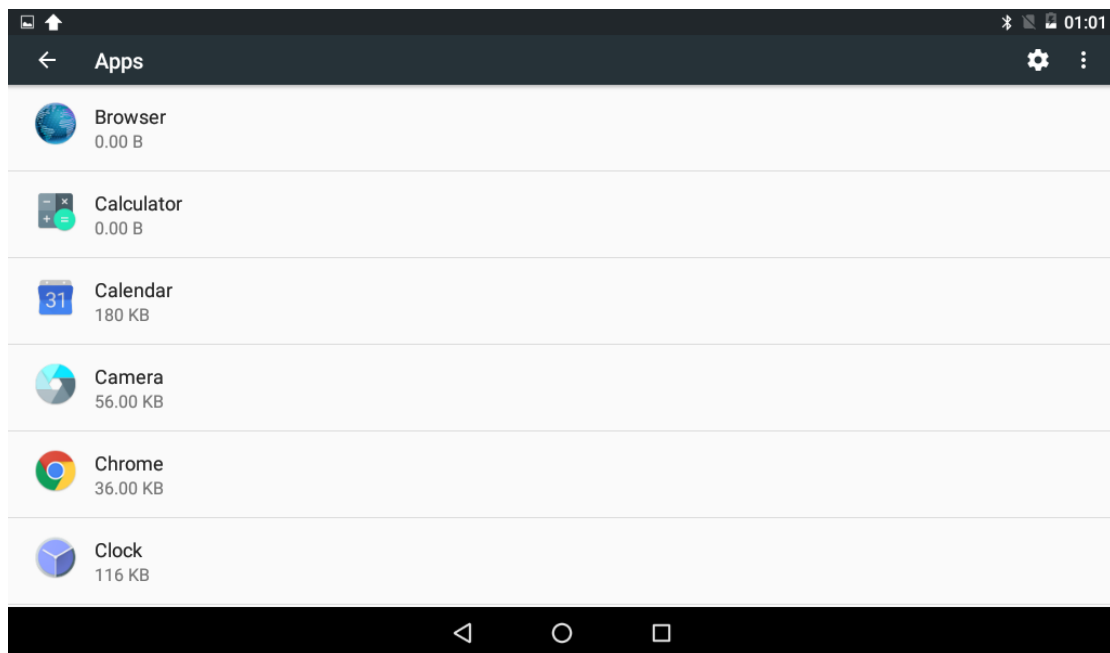


Click on an individual APP to view details, you can forcibly stop the Running APP, clear data, uninstall, move to SD card and other operations. Details as

 below:

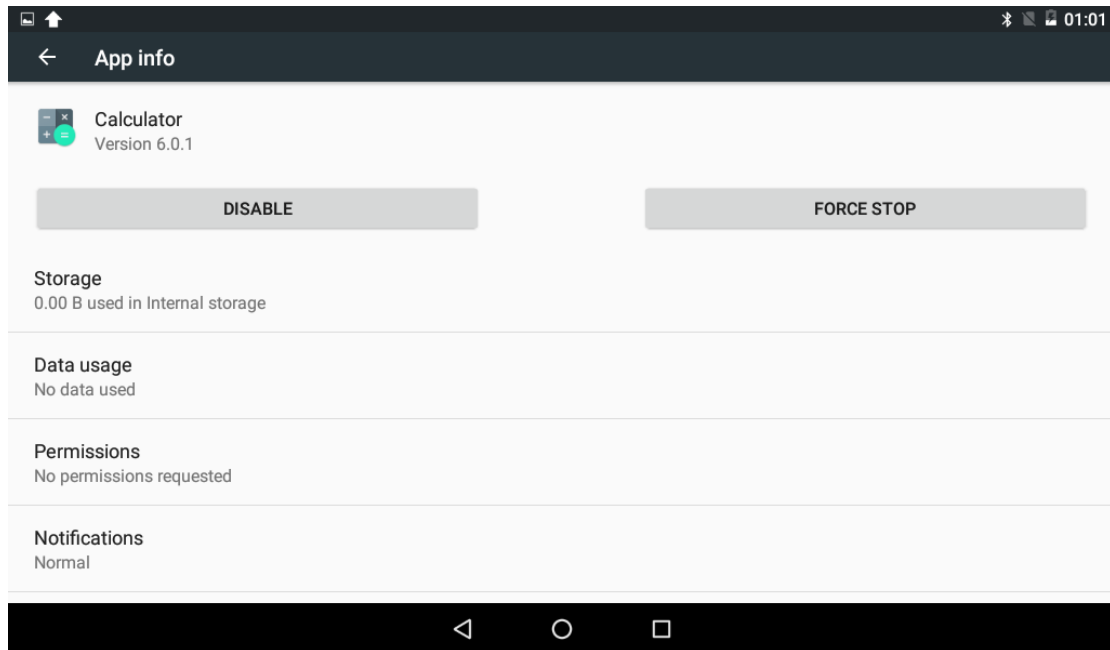

## Security

 
Enter “Security” to set security settings lock, set the security lock as password, pattern and so on. Details as below:

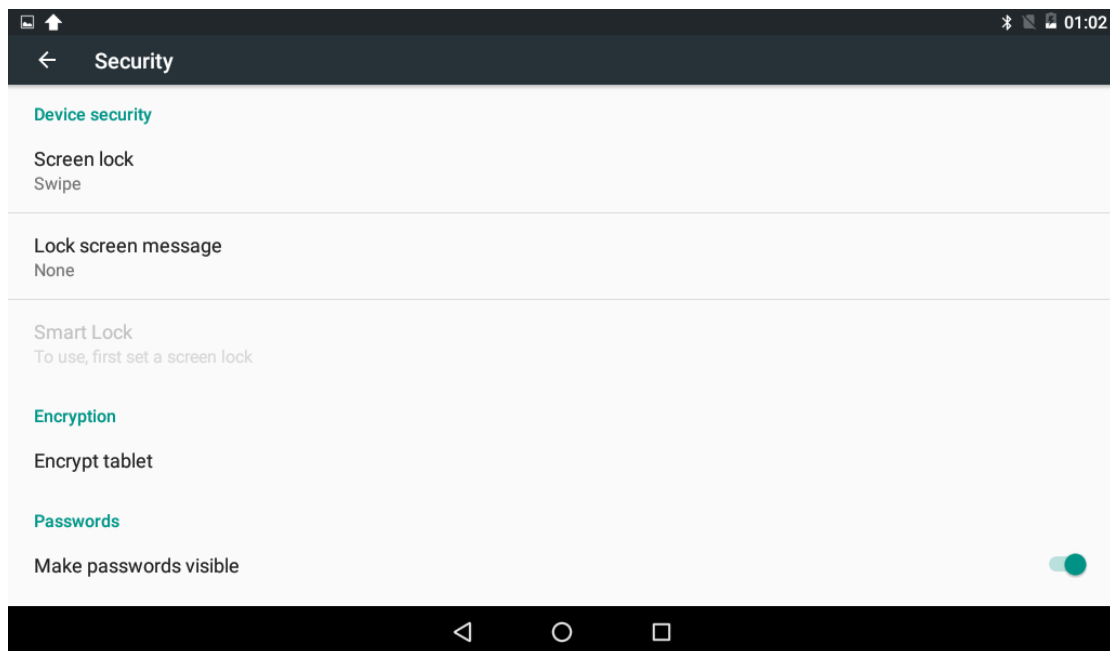

## Language & input


Enter “Language & input”, can set the language and input. As shown below,click on the language to enter,

 you can set the machine language. Language library is the latest 5.1 system language libraries.

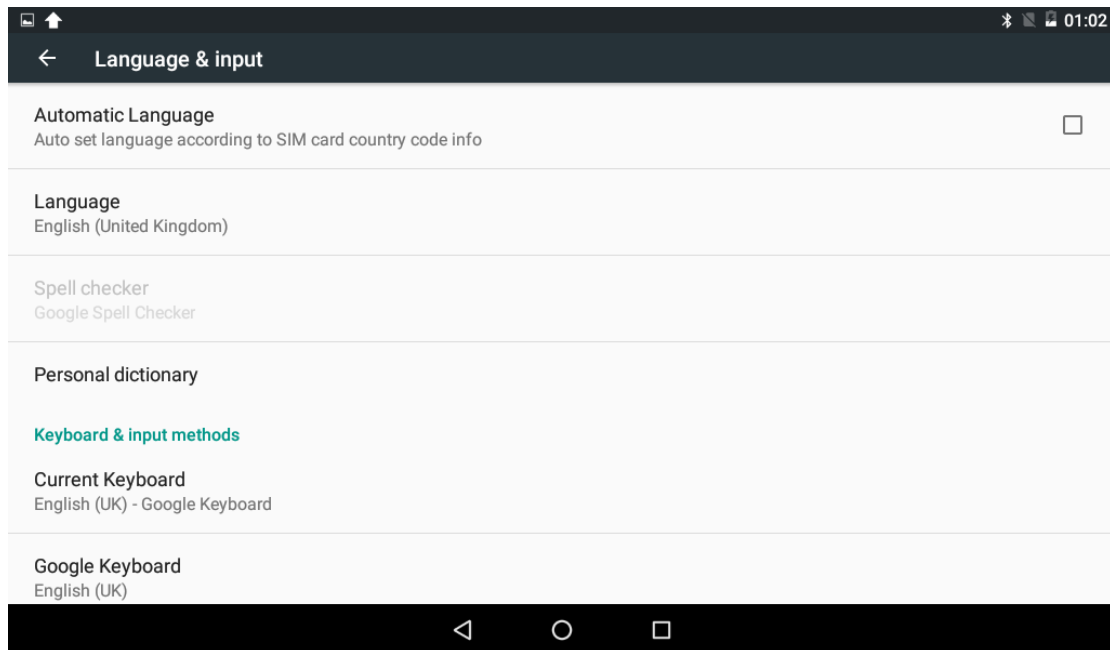


## Backup & reset

 Enter “Backup & reset”, can backup the machine information to avoid lost of them. Remark: Reset will empty all the user Information & data, please carefully use this feature.

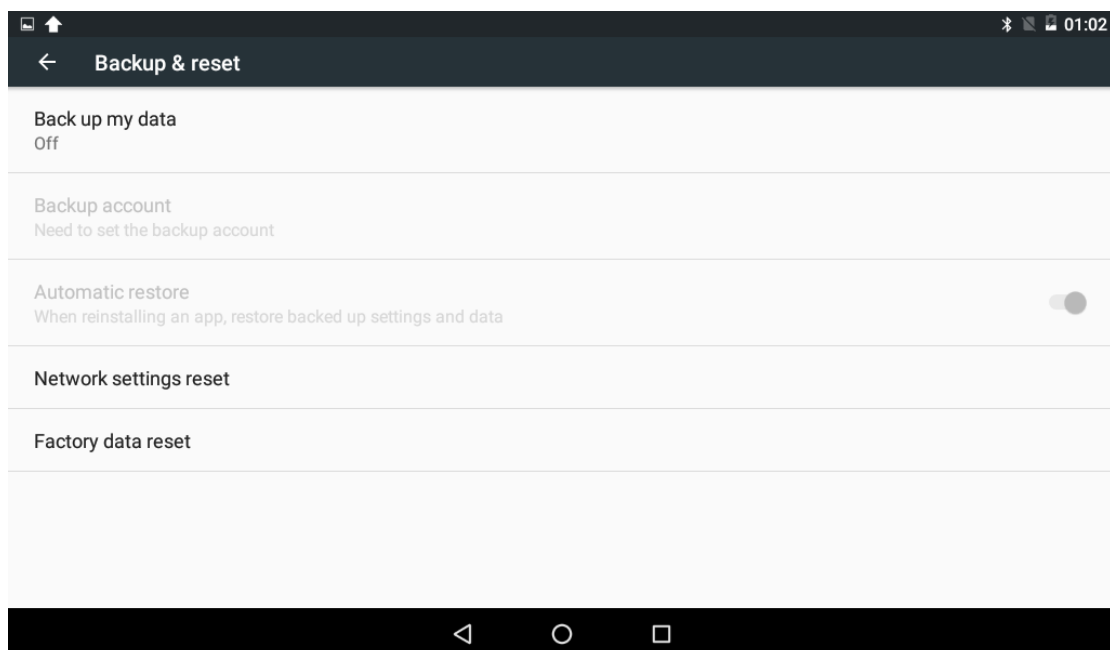



## Sound&notification

 
Click setting --> **Sound&notification** to set audio profiles like Silent/Outdoor, details as follows

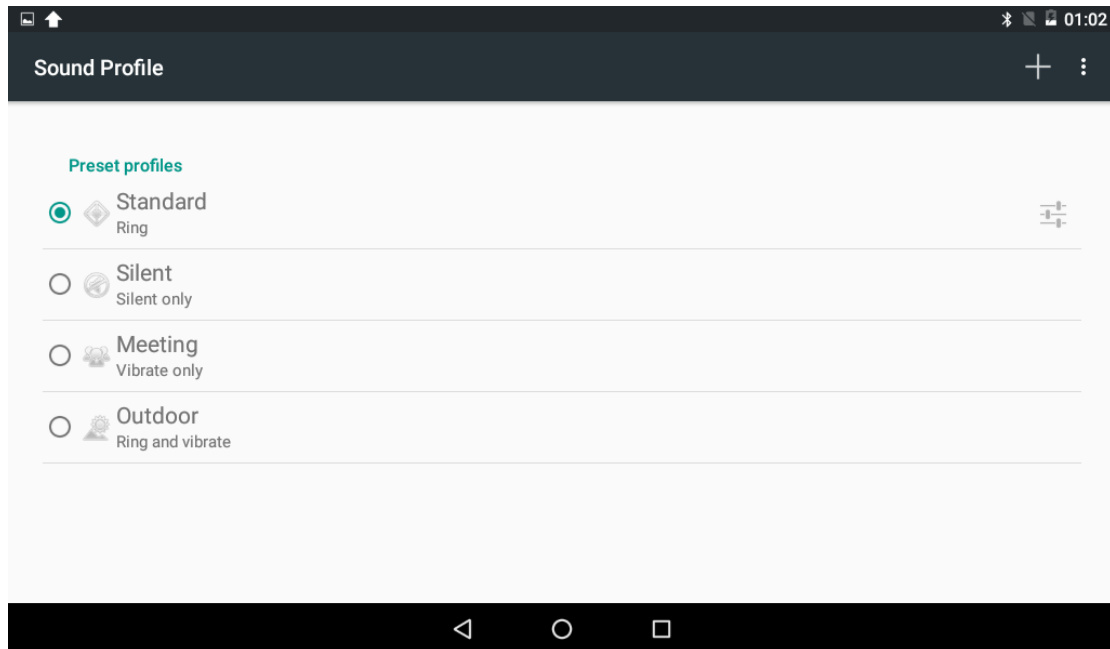

## Camera

 

  
Click  to enter the camera application. Can preview bigger picture, zoom pictures by sliding 2 fingers on the screen. After preview, gently slide, you can re-enter the camera interface. Details as below.

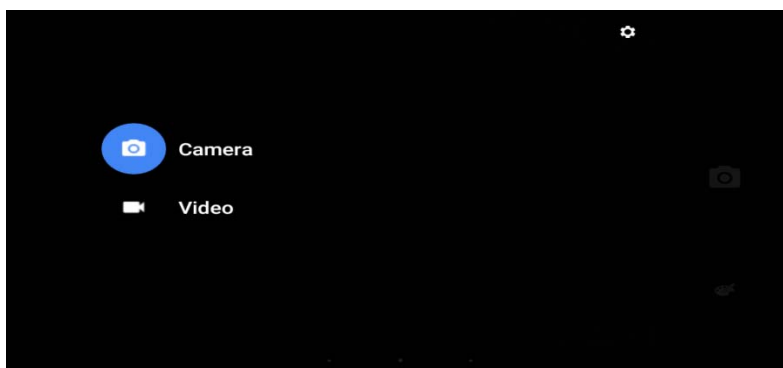






## Gallery

  
Click  to enter the gallery application, in the gallery, you can preview all the storage data of the machine in the picture and video files, including memory and Micro-SD card pictures and video files. Below is a picture gallery document preview.

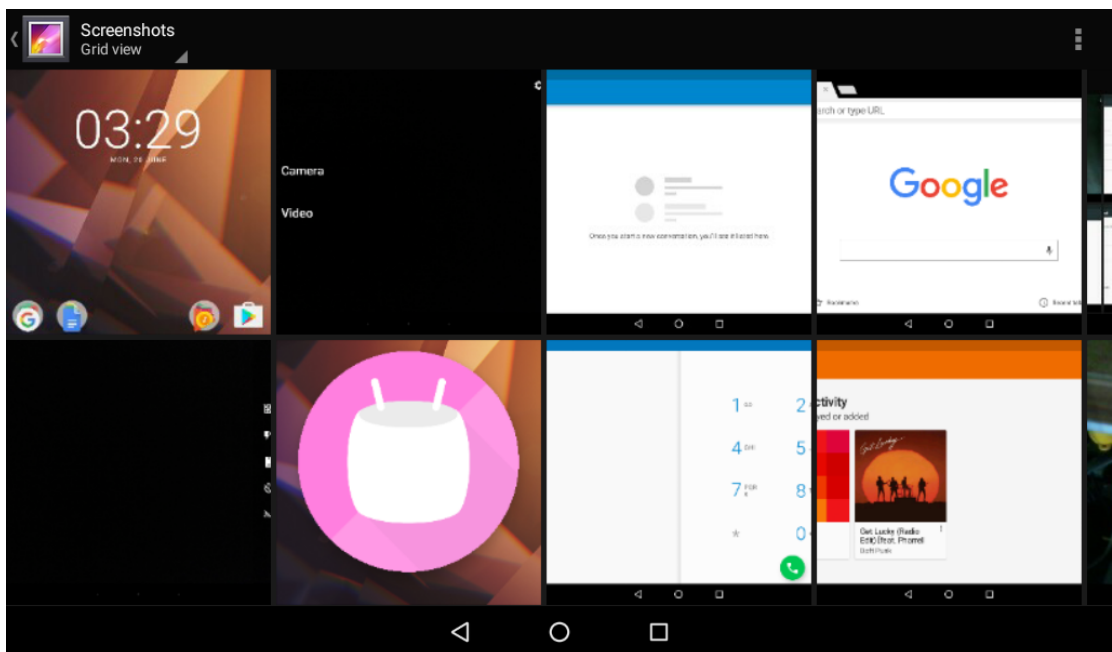

## Music



 
Click to play music, details as below:

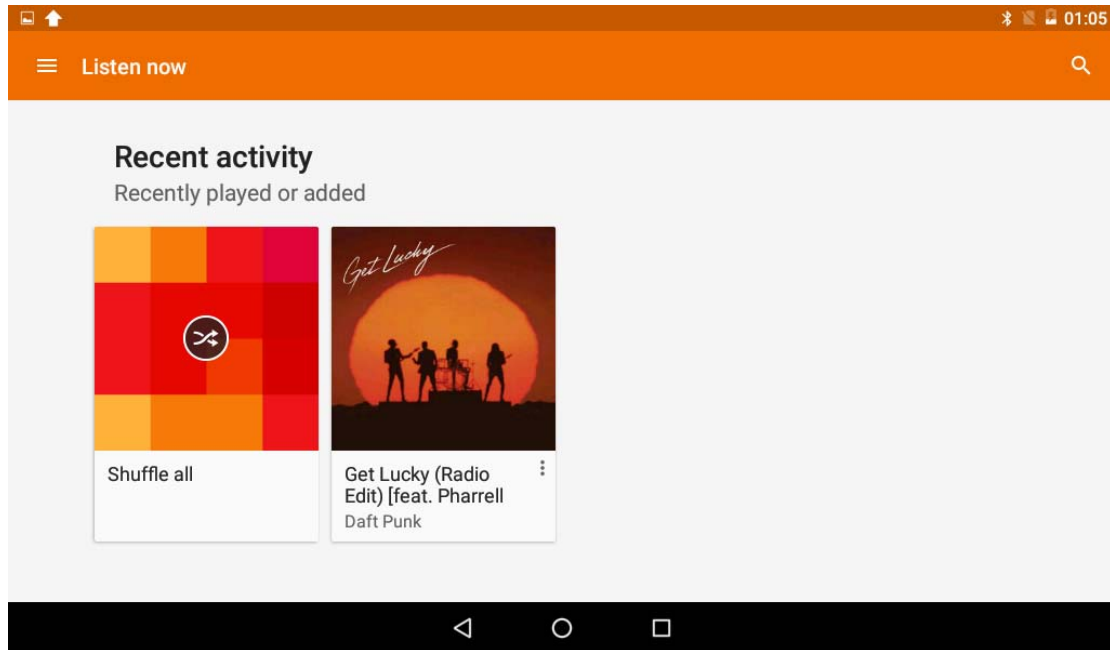

## Browser



 
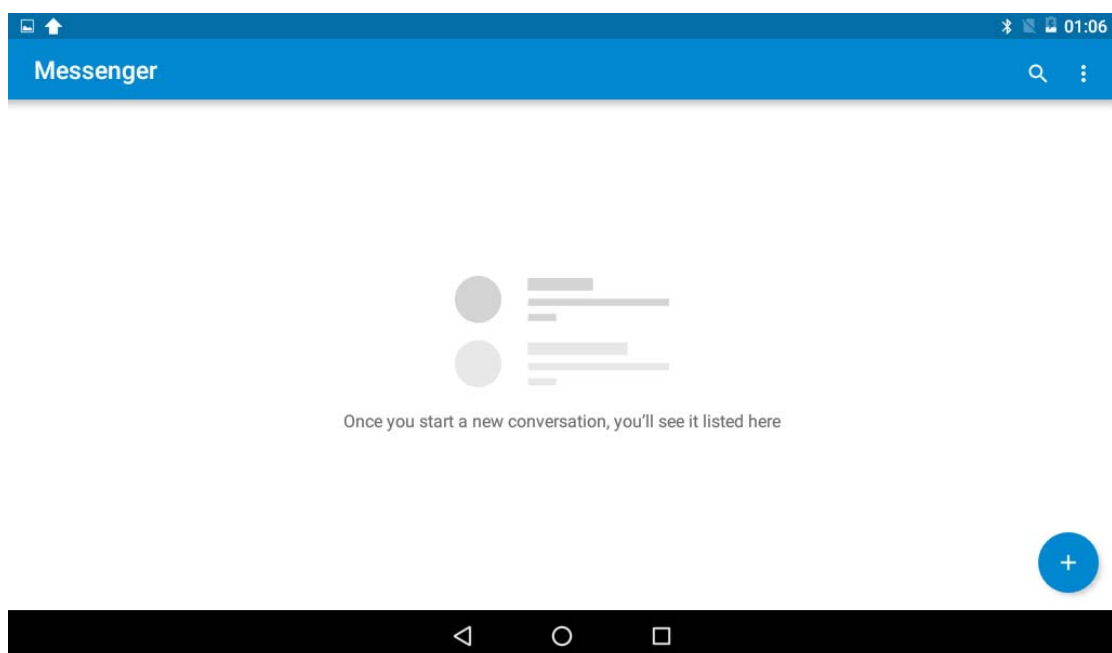 
Click to enter the internet, after the network connection, open a Web browser, enter the URL, you can quickly browse the web, or enter the URL through the main desktop search bar to open the page.

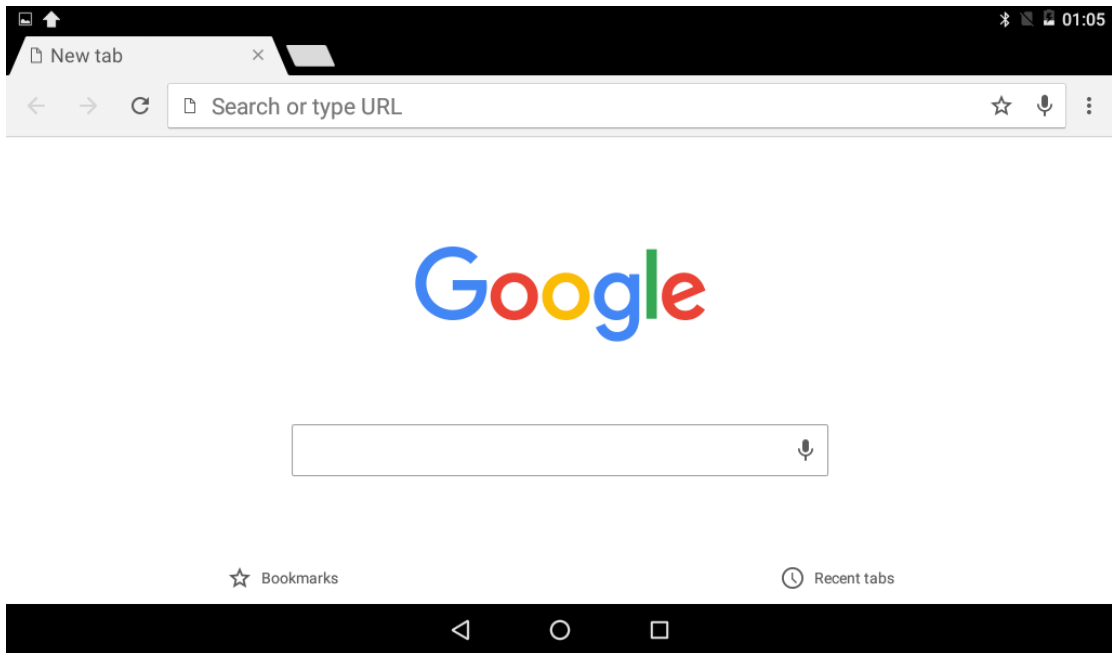

## Messaging



Click  to enter the messaging application. Users can refer to SMS related operations to explore. Below is the new message interface.



## Trouble Shooting

If you have a problem with this device, please check the troubleshooting guide below.

Problem	Solution
<b>The Tablet does not turn on.</b>	<ul style="list-style-type: none"><li>● Ensure that the tablet is fully charged. Try charging the Tablet overnight (6 hours).</li></ul>
<b>The buttons does not work.</b>	Switch –off and switch on the tablet
<b>I cannot transfer files to the tablet.</b>	<ul style="list-style-type: none"><li>● Ensure that your computer is running on a supported operating system platform.</li><li>● Check the USB extension cable, ensure that it is securely attached to the tablet and the PC, or try using another USB cable.</li><li>● Ensure that the tablet’s memory capacity is not full.</li></ul>
<b>There is no sound during playback.</b>	<ul style="list-style-type: none"><li>● Check the volume level.</li><li>● Ensure that the earphone is attached securely to the tablet.</li></ul>

## Specification

<b>Display</b>	
Display inch	7inch
Resolution	HD panel 1024X600
Ratio	16:9
Touch panel	5 point Capacitive multi-touch
<b>Processor/ Memory</b>	
CPU	Media Tek 8321
Frequency	1.2GHz
GPU	Mali400 MP2
RAM	1G
ROM	16GB
System	Android 6.0.1 OS (GUI)
<b>Connect</b>	
WIFI	Support,IEEE802.11 b/g
USB Host	x1
Micro-SD Slot	x1
Bluetooth	Support
Earphone	x1, 3.5mm
<b>Battery information</b>	
Battery Type	Lithium ion battery
Battery Capacity	2200mAh

### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.