




Ematic Bluetooth® Speaker - EP204 Connection Guide



Slide left to power on.

Charge by MicroUSB

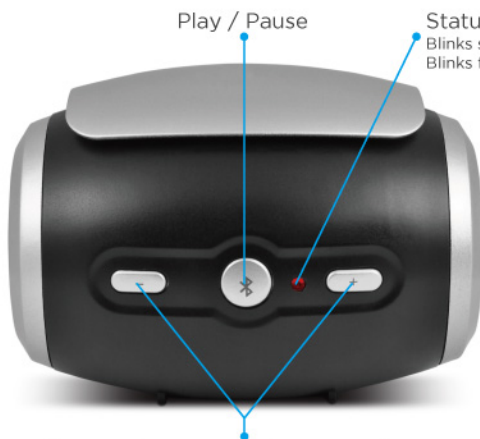

Play / Pause

Status Light

Blinks slow when paired.
Blinks fast when unpaired.

Press to increase or decrease volume.

1. First, Turn on the Bluetooth speaker. The status light will blink slowly.




iPad® /iPhone®/iPod touch®

2. Go to Bluetooth settings, be sure Bluetooth is active, and tap BT Speakers.
3. Input the PIN as 0000 and tap Pair.

“Connected” will display next to BT Speakers.


Android™ 4.0

2. Go to Bluetooth settings and tap Search for Devices.

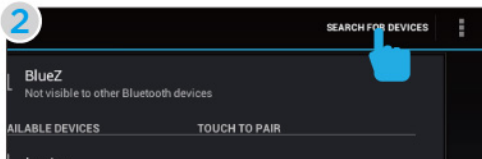


Go to Bluetooth settings and tap Search for Devices.

3. Tap BT Speakers to pair with your device.

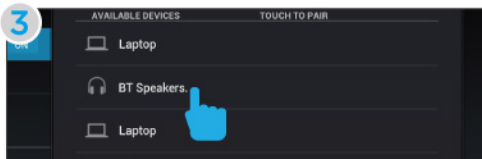


Tap BT Speakers to pair with your device.

4. Input the PIN as 0000.

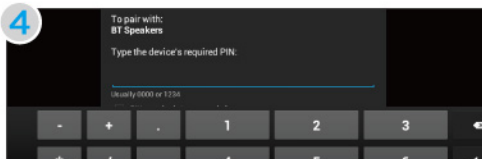

Input the PIN as 0000.

5. BT Speakers will display under Paired Devices.

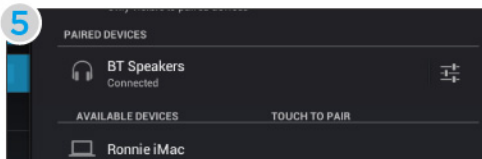

BT Speakers will display under Paired Devices.

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
-

Warning: Changes or modifications made to this device not expressly approved by E-matic may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.