

Contents

Attention.....	1
1. Appearance and Buttons	2
1.2 Power.....	3
1.3 Return	3
1.4 Volume +, Volume -	3
1.5 Headphone Jack.....	3
1.6 HDMI.....	3
1.7 MicroSD.....	4
1.8 Mini USB	4
1.9 Reset	4
2. First Use	4
2.1 Battery Management and Charging.....	4
2.2 Connecting with PC	5
3. Device Operation.....	6
3.1 Home Screen	6
3.2 Status Bar	7
3.3 Touchscreen.....	8
4. Settings	9
4.2 Apps	10
4.4 Date & Time	13
4.5 About Device	14
6. Troubleshooting	15
7. Tech Specs.....	16

Attention


This manual contains important safety and usage information.

Please read carefully before first use

- Avoid extreme temperatures and dusty areas
- Don't leave in a hot car with the windows up
- Avoid dropping. Impacts may damage the device
- Be careful when using headphones. Very high volume may damage your ears.
- Charge the battery, when:
 - A、 The battery power icon is empty and red
 - B、 The device automatically shuts off
 - C、 Buttons are unresponsive
- Never disconnect the device when uploading or downloading
- eMatic cannot be held responsible for any data loss for any reason
- Don't disassemble the product
- Don't clean the device with alcohol, thinner, benzene, or other abrasive cleaners
- Don't use the device while driving

All product information is subject to change without prior notice.

1. Appearance and Buttons:

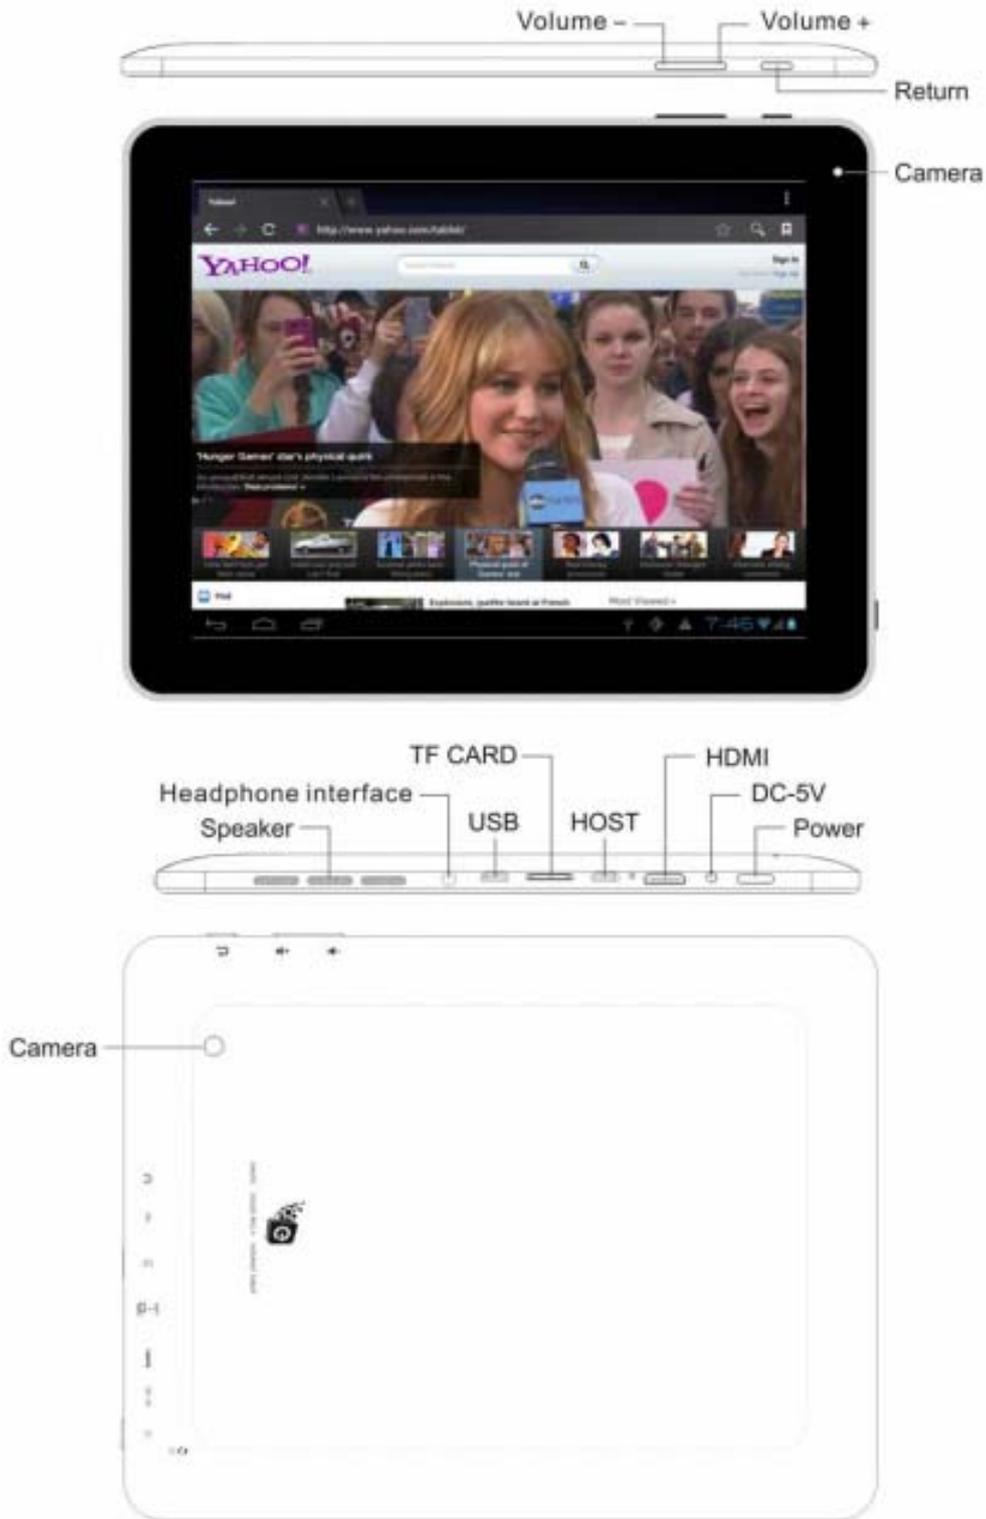

1.2 POWER

Startup: Press and hold the power button for about 3 seconds.

Shutdown: Press and hold the power button for about 5 seconds.
If the shutdown dialogue box pops up, select "Shut Down" and "OK."

Lock screen: Press the power button to lock or unlock the screen.
When the battery is drained, the system will shut down automatically.

1.3 Return

Short press Return to return to the last screen.

Long pressing return will bring you to the home screen

1.4 Volume +, Volume-

Use the volume buttons to adjust the sound intensity

1.5 Headphone Jack

3.5 mm standard headphone jack

1.6 HDMI

Use an HDMI cable to connect your device to an HDTV

1.7 Micro SD

Insert a Micro SD card to expand your storage space by up to 32GB

1.8 Mini USB

Use a USB cable to connect your device to a computer and transfer files

1.9 Reset

If the tablet should freeze, long press the power button to force a restart

【Remark】 : Only use the reset button when normal shutdown is impossible

2. First use

2.1 Battery Management and Charging

Charge the battery for 6 hours before first use.

After that, the device can be charged in 4 hours.

Charge using only the provided adapter, or USB cable.


When charging, the battery icon will fill, and contain a lightning bolt.

When fully charged, the icon will be full, and green.

Charge, and use your tablet at least once a month to keep your battery strong

2.2 Connection with PC

When you connect your device to a computer, your device will show this screen:

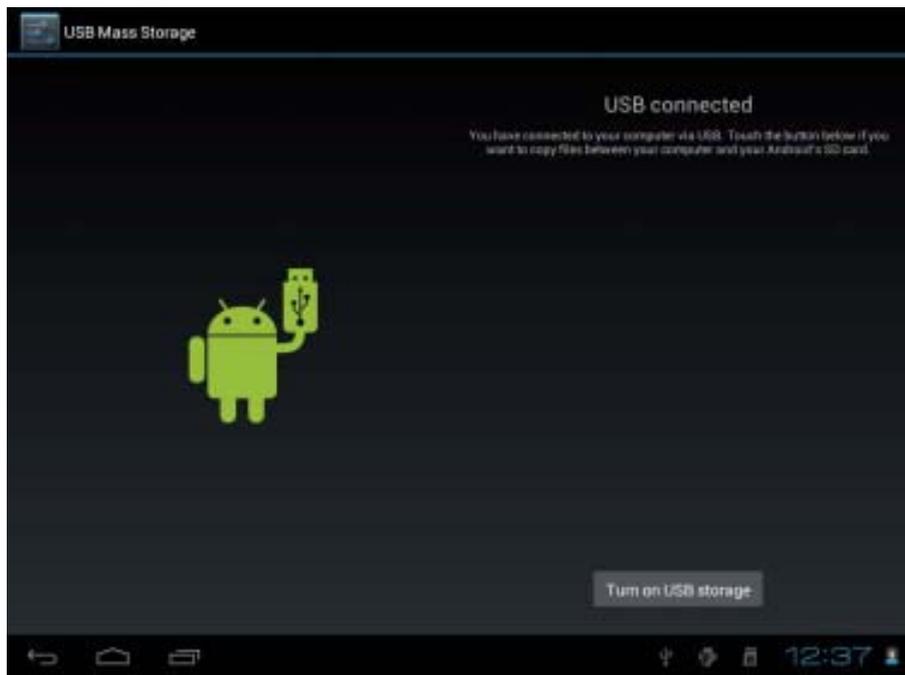

Tap "Turn on USB storage" to transfer files to your device.

3. Device Operation


3.1 Home screen

This is the screen you will see after powering on your device



You can customize this screen with icons and widgets

Tap and hold anywhere on the desktop to customize background:

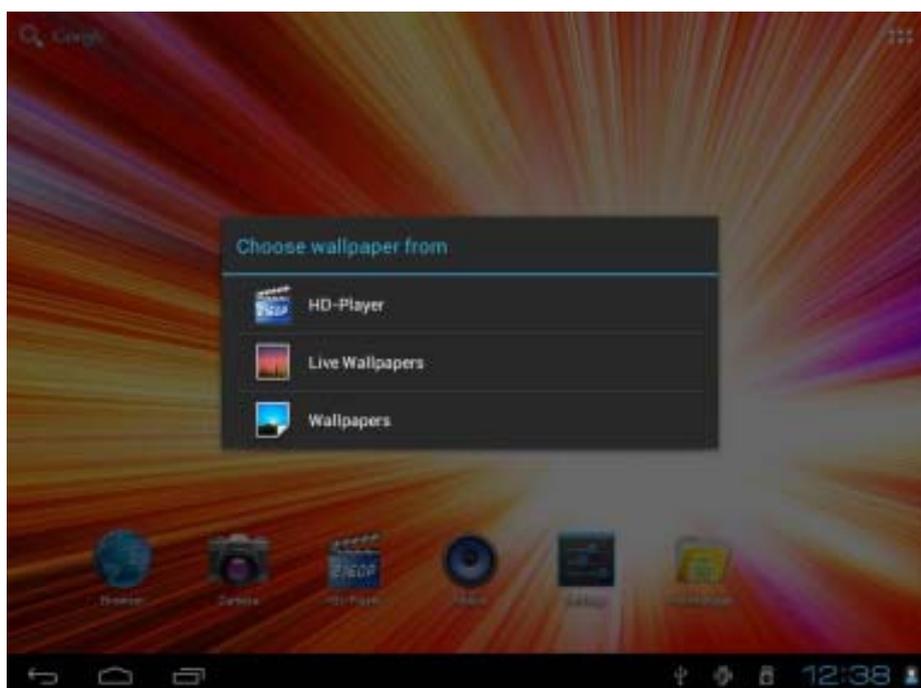

Tap the icon on the top right to show everything installed on your device:



Tap and hold on an item to move it to your home screen

3.2 Status Bar

- The status bar can be found at the bottom of the screen
The right side shows USB, MicroSD, Battery, and other notifications.
Swipe up from the bottom on the right for even more options
The left side shows the Back, Home, Tasks, and Menu buttons.

3.3 Touchscreen



No matter what screen you are on, you can always get back to the home screen by pressing this icon  located on the bottom left..

Press the Back button  to go to the previous screen

Press the menu button  for more options

Press the multi-task button  to show a list of apps currently open

4. Settings

To enter Settings, click the Settings icon: 



4.2 Apps

Managing applications



To install new apps, make sure the box next to "Unknown Sources" is checked, click on the APK file, and follow the installation instructions.

Uninstalling Apps

Enter settings  and tap "Apps"


To uninstall an app, tap the name of the app, and tap uninstall



4.3 Privacy


Factory Date Reset

This will delete everything from your tablet, and restore everything to defaults

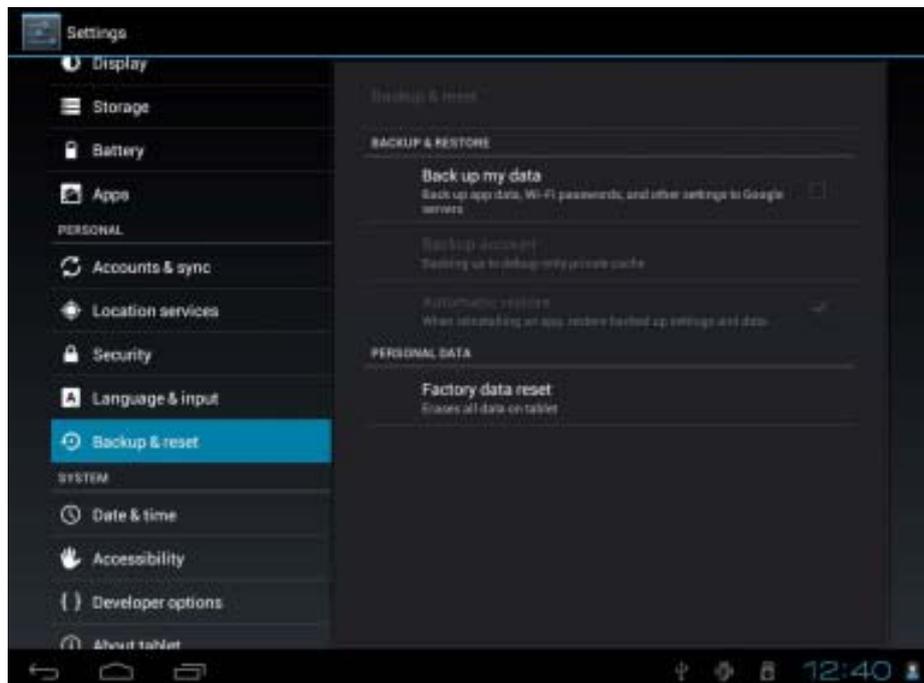


4.4 Date & Time

Here you can set the time zone, and appearance settings

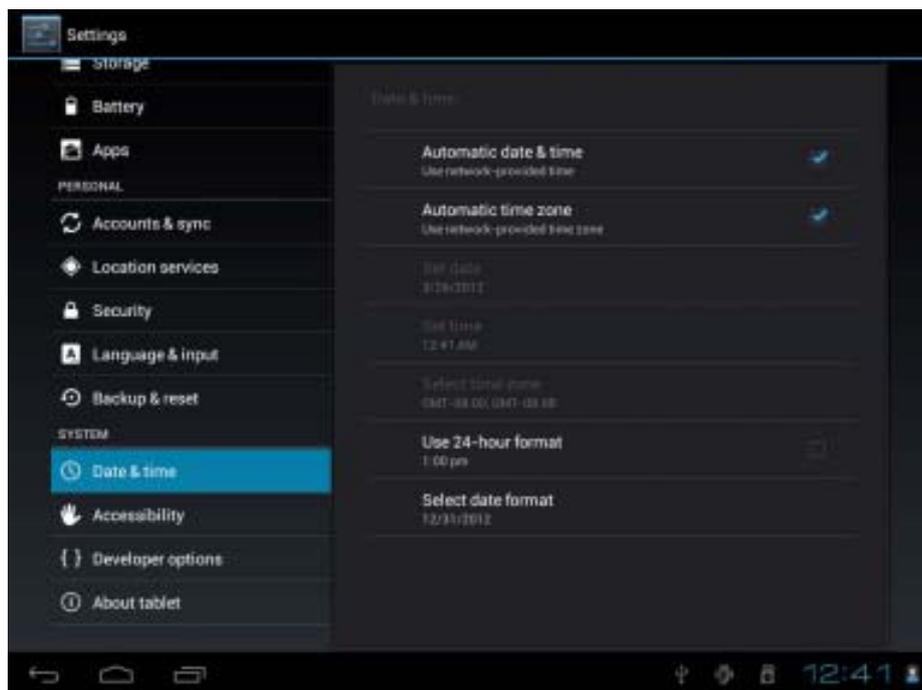

4.5 About device

This section will give you more information about your device

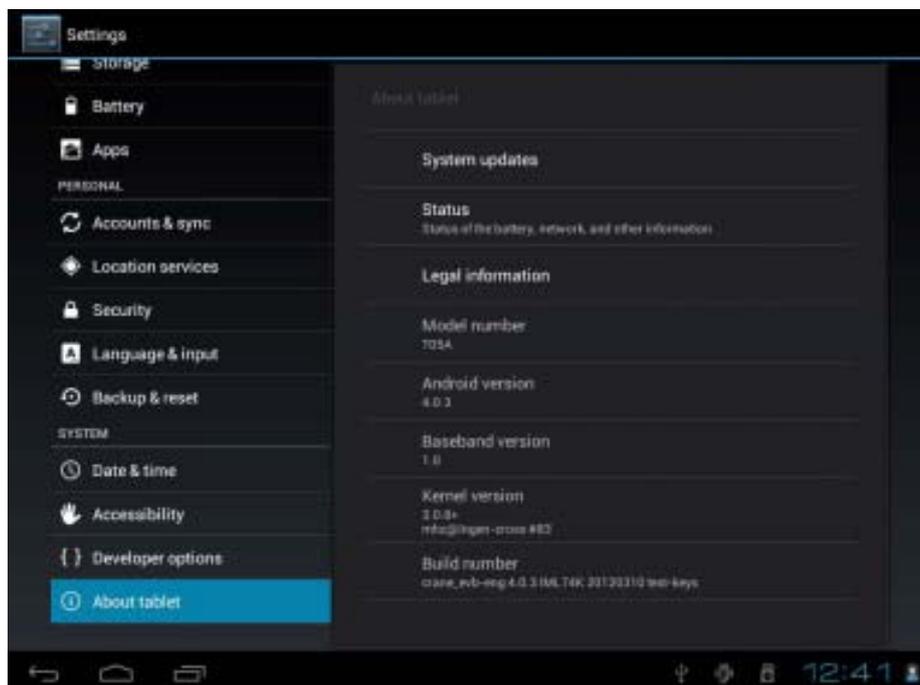

6. Troubleshooting

1. Device won't power on
 - 1) Check the battery power
 - 2) Connect the power adapter, then check again
 - 3) If it doesn't turn on after this, contact the supplier

2. The device appears to be starting, then turns off
 - 1) Charge the battery

3. No sound can be heard
 - 1) Make sure the volume is turned up
 - 2) Try another sound file. It may be damaged.

4. Can't copy files to the device
 - 1) Check connection between PC and device
 - 2) Make sure the device has available space
 - 3) Make sure the USB cable isn't damaged

For more FAQs, please check "Tips and Tricks" at ematic.zendesk.com

7. Tech Specs

CPU: 1.2 GHZ,

Memory: 8GB

RAM: 1GB DDR3

MicroSD: up to 32GB

Display screen: 4:3, 9.7" IPS 10 points capacitive screen

Resolution: 1024X720

Battery: Rechargeable Li-Polyer Battery

Record: built-in microphone

Operation System: Android 4.0 (ICS)

Video format(1080P):WMV,MKV,MOV,AVI,RM/RMVB,MPEG-2/4.

Music: MP3. WMA. APE. FLAC. AAC. AC3.WAV

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any interference, for example RADIO or TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user' authority to operate the equipment.