



Playtime Pad+

7" HD Kid Safe Tablet + Live TV



GROWNUP'S GUIDE



PBSKD7001

TABLE OF CONTENTS

I. Tablet Overview

Tablet Overview.....	1
Icon Glossary.....	2
Charging.....	2
Turning on your Playtime Pad.....	2
Touch Screen Basics.....	3

II. Initial Setup

User Setup.....	4
-----------------	---

III. Kid Mode

Kid Mode Home.....	5
Live TV.....	7
Character Navigation Wheel.....	8
Themes.....	9
Videos.....	9
Games.....	11
Color & Paint.....	12
Camera and Gallery.....	12
Adding and Removing Apps.....	13
Exiting Kid Mode.....	14

IV. Parent Mode

Parent Mode Overview.....	15
Downloading New Apps.....	16
Uninstalling Apps.....	16
Creating a Google™ Account.....	16
Add a Google Account to your Tablet.....	17
Remove a Google Account.....	17
Connecting to Wi-Fi.....	18
Connecting to a Computer.....	19

V. Tablet Settings

Device Settings.....	20
Personal Settings.....	20
System Settings.....	20
Wireless & Network Settings.....	21
Adjusting your Screen Brightness.....	21

VI. Miscellaneous

Updating your Software.....	21
Factory Restore.....	22
Reset Device.....	22
Won't Connect to Computer.....	22
Resetting PIN-Code.....	23
Changing your Home Screen to Android™.....	26
Care.....	28
Specifications.....	29
Customer Support.....	29

I. TABLET OVERVIEW



ICON GLOSSARY



Battery Level: The white battery level indicator will decrease and change to red as the battery is drained.



Wi-Fi Signal: As the Wi-Fi signal strength decreases, the white bands will change to gray.



Settings: Tap to adjust settings for Wi-Fi, screen brightness, security settings, language options, and more.



Menu: Tap to reveal settings and options

CHARGING

Fully charge your Playtime Pad for 6 hours before the first use.



Use the included USB Charger. The battery indicator will show that your device is charging.

Note: Charging your tablet using the USB port on your computer will be slow. We recommend using the included wall charger.

TURNING ON YOUR PLAYTIME PAD

To turn on your Playtime Pad, press and hold the power key for 2 seconds. The PBS KIDS logo indicates the software is loading.

TOUCH SCREEN BASICS

Tap an app icon once to activate or open an app.
Touch and hold to move an item by dragging.



*In many apps touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.



To Hide
Keyboard



Touch and hold a letter for special characters.

LOCK SCREEN

Slide the padlock icon up to unlock the screen.



G-SENSOR

 
The G-Sensor allows the tablet to detect screen rotation. You can view the home screen in either a landscape or portrait format as you use the apps.

Note: Some functions in the Playtime Pad only display in landscape format.

II. INITIAL SETUP


USER SETUP

Follow the steps upon initial startup to begin using your Playtime Pad.

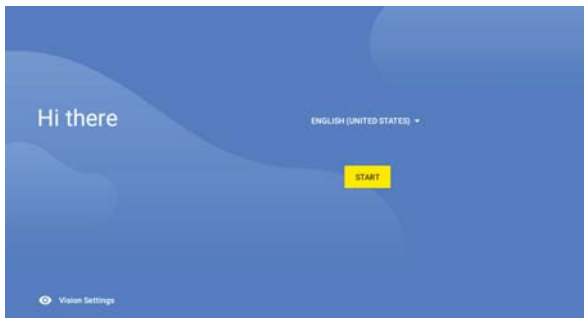


III. KID MODE

 KID MODE HOME

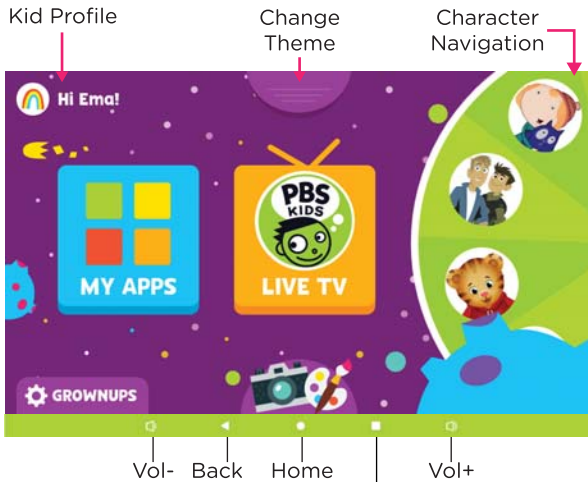

 The Multi-tasking button has no function when in Kid Mode.

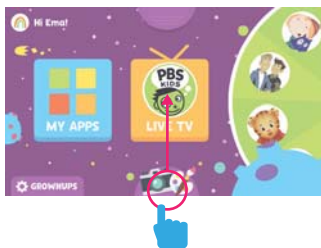

Swipe up from the bottom of the screen to reveal the Home button and Back button.

The Home Button will bring you back to the Kid Mode Home Screen.



Grownups Settings

- Create new Kid Profiles
- Delete Kid Profile
- Edit Kid Profile
 - Change avatar
 - Change birthday
 - Change name
- Add or Remove Approved Apps for each child



Camera, Paint, Gallery

- Access the Camera
- View Gallery
- Enter the Color & Paint app



My Apps

Shows all apps approved for your child. To add more apps, check the "Adding or Removing Apps" section of this guide.



Live TV

Watch PBS KIDS live. You can also view the TV schedule guide to see what programs will be showing for the day.



Kid Profile

- Switch Kid Profiles
- Choose new avatar
- See your child's Favorite Shows

LIVE TV



- Tap on the Live TV app to watch PBS KIDS livestream.
- Tap on the video screen to enter and exit full screen mode.
- Tap on “CC” to toggle captions on or off.
- Tap on the PBS KIDS icon on the upper-left corner to easily enter the Games or Video app.



 
Tap on “What’s On” or the Live TV icon found on the upper-right corner of the screen to see the program guide.

To go back Home, swipe up from the bottom of the screen to reveal the Home button.

CHARACTER NAVIGATION WHEEL

Turn the wheel to see your favorite characters.
Tap on a character to view all related videos and games available to watch or play.

Character
Navigation

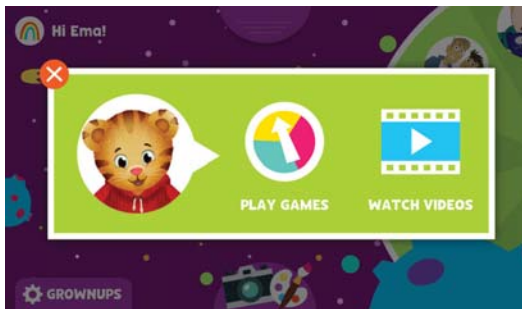

THEMES

 
Tap on the Themes tab found in the home screen of Kid Mode to view the different themes you can choose from.

 


VIDEOS



You can access videos from the Character Navigation Wheel or from the All Apps Screen.

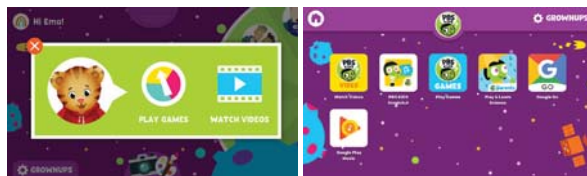

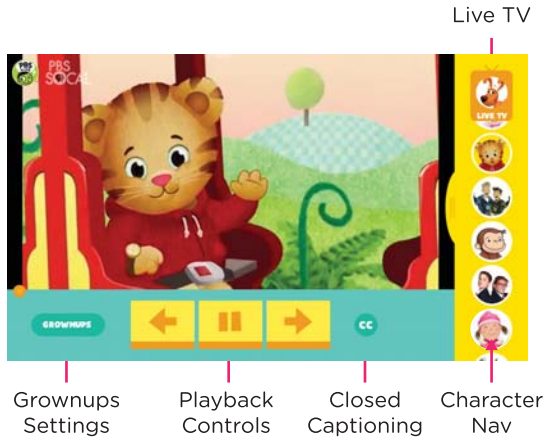


Swipe the Character Nav to the left to reveal more videos.



GAMES




 To play games, you can click on “Play Games” from the Character Navigation Wheel or select the “Play Games” app from All Apps.

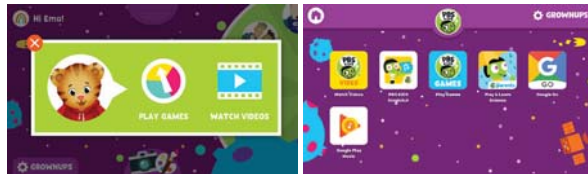


COLOR & PAINT

 Tap on the Camera and Paint icons from the Kid Mode homescreen then tap on “Color & Paint” to access the Paint App. Saved artworks can be found in the Gallery.

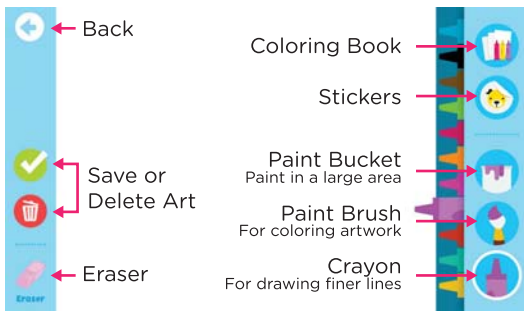

CAMERA AND GALLERY

 Tap on the Camera and Paint icons from the Kid Mode homescreen then tap on “Take A Picture” to access the camera.

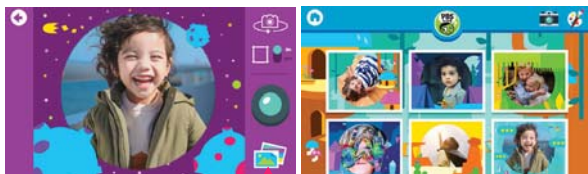


Gallery



Frames: You can toggle frames on or off by tapping on the switch. Each theme has 2 unique frames for front and back view. Switch themes from the homescreen.

ADDING AND REMOVING APPS

You can add or remove apps from your child's "My Apps" screen by going into the Grownups Settings then tapping on the  icon beside the name of the child's profile.



Tap on the app you wish to add or remove from your child's profile.



EXITING KID MODE



To exit Kid Mode, tap on Grownups at the bottom-left corner of the screen



Enter your 4-digit PIN-code.

If you forgot your code, please see [Resetting PIN-Code](#) on page 23.

 
 


Then tap on “Exit Kid Mode” on the upper-right corner of the screen.



Tap on the  icon to enter Parent Mode.

IV. PARENT MODE PARENT MODE OVERVIEW

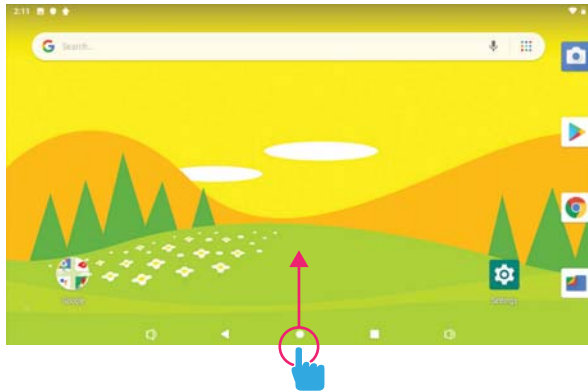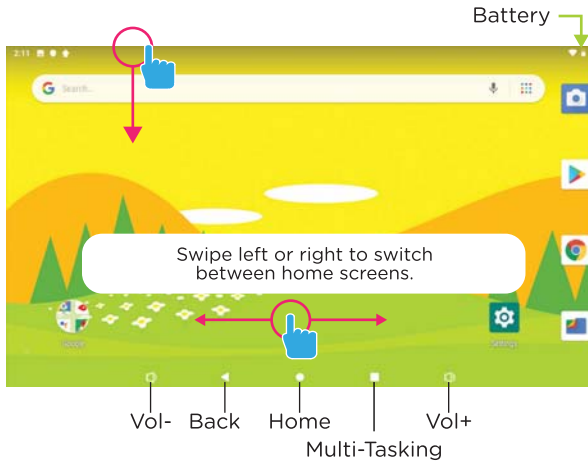

Swipe up to reveal all your apps.

DOWNLOADING NEW APPS

 


Play Store

You will need a Google account in order to download third-party apps. Exit Kid Mode and open the Play Store app to download more apps.


UNINSTALLING APPS

In Parent Mode, touch and hold an app in the All Apps Drawer and drag them to the trashcan uninstall icon.

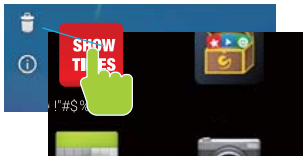

Note: You can also uninstall by tapping Apps in the settings application.

 REMOVING APPS FROM HOME SCREEN

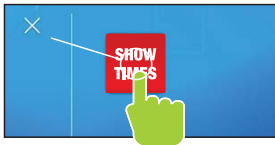

In Parent Mode, touch and hold an app on the home screen and drag the app to the “X” icon.

CREATING A GOOGLE ACCOUNT

1. Go to <https://accounts.google.com/signup>
2. The signup form will appear. Follow the directions by entering the required information.
3. Your account will be created, and the Google welcome page will appear.

Google

Create your Google Account

First name Last name

Username @gmail.com

You can use letters, numbers & periods
[Use my current email address instead](#)

 
Password Confirm

Use 8 or more characters with a mix of letters, numbers & symbols

[Sign in instead](#)


One account. All of Google working for you.

ADD A GOOGLE ACCOUNT TO YOUR TABLET



Tap Settings

 Under Accounts, tap “Add Account”

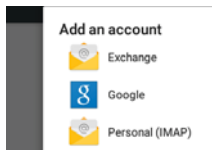

Tap what kind of account you want to add and sign in.

 
REMOVE A GOOGLE ACCOUNT

1. Tap Settings.
2. Under Accounts, tap Google.
3. Tap the account you want to remove.
4. Tap on the “Remove Account” button.

CONNECTING TO WIFI

To connect to a different Wi-Fi Network for when you're not at home, or to set-up a new connection, please exit Kid Mode and enter Parent Mode.

Tap on the Settings App  > Network & Internet > Wi-Fi to set up a new connection.

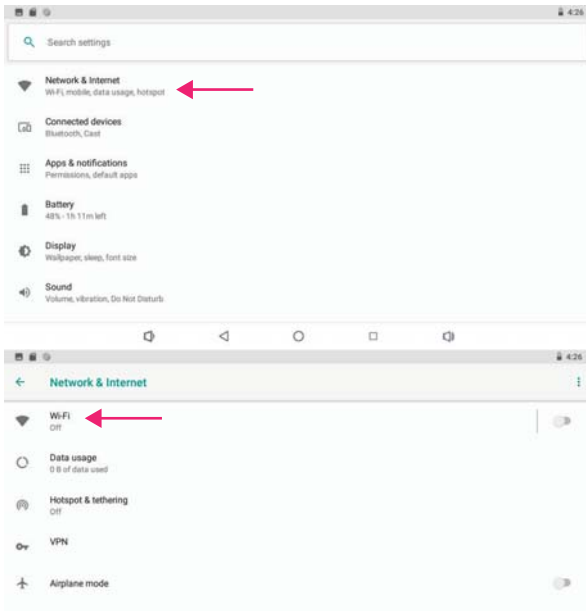


Tap on the Home Button  to go back to Kid mode.

CONNECTING TO A COMPUTER

Connect to your computer by USB.

 Note: You must be in Parent Mode to connect to a computer.

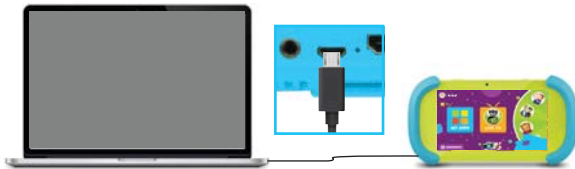

ON PC:

Once connected, the device driver will install. The Autoplay Dialogue Box will appear. Choose “Open folder to view files” or “select removable disk”.

You will now be able to drag and drop files from your computer onto your tablet just as you would with a USB Flash drive.

ON MAC:

First, install the Android File Transfer application for Mac. Go to [android.com/filetransfer](https://www.android.com/filetransfer) on your Mac and choose “Download Now” and then install the application.



The Android File Transfer application will launch automatically when you connect your tablet. Drag & drop files to transfer.

V. TABLET SETTINGS

DEVICE SETTINGS

Home: Google Now Launcher

Display: Adjust brightness, change your wallpaper, sleep settings, font size, HDMI setting, and device rotation.

Storage: Provides storage use data.

Battery: Provides battery usage data.

Apps: Tap an app to force stop, uninstall, clear data, move to SD card, or clear data.

Sound: General audio settings.

Notifications: Adjust notifications.

Memory: Show the size of memory used.

PERSONAL SETTINGS

Location: Allow Google to use data to determine your location for improved search results.

Security: Adjust settings to make your tablet more secure. Allow installation of non-market apps.

Accounts: Tap to add or remove email accounts.

Language & input: Set language, spelling correction, keyboard and voice settings.

Backup & rest: Backup data and reset your tablet.

Google: Provides Google services.

SYSTEM SETTINGS

Date & time: Set the date, time, and time zone.

Accessibility: Adjust settings for users with low vision, turn on/off screen rotation.

Printing: Print services

About tablet: Model number and general tablet information.

WIRELESS & NETWORK SETTINGS

 
Wi-Fi: Turn Wi-Fi on to see available networks and connect.

Bluetooth: Provides Android Bluetooth to nearby devices.

Data usage: Shows data usage.

More: Provides Airplane mode and VPN

ADJUSTING YOUR SCREEN BRIGHTNESS

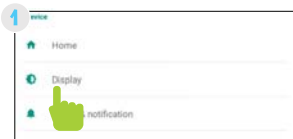

In settings tap “Display”



Then “Brightness Level”



Use the slider to adjust the brightness.

Tip: Lower the brightness at night to extend your battery life.

VI. MISCELLANEOUS

UPDATING YOUR SOFTWARE



Software Update

1. Make sure you are connected to Wi-Fi.
2. Exit Kid Mode.
3. In Parent Mode, tap on the Software Update app and follow the on-screen prompts.

FACTORY RESTORE



From the Settings app, tap on System > Reset Options then select the type of reset you would like to run.



RESET DEVICE

The reset button is located on the back of the unit. Reset this device by pressing the button inside the hole with a small object such as a paper clip.



WON'T CONNECT TO COMPUTER

Try a different USB port on your computer and/or restarting your Playtime Pad.

 
The battery may be too low and the computer is not providing enough power via USB. Use the wall charger to charge your Playtime Pad for 30 minutes and then re-connect to the computer.

RESETTING PIN-CODE

1. Tap “Grownups” tab > “Forgot PIN-Code?”




2. You will be asked for the “Secret Exit Phrase”. Enter `exitplaytimemode` and tap “Exit Kid Mode” button.

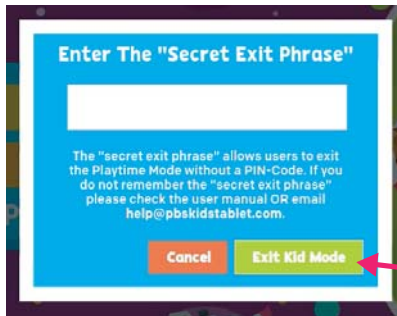


Note: Use the “Secret Exit Phrase” to exit out of the Playtime mode anytime you forget your PIN.

 3. Tap the  to enter Parent Mode
4. Now go to “Settings” > “Apps & notifications”

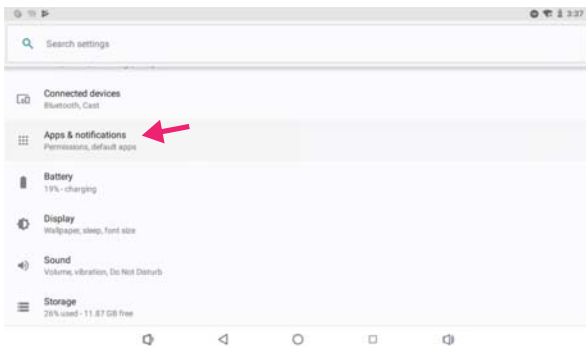

 
5. Click on “See all apps” to enter the “App Info” page of all apps
6. Tap “PBS KIDS Playtime Mode 2.0”

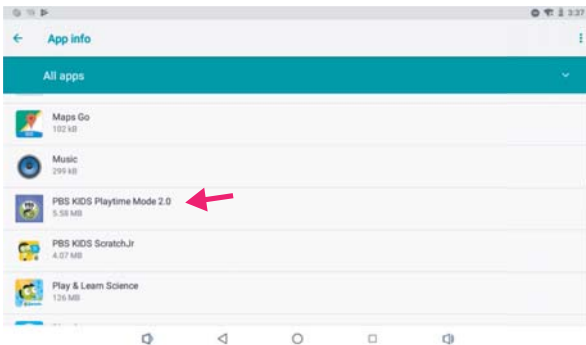

7. Tap the “Storage” option and then Tap the “CLEAR DATA” button



 8. Confirm that you want to “Delete app data?” by Tapping “OK”.

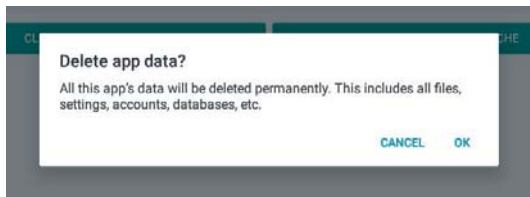


9. Tap the home circle icon to return to Playtime Mode. You will see the option to recreate “Pin Code” and “Kid Profile”. Finish setup and you are done.

 


Note: This process will only reset profile data. It will not delete any photos, drawings, or downloaded apps. That content is saved to the device directly and will remain unless explicitly deleted or uninstalled.


CHANGING YOUR HOME SCREEN TO ANDROID

The default home screen of your device is Playtime Mode. If you want to change the default home screen to the Android interface, please follow the steps below:

1. Exit Kid Mode.
2. While in Parent mode, tap on “Settings” 

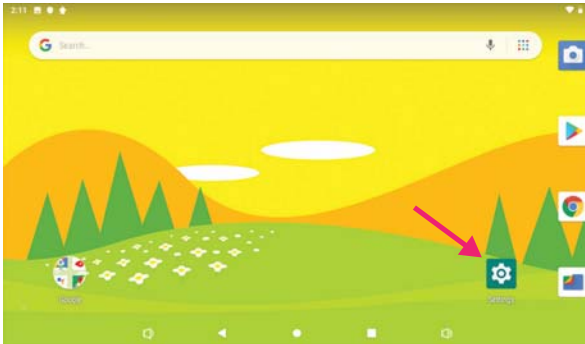

 3. Then tap “Apps & notifications” > “Advanced”

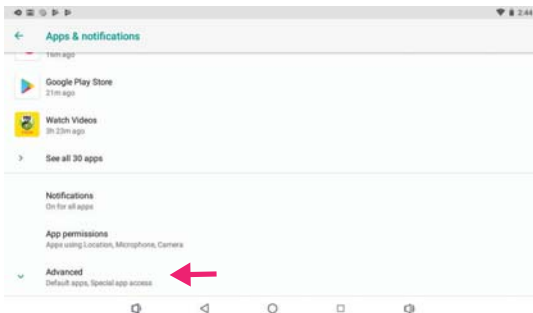

4. Then tap “Default Apps” > “Home App”



5. In the Home Apps Settings, tap on “Launcher3”



This will now change your default homescreen to Android so that whenever you tap on Home You will be brought the the Parent Mode screen.

CARE

The Playtime Pad is an electronic device and can be damaged if used improperly.

- Don't expose your device to liquids, water or extreme humidity.
- Don't try to dry the Playtime Pad using a heat source such as a dryer, microwave, or oven.
- Don't charge your tablet or use it in environments above 95°F and below 32°F.
- Don't expose the Playtime Pad to dirt or sand.
- Use a clean, dry cloth to clean your tablet. Do not use chemicals or water to clean your device.
- The Playtime Pad can be damaged by shock from dropping.

SPECIFICATIONS

CPU:	1.5GHz Quad-Core Processor
RAM:	1GB
Memory:	16GB
MicroSD Card:	Supports up to 32GB
Screen:	7" HD Touch Screen
Resolution:	1024x600
Battery:	Rechargeable Li-Polymer
OS:	Android 8.1 (Go edition)
Record:	Built-in Microphone
Camera :	Front and Back Cameras
Connectivity:	Bluetooth, Wi-Fi
Video Formats:	WMV, MKV, MO, AVI, RM/RMVB, MPEG-2/4
Music Formats:	MP3, WMA, APE, FLAC, AAC, AC3, WAV

CAUTION - ELECTRIC DEVICE

Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

IMPORTANT SAFETY INFORMATION

All charging functions and mechanisms (AC adapter, car charger) are intended for adult usage. Children should not use this device while charging.

CUSTOMER SUPPORT

Visit ematic.us/support for customer support regarding your device. To submit a request, fill out the required information online. You will be provided a ticket number regarding your issue, which you can refer to when contacting us further.

You can also reach an Ematic customer service representative by calling: **1-888-968-1985**.

We are open Monday - Friday 9 AM - 5 PM PST, except weekends and major holidays. Ematic strongly urges customers submit an online support ticket before calling, as this will enable us to better assist you.

LIMITATIONS OF LIABILITY STATEMENT

LINKS TO THIRD PARTY SITES

The Ematic User Manual may contain or reference links to third-party sites, however, please be aware that Ematic is not responsible for and cannot control these other sites. Ematic makes no representations or warranties whatsoever about any other website which you may access as a result of reading this user manual, or otherwise. When you access a website that is not owned or operated by Ematic (a “non-Ematic website”), even one that may contain an Ematic logo, please understand that it is independent from Ematic, and that Ematic has no direct control over the content on such website(s). In addition, a link to any such non-Ematic website does not mean Ematic endorses or accepts any responsibility for the content, or of any functionalities or services, of such website(s). Furthermore, Ematic makes no promise, representation or warranty that any non-Ematic website you navigate to will be free of viruses, worms, Trojan horses and other items of a destructive nature. The Ematic User Manual is for your exclusive benefit and you assume all risks, losses and/or damages of whatever nature that may result arising out of your use of the Ematic User Manual.

LIMITATION OF LIABILITY AND INDEMNITY

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach of contract or in tort, even if Ematic has been previously advised of the possibility of such damage. You agree that you have sole responsibility for adequate protection and backup of data and/or equipment used in connection with the product and software and will not make a claim of any nature against Ematic for lost data, inaccurate output, work delays or lost profits resulting from the use of the materials. You agree to indemnify, hold harmless and defend Ematic, together with its affiliates, parent and subsidiary entities, successors, assigns, partners, managers, members, employees, officers, directors and shareholders, from and against any and all damages, liens, liabilities, losses, demands, actions, causes of action, claims,

To the maximum extent permitted by applicable law, Ematic shall not be liable for any damages suffered as a result of using, modifying, contributing, copying, distributing, or downloading the materials, use of the Ematic User Manual or use of any Ematic product and/or software. In no event shall Ematic be liable for any indirect, extraordinary, exemplary, punitive, special, incidental, or consequential damages (including, without limitation, loss of data, revenue, profits, use or other economic advantage) however arising, whether for breach of contract or in tort, even if Ematic has been previously advised of

©2019 Ematic. All Rights Reserved. PBS KIDS and the PBS KIDS logo are registered trademarks of Public Broadcasting Service. Used with permission. ©2019 PBS. All rights reserved. Wild Kratts® © 2015 Kratt Brothers Company Ltd. / 9 Story Media Group Inc. Wild Kratts® and Creature Power® and associated characters, trademarks, and design elements are owned by Kratt Brothers Company Ltd. Licensed by Kratt Brothers Company Ltd. All Rights Reserved. WordGirl and underlying materials (including artwork) TM, ® & © Scholastic Inc. Odd Squad and underlying materials (including artwork) © 2014 The Fred Rogers Company. Peg + Cat and underlying materials (including artwork) ©2016 Feline Features, LLC. READY JET GO! © 2017 Jet Propulsion, LLC. Ready Jet Go! and the Ready Jet Go logo are registered trademarks of Jet Propulsion, LLC. Sid the Science Kid © 2011 The Jim Henson Company. Characters and elements are trademarks of The Jim Henson Company. All Rights Reserved. Super Why and underlying materials (including artwork) © 2016 Out of the Blue Enterprises LLC. The Cat in the Hat Knows a Lot About That! Logo, word mark and artwork™ 2016 Dr. Seuss Enterprises, L.P. Collingwood O'Hare Productions Limited, and Portfolio Entertainment Inc. All Arthur characters and underlying materials (including artwork) © Marc Brown. "Arthur" and "DW." and all of the ARTHUR characters are trademarks of Marc Brown. Nature Cat and associated characters, trademarks, and design elements are owned by Spiffy Entertainment, LLC. © 2017 Spiffy Entertainment, LLC. All rights reserved. Dinosaur Train and associated characters, trademarks, and design elements © 2009 - 2015 The Jim Henson Company. All Rights Reserved. Daniel Tiger and underlying materials (including artwork) © 2016 The Fred Rogers Company. Maya & Miguel and logos are trademarks of Scholastic Inc. © 2005 Scholastic Entertainment Inc. All rights reserved. Pinkalicious © 2018 WGBH Educational Foundation. All rights reserved. Pinkalicious, Peter, and other Victoria Kahn Pinkalicious characters and underlying materials (including artwork) are trademarks and copyrights of Victoria Kahn. Used with permission. "Luna" © 2018 LATW Production Inc. and Let's Go Luna © &™ 9 Story Media Group Inc. All Rights Reserved. Splash & Bubbles © 2016 The Jim Henson Company. SPLASH AND BUBBLES mark & logo, characters and elements are trademarks of The Jim Henson Company. All rights reserved. These and all third party trademarks are the property of their respective owners. Used with permission. ©2019 Google Inc. All rights reserved. Google, Android and Google Play are trademarks of Google LLC. ©2019 Bluetooth SIG, Inc. All rights reserved. Wi-Fi® is a registered trademarks of the Wi-Fi Alliance. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. MicroSD card not included. 1 year warranty from date of purchase, 90 days only on labor. Distributed by: Shaghal Ltd, Los Angeles CA 90064.

This product comes with



Covers damage from accidental drops and spills.

REGISTRATION REQUIRED:
<https://ematic.us/warranty>

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.