



User's Manual

Ematic Edan - EGS006

Since the tablet software updates regularly, the user manual may not cover all aspects of new features.

Important Notices

- The new battery will be in its best condition after being fully charged and discharged 2-3 times.
- While using earphones, if the volume is excessively high it may cause hearing damage. Please adjust the volume of the player to a safe level and moderate during use.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit the tablet against a hard surface, or the screen may be damaged or cracked.
- Do not upgrade the firmware by yourself. The tablet should be upgraded with the right firmware and right methods offered by us. If upgrade is needed, please contact us.


Section 1: Tablet Overview	
Tablet Overview	4
Screen Basics	5
Touch Screen Basics	5
Section 2: Initial Setup	
Charging	6
Turn on	6
Connecting to Wi-Fi	7
Setting up your Google Account	7
Section 3: Your Home Screen	
Icons	8
Adding Icons	9
Moving Icons	9
Removing Icons	9
Take a Screenshot	9
Sleep Mode	10
Change the Wallpaper	10
Section 4: Network Connection	
Turn On/Off Wi-Fi	11
Adding a Wi-Fi Network	12
Section 5: Connecting to a Computer	
PC	13
Mac	14
Section 6: Using the Keyboard	
Entering text	15
Basic Editing	15
Keyboard settings	16
Section 7: Voice Actions	
Using Voice Actions	17
Voice Commands	18
Section 8: Exploring Apps	
Gmail	19
Calendar	19
Clock	20
Camera	20
Included Apps	20
Uninstalling Apps	23
Section 9: Google Accounts	
Why use a Google Account?	24
Add a Google Account	24

Remove a Google Account	25
Google Play	25
Google Play Widgets	26
Google Play Store	26
Section 10: Google Now	
Google Now Cards	27
Location Access	28
Google Now Settings	28
Section 11: Tablet Settings	30
Section 12: Tips & Tricks	
Extending Battery Life	31
Reset/Restore	32
Troubleshooting	32
Customer Support	33
Limitation of Liability Statement	33

1. Tablet Overview



 Screen Basics

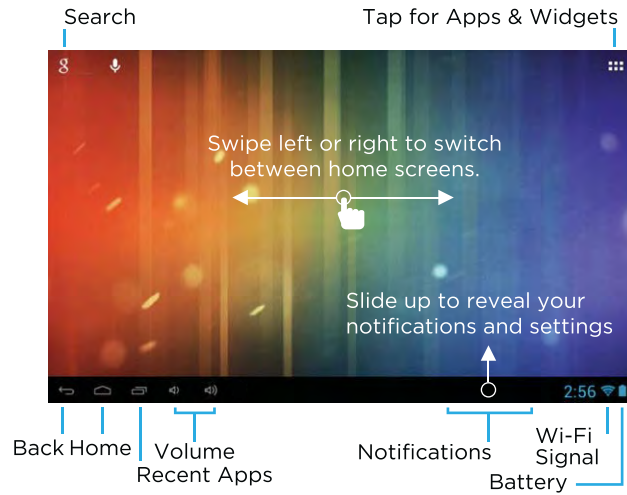

Touch Screen Basics

Tap the screen once to activate or open something.



Touch and hold to move an item by dragging.

*In many apps touch and hold can offer more options.



Zooming: Double tap quickly to zoom into a webpage, picture, or map. Some apps allow you to zoom in and out by touching the screen with two fingers, and pinching them together.



TIP: You can flick the screen with your finger to quickly scroll through a long list, such as a library of music.

Tap a specific location on the screen where you would like to enter text. The on-screen keyboard will pop up.

2. Initial Setup

Charging

Fully charge your tablet for 6 hours before the first use.



Use the included USB wall charger.



The battery indicator will show that your device is charging.



Attention: Charging by connecting to a computer will be extremely slow. We recommend only using the included wall charger.

Turn on

To start your tablet, press and hold the power key for 2 seconds. The Ematic logo indicates that the tablet is loading.

Once the screen loads, you will see a Welcome Screen. Choose your language and tap **Start**.

Connecting to Wi-Fi

You will be asked to select your Wi-Fi connection. Tap to select your network and enter your password.



Setting up your Google Account

When prompted, sign in using the email address and password from your Google Account. If you don't have one yet, create one.

An email address that you use for any of the following counts as a Google Account:

- Gmail
- YouTube
- Google Apps
- AdWords
- Any other Google product

When you sign in with a Google Account, all the email, contacts, Calendar events, and other data associated with that account are automatically synced with your tablet. You can also add multiple Google Accounts later.

3. Your Home Screen

Icons

You can fill the home screen with any combinations of shortcuts, widgets, and folders you like.

When you power up your tablet for the first time, you'll see the main home screen panel. This panel is typically centered; you can access additional panels on either side of the main one by swiping your finger left or right.



Battery Level: The blue battery level indicator will decrease and change to red as the battery is drained.



Wi-Fi Signal: As the Wi-Fi signal strength decreases, the blue bands will change to grey.



All Apps: Tap to view all apps.



Back: Go back to the previous screen. Hold and slide up to open Google Now.



Home: Go back to the home screen.



Recent Apps: Open a list of recent apps. Tap an app to open or swipe left/right to remove the thumbnail.



Increase Volume



Decrease Volume



Google Search: Touch Google to type your search terms, or the Microphone icon to speak them. You can also say "Google" and your query to activate a voice search.

Adding Icons



 
Within the All Apps menu, choose an app or swipe right to choose a widget. Tap and hold desired app or widget for about 2 seconds until the Home screen appears. Slide it wherever you want and let go.

Moving Icons

Touch & hold the icon.
Slide your finger to the new position.
(To move between Home screens, slide toward the edge of the screen. To bump another icon out of the way, slide slowly towards it.)
Lift your finger to drop the icon into its new position.

Removing Icons

Touch and hold the app or widget and drag to the X icon at the top of the screen.

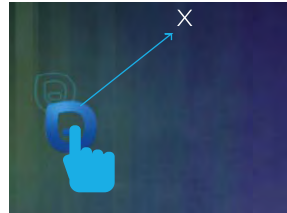

Take a Screenshot

Make sure the image you want is displayed on the screen.
Press the Power Button and the Decrease Volume Button simultaneously.

The screenshot is automatically saved to your Gallery.

Sleep Mode

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, press the power key and immediately release it. Do it again to bring up the lock screen.



Change the Wallpaper

Tap and hold your finger on any open space on your home screen. A list of options appears.



Live Wallpapers: Choose from a scrolling list of animated wallpapers

 
Video: Choose a wallpaper from your personal gallery

Wallpapers: Choose from thumbnails of default images

4. Network Connection

Wi-Fi can only be used when it connects with a Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot.

Turn on Wi-Fi

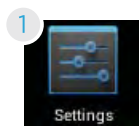


Within the All Apps menu, tap Settings.



Under Wireless & Networks, tap the Wi-Fi switch to turn it on and scan for networks.

Your tablet will list the networks it finds within range. Tap a network to connect.



 
When connected, the wireless indicator appears in the status bar. The blue lines indicate connection strength. 

Turn off Wi-Fi

Tap the Wi-Fi ON switch under Wireless & Networks. Turn off Wi-Fi when you're not using it to extend the life of your battery between charges.

Adding a Wi-Fi Network

Users may also add a Wi-Fi network under Wi-Fi settings.

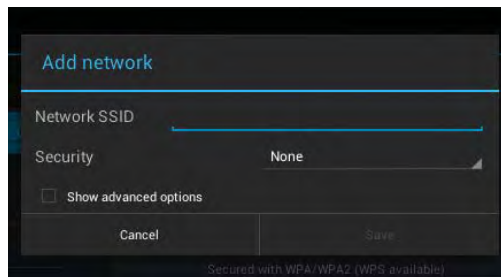


Forget a Wi-Fi Network

In the Wi-Fi settings screen, tap the name of the network. Tap “Forget” in the dialog that opens.


Add a VPN profile

Opens a screen that prompts you to select the type of VPN to add. You are then prompted for VPN configuration details.

 
5. Connecting to a Computer

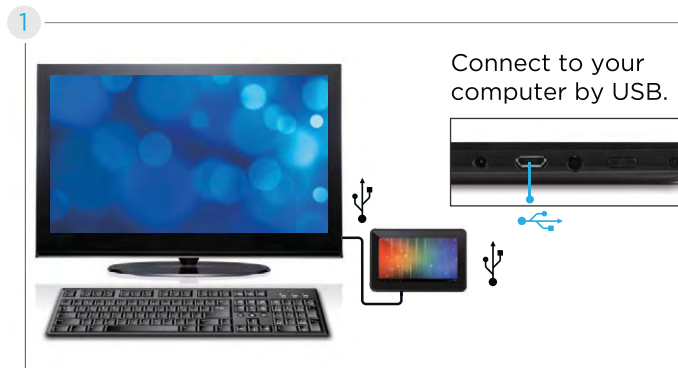

PC

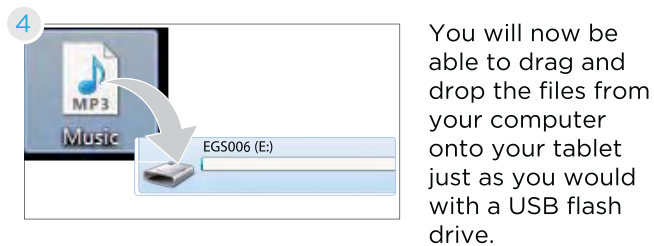 


Mac

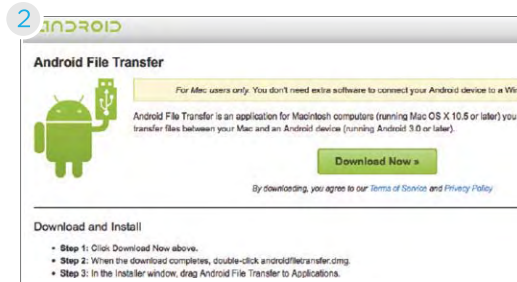 

First, install the Android File Transfer application for Mac.

Go to android.com/filetransfer on your Mac and choose download now.

 3 Install the application.

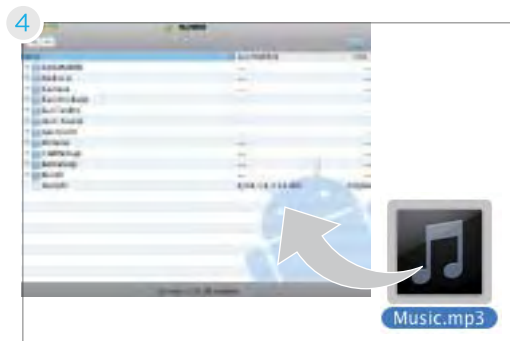

The Android File Transfer application will launch automatically when you connect your tablet. Drag & drop files to transfer.

 
6. Using the Keyboard

Entering text

Enter text using the onscreen keyboard. In most apps it will open automatically. In others, open the keyboard by touching where you want to type.


*Depending on what you are doing, some of the keys on the keyboard may look different. Keyboard A appears when you are searching or browsing the net. Keyboard B appears when you are writing emails, documents, or messaging.

Keyboard A:

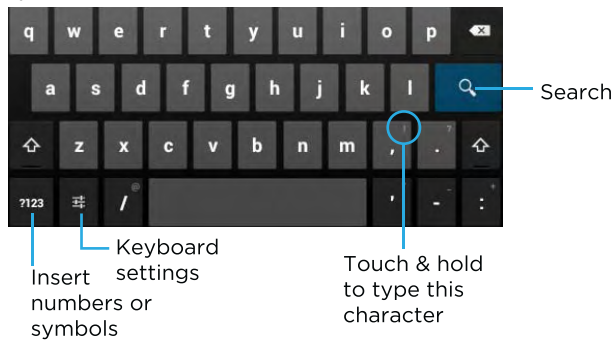

Keyboard B:



To make the keyboard go away, touch the modified Back button  at the bottom left of the screen.