

User Manual



Product Name: Keytab

Brand: E-tel

Model: E-tel Q10 Plus

Manufacture: E-tel Technologies Ltd

Introduction

Thank you for your choosing the new Keytab.


This guide serves to enable users to get to know and familiar with our product as soon as possible.

Here we have made a brief introduction to the key layout and definitions in figures and words.

Contents

I. Precautions before Use	03
II. Key Layout and Definitions	04
III. Key Descriptions and Applications	05
IV. Introduction to Desktop	06
1. Windows 10 Start Screen	06
2. Image Slide Application	06
3. apps Introduction	08
4. Start menu	09
5. Multitasking operating interface	10
V. Basic Operations	11
1. Sleep, Restart, and Power off	11

I. Precautions before Use

This production is suitable for use in non-tropic areas below 2,000 meters, and the mark  in the nameplate indicates the product is suitable for use in non-tropic areas.

2. Prevent the Keytab from falling to the ground or being strongly impacted otherwise.
3. Do not use it in the long term in any environment where the air is too cold, too hot (<35°C), too humid or with too much dust. Do not expose the Keytab to sunlight.

4.

Avoid using it in the strong magnetic and strong static environment as much as possible.

5. Once any water or other liquid splashes onto the Keytab, close it immediately and do not use it until it dries out.

6. Do not clean the Keytab with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.

7.

Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.

8. Please back up your important material at any time to avoid loss.

 
9. Please do not disassemble the Keytab by yourself; otherwise you will lose the right to warranty.

10. This product supports the overwhelming majority of mainstream brands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.

11. Quick Use Guide and the relevant software shall be updated at any time. For updated software version, visit www.xxx.com for downloading by yourself, and no notice shall be given otherwise.

If any anything is found to be inconsistent with the Quick Use Guide, the material object shall prevail.

12. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.

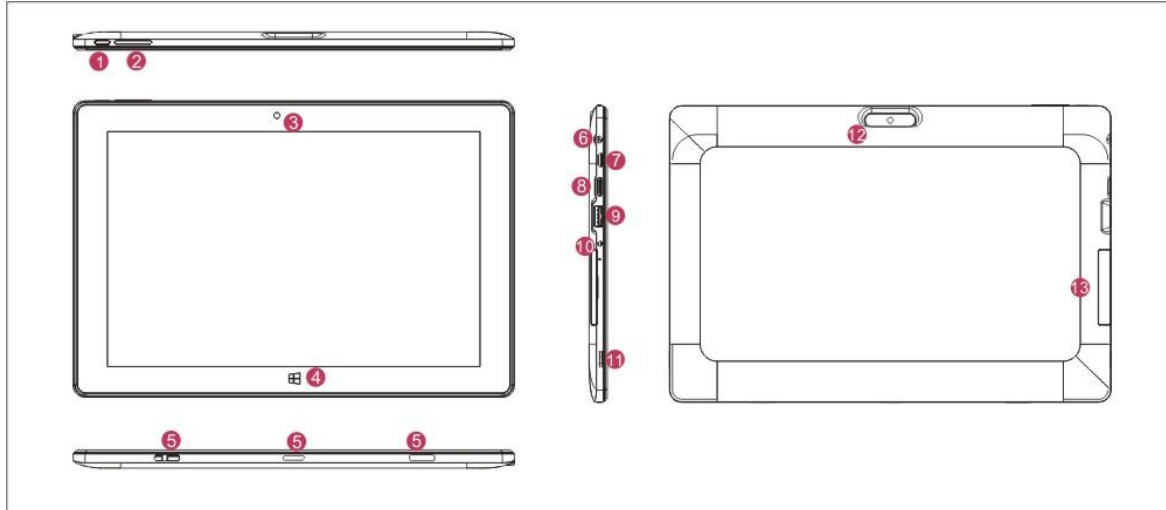

① Power button: Press it down to start or close the touch screen panel. You can also let the computer to enter dormancy through this button or wake from the dormancy mode.

② Sound-/sound+: Lower/raise volume

Loudspeaker: The built-in loudspeaker enables you to hear the sound without having to linking additional device

③ Front CCD camera: take photos, and record pictures

④ Windows key: Press this button to return to the Start screen.

CCD camera indicator: The CCD camera indicator will be on when the built-in CCD camera is used.

⑤ Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.

⑥ Socket for earphone: This socket can transmit the audio signals of Keytab to loudspeaker or earphone.

⑦ Micro USB Interface: You can read the data through USB.

⑧ Mini HDMI Interface: High-Definition Multimedia Interface

⑨ USB 3.0 Interface: You can directly inserted USB flash disk, mouse, keyboard.

⑩ DC Indicator: Becomes brighter when charging.

 
⑪ Microphone: This socket can transmit the audio signals of Keytab to loudspeaker

⑫ Back CCD camera: take photos, and record pictures

⑬ Micro SD card slot: The built-in storage card reader slot supports MicroSD and MicroSDHC format.

III. Descriptions of Keys

Attention: Keyboard is optional, and configure the product according to the specific type of the Keytab you have bought.

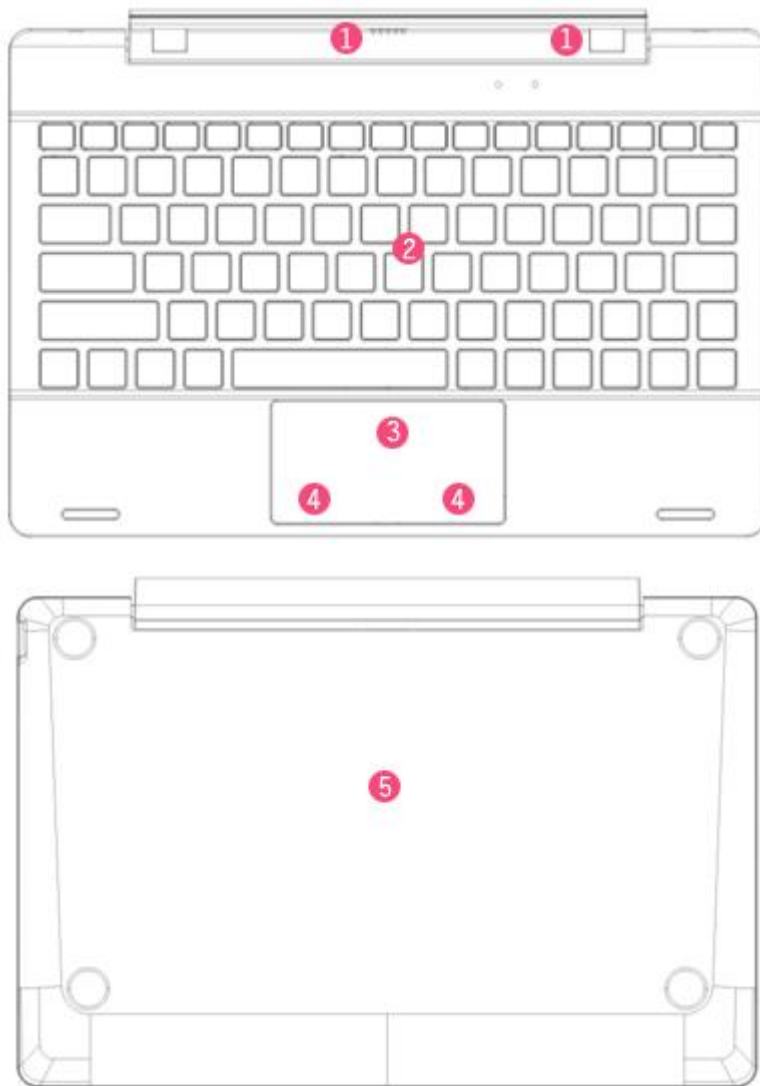

① Movable base keyboard interface: This interface is magnetic, which is convenient for alignment and firmly linking the Table PC and the keyboard.

② Keyboard group: The keyboard group provides full size QWERTY key and best typewriting comfortability.

③ Touch Tablet: Used to control the cursor on the Keytab, with the same function as a mouse.

④ Left key

 
④ Right key

⑤ Base: Folding base of Keytab.

VI. Introduction to Desktop

1. Windows 10 start image: On the start screen, you can see many programs fixed in the image. These application programs are displayed in the form of “magnet”. As long as you click them, you can easily visit them.

You need to log on your Microsoft account before the application program completely runs.

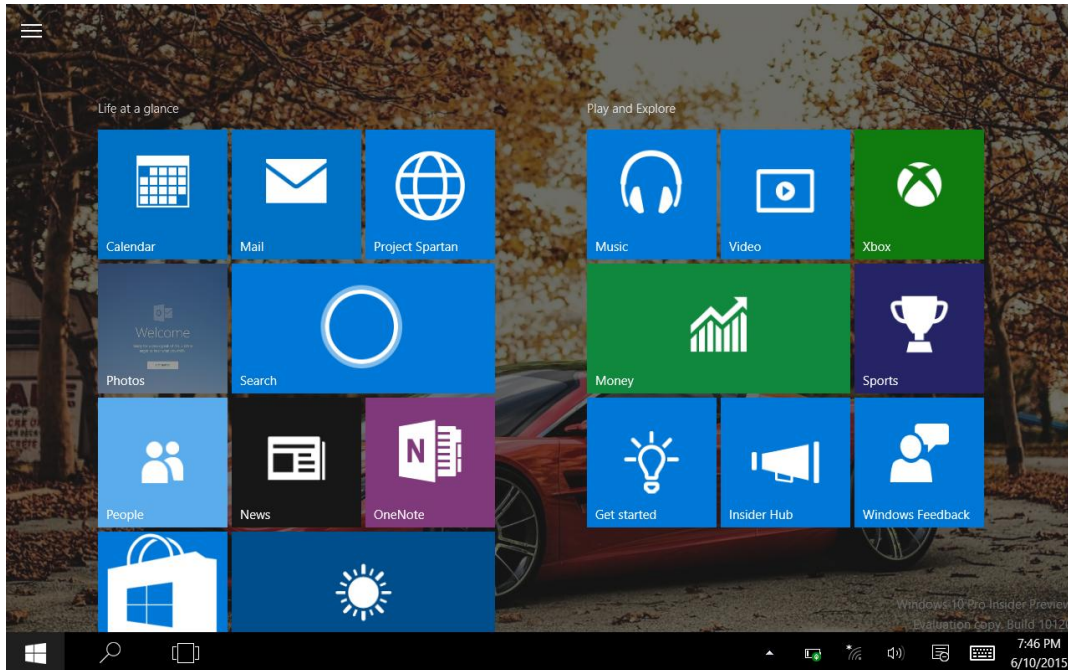


2. Image slide applications

Slide to right



Slide to the right from the left side of the screen to scan the application program in running.

 Slide to left

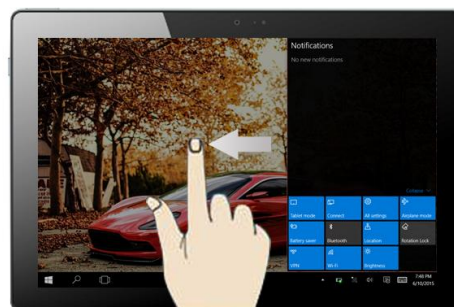

Slide to the left from the right side of the screen to setting **Action Center**.

Slide downward



 
Slide with finger




In start screen, slide from the top of the screen In start screen, slide finger up and down to view application programs to move the image.

3. Introduction to app Interface


Besides the application programs already fixed on the start screen, you can also start other application programs in all application programs, such as other software application programs attached to the Keytab.

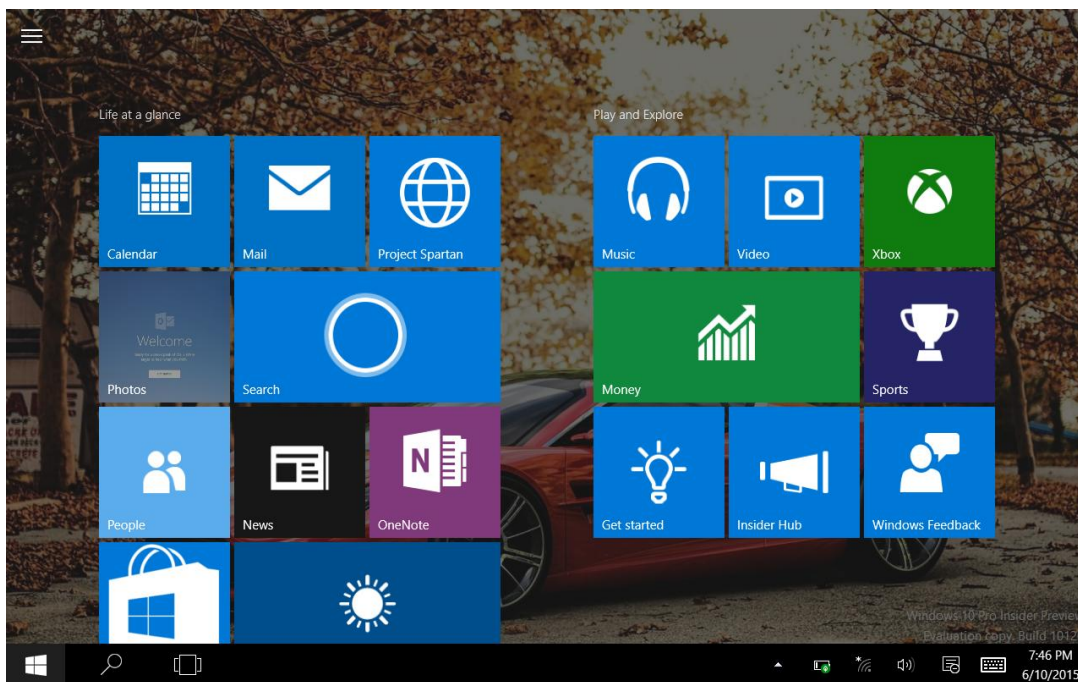

 If you want to fix more application programs on the start interface, see the operation in the figure below, (1) Click the properties icon(2) press and hold the application program magnet for about one second and then let go (3) Click the Pin to start

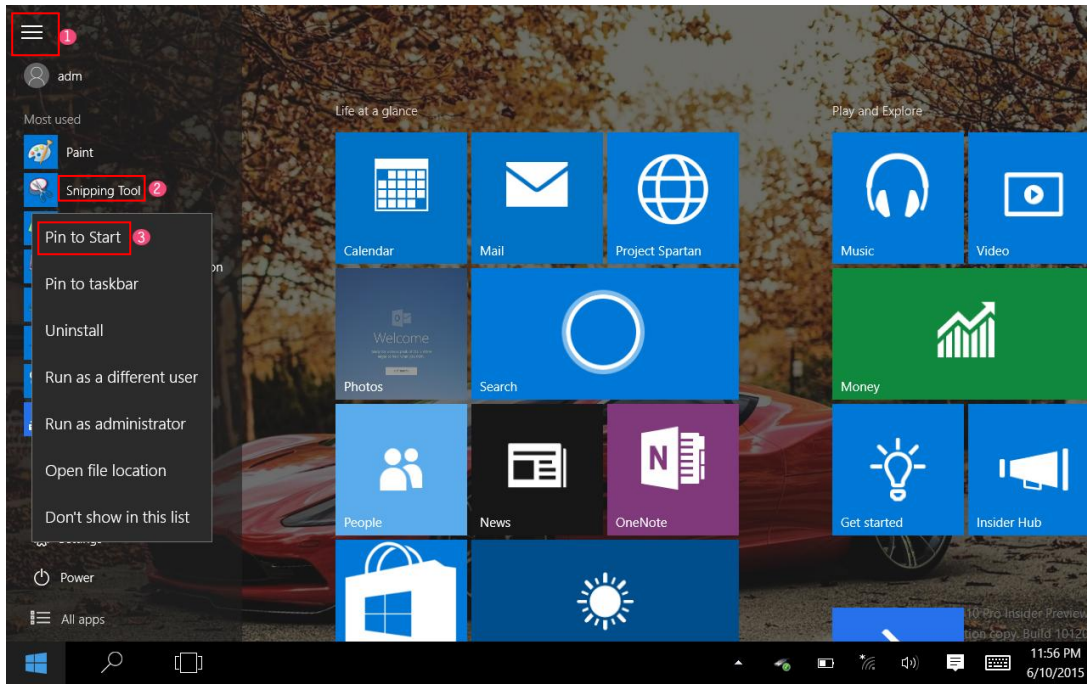


 Conversely, if you want to cancel or delete a certain application in the start screen, (1) lightly touch, press and hold the application program magnet for about one second and then let it go and run, and select

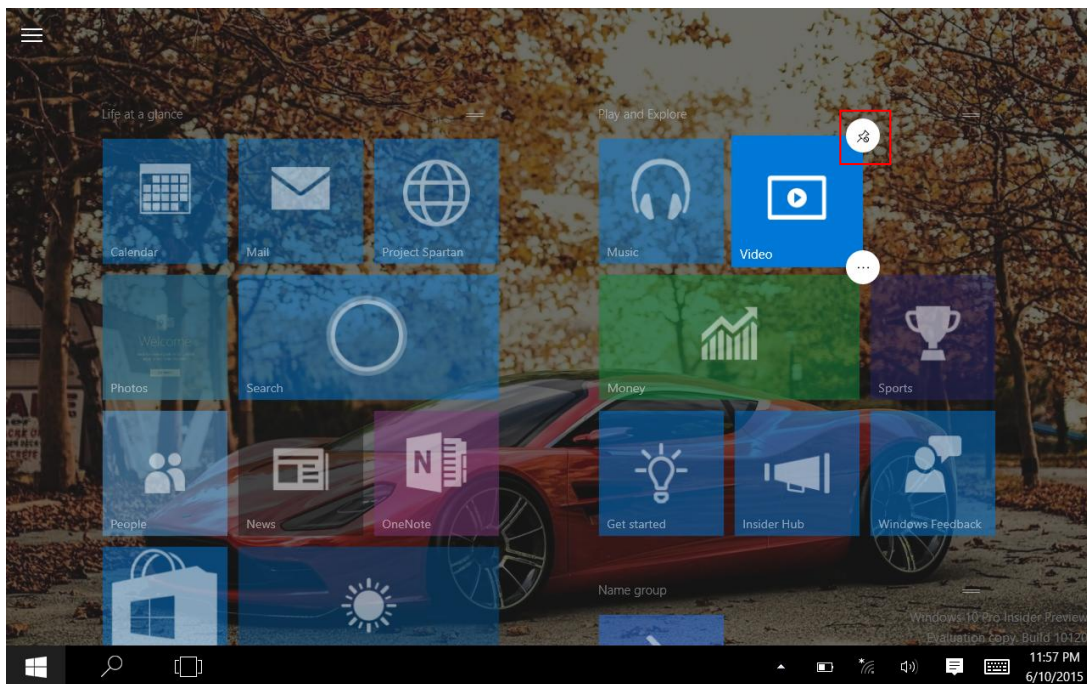


4. Start Menu

 
Under PC mode, press Start ion, Start Menu will display, including: Start, Device, Setup, Share, and Search Program.

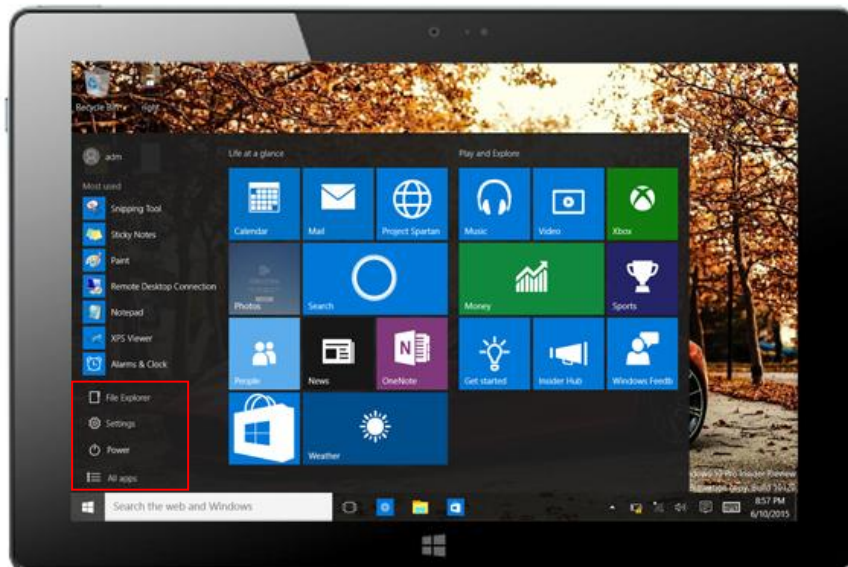

 
Usually: File Explorer, Settings, Power, and All apps




Can Sleep/Shut down/Restart the Keytab

 

 Can let you search the files and application programs in the Keytab.



Can let you set up the Table PC.

 

Can scan more apps

 
Search menu



Action Center




Setup Menu

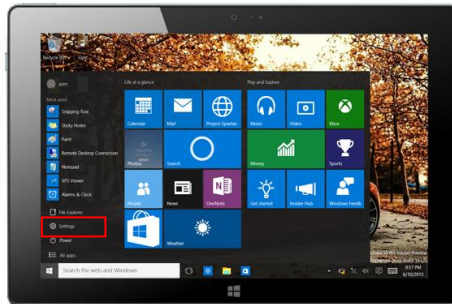

Action Center is a notification center also allows for quick settings like Tablet / PC mode, Wi-Fi, Bluetooth etc.


5. Multitasking operating interface

 slide it right from the left side of the screen, Let go when Can see the running applications. We can enter the application, also can be deleted.

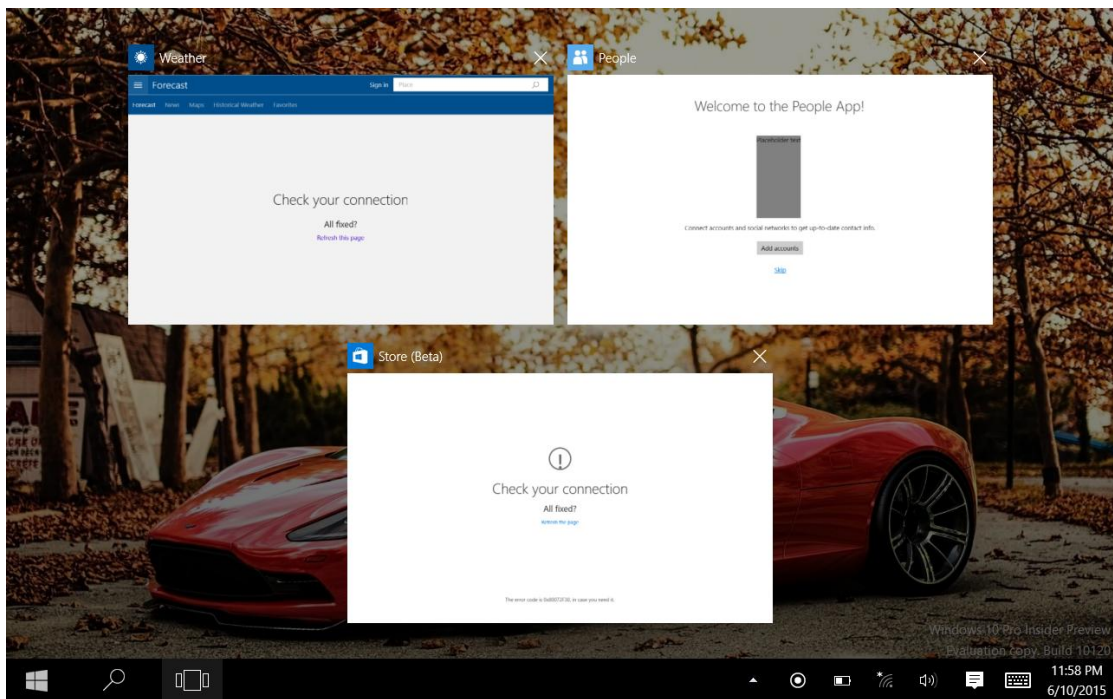

V. Basic Operations

 
1. Sleep, restart and power off

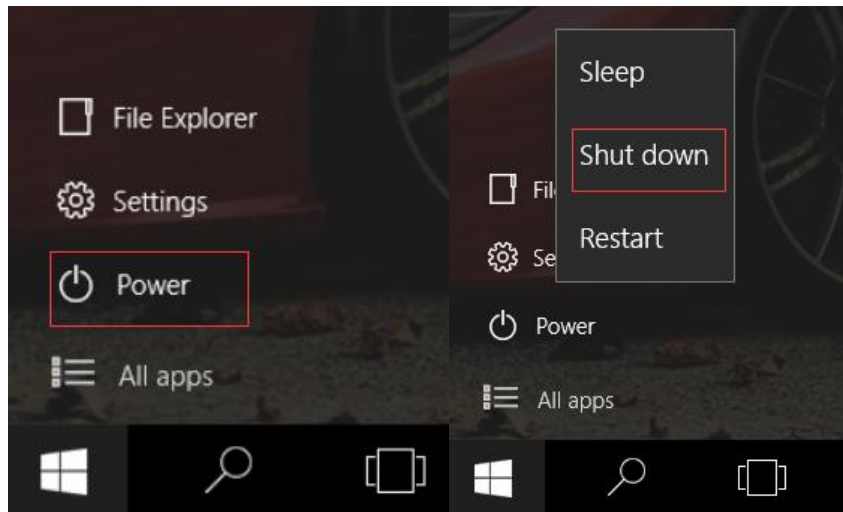


Wi-Fi settings

Many functions require Wi-Fi connection, so we suggest you use the preset Wi-Fi network.

1. Click  → **Settings** → **Wireless and network** → **Wi-Fi**
2. Enable **Wi-Fi**.

The device will search and list all available **Wi-Fi** networks automatically. The icon  beside **Wi-Fi** means you need to enter a password to connect to it.

3. Click the **Wi-Fi** network you want to connect to → if there is a password, you need to enter the password → Click **Connect**. After connecting to Wi-Fi network, you will see an icon  on the desktop.

4. Click  to return to desktop.

Note: If your Wi-Fi is set to be hidden, it will not be searched automatically. You need to click add Wi-Fi network and then enter required information to add your Wi-Fi.


Bluetooth settings

1. Make device discoverable

You must pair your Keytab with a device before you can connect to it. Once you pair your Keytab with a device, they stay paired unless you un pair them.



Under “Settings”, “Wireless & networks” choose “Bluetooth”. Tap “Bluetooth” and

then “On” to turn on. The Bluetooth indicator  appears in the status bar.

2. Scan for devices

After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.

3. Pair with the Bluetooth device

Tap the name of an available Bluetooth device to pair with. In the popup “Bluetooth pairing request” dialog, type a PIN.

If the pairing is successful, your Keytab connects to the device.

Example: to transmit a photo

Go to “Photos”, choose a photo to share. Tap any spot on the photo to view a submenu. Tap



icon →



, and then choose the device name in the Paired devices list. The photo will then be sent.

You can touch the right icon to unpair the device.

Note: After pairing, it shows under the Bluetooth device “Paired but not connected”, but file transmission is still possible.

You can see the received files by touching the right corner icon. At present, the Bluetooth function only supports files transmission. To extend battery life, turn Bluetooth power off when not in use.

4. Bluetooth settings



Tap the icon in the upper-right corner to view and choose menu options, like Refresh, Rename this device and Show received files.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.