

# User Manual for FULL FUNCTION RADIO CONTROLLED STUNT VEHICLE

For Ages 5+

 
## FEATURES

### VEHICLE


- \* Can be made to move forward, reverse, turn right / left and various stunt actions
- \* Can be operated on all flat smooth surfaces
- \* Battery: Ni-Cd or alkaline batteries
- \* Battery working time: 20 minutes

### TRANSMITTER

- \* Full function:  
Forward, Backward,  
Left Turn, Right Turn, Stop
- \* Modulation: AM
- \* Battery: 1 x 006P (9 volt)
- \* Battery life time: 8 Hours

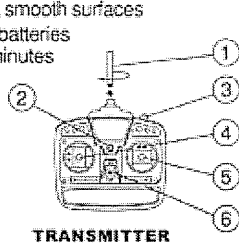

TRANSMITTER

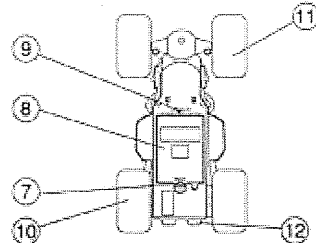 


VEHICLE

- |                       |                                    |                       |                       |
|-----------------------|------------------------------------|-----------------------|-----------------------|
| 1. Telescopic Antenna | 4. Forward / Reverse Control lever | 7. Cover Fastener     | 10. Rear Wheel        |
| 2. Indicator Lamp     | 5. Left / Right Control Lever      | 8. Battery Case Cover | 11. Front Wheel       |
| 3. Stunt Key          | 6. On / Off Switch                 | 9. On / Off switch    | 12. Rear Assist Wheel |


## INSTALLING BATTERIES

 1. Open the battery case of the transmitter, and install 1 "9V" battery into it, then close the case cover.
2. Turn away the battery case cover fastener and open the cover.
3. Install Ni-Cd or alkaline batteries into the case, making sure the (+) and (-) poles of the battery are positioned properly.
4. Close the case cover and fasten it by turning the fastener. (Batteries included)

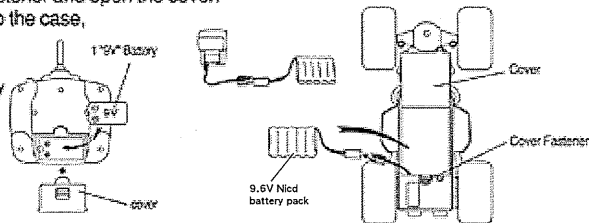


## SAFETY RULES

 - \* Not suitable for children under 3 years due to detachable small parts.
- \* Installation of the battery should be done by an adult.
- \* Keep fingers, hair and loose clothing away from the tires and the wheels while the vehicle is switched "ON".
- \* Don't pick up vehicle while in motion.
- \* Don't put your vehicle and transmitter near any sources of **heat**.
- \* Don't operate your vehicle in dangerous places.
- \* Avoid driving on **sand**.
- \* Don't let the vehicle get wet. Don't run through **water**.
- \* Avoid all possible collisions, check the road ahead and watch for obstacles.
- \* Children should not disassemble this vehicle.
- \* If the vehicle is damaged and any broken parts are exposed, the vehicle should not be used by children until checked by adults that no sharp edges are exposed.

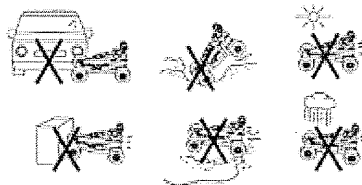

## OPERATION

 
1. Extend the transmitter antenna to its full length.
2. Turn "on" the vehicle and transmitter.
3. Drive the car by operating the sticks of the transmitter.

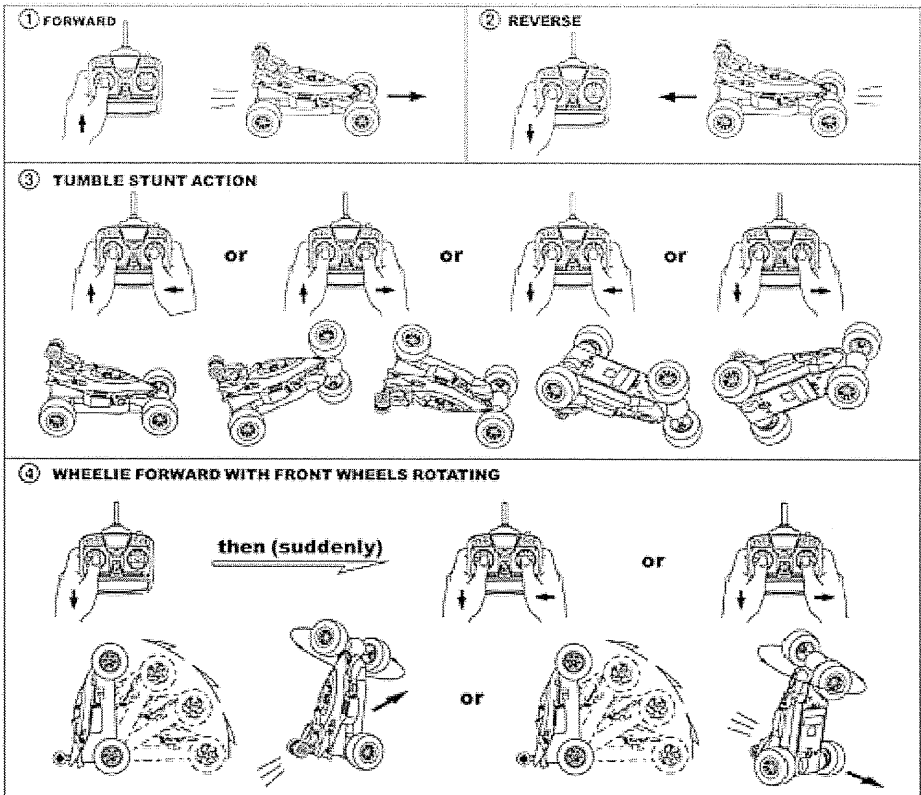

REMARKS: LED flashing effect in Wheels - Please press the rubber buttons inside the wheels to light up and turn off.

## TROUBLESHOOTING

 TROUBLES	PROBABLE CAUSE	CORRECTION
The car does not move	The switch of the car or controller had not been turned on	Switch them on
	The (+) and (-) ends of battery is positioned in the wrong direction	Take out the batteries and install them again correctly
	The 9V battery is too weak to make the controller work	Replace 9V battery with a new one
The car is out of control	The batteries of the car are too weak to move the vehicle	replace them with new powerful batteries
	Weak 9V controller battery	Replace 9V battery with a new one
	There is same wave radio control car is being used	Change location

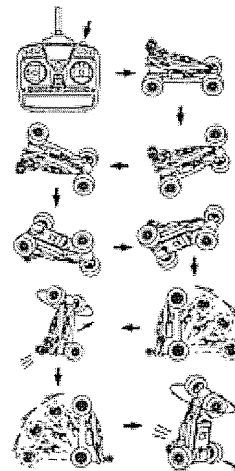

## Battery Information

 
- Batteries should be installed and replaced only by an adult.
  - Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
  - Do not mix old and new batteries.
  - Do not use rechargeable batteries.
  - Remove exhausted batteries from the unit.
  - Do not short circuit battery terminals.
  - Remove batteries and store them in a cool, dry place when not in use.
  - To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.
- Use only batteries of the same type and equivalency.

## FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

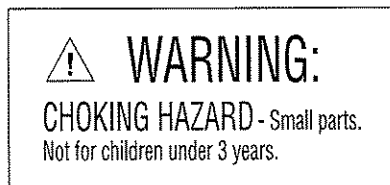

Model No. EI-PT1020

## 90-DAY LIMITED WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown below.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

The only authorized service center in the United States is:

Excalibur Electronics, Inc.  
13755 SW 119th Ave  
Miami, Florida 33186 U.S.A.  
Phone: 305.477.8080  
Fax: 305.477.9516  
[www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com)

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

Excalibur Electronics, Inc. reserves the right to make technical changes without notice in the interest of progress.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.