



2.4 GHz

FOR MULTI-RACER ACTION

BOUNCING STUNTS

- FLIP
- VERTICAL SPIN
- 360° SPIN
- SOMERSAULT
- SIDE SPIN

RC

MAX REBOUNCE

2.4 GHz

FOR MULTI-RACER ACTION

BOUNCING STUNTS

- FLIP
- VERTICAL SPIN
- 360° SPIN
- SOMERSAULT
- SIDE SPIN

11768 - Window Box

13.5w 7.5h 8.5d

RC

MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

2.4 GHz

FOR MULTI-RACER ACTION



RC

MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!

2.4 GHz

FOR MULTI-RACER ACTION



RC

MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!


RC

MAX REBOUNCE

RADIO CONTROLLED STUNT VEHICLE

BOUNCING STUNTS!



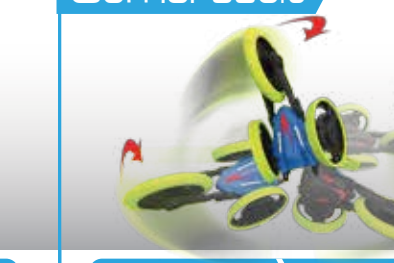




Flip

360° Spin

Side Spin

Vertical Spin

Somersault



To flip the Max Rebound, pull both Joysticks down to Drive backward. Then push Both Joysticks up. The momentum of the Max Rebound will flip itself.

For 360° spin, just push the left joystick up and the right joystick down at the same time. To spin in the opposite direction, push the left joystick down and the right joystick up at the same time.

To perform the Side Spin, first do 360° spin. And push up both Joysticks upward or downward about a second, then release it. Second, push right Joysticks down and hold it to accelerate.



To perform Vertical Spinning, Push up both Joysticks downward then upward a second to see it stand up. At this moment, push the left joystick up and the right joystick down to spinning.

Hold the left Joysticks up and Right Joysticks down to perform the 360° spin. Tap the right Joystick upwards repeatedly to advance to a Somersault Stunt

Left Stick Controls Forward And Reverse Of Left Wheel

Right Stick Controls Forward And Reverse Of Right Wheel

ON/OFF Switch

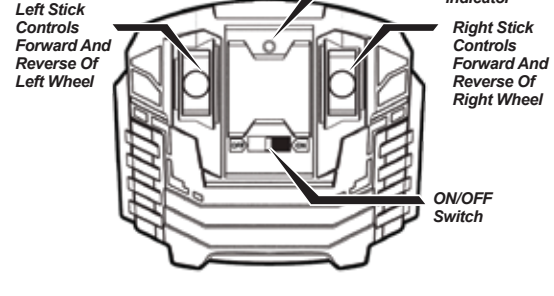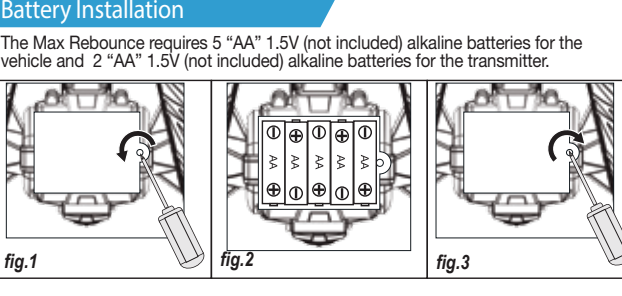

1. Turn "ON/OFF" switch to the OFF position for the Max Rebound.

2. Open the battery compartment cover by loosening the screw (Fig. 4) and insert AA batteries following the correct polarities (Fig. 5).

3. Replace the battery compartment cover and tighten the screw (Fig. 6).

1. Turn "ON/OFF" switch to the OFF position for the transmitter.

2. Open the battery compartment cover by loosening the screw (Fig. 4) and insert AA batteries following the correct polarities (Fig. 5).


3. Replace the battery compartment cover and tighten the screw (Fig. 6).

1. Turn "ON/OFF" switch to the OFF position for the transmitter.

2. Open the battery compartment cover by loosening the screw (Fig. 4) and insert AA batteries following the correct polarities (Fig. 5).

3. Replace the battery compartment cover and tighten the screw (Fig. 6).

Precautions and Care



Battery Warnings:

Important! Only adults should replace batteries. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the toy before being charged. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Alkaline batteries are recommended. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Please keep this information for future reference. Remove batteries from the product before extended storage.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the appliance is connected. - Consult the dealer or an experienced radio/TV technician for help.

11768

RC MAX REBOUNCE

MADE IN CHINA

www.echo-tech.com





