















Support Trouble Shooting & Support

Patteries are the foremost issue experienced with radio controlled vehicles, due to either weak batteries or batteries that have been installed incorrectly Veak batteries – the vehicle exhibits slow response, slow speed or unpredictable behavior.

Issue - No response or slow movements

- Ensure that the ON/OFF switch is in the "ON" position

Ensure that fresh alkaline battery is in the transmitter and has been installed

correctly, sometimes giving it a nudge or reinserting the batteries may solve the issue.

- Is the Rechargeable Battery Pack installed correctly in the vehicle?

- (+) and (-) contacts in the Transmitter Battery Compartment MUST be aligned correctly

with the (+) and (-) contacts on the Alkaline Battery.

(+) and (-) contacts in the Vehicle Battery Compartment MUST be aligned correctly with the (+) and (-) contacts on the Vehicle Battery Pack.

Are all battery contact points touching? Please ensure that the contact points are neither rusty nor dirty

Issue - Erratic or Unpredictable Behavior

If the vehicle moves by itself or exhibits reduced transmission range, please ensure that there is no external interference in the area. To do this, take the vehicles away from any power lines, tall buildings or radio towers to reduce radio interference.

Issue – Short Battery Life

Ensure that the battery is fully charged. The included 9.6V Vehicle Battery is NOT charged prior to shipment, please charge for 8 hours (first two full charges) out of the box. Subsequent charges will only require 4 hours.

If the Battery Pack is Hot or Warm

Please DO NOT recharge, allow the Vehicle Battery Pack to cool down before recharging, otherwise, it will reduce the life of the Vehicle Battery Pack. Damaged Vehicle Battery Pack

Please DO NOT recharge if the Vehicle Battery Pack appears to be damaged or leaking.

When NOT in use
Always unplug Vehicle Battery Pack Charger from the power outlet.

Always remove any batteries from the Transmitter and the Vehicle.

Battery Safety Precautions DO NOT dispose any type of batteries in fire, leakage, explosion and personal injury may

Dispose of Rechargeable Battery Packs properly.
DO NOT take apart Rechargeable Battery Packs.
DO NOT use the Battery Charger other than instructed in this Owner's Manual.

Adult supervision strongly recommended when charging batteries. DO NOT attempt jumps or crashes with this vehicle as this may dislodge the battery

ECHO Warranty Information

3. OPERATE ON SNOW – The Hovercraft operates best on compacted snow and ice

30-DAY LIMITED WARRANTY - USA & Canada only

CHO TECHNOLOGIES warrants to the original consumer that this product will be free of defects in materials and workmanship for thirty (30) days from e date of purchase. ECHO TECHNOLOGIES will repair or replace the product, at our sole discretion, in the event of such a defect within the warranty in

ne event of a defect covered under this warranty, first please visit our website at www.toysinquiry.com and fill out the Inquiry Form under the Contact page. This manner would be the quickest way for you to get a response and your concern to be resolved, by providing us with all the information reques the Porm. If you would like to speak to our friendly Customer Representatives in person, you may also call the toll-free number. If necessary, you will b nucled to return the product (postage pre-paid and navende by the consumer) to the address below.

CHO TECHNOLOGIES liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole discretion, and no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This rearranty is exclusive, and is made in lieu of any express or implied warranty. Valid only in U.S.A. and Canada. This warranty suspecific legal rights, without may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above obtains or limitation may not apoly by to vu.

Best way to contact us is via our website:

TOLL-FREE NUMBER: 1-800-434-6178

Hours: 8:30 A.M. – 5:00 P.M. Central Time; Monday – Friday, except Public Holidays.

Expect some delay during peak seasons. Please be patient.

Address for Returns: Toys Inquiry 1800 North, 9th Street, Indianola, IA 50125

FCC Statement

This device complies with Part 15 of the FCC Rules.

peration is subject to the following two conditions:

1) This device may not cause harmful interference, and

2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacture is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are descrime supplies in seven several out our output print and an access output output, pursuant or an 15 or tier Co Yours. These minit designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio requency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantse that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Canada 310

is device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause erference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. is device complies with RSS-310 of Industry Canada. seration is subject to the condition that this device does not cause harmful interference.

rrier Frequency: 27.145 MHz, Field Strength: 64.9 dB μ V/m @ 3m rrier Frequency: 49.860 MHz, Field Strength: 47.6 dB μ V/m @ 3m

160E Ensure that the battery is fully charged before use. The included 9.6V Vehicle Battery is NOT charged prior to shipment, please charge for 8 hours (first two full charges) out of the box. 1. Vehicle requires a 9.6V Re

Battery Pack

To charge the 9.6V Rechargeable battery pack, first plug the charger into a household standard power outlet.

2. To charge the 9.6V Rechargeable battery pack, first plug the charger into a household standard power outlet
3. Attach the battery pack's white connector to the battery charger's matching connector.
4. Flashing green light indicates battery pack is charging. Green light keep on indicates the battery is fully charged.
5. Allow the battery pack to charge for a minimum of 8 hours on the initial two charges. Subsequent charges will only require around 4 hours. Please unplug the battery charger once the battery is fully charged.
6. A full charge will last approximately 15 minutes of continuous play, depending on terrain and driving style.
7. If the Hovercraft slows down during play, this may indicate low battery power, therefore it would be necessary to recharge the battery.
8. Wait at least 10 minutes until the battery pack has cooled down before charging.
9. Recharging a warm battery pack will greatly reduce the life of the battery pack.
10. If you leave the battery pack charging for too long, the battery pack may cause burns or fire.
11. If Battery Pack and/or Charger are wet, but the battery battery

Battery Charger for use by children-Instruction

CAUTION: Only allow children at least 8 years old to use the battery charger. Give sufficient instruction so that the child is able to use the battery charger in a safe way and explain that it is not a toy.

Instruct the child not to try and recharge non-rechargeable batteries because of the danger of explosion.

Examine the battery charger regularly for damage, especially the cord, plug and enclosure. If the battery charger is damaged, it must not be used until it has been repaired.

Special Note:

Battery Charging

Ensure that the charger's voltage meets your local standards.

Because of its unique design, other battery chargers will be unable to charge your RC Hovercraft battery pack. To charge your battery pack, use only the RC Hovercraft battery charger.

Please remember to monitor anything that is charging. Do not place flammable materials next to or

anything that covers the battery pack.

4. Do not overcharge the battery pack, if the battery pack feels hot to the touch, please stop charging.

5. After repeated charging, the charging time may increase.

6. When using or charging the battery, please stop using the battery if you experience, an odd smell, sudden heat, deformation, discoloration or other abnormalities.

7. Battery charger for indoor use only.

S: The Battery Charger & Battery Pack need to be periodically examined for potential hazards. Any potentially hazardous parts need to be repaired or replaced. CONTENTS AND SPECIFICATIONS MAY VARY FROM THOSE ILLUSTRATED. PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.