

## Hello

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

## Getting Started

Turn camera ON and repeatedly press the Power/Mode Button to cycle through camera modes.

### 1. Video (1080p 30fps/ 720p 60fps)



Record Video

### 2. Playback (Event, Video or JPEG)



View your videos and photos on the screen

### 3. Settings (Video Settings, Photo Settings, and System Settings)

Repeatedly press the Shutter/Select Button to cycle through three settings. Use the Up or Down Button to cycle through the Settings options and press Shutter/Select to select desired option.

#### a. Video Settings:



#### 1) Movie Size: 1080p 30fps or 720p 60fps

Micro SD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins
4 GB	30 mins	40 mins

- 2) Loop Record: On/Off
- 3) Date Stamp: Off/Date/Date & Time
- 4) Exposure: +-2.0/+1.7/+1.3/+1.0/+0.7/+0.3/0

b. Photo Settings:



- 1) Resolution: 2M
- 2) Single Shot: On/Off
- 3) Treble Shot (Burst Photo 3 photos): On/Off
- 4) Selftimer (Time Lapse): OFF/5 Seconds/ 10 Seconds/ Double Shoot a series of photos at set time intervals
- 5) Continuous (Burst Photo): 2, 3, 5, 10, 20, 30 or 60 second intervals

c. System Settings:



- 1) Sounds: On/Off, Start-up 1/2/3/None, Beep On/Off, Volume 0/1/2/3
- 2) Power Frequency: 50Hz/60Hz/Auto
- 3) Panel Protect (Screen Saver): Off/1 mins/3 mins/5 mins
- 4) Power Save: Off/1 mins/3 mins/5 mins
- 5) Date & Time: YY/MM/DD
- 6) Language: English/Simplified Chinese/ Traditional Chinese/ France/ Spanish/ Italian/ Portuguese/ Dutch/ Polish/ Russian/ Japanese
- 7) Format: No/Yes
- 8) Rotate: 180 On/Off
- 9) Reset All: No/Yes
- 10) Version

**Capturing Video + Photos**

Press the Shutter/Select Button to start/stop recording. Press the Down/Shutter Button to take a picture. You can also change video and photo settings in the Settings menu.

**Storage/MicroSD Cards**

This camera is compatible with 4GB, 16GB, and 32GB capacity microSD, microSDHC, and microSDXC memory cards. You must use a microSD card with a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

### **Charging the Battery**

If recording is occurring when battery reaches 0%, the camera will save the file and power OFF.

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

### **Connecting to the iSmart DV App (Wi-Fi Edition Only)**

The iSmart DV App lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the iSmart DV App to your smartphone or tablet at the Apple App Store or Google Play.
2. Press the Power/Mode Button to power camera ON.
3. Press the Up/Wi-Fi On/Off button to turn on Wi-Fi\*.
4. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Sports Cam 8" followed by a series of numbers.
5. Enter the password "1234567890".
6. Open the iSmart DV App on your smartphone or tablet.

\* Press and hold the Up/Wi-Fi On/Off button for three seconds to turn off Wi-Fi.

### **Compatibility**

The iSmart DV App is compatible with some smartphones and tablets listed below.

#### **For Apple iOS:**

- iPhone 5 & 5S (iOS 7)
- iPad Air & Mini (iOS 7)

#### **For Android:**

- Android 4X Quad-core devices

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

FCC Compliance:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including Interference that may cause

undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE1622