

# Action Camera

Wi-Fi · Waterproof · Real 4K · Super slow-mo



Made in China



Wide Angle  
Lens



HDMI



Ultra HD

 


Waterproof  
to 30m



Long-lasting  
battery

## THE BASICS

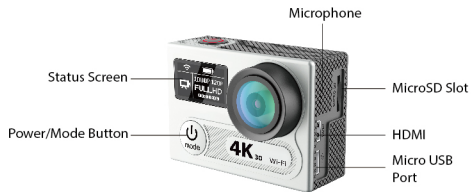

## ACCESSORIES



Waterproof Housing



Handle Bar/Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet Mounts



Bandages



Battery



Lens Cloth



Tethers



Protective Backdoor



 
 
 
 
 
USB Cable



Charger

## MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

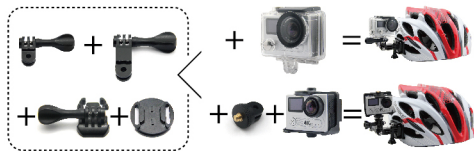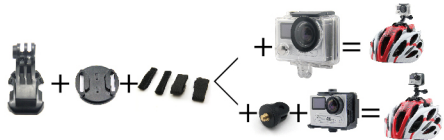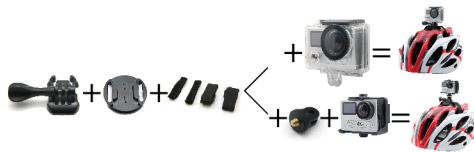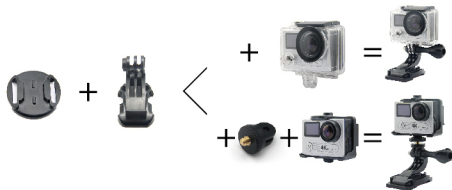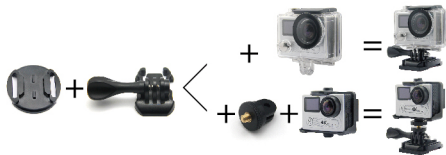

---

## GETTING STARTED

---

### HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

#### To power ON:

Press the **Power/Mode Button**.

#### To power OFF:

 
Press and hold the **Power/Mode Button**.

---

## OVERVIEW

---

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:

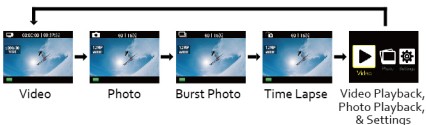

---

 Video

Record Video

---

 Photo

Capture a single photo.

---

 Burst Photo

Capture photo bursts

---

 Time Lapse

Shoot a series of photos at set time intervals



Video & Photo playback



Adjust camera settings, resolution and more.

---

---

## SETTINGS

---



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. To go back to the previous screen or exit the settings menu, press the **Wi-Fi Button**.

## Video Resolution:

4k30/2.7k60/1080p120/1080p60/720p200

MicroSD Card	4k30/2.7k60	1080p60	1080p120/720p200
32 GB	80 mins	120 mins	60 mins
64 GB	160 mins	240 mins	120 mins

**Photo Resolution:** 12M/8M

**Video Interval:** 1 Min/ 5 Min

**Looping Video:** Off/On (4K & 2.7K not supported)

**Time Stamp:** Off/Date/Date & Time

**Exposure:** +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

**Burst Mode:** 3 Photos/ 1S, 7 Photos/ 2S, 15 Photos/ 4S, 30 Photos/ 8S

**Time Lapse Interval:** 3s/5s/10s/30s/60s

**Time Lapse:** Off/On

**Power Frequency:** 50Hz/60Hz/Auto

**Language:** English/Tranditional Chinese  
/Italian/Spanish/Portuguese/German/  
Dutch/France/Czech/Polish/Turkish/  
Russian/Japanese/Korean/Thai

**Date & Time:** MM/DD/YY, DD/MM/YY,  
or YY/MM/DD

**Sound Indicator:** Shutter On/Off, Start Up 1/2/3/  
None, Beep On/Off, Volume  
0/1/2/3

**Screen Saver:** Off/1 min/3 min/5 min

**Power Saver:** Off/1 min/3 min/5 min

**Format:** No/Yes

**Reset:** No/Yes

**Version**

---

## VIDEO MODE

---

### Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### **To start recording:**

Press the **Shutter/Select Button**. The camera will emit one beep and start recording.

#### **To stop recording:**

Press the **Shutter/Select Button**. The **Camera** emits one beep to indicate recording has stopped. This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

---

## PHOTO MODE

---

### Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

---

## BURST PHOTO MODE

---

### Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo mode**, your camera takes 3 photos/1 sec, 7 photos/2 sec, 15 photos/4 sec, or 30 photos/8 sec.

#### To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

---

## TIME LAPSE MODE

---

### Time Lapse

To capture a **Time Lapse** series, verify the **Time Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **3,5,10,20,30** or **60** second intervals.

#### To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

---

## PLAYBACK

---

### Playing Back Videos and Photos

#### To enter the Playback menu:

1. Press the **Power/Mode Button** to select **Video** or **Photo**.
2. Press the **Shutter/Select Button** to enter the **Playback** menu.

3. Use **Power/Mode Button** to cycle through the various options.
4. Press the **Shutter/Select Button**.
5. To return to the **Playback menu**, press the **Wi-Fi Button**.

---

## BATTERY

---

### To charge the battery

Use the **1.5A USB charger** and **USB cable** that come standard with your camera.

\*Charging Time: 3 hours.

\*You can NOT record or take photos while charging the camera.

\*Third-party chargers and accessories may **NOT** be supported.

---

## CAMERA APP

---

### Connecting to the Ez iCam App

#### EziCam video formats:

4K30/2.7K50/1080p100/1080p60/720p120  
(The **EziCam App** does **NOT** support  
2.7K60/1080p120/720p200 formats of your camera.  
Therefore, you can't see these formats on the app.)

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **Ez iCam App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
  2. Press the **Power/Mode Button** to power camera **ON**.
  3. Make sure the camera is in **Camera modes**.
  4. Press the **Wi-Fi Button** to turn on **Wi-Fi\***.
  5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "iCam-H8Pro" followed by a series of numbers.
  6. Open the **Ez iCam App** on your smartphone or tablet.
- \* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones and tablets listed below.

#### For Apple iOS

\* iPhone6 (Plus) & 6s (Plus) (iOS9)

\* iPad Air & Mini (iOS9)

#### For Android:

\* Android 4X Quad-core devices

---

## APP DOWNLOAD & COMPATIBILITY

---



IOS / Android  
App Download

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

---

## SET THE DATE/TIME

---

Your camera's date and time are automatically set when you connect your camera to the EziCam App. If the battery is removed from the camera, you must reset the date and time (automatically or manually).

---

## STORAGE/MICROSD CARDS

---

This camera is compatible with **32GB** and **64GB** capacity **microSDXC** memory cards. Be sure to use a **microSDXC** card with at least a **U3 (90MB/s)** speed rating and format your card using the camera before first use. Cards can also be formatted to FAT32 (32GB) or exFAT (64GB and above) using your PC or Mac.

---

## MICROSD CARD CONSIDERATIONS

---

We strongly recommend only purchasing name brand cards through official resellers. The cards below are known to work well with this camera.

Card Name and Manufacturer Part Number:

	Sandisk Extreme microSDXC U3 64GB (SDSQXNE-o64G-ZN6MA)
	Sandisk Extreme microSDHC U3 32GB (SDSQXNE-o32G-ZN6MA)
	Sandisk Extreme PRO microSDXC U3 64GB (SDSDQXP-o64G-Z46A)
	Sandisk Extreme PRO microSDHC U3 32GB (SDSDQXP-o32G-Z46A)
	Transcend Ultimate 633x microSDXC U3 64GB (TS64GUSDU3)
	Transcend Ultimate 633x microSDHC U3 32GB (TS32GUSDU3)
	Lexar 633x microSDXC U1 64GB (LSDMI64GBB1NL633R)
	Lexar 633x microSDHC U1 32GB (LSDMI32GBBNL633R)
	Samsung Pro microSDXC U3 64GB (MB-MG64E)
	Samsung Pro+ microSDXC U3 64GB (MB-MD64D)



FCC Compliance:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including Interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# CE1622