

# 360° Panoramic Camera

Wi-Fi · 1-inch Screen · 360° Panoramic Video/Photo



Made in China



Panoramic  
Video



Dual Screen



1" Screen



VR Video



VR Video

---

## THE BASICS

---



Micro USB Port

---

## ACCESSORIES

---



Tripod



USB Cable



Charger

---

## MOUNTING YOUR CAMERA

---

Attach your camera to the tripod.



---

## GETTING STARTED

---

### HELLO

Congratulations on your new 360° Panoramic Camera! This user manual will help you learn the basics of capturing life's most incredible moments!

#### To power ON:

Press and hold the **Power/Mode Button** for **3 seconds**.

#### To power OFF:

 
Press and hold the **Power/Mode Button** for **3 seconds**.

---

## OVERVIEW

---

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



960P30

Record 960p30 video



2.7K25

Record 2.7K25 video



4K15\*

Record 4K15 video



Photo

Capture a 4M photo

---

## 360° PANORAMIC VIDEO RESOLUTION

---

### 360° Video Resolution:


960p30 / 2.7K25 / 4K15

MicroSD Card	960p30	2.7k25	4k15
32 GB	300 mins	60 mins	60 mins

---

## 360° PANORAMIC VIDEO MODE

---

 960p30 / 2.7K25 / 4K15

To record **360° Video**, verify the camera is in **Video mode**. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

### To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep.

### To stop recording:

Press the **Shutter/Select Button**. The camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

---

## 360° PANORAMIC PHOTO MODE

---

 4M Photo

To capture a **360° Photo**, verify the camera is in **Photo mode**. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

### To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.