

---

## BATTERY

---

### To charge the battery

Use the **1.5A USB charger** and **USB cable** that come standard with your camera.

\*Charging Time: 4 hours.

\*Third-party chargers and accessories may **NOT** be supported.

---

## MICROSD CARD CONSIDERATIONS

---

This camera is compatible with **32GB** capacity **microSDXC** memory cards. Be sure to use a **microSDXC** card with at least a **U3 (90MB/s)** speed rating. We strongly recommend only purchasing name brand cards through official resellers. The cards below are known to work well with this camera.

Card Name and Manufacturer Part Number:



Sandisk Extreme microSDHC U3 32GB  
(SDSQXNE-032G-ZN6MA)



Sandisk Extreme PRO microSDHC U3 32GB  
(SDSDQXP-032G-Z46A)



Transcend Ultimate 633x microSDHC U3 32GB  
(TS32GUSDU3)



Lexar 633x microSDHC U1 32GB  
(LSDMI32GBBNL633R)

---

## HOW TO FORMAT MICROSD CARD

---

Be sure to format your card using the **CAMERA APP Ez iCam** before first use.

1. Open the Ez iCam App on your phone.
2. Go to **SETTINGS** in the top right corner.
3. Press "Format".
4. Format card? All data will be lost.  
Press "Confirm".

---

## CAMERA APP

---

### Connecting to the Ez iCam App (Android not supported at the moment)

The **Ez iCam App** lets you control your camera remotely using your iPhone. Features include full camera control, live preview, playback and sharing of select content and more.

1. Download the **Ez iCam App** to your iPhone at the **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Press the **Wi-Fi Button** to turn on **Wi-Fi\***.
4. In your iPhone's Wi-Fi settings, connect to the network called "**ICAM-Pano360**" followed by a series of numbers.
5. Open the **Ez iCam App** on your iPhone.
6. Press "Connect" using the **Ez iCam App**.

\* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones listed below.

### For Apple iOS

\* iPhone 6/6s/7 (Plus)(iOS10)



iOS App Download

---

## COMPATIBILITY

---

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

---

## VIDEO PLAYER FOR COMPUTERS

---

Recommended 360 Video & Photo player for computers  
Kolor: [www.kolor.com/kolor-eyes](http://www.kolor.com/kolor-eyes)

---

## HARD RESET YOUR CAMERA


---

\*\* Press and hold the **Power/Mode Button** for **10 seconds**.

---

## USER INTERFACE OF APP

---

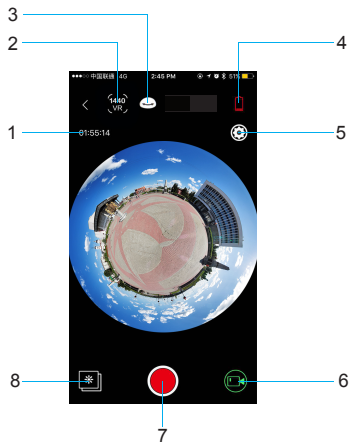

1	Available recording time	2	Video resolution
3	360° Mode switch	4	Battery
5	Settings	6	Video/Photo switch
	Format		Video
	Power Frequency		Photo
7	Record/Stop button	8	Album

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.