

2.4G Remote



Photo Button

Video Button

3m/10ft waterproof

Video

To record **Video**, verify the camera is in **Video** mode.

To start recording:

Press the **Grey Video Button**. The camera will emit one beep and the **Camera Light** will flash while recording.

To stop recording:

Press the **Grey Video Button** again. The camera will emit one beep and the **Camera Light** will stop flashing while recording.

Photo

To capture a **Photo**, verify the camera is in **Photo** mode.

To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

To take a Burst Photo series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.

Time Lapse

To capture a **Time Lapse** series, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

To take Time Lapse:

Press the **Red Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

*To power OFF camera:

Press and hold the **Red Photo Button**.

2.4G Remote



Made in China

2.4G

Remote



Waterproof
to 3m



Long-lasting
battery

FCC Compliance:

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including Interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

CE1622