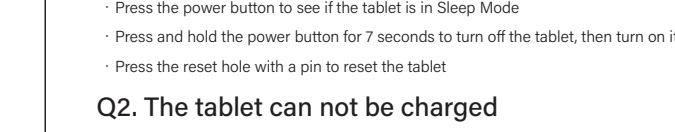


材质：128G铜版纸 黑白印刷，中间打钉

<p>Display</p> <ul style="list-style-type: none"> Adjust the screen brightness Adjust the font size and display size Set screen zoom Change the wallpaper <p>Sound</p> <ul style="list-style-type: none"> Set volume levels for media, alarms, and notifications Turn off Do Not Disturb Set the sounds for notifications and calls Turn off all sounds for a specific app Turn off all sounds for screen locks, charging and touch <p>Storage</p> <ul style="list-style-type: none"> View and manage your storage space <p>Privacy, Security, Location</p> <ul style="list-style-type: none"> Set screen lock settings (e.g. password, PIN, Draw, etc.) Enable/disable notifications when the screen is locked Turn on/off location services for a specific app Set always-on display (when available) <p>Accounts</p> <ul style="list-style-type: none"> Add and manage the user accounts on your tablet <p>Accessibility</p> <ul style="list-style-type: none"> For vision and hearing impaired users, manage settings for screen readers, subtitles and more <p>Digital Wellbeing & Parental Controls</p> <ul style="list-style-type: none"> Set screen time for your child Set up parental controls with Google's Family Link <p>Google</p> <ul style="list-style-type: none"> Get the addresses for Google-related services <p>System</p> <ul style="list-style-type: none"> Set language Two Languages or Less > Languages > + add a language. After adding, hold and slide the icon to the top to change the language <p>Restore Factory Settings</p> <ul style="list-style-type: none"> Use factory restore > Erase all data (factory reset) > Restore to factory settings 	<p>- Other Settings</p> <ul style="list-style-type: none"> Set the date and time Turn on/off the battery <p>About Tablet</p> <ul style="list-style-type: none"> Check detailed information about the tablet <p>NETWORK CONNECTION</p> <p>Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings</p> <p>Wi-Fi Connection</p> <ul style="list-style-type: none"> Go to Settings > Network & Internet > turn on Wi-Fi. All available Wi-Fi connections will be listed. <p>Uninstall an App</p> <p>To stop hold the app, then slide to the trash bin to uninstall the app.</p> <p>Clear the App Cache</p> <ul style="list-style-type: none"> Go to Settings > Apps & notifications Select an app > Storage & Cache > CLEAR CACHE <p>INTERNET NAVIGATION</p> <p>Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet. You can use the Chrome browser that is pre-installed or download another browser from the Play Store.</p> <p>MULTIMEDIA</p> <p>Connecting to the Computer</p> <ul style="list-style-type: none"> Connect your tablet to a computer via USB type-C cable and go to Quick Settings. Tap Android Options > Change this device as USB > Tap to view options > The Transfer Go to your computer and find tablet to transfer files from your tablet and computer. 	<p>APP MANAGEMENT</p> <p>App Download and Installation</p> <ul style="list-style-type: none"> Tap and drag Play Store to install the app you need. <p>Move an App</p> <p>Tap and hold the icon, then slide to desired screen.</p> <p>Remove an App from the Home Screen</p> <p>Tap and hold the app, then slide to X to remove it from your home screen.</p> <p>Connecting to an External Device</p> <ul style="list-style-type: none"> Insert a device (e.g. SD card or external monitor) and go to Quick Settings. Tap to set up. 	<p>Tips</p> <p>Select Charge this device if you only need to charge the battery.</p> <p>Select Transfer photos (PTP) to transfer photos from the device.</p>  <p>TROUBLESHOOTING</p> <p>Q1. The tablet can not be turned on</p> <ul style="list-style-type: none"> Release the power button for 30 seconds Press the power button to use if the tablet is in Sleep Mode Press and hold the power button for 15 seconds to turn off the tablet, then turn it on Press the reset hole with a pin to reset the tablet. <p>Q2. The tablet can not be charged</p> <ul style="list-style-type: none"> Charge the device at least 30 minutes before using the tablet. The battery was completely drained. Make sure the USB cable is properly plugged into the charging port Try another USB cable <p>Q3. Error message occurs during operation</p> <ul style="list-style-type: none"> Uninstall the app displaying the error message, then download and install again Press the reset hole with a pin to reset the tablet. <p>Q4. The tablet cannot be detected by the computer</p> <ul style="list-style-type: none"> Make sure the tablet is powered on Try another USB cable Insert the USB cable into the front computer Instead of Change this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to a computer <p>Q5. The tablet cannot connect to the Wi-Fi</p> <ul style="list-style-type: none"> Make sure the Wi-Fi on your tablet is turned on Release the router Make sure there is no file sharing or device connection limitation in the settings of the router Press the power button to turn on the router and make sure the router is powered on <p>Q6. The storage space of the tablet is not enough</p> <ul style="list-style-type: none"> Release the tablet Clear the app cache regularly Remove any microSD card to expand the storage 	<p>FCC STATEMENT :</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ul style="list-style-type: none"> (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. <p>Noting: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.</p> <p>This equipment generates noise and can radiate radio frequency energy. And, it is shielded and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. <p>RF warning statement:</p> <p>The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.</p>	<p>2ABCS-E0020</p> <p>An FCC label is provided on the BCT, as the label is placed in the packaging box.</p> <p>Contact Us</p> <p>Email: amazon@idol.com Manufacturer: Shenzhen Electron Technology Co., Ltd For any inquiries, feel free to contact us. We'll get back to help you out!</p>
<p>06</p>	<p>07</p>	<p>08</p>	<p>09</p>	<p>10</p>	<p>FCC</p> <p>CE</p> <p>The product complies with the essential requirements of European safety regulations and has passed the product safety conformity assessment procedure. It also has a manufacturer's declaration of conformity to ensure that every product complies with the customer's needs.</p> <p>Android is a trademark of Google LLC</p>