

SIZE:110mmX165mm

材质：封面128G铜版纸 单色印刷 中间打钉

EMPOWRING YOUNG MINDS

K109A



USER GUIDE

Please read the manual before using this product, and save it for future use.


Contents

- ATTENTION 1
- FUNCTION OVERVIEW 2
- SPECIFICATIONS 2
- START 3
- HOME SCREEN 3
- BASIC SETTINGS 4
- NETWORK CONNECTION 7
- APP MANAGEMENT 8
- INTERNET NAVIGATION 9
- MULTIMEDIA 9
- TROUBLESHOOTING 11

ATTENTION

- Before using the tablet, please carefully read the manual and follow the instructions and specifications provided.
- Always use the original charger provided with the device to charge it, and avoid using other chargers. If the charger is damaged, replace it with a new one that meets the standard voltage (5V/2A).
- When the tablet prompts for charging during use (typically when the battery level is around 15%), please charge it promptly.
- To prevent degradation of hardware performance or accelerated aging and damage to the device, it is recommended that you limit your use to 3-4 hours and avoid using it while it is charging.
- If the tablet experiences a power outage during charging, unplug it immediately.
- Avoid placing any objects on the tablet to prevent screen damage.
- When not in use, place the tablet on a stable surface to avoid accidental damage from falls.
- Handle the tablet screen with care, as it is susceptible to damage from squeezing and collisions. Avoid using your fingernails and apply light touch rather than heavy pressure.
- Do not rinse the tablet directly with water when cleaning, as it is not waterproof and may become unstable.
- To avoid damage to the built-in electronic components, keep the tablet away from high temperatures, humidity, and dust. Store it in a dry place and avoid direct sunlight.

FUNCTION OVERVIEW

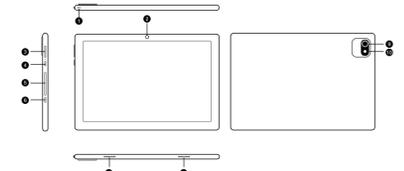

- Headphone Jack
- Front Camera
- Volume+/Volume-
- Power on/off
- Micro SD Card Slot
- USB-C Port
- Left Speaker
- Right Speaker
- Rear Camera
- Flash

START

Power On/Off

- Hold down the power button for 2-3 seconds to turn on the tablet. Select the language and follow the start up guide to set up the tablet.
- Hold down the power button for 2 seconds to display power off and restart options on the screen. Click power off to turn off the tablet.
- If the tablet freezes, press and hold the power button for 7 seconds to do a forced shutdown.

Battery

- A rechargeable Li-ion battery is installed in the tablet.
- We suggest you drain the battery completely once a month if you only use your tablet occasionally.
- DO NOT dispose of tablet in fire.
- Charge the device fully each time to increase the battery life.
- You can charge the tablet, even if the tablet has some power left in it, as the lithium battery does not need to be fully drained to charge.
- A full charge can be used for an average of 4 hours.

Sleep Mode

Simply press the power button once to switch the tablet into sleep mode when the tablet is ON; press again to wake it up.

Tip: Go to Settings > Display > Screen timeout to adjust automatic sleep settings

HOME SCREEN

Icon on the Bottom Menu



- Hide
- Volume-
- Back
- Home Screen
- Recent Activities
- Volume+
- Screenshot

Home settings, Wallpapers, Widgets

Home settings

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. Tap HOMESettings to enable/disable adding icons to the Home screen. This applies to new Apps installed from Play Store.

Wallpapers

Tap and hold your finger in any blank space on the home screen and a pop-up menu will appear. You can choose a wallpaper from the Gallery or your downloaded files. Set the one you like to be the wallpaper.

Tips

Tap an icon and move it on top of another icon to create a new folder on the home screen. Open the folder; tap "Edit Name" to rename the folder.

More Settings

Swipe down from the top of the screen, then tap the ⚙ icon to enter the detailed setting interface or swipe up from the bottom of the screen, and then tap Settings to enter the setting interface.



Network & Internet

- Connect to any working Wi-Fi
- Enable/disable airplane mode

Connected Devices

- Connect the device and check the connected device

Apps & Notifications

- Check recently opened apps
- Check all apps on the tablet
- Set app permissions
- Uninstall third-party apps
- Adjust app notification settings
- Clear the cache for apps

Battery

- Display the remaining battery power as a percentage
- Enable/disable battery saver mode

Storage

- View and manage your storage space

Display & Wallpaper

- Adjust the screen brightness
- Adjust the font size and display size
- Set eye comfort mode
- Set a screensaver
- Change the wallpaper

Sound

- Set volume levels for media, call, notifications and alarms
- Set Do Not Disturb preferences
- Turn on / off the sound for screen lock, charging, and touch

Scheduled power on / off

- Set a scheduled start time
- Set a scheduled shutdown time

Accessibility

- For vision and hearing impaired users, manage settings for screen readers, subtitles, and more

Privacy, Location, Security

- Set screen lock pattern, e.g. password, PIN, Swipe, etc.
- Enable / disable all notifications while the screen is locked
- Turn on / off the location services for a specific app
- Set show/hide password when inputting a password

Accounts & Password

- Add and manage the user accounts on your tablet

Digital Wellbeing & Parental Controls

- Set timers for your apps

Google

- Set the preferences for Google related services

System

- Set Language
- Tap Languages & input > Languages > + Add a language. After adding, hold and slide the = icon to the top to change the language
- Restore Factory Settings
- Tap System > Reset options > Erase all data (factory reset) to restore to factory settings
- Other Settings
- Set the date and time
- Turn on / off the backup

About Tablet


- Check detailed information about the tablet

NETWORK CONNECTION


Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings

Wi-Fi Connection

- Go to Settings > Network & Internet > Internet > Turn on the Wi-Fi. All available Wi-Fi connections will be listed.

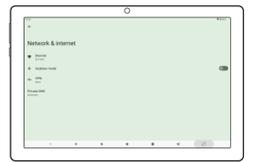

- Select your Wi-Fi, and input the correct password.

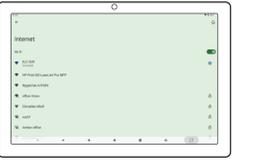

APP MANAGEMENT

App Download and Installation

- Tap and open Play Store on the Home screen.
- Log into your Google account; search and download the apps you need.

Move an App

Tap and hold the app, then slide to desired screen.

Remove an App from the Home screen

Tap and hold the App, then slide to the x to remove it from your home screen.

Uninstall an App

Tap and hold the app, then slide to the uninstall to uninstall the app.

Clear the App Cache

- Go to Settings > Apps & notifications
- Select an App > Storage & cache > CLEAR CACHE

INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet. You can use the Chrome browser that is pre-installed or download another browser from the Play Store.

MULTIMEDIA

Connecting to the Computer

- Connect your tablet to a computer via USB type-c cable and go to Quick Settings.
- Tap Android Systems > Charge this device via USB > Tap for more options > File Transfer
- Go to your computer and find tablet to transfer files between your tablet and computer.

Tips

Select Charge this device if you only need to charge the tablet. Select Transfer (PTP) to transfer photos between the devices.



Connecting to an External Device

- Insert a micro SD card into the micro SD card slot and go to Quick Settings.
- Tap to set up.



- Set the micro SD card as portable storage by selecting use for portable storage. Enter micro SD card storage to move files between the card and tablet.



TROUBLESHOOTING

Q1. The tablet can not be turned on

- Reboot your tablet after charging for 30 minutes
- Press the power button to see if the tablet is in Sleep Mode
- Press and hold the power button for 7 seconds to turn off the tablet, then turn on it
- Press the reset hole with a pin to reset the tablet

Q2. The tablet can not be charged

- Charge the device for at least 30 minutes, in case the battery was completely drained
- Make sure the USB cable is properly plugged into the charging port
- Try another compatible USB cable and adapter

Q3. Error message occurs during operation

- Uninstall the app displaying the error message, then download and install again

Q4. The tablet cannot be detected by the computer

- Make sure the tablet is powered on
- Try another USB cable
- Try another USB port on the computer
- Instead of Charge this device, choose Transfer files or Transfer photos PTP when connecting the tablet to the computer

Q5. The tablet cannot connect to the Wi-Fi

- Make sure the Wi-Fi on your tablet is powered on
- Make sure you input the correct password
- Reboot the router
- Make sure there is no filter setting or device connection limitation in the settings of the router
- Forget the current Wi-Fi, reset the router and connect to the network again

Q6. The storage space of the tablet is not enough

- Uninstall the apps you don't use
- Clear the app cache regularly
- Insert a micro SD card to expand the storage

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



This device complies with parts of the FCC rules. Operation is subject to the following two conditions:

- This device will not cause harmful interference;
- This device must accept any interference received, including interference that may cause undesired operation.

This product complies with the essential requirements of European safety regulations and has passed the product safety conformity assessment procedure. It also has a manufacturer's declaration of conformity to ensure that every product delivered to the customer is safe.

Android is a trademark of Google LLC

Specific Absorption Rate (SAR) information:

This tablet PC FCC ID: 2ABC5-E0040 meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

- This radio is designed for and classified as "General population/uncontrolled Use", the guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The exposure standard for wireless radio employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set 1.6W/kg.
- Body-worn operation: this device was tested for typical body-worn operations with the back of the handset kept 0mm for body worn. To maintain compliance with RF exposure requirements, use accessories that maintain a 0mm for body worn. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with RF exposure requirements, and should be avoided.
- The highest reported SAR value for worn on the body is 0.700 W/kg.

Contact Us

E-mail: Service@elclcd.com
Manufacturer: Shenzhen Electron Technology Co., Ltd
For any inquiries, feel free to contact us. We'll be glad to help you out!