

Quick Start Guide



Warranty:
This Cloud Frame comes with a full one-year Manufacturer's Warranty. You do not need to register your warranty. In the event your Cloud Frame requires any servicing, you just need to contact us via our website: www.nixplay.com.

Please provide a copy of your original order information as proof of purchase.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Please carefully follow this Quick Start Guide



Thanks for buying the nixplay Cloud Frame

1 ASSEMBLE FRAME


PART A:
The Frame setup



PART B:
The Web setup




A LIVE FRAME

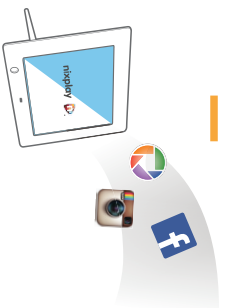

2 GET TO KNOW YOUR FRAME

Basic actions & procedures

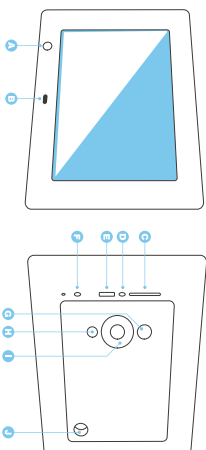

- Function**
- 1** Motion Sensor - Senses movement and turns the Cloud Frame ON and OFF
- 2** IR Sensor for Remote - Receives signals from the remote
- 3** SD/SDHC Card Slot - Connect your memory card and view photos
- 4** Headphone/Speaker Port - Connect your headphones or speakers
- 5** USB Port - Connect your USB flash drives and view photos
- 6** Power Adapter DC-In (5V) - Plug-in power cable for power
- 7** ON/OFF Button - Press and hold to power on the Cloud Frame
- 8** Menu Button - This will allow you to go back a step
- 9** 4-Way Menu Control and PLAY Button - Helps you navigate and select
- 10** Stand screw hole - Screws your stand in

- A** Delete - Delete selected photo
- B** Rotate and Save - Rotates a selected photo 90 degrees at a time
- C** Share - Email any photo on the Frame to your friends - coming soon
- D** WIFI Setting
- E** Slideshow - Starts the slideshow (Whenever you are in the Frame's settings or menu)
- F** UP/DOWN/LEFT/RIGHT arrows - Navigate through the Cloud Frame's Menu
- G** OK - Confirms changes made on Cloud Frame
- H** Back - Go back a step in any of the Cloud Frame's menus
- I** Vol- / Vol+ - Adjust the volume if you watch a video
- J** Menu - Goes directly to the main menu
- K** ON/OFF - Turns your Frame on or puts it into standby
- L** Motion Sensor - Turns motion sensor ON/OFF

